



MANUAL

FDo-VC-Ex4.PA

VALVE COUPLER
FOR PROFIBUS-PA



The general terms of delivery for products and services produced or provided by the electrical industry as published by the Zentralverband Elektrotechnik und Elektroindustrie (ZVEI) e.V. in its most recent edition as well as the supplementary proviso: "Extended property proviso" are applicable.

We at Pepperl+Fuchs feel obligated to contribute to the future;
this publication is, therefore, printed on paper bleached without the use of chlorine.

Table of contents

1	EXPLANATION OF SYMBOLS	4
2	INTRODUCTION	5
2.1	Aim of the manual	5
2.2	Intended use	5
2.3	Responsibilities of the user	5
2.4	Safety instructions	5
2.5	Marking	6
3	PRODUCT DESCRIPTION	7
3.1	Delivery package	7
3.2	System structure	7
3.2.1	Device description	8
3.2.2	Description of communication	9
3.2.3	Auxiliary valves which can be connected	9
3.2.4	Final position feedback contacts which can be connected	9
3.2.5	Description of 2:1 procedure	9
3.3	Accessories	10
4	INSTALLATION	11
4.1	Storage and transportation	11
4.2	Unpacking	11
4.3	Mounting	11
4.4	Electrical connection	13
4.4.1	General notes for connection	13
4.4.2	Connection of PROFIBUS-PA	14
4.4.3	Connection of auxiliary valves and final position feedback contacts	14
4.4.4	EMC, screening, grounding	16
4.5	Dismantling, packing and disposal	16
5	INTRODUCTION FOR COMMISSIONING (PARAMETERISATION, CONFIGURATION)	17
5.1	System requirements for the commissioning	17
5.2	General for commissioning	17
5.3	Check list for commissioning	18
6	PARAMETERISATION	19
6.1	General	19
6.2	Parameterisation of the device specific characteristics	21
6.2.1	Set PROFIBUS address	21
6.2.1.1	Setting a fixed address without modification feature via bus	21
6.2.1.2	Setting an address with modification feature via bus	21
6.2.2	Setting the PROFIBUS Ident Number	22
6.2.3	Setting the documentation parameters	22

Part No.: 054340, Date of issue 26.01.2006

PROFIBUS-PA Valve Coupler FD0-VC-Ex4.PA

Table of contents

6.2.4	Other device parameters for specific devices	22
6.3	Parameterisation of the channel specific characteristics	23
6.3.1	Responses of the output to the setpoint value	23
6.3.1.1	Introduction in the user data structure and importance of the setpoint value	23
6.3.1.2	Introduction into the operating modes (parameter target mode)	24
6.3.1.3	Behaviour in the "Auto" mode of operation, case of a fault	25
6.3.1.4	Behaviour of the device in the "RCas" mode of operation	26
6.3.2	Parameters concerning actuator and final position feedback	27
6.3.2.1	Actuator fail action (mechanical safety position)	27
6.3.2.2	Sensor mode	27
6.3.3	Channel specific parameters for diagnosis	28
6.3.3.1	Wire check	28
6.3.3.2	Stroke counter	28
6.3.3.3	Time monitoring	28
6.3.3.4	Cyclic function test	29
6.3.4	Setting the documentation parameters	30
6.4	Write protection	30
7	CONFIGURATION	31
7.1	General	31
7.2	Log in valve coupler at DP master	31
7.3	Installation of GSD file	31
7.4	Select module identifiers	31
7.5	Example of configuration	33
7.6	Description of user data	33
7.6.1	General	33
7.6.2	Arrangement of the status of SP_D, RB_D, RIN_D and ROUT_D	33
7.6.3	Variable SP_D	34
7.6.4	Variable RIN_D	35
7.6.5	Variable RB_D	35
7.6.6	Variable ROUT_D	36
7.6.7	Variable CB_D	36
7.7	Description of slave diagnosis	37
8	OPERATION	38
8.1	Manual operating mode	38
8.1.1	Initialisation run	38
8.1.2	Direct setpoint value specification	38
8.2	Simulation	38
9	DIAGNOSIS AND ERROR CORRECTION	39
9.1	General	39
9.2	LEDs	39
9.3	Functional check without connected valves	40
9.4	Possible faults during the initialisation run (section 8.1.1)	41
9.5	Status information from RB_D	41

Part No.: 054340, Date of issue 26.01.2006

9.6	Status informations from ROUT_D	42
9.7	Variable CB_D	42
9.8	Slave diagnosis	44
10	APPENDIX	45
10.1	Parameter Reference list	45
10.1.1	Legend	45
10.1.2	Device related parameters	45
10.1.3	Channel related parameter (channel 1 ... 4), identification and output	47
10.1.4	Channel related parameters (channel 1 ... 4), characteristics of actuator (drive) and regulation unit	49
10.2	Literature	53
10.3	Glossary	54

1 Explanation of symbols



Warning

This symbol indicates a warning about a possible danger.
In the event the warning is ignored, the consequences may range from personal injury to death or from damage to equipment to destruction.



Attention

This symbol warns of a possible fault. Failure to observe the instructions given in this warning may result in the device and any connected facilities or systems to it develop a fault or fail completely.



Note

This symbol brings important information to your attention.

2 Introduction

2.1 Aim of the manual

This manual shall allow the user to install, start, operate and parameterise the valve coupler. In addition, it provides all necessary information of the status/fault messages, device safety and monitoring functions and of fault diagnosis and fault elimination.



Note

Some sections of the manual require special knowledge and experience in the field of explosion protection as well as planning, design and implementation of field bus systems with the PROFIBUS-PA, i.e., there is no introduction into the PROFIBUS for newcomers or inexperienced users for space reasons. For further information refer to the bibliography in the appendix and the relevant literature and publications of PROFIBUS Nutzerorganisation e.V. (www.profibus.com).

Within this manual reference is made to the bibliography. These references are given in the form /3/.

In addition, many terms and abbreviations used in this manual are explained in the appendix.

2.2 Intended use

The valve coupler FD0-VC-Ex4.PA is a field device for the field bus system PROFIBUS-PA which corresponds to the FISCO model. It is used to operate intrinsically safe low power auxiliary valves and their final position feedback contacts (sensors or mechanical switches) within hazardous areas, e.g. in the chemical and petrochemical industries. The valve coupler is used in ignition protection II (1) 2G EEx ia IIC T4. Supply is via a segment coupler. Data are transferred bi-directionally via PROFIBUS-PA, the segment coupler and via PROFIBUS-DP to a higher-level PLC or PCS.



Warning

The protection of operators and plant is not ensured unless the device is used for the purpose intended.

2.3 Responsibilities of the user

Before installing and commissioning the valve coupler, the user must ensure that he is conversant with the device by reading and understanding the manual. Various procedures and instructions in this manual require special precautions in order to ensure the safety of personnel.



Warning

Work carried out on/with the device must only be undertaken by qualified specialist personnel, duly authorised by the operator, who have read and understood this manual.

2.4 Safety instructions



Warning

*When using intrinsically safe devices in accordance with EN 50020, follow the EC Type Examination Certificate and the national regulations for installations.
 In addition, follow all applicable standards, directives and factory regulations as well as the relevant publications of the PROFIBUS user group for the subject PROFIBUS-PA.*

The PROFIBUS-PA connection for the valve coupler is a certificated, intrinsically safe circuit, in accordance with the FISCO model.

*In order to ensure the intrinsic safety of the complete PROFIBUS-PA segment, **all** the field devices and associated apparatus (Segment couplers) connected to this PROFIBUS-PA segment must be certificated in accordance with the FISCO model.*

PROFIBUS-PA Valve Coupler FD0-VC-Ex4.PA

Introduction

The respective maximum values of the field devices and of the valve coupler must be considered in the sense of explosion protection (**Demonstration of intrinsic safety**) when interconnecting the intrinsically safe field devices (Auxiliary valves, sensors, etc.) with the intrinsically safe circuits of the valve coupler.



In case that the valve coupler was operated with non-intrinsically safe signals it must not be used in hazardous area then and/or be switched with intrinsically safe circuits.

Warning

*Repair work at devices with intrinsically safe circuits shall be carried out by qualified personnel with due consideration given to the applicable regulations.
We recommend urgently to have repairs made by the manufacturer. No guarantee claims will be accepted by Pepperl+Fuchs GmbH resulting from improper repair work.*

2.5 Marking

The following identification is provided at the valve coupler FD0-VC-Ex4.PA:

Pepperl+Fuchs GmbH
D-68307 Mannheim

FD0-VC-Ex4.PA
CE 0102
PTB 98 ATEX 2210 II (1) 2G EEx ia IIC T4

3 Product description

3.1 Delivery package

Included in the delivery package of the device are:

- A device FD0-VC-Ex4.PA
- One product attachment (instruction manual, data sheet)

The following parts are not included in the delivery package of the device, however, can be requested free of charge up to the number of devices ordered:

- Manual, German and English, incl. data carrier (disk 3,5" or CD) with GSD file and DTM-driver



Other accessories see section 3.3 and product catalogue of Pepperl+Fuchs.

Note

3.2 System structure

The valve coupler FD0-VC-Ex4.PA is a field device for system structure PROFIBUS-PA corresponding to the FISCO model. A maximum of four intrinsically safe low power auxiliary valves and a maximum of eight final position feedback contacts (PFCs; NAMUR sensors or other mechanical contacts) can be connected within areas subject to explosion hazards or areas which are not subject to explosion hazards. An auxiliary valve is used as a pilot valve for one actuator which can be provided with limit position feedback contacts to feed back the drive position. The term valve as used within the manual means the overall chain consisting of auxiliary valve and actuator.

PROFIBUS-PA and the connected devices are supplied by a segment coupler which is also the interface between the areas subject to explosion hazard and not subject to explosion hazard.

For PROFIBUS-PA a screened twisted two-wire cable is used. Via this two-wire cable the field devices are supplied and data are exchanged. PROFIBUS-PA allows branches as shown in figure 3.1.



For further information of PROFIBUS-PA and important notes for planning and design please refer to /4/.

Note

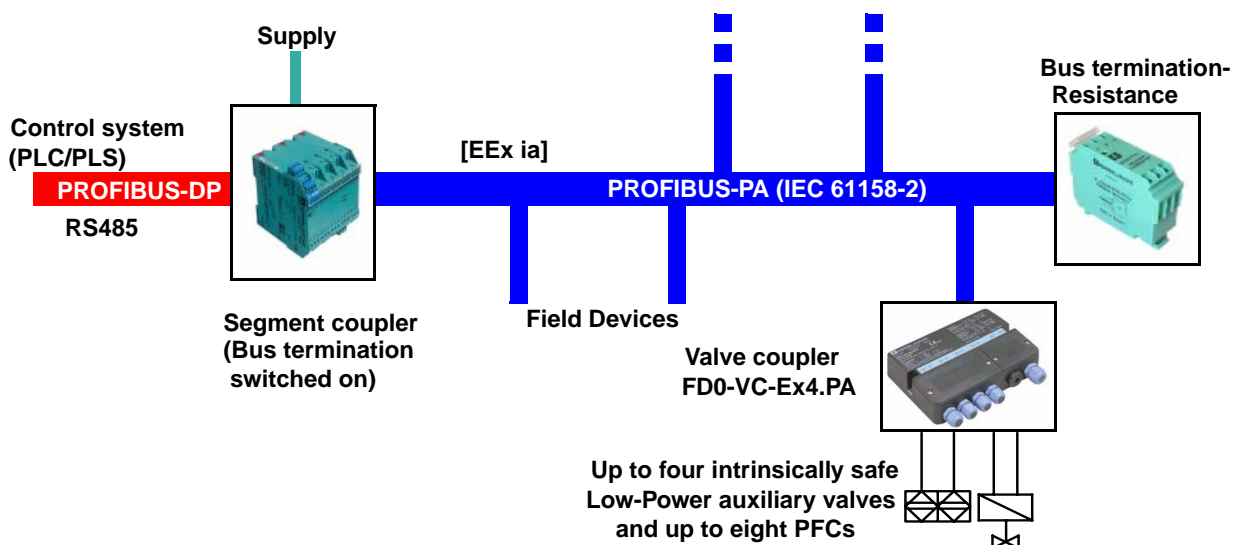


Figure 3.1: The valve coupler FD0-VC-Ex4.PA at PROFIBUS-PA

PROFIBUS-PA Valve Coupler FD0-VC-Ex4.PA

Product description

3.2.1 Device description

The valve coupler is accommodated in a housing for panel mounting. This housing may also be mounted at a pipeline using specific accessories. The device has been designed for the ignition protection class "intrinsic safety" and can be arranged in the field subject to the approval. The connector terminals of the field bus are spatially and galvanically separated from those of the auxiliary valves and PFCs. LEDs on top of the terminal blocks indicate the instantaneous status of the valve coupler locally.

- PWR (power): green (continuous light) = supply voltage available
- COM/ERR: red (continuous light) = Hardware fault
red (flashing) = no bus activity or bus fault
- IN/OUT CHK: red (continuous light) = Fault code for a hardware fault detected during acceleration.
red (flashing) = channel fault; for the cause of the fault refer to section 9.

For the wiring and evaluation of the final position feedbacks the 2:1 procedure is used which is described in more detail in section 3.2.5.

Monitoring and diagnosis features are integrated in the field device. The valve coupler can record automatically the lead breakages or short-circuits, carry out position dependent functional tests (cyclic function test, section 6.3.3.4) and count the setting operations of the valve.

The valve coupler works at PROFIBUS-PA as a modular slave and corresponds to PROFIBUS-PA profile 3.0.

Each of the four valves (drives) including PFCs is illustrated as an own channel at the bus, i.e. each valve is assigned an own module (type DO, discrete output, digital output) for data exchange independent from each other via PROFIBUS-PA.

Figure 3.1 shows the internal structure of the valve coupler and also the galvanic separation can be seen there.

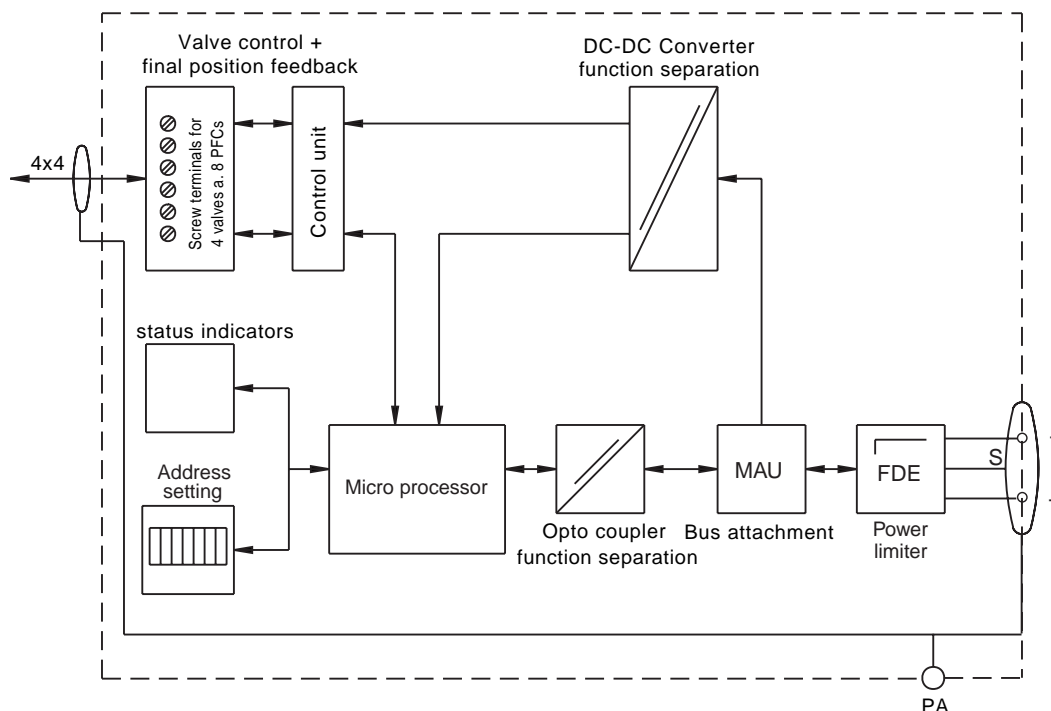


Figure 3.2: Mimic diagram of valve coupler FD0-VC-Ex4.PA

3.2.2 Description of communication

The two types of communication, cyclic and acyclic data exchange exist in PROFIBUS-PA.

In cyclic data exchange, the useful data are transferred between master (control system) and slave (field device) at regular intervals. Useful data are the set value of the valve, the final position feedbacks, and alarm messages. The bus cycle time mainly depends on the number of bus stations and the amount of data transferred.

In acyclic data exchange, the data, e.g. device parameterising, diagnostic information, commands, and useful data are transferred if required.

It is convenient to parameterise the device by means of acyclic communication prior to cyclic communication and to put all parameters to the adjustment required.



Note

For further information of the planning and design of PROFIBUS-PA bus systems in hazardous and safe areas refer to/4/.

3.2.3 Auxiliary valves which can be connected

The valve coupler FD0-VC-Ex4.PA has been designed particularly for intrinsically safe low power auxiliary valves in 6V design, which control the supply of compressed air to the drive.

The following circuit values are applicable (per channel):

$$U_S = 6.4 \text{ V} \dots 7.9 \text{ V}$$

$$I_S = 1.5 \text{ mA (inrush current of the valve)}$$

$$I_{\text{Hold}} = 1.0 \text{ mA (holding current with the valve switched on)}$$



Attention

Do not connect any additional current consumers to the valve circuit (e. g. LEDs). If additional consumers are connected to the valve circuit, successful operation of the valve coupler cannot be ensured.



Note

The valve control outputs of the valve coupler can also be checked for correct functioning without connected valves by simulating the valve by a 3 kΩ resistor (see section 9.3). In deactivated state, via this resistor a voltage of approx. 0.3 V and in activated state a voltage of approx. 3 V can be measured. It is not possible to connect a voltmeter direct to the open terminals of the valve output because then a voltage U_S of 6.8 V... 7.4 V is measured independently of the state.

To switch on, the auxiliary valve is triggered with an increase inrush current I_S for a short period of time. Then it is held in its position at the lower holding current I_{hold} .



Note

Suitable valves are offered, among others, by Samson, ASCO /Joucomatic and Herion. For information of suitable valve types please refer to the data sheet and Internet and to Pepperl+Fuchs.

3.2.4 Final position feedback contacts which can be connected

Two final position feedback contacts per valve can be used for detecting the valve positions. These may be NAMUR proximity sensors or mechanical switches. The binary signals of both PFCs are requested alternately from the valve trigger equipment in the 2:1 procedure via a pair of cores and must thus be suitable for this procedure or be provided with a polarised diode (see section 3.2.5).

3.2.5 Description of 2:1 procedure

The 2:1 procedure allows to transfer two independent binary signals to a pair of cores without bus system. To do so, the two sensors or mechanical contacts are triggered and evaluated in time multiplex mode anti-parallel (see figure 3.3).

A prerequisite of this procedure is that the sensors/mechanical contacts are provided with a polarised diode and one of the two sensors/mechanical contacts is operated in polarised mode. When using NAMUR sensors from Pepperl+Fuchs as PFCs these polarised diodes are integrated. The connection is described in section 4.4.3.

PROFIBUS-PA Valve Coupler FD0-VC-Ex4.PA

Product description

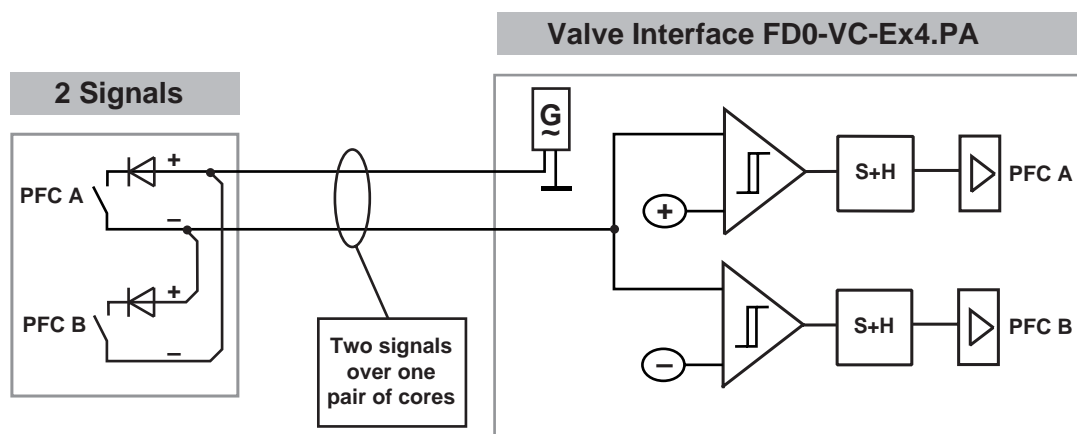


Figure 3.3: Principle of operation of the 2:1 procedure for proximity switches



Attention

Due to the time multiplex mode, not all NAMUR proximity switches can be operated. A selection of suitable NAMUR sensors from Pepperl+Fuchs, which have also an integrated polarised diode, is given in the following list. For other suitable sensors please refer to the data sheet. If sensors shall be used which are not listed in the data sheet, please contact Pepperl+Fuchs to clarify whether these can be used together with the valve coupler.

NCB1,5-6,5M25-N0(-V1)	NJ 0,8-5GM-N
NCB1,5-8GM25-N0(-V1)	NJ 1,5-6,5-N
NCB2-12GM35-N0(-V1)	NJ1,5-8GM-N(-V1)
NCB2-F1-N0	NJ 2-12GK-N
NCB5-18GM40-N0(-V1)	NJ 2-12GM-N(-V5)
NCN3-F24L-N4	NJ 2-V3-N(-V5)
NCN3-F24R-N4	NJ 3-18GK-S1N
NCN3-F25F-N4-V1	NJ 5-11-N(-G)
NCN3-F25-N4-V1	SC2-N0
NCN3-F31-N4-K(-V1/-V16/-V18)	SC3,5-N0
NCN4-12GM35-N0(-V1)	SJ 2-N
NCN8-18GM40-N0(-V1)	SJ 3,5-G-N
NJ 0,8-4,5N	SJ 3,5-N

3.3 Accessories

The following accessories are available for the valve coupler:

Pipe clip mounting set F-TMC	Order no.: 104930
Socket wrench SW19 for cable glands PG9	Available from: Hugro Armaturen GmbH Rudolf-Blessing-Str. 5 D-79183 Waldkirch Germany Hugro ref. no. 784.19

Part No.: 054340, Date of issue 26.01.2006

4 Installation



Note

For further information of PROFIBUS-PA and important notes for planning and design please refer to /4/.

4.1 Storage and transportation

For storage and transportation the valve coupler should be packed protected from impacts and dampness. Optimum protection is afforded by the original packaging.

In addition, the permissible ambient conditions must prevail (see datasheet).

4.2 Unpacking

Make sure that the valve coupler is undamaged. Damages should be reported to the mail or forwarding agent as well as the supplier.

The consignment should be in compliance with the order and shipment documents. Check the following items:

- Quantity supplied
- Device type and version in accordance with the type plate
- Accessories (manual, etc.)

Keep the original packing if the device must be stored and shipped at a later date.

4.3 Mounting

The housing of the valve coupler with protection degree IP65 is provided for wall mounting. For mounting use two screws (max. thread diameter 6 mm) for the through bores in the housing (see figure 4.1).



Note

The r.h. through bore for mounting the device is provided with a grounding plate at the side of the screw head so that the device can be grounded directly via the fixing screw when selecting a suitable place of installation.

When grounding the device via the fixing screw, ensure low-resistance connection with ground. Otherwise ground via a separate grounding cable.

The mounting set F-TMC is available as accessory for pipe installation (see section 3.3).

The place of installation should be well accessible for

- mounting
- electrical installation and cable routing
- the six device LEDs should be visible for quick fault diagnosis
- hardware setting of PROFIBUS device address.

PROFIBUS-PA Valve Coupler FD0-VC-Ex4.PA

Installation



Note

In narrow spaces it may be convenient to make the electrical connections prior to the mounting of the device, also because the PG9 cable glands for the valve connection are arranged very close to each other and there may be insufficient space for using an open-end wrench.

An SW 19 socket wrench is available as installation accessory for the valve coupler to facilitate screwing/unscrewing of the PG9 cable glands (see section 3.3).



Attention

To keep the protection degree IP65 of the housing, make sure when doing connection work that unused cable glands are provided with the supplied blank inserts and that these cable glands are tightened to seal.

Mechanical dimensions

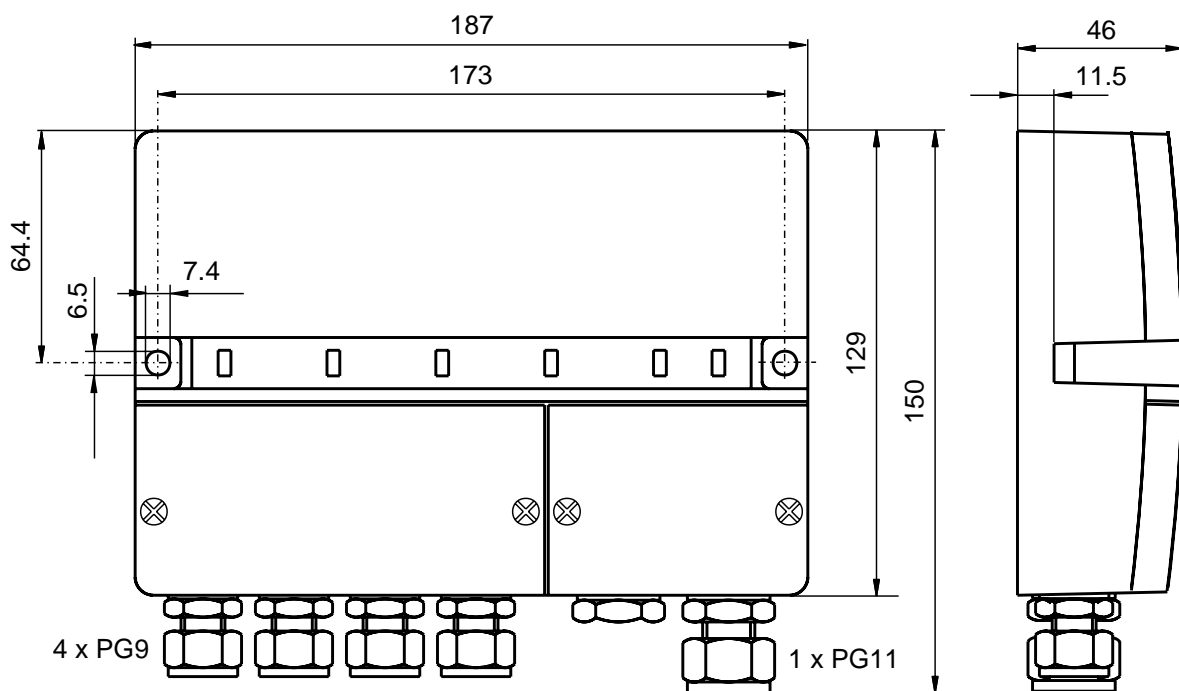


Figure 4.1: Mechanical dimensions of valve coupler FD0-VC-Ex4.PA

4.4 Electrical connection

4.4.1 General notes for connection



Work at live installations and electrical connections must be carried out by appropriately trained specialists only.

Warning

If the valve coupler is connected with an activated live PROFIBUS-PA segment make sure that the bus cables are not short-circuited so that the function of other bus stations is not affected.

Location of electrical connections

The connector terminals of the valve coupler for the connection of the valves with PFCs and the PROFIBUS are accommodated in two separate terminal spaces.



Figure 4.2: valve coupler with the terminal space covers removed



Attention

To keep the protection degree IP65 of the housing make sure when doing connection work that

- for the connection round cables only are used with the diameter of 4 mm ... 8 mm for the valves and 5 mm ... 10 mm for PROFIBUS,*
- the cable glands are tightened properly,*
- the sealings of the terminal space cover are not damaged and the screws of the terminal space cover are tightened properly,*
- and that unused cable glands must be closed by the supplied blank inserts and that these cable glands are tightened in a sealing way.*

PROFIBUS-PA Valve Coupler FD0-VC-Ex4.PA Installation

4.4.2 Connection of PROFIBUS-PA

The following illustration shows the location and designation of the connector terminals for the bus connection.

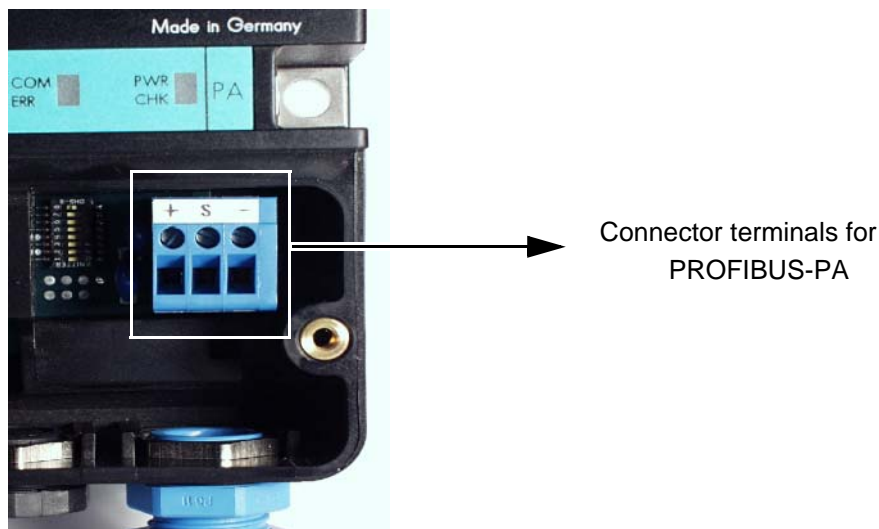


Figure 4.3: Location and designation of the connector terminals for bus connection

Terminal assignment

Terminal	Signal	Explanation
+	PROFIBUS-PA +	PROFIBUS-PA bus cable +
S	Screen	Screen of bus cable
-	PROFIBUS-PA -	PROFIBUS-PA bus cable -

4.4.3 Connection of auxiliary valves and final position feedback contacts

The following illustration shows the location and designation of the terminals for valve connection and PFCs.

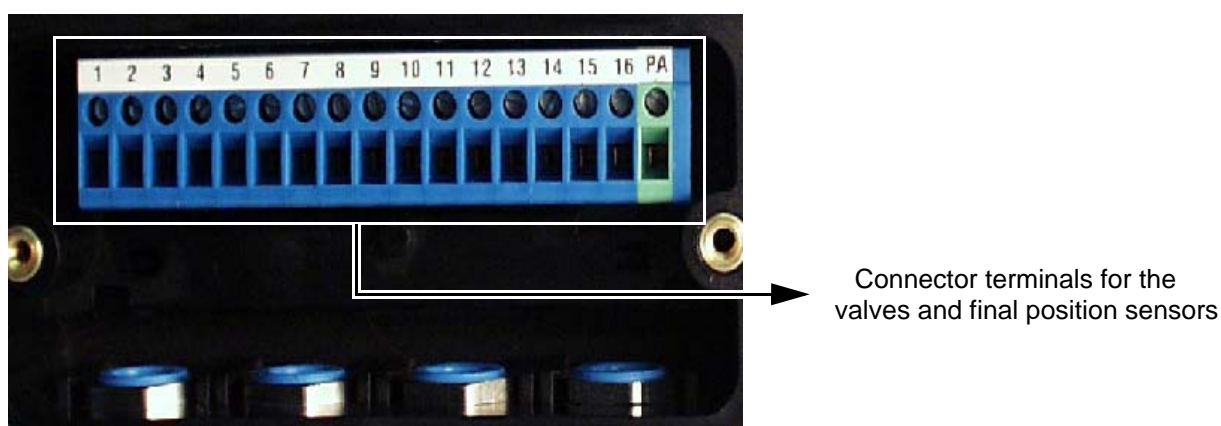


Figure 4.4: Location and designation of the connector terminals for the valve connection incl. final position feedback contacts

Terminal assignment

Terminal	Signal	Explanation
1	Valve 1 +	output, trigger signal for valve 1
2	Valve 1 –	
3	PFC 1A +, PFC 1B –	2 inputs, signals of 2 PFCs from valve 1, transfer by 2:1 procedure
4	PFC 1A –, PFC 1B +	
5	Valve 2 +	output, trigger signal for valve 2
6	Valve 2 –	
7	PFC 2A +, PFC 2B –	2 inputs, signals of 2 PFCs from valve 2, transfer by 2:1 procedure
8	PFC 2A –, PFC 2B +	
9	Valve 3 +	Output, trigger signal for valve 3
10	Valve 3 –	
11	PFC 3A +, PFC 3B –	2 inputs, signals of 2 PFCs from valve 3, transfer by 2:1 procedure
12	PFC 3A –, PFC 3B +	
13	Valve 4 +	Output, trigger signal for valve 4
14	Valve 4 –	
15	PFC 4A +, PFC 4B –	2 inputs, signals of 2 PFCs from valve 4, transfer by 2:1 procedure
16	PFC 4A –, PFC 4B +	
PA	Equipotential bonding	Connection for equipotential bonding and/or connection for the screen between the valve coupler and valve and PFC. Preferably no screened cable should be used here

As described in section 3.2.5, the PFCs are used in the 2:1 procedure. For the connection of sensors or mechanical contacts the possible connections are shown in figure 4.5; terminals 3 and 4 are given as examples.

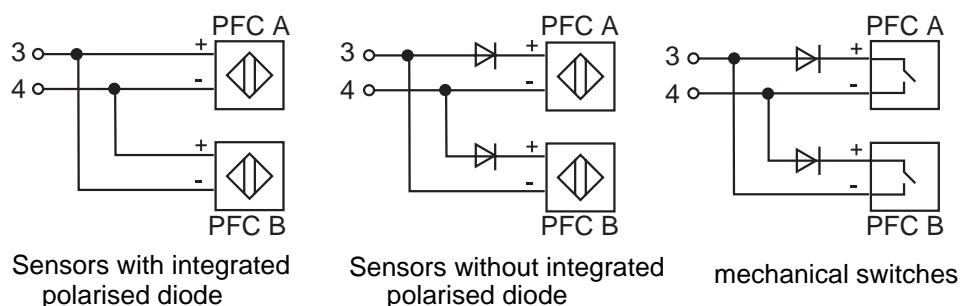


Figure 4.5: Connection of PFCs and additional polarised diodes



To use mechanical contacts as valve final position feedbacks, use a "Field Terminal Block" from Pepperl+Fuchs or two polarised diodes to be able to make use of the 2:1 procedure.



If mechanical contacts are used as valve final position feedbacks, also the lead breakage and short-circuit monitoring system can be used after adding an additional serial and parallel resistor in the lead.

The following is required:
one 1 kΩ series resistance (for monitoring short-circuit),
one 10 kΩ parallel resistance (for lead-breakage monitoring).

PROFIBUS-PA Valve Coupler FD0-VC-Ex4.PA

Installation

Whether an actuated sensor or an actuated mechanical contact represents an open or closed valve depends on the construction of the position feedback and cannot be shown in general. The valve coupler supports the following three versions of connection:

Position of actuator	Version 1 low active		Version 2 high active		Version 3 No Position Check	
	PFC A	PFC B	PFC A	PFC B	PFC A	PFC B
Open	0	1	1	0	1	0
Close	1	0	0	1	0	1
Intermediate position	0	0	1	1	1	1
undefined*	1	1	0	0	0	0

* if „No Position Check“ is enabled the status of the variable Readback (RB_D) is not set to „BAD“.

The signals of the PFCs are coded as follows:

high current ⇒ logical 1

low current ⇒ logical 0



Note

The setting of the parameter "sensor mode" (see section 6.3.2.2) must comply with the connected PFCs.

Default setting is „low active“.

4.4.4 EMC, screening, grounding

Cables are screened to exclude electro-magnetical interference.

The device is provided with an equipotential bonding terminal (PA) which is connected with the grounding plate of the right housing mounting bore inside the device. Preferably, the device should be grounded directly via the grounding plate during installation (see note in section 4.3). Large metallic objects with a proper galvanic ground connection are suitable, e.g. switch cabinets, tower shelf columns, etc.

Connect the screen of the bus cable to the terminal (S) of the valve coupler.

Preferably do **not** use screened cables for the connecting leads between the valve coupler and the valve and PFC.



Note

When using a double-screened bus cable, e.g. wire braided and metallised foil, connect both screens with each other low-resistively at the line end when preparing the cables.

Power supply cables generate quite a number of interferences, e.g. inrush current of a three-phase electric motor. Thus avoid parallel routing of supply cables and data/signal cables in the same cable duct.

4.5 Dismantling, packing and disposal

When dismantling the device, keep it in the original packaging for future use.



Note

The valve coupler should be disposed of according to the national specifications or subject to recycling procedures.

The device does not contain batteries which would have to be disposed of separately.

5 Introduction for commissioning (parameterisation, configuration)

5.1 System requirements for the commissioning

The following requirements must be fulfilled to start the valve coupler:

- For the **parameterisation** of the valve coupler (setting of device/channel specific characteristics such as the actuator fail action (mechanical safety position of the valve), lead monitoring, monitoring of the setting times of the valve, etc.) a suitable tool must be available to carry out parameterisation via a PROFIBUS-DP master. Examples of parameterisation tools include PDM by Siemens and Commwin II by Endress+Hauser.
Parameterisation can be carried out only if a device driver for the valve coupler is provided in the parameterisation tool. If not, the tool must be updated as described in its operating instructions. Drivers are available for the common parameterisation tools in the enclosed data carrier or in Internet under www.pepperl-fuchs.com.
- A tool is required for the **configuration** of the cyclic user data exchange (specification of slave, user data, etc.) via a PROFIBUS-DP master class 1.
- The PROFIBUS master is connected with a PROFIBUS-DP segment. No DP slaves need to be available at the DP segment.
- A PROFIBUS-PA segment is connected via a segment coupler (see figure 3.1).
- The bus terminations at both ends of the PROFIBUS-PA segment are mounted and/or switched ON.
- The correct bus parameters of the PROFIBUS-DP have been set for the segment coupler via the DP master (see operating instructions of segment coupler).
- A valve coupler is installed at the PROFIBUS-PA segment according to chapter 3.



Note

*If a Pepperl+Fuchs segment coupler is used, the PROFIBUS-PA valve coupler - from the view of the PROFIBUS-DP master - behaves as a PROFIBUS-DP slave.
For further important notes for the commissioning of a PROFIBUS system please refer to the user documentation of the configuration tools used.*

5.2 General for commissioning



Warning

*Make sure that no persons or the plant process are endangered when taking the valve coupler into operation.
An important advantage of the PROFIBUS-PA is that a new bus station can be connected while the bus segment is in operation. When connecting, however, make sure in this case that the bus cables must not be short circuited, otherwise the bus communication may be interrupted.*

Commissioning of the valve coupler is summarised in the following check list (section 5.3). It should be processed step by step, while actions which had been carried out before can be skipped. Steps which require increased actions indicate the chapter in which the exact procedure is described in detail.

For commissioning proceed as follows:

First, parameterise the device using the parameterisation tool. Thus the device functions as desired when being taken into operation at a later time. Parameterisation is an "acyclic" communication, i.e., the data to be read or written are read from the device or stored there as required.

Then the master class 1 defines and established a cyclic communication. Here the user data exchange of defined variables is carried out.

5.3 Check list for commissioning

Parameterisation:

- ✓ Setting of a fixed valid PROFIBUS address 0 ... 125 via the DIP switch of the device or setting the address 126 (default setting) for later assignment of the address via the configuration or parameterisation tool (see section 6.2.1).
If the address switches are modified during operation, a device reset (warm restart) must be released via the parameterisation tool or the device must be disconnected from the PROFIBUS-PA for a short period of time to take over the newly set address.
- ✓ Setting the parameters for specific devices (PROFIBUS Ident Number, Documentation parameters).
- ✓ Selection and setting of the operating mode (section 6.3.1.2).
- ✓ Setting of other channel specific parameters (actuator fail action, fault state, type of position feedback, etc.) (see section 6.3). In addition, a list of all parameters is given in the appendix.
- ✓ If desired, activate the hardware or software write protection to protect the parameters from overwriting (see section 6.4).

Configuration:

- ✓ Log on at DP master (section 7.2) and select the GSD file to be used (manufacturer specific, profile specific); if necessary, install GSD file (section 7.3).
- ✓ Configuration of modules (channels) according to the operating mode set (see section 7.4). For each valve to be used, a module must be assigned for the cyclic data exchange. For each unused valve an empty module must be assigned.

Operation:

- ✓ To have the actuator fail action (mechanical safety position) and the breakaway and transit times defined automatically the initialisation run can be started in the "Man" operating mode (see section 8.1.1).
- ✓ To control a valve manually (e. g. for test purposes), the valve can be opened and closed via a parameterisation tool in the "Man" mode (see section 8.1.2). During this process the default setpoint values of the cyclic user data exchange are ignored.
- ✓ A channel can be subjected to simulation in each mode of operation. It is possible here to specify final position feedback of the valve transferred to the control system via a parameterisation tool (see section 8.2).

6 Parameterisation

6.1 General




This chapter describes the parameterisation of the device. Proceed according to the check list specified in the previous chapter.

All parameters are given in plain text clearly in tables according to functions in the relevant tools. However, the representation of the individual tools may differ widely. Also the designation of the parameters is not always uniform. The different terms should, however, allow conclusions to the function and thus to the terms used here.

In general, a distinction is made between device specific (existing once only) and the channel specific (provided for each channel) parameters. Further subdivision is the classification in function, diagnosis and documentation parameters.

This structure is given in the following parameter trees.

The parameters are identified with the following symbols:

- : characterises a function parameter. Parameters which are required for operation and which determine the parameters, without the correct setting of which no proper operation of the valves or PFCs would not be possible.
- : characterises a diagnosis parameter. These parameters control additional device and diagnosis functions which have no influence on the basic functions of the valves. In addition, they provide important feedbacks for fault diagnosis and prevention. Also, this information is required for inquiries with Pepperl+Fuchs.
- : characterises a documentation parameter. These are parameters which are used for the documentation and description of the device and the measuring points. They have no effect on the device functions.




Note

The meaning of the parameters is described in detail in this chapter. In addition, they are included in a reference list in the appendix, section 10.1.


PROFIBUS-PA Valve Coupler FD0-VC-Ex4.PA

Parameterisation

device specific parameters

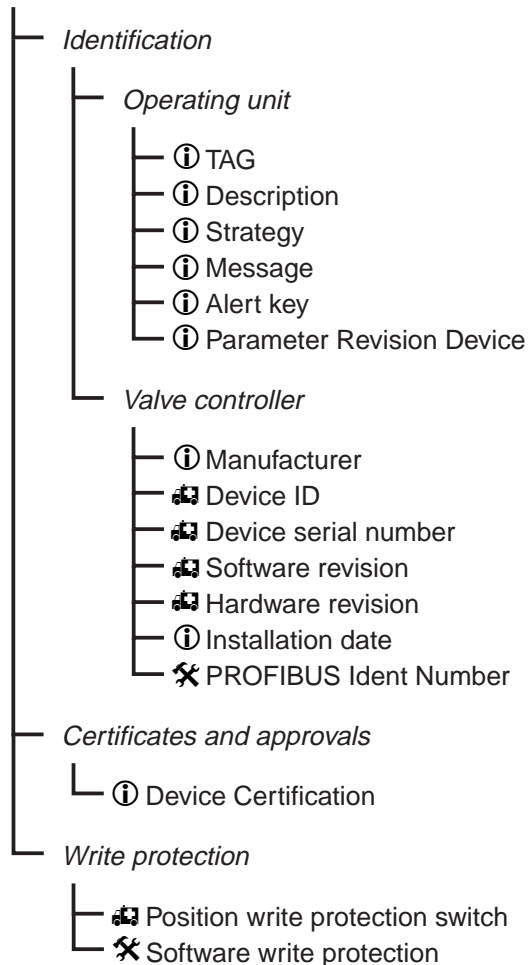

channel specific parameters (channel 1 ... 4)

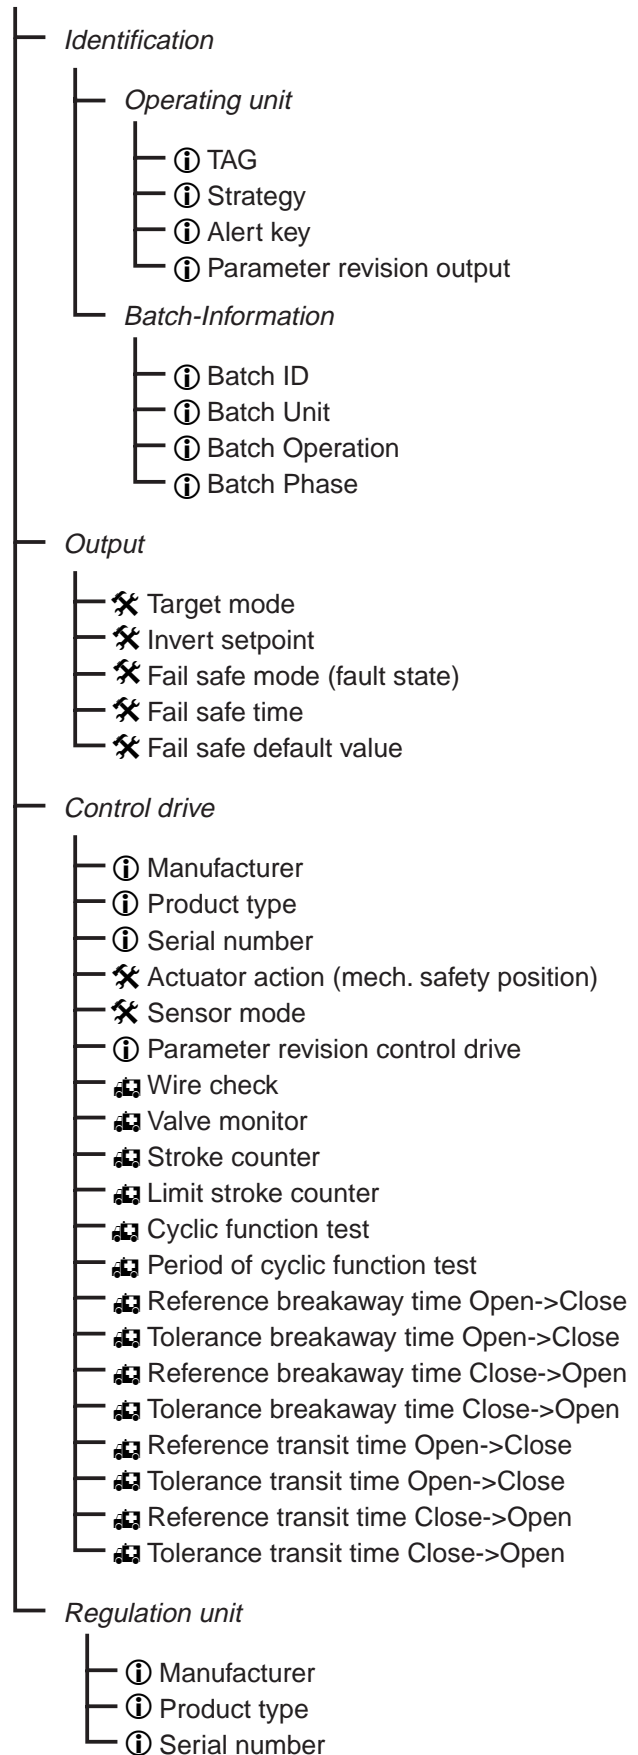

Part No.: 054340, Date of issue 26.01.2006

6.2 Parameterisation of the device specific characteristics

6.2.1 Set PROFIBUS address

6.2.1.1 Setting a fixed address without modification feature via bus

Normally, the PROFIBUS stations are assigned fixed addresses in the range 0 ... 125. For the valve coupler the address is set via the DIP switches 1 to 7 in the r.h. terminal space. Setting is made as a binary digit (see figure 6.1).

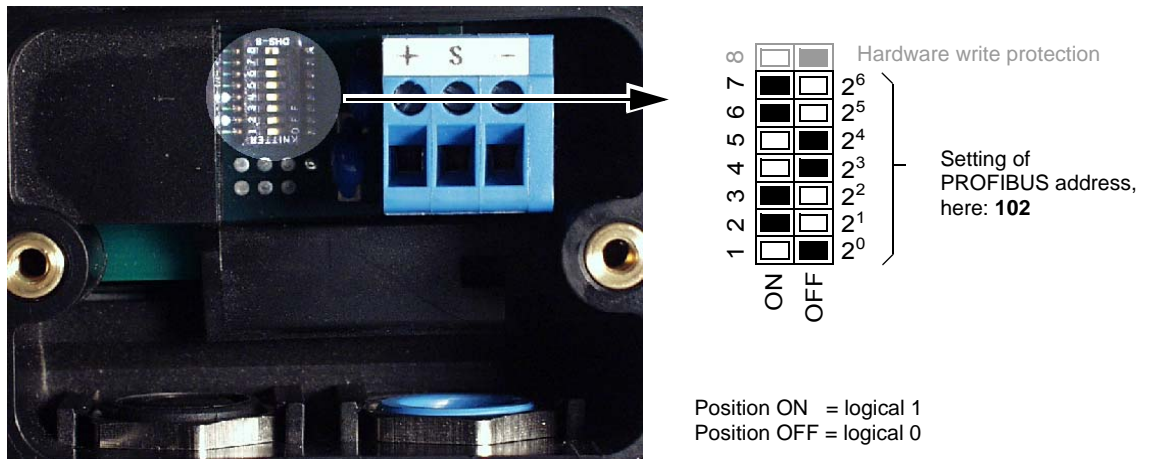


Figure 6.1: Position of DIP switches to set the PROFIBUS address

Address 126 must remain free for the address assignment via software commands (see section 6.2.1.2) in order to prevent address conflicts with new devices which are always supplied with this address.

As soon as an address has been set in the range 0 ... 125, any trial to modify the PROFIBUS address by means of a software command, is rejected. In this case, setting by DIP switches has priority.

Thus a new address can be changed only by repeating the process described here.

For the valve coupler the switch position 127 is identical with switch position 126 and is thus interpreted as address 126.



Note

To accept the set address, a device reset must be released via a software command (warm restart) or the device separated from the PROFIBUS-PA for a short period of time.

When supplied, address 126 is set at the DIP switches.

6.2.1.2 Setting an address with modification feature via bus

The valve coupler allows to assign an address via the bus. Here the address 126 must be set via the DIP switches. This is the case with switch position 126 (factory setup) and 127. Whether and how this software setting can be made is described in the operating instructions of the configuration or parameterisation tool used.

Furthermore has to be noticed:

- As long as no address is set via the software command, address 126 is used.
- If an address has been set via the software command, this address is used also if the device had been separated from the PROFIBUS PA in the mean time.
- If an address 0 ... 125 is set via the DIP switches, this address has priority and the software address is cleared.

6.2.2 Setting the PROFIBUS Ident Number

For PROFIBUS each field device type of each manufacturer (e. g. the valve coupler FD0-VC-Ex4.PA from Pepperl+Fuchs) is assigned a PROFIBUS Ident Number for unambiguous identification of the latter. Via this number a field device is connected with a related GSD file, i.e. a GSD file exactly describes a field device type of a manufacturer.

When starting the cyclic communication a check is made by means of the Ident Number whether the devices connected under the respective address correspond to the devices projected there. If not, an error is indicated.

However, this makes it impossible to replace devices of different manufacturers, but with the same function, by each other. To enable this interchangeability, the devices which correspond to the PROFIBUS-PA profile have been divided in device classes. The devices in these device classes have been assigned another Ident Number. Now they have the same Ident Number and thus the same GSD file. The valve coupler FD0-VC-Ex4.PA corresponds to device class 4 DO.

Thus the valve coupler has two possible Ident Numbers and thus also two GSD files:

- the manufacturer specific one with the Ident Number 0841h,
- the profile specific one with the Ident Number 9733h.

The Ident Number with which the valve coupler shall operate is set via the parameter "PROFIBUS Ident Number".



In the device class the devices are divided in function oriented classes only. In addition to the valve coupler FD0-VC-Ex4.PA also e. g. a four-channel relay output or a four-channel valve coupler without final position feedback corresponds to device class 4 DO.

If the profile specific Ident Number is used, make sure that the device used has all characteristics required for the application. This is no longer ensured by the automatic check when starting the cyclic communication.

6.2.3 Setting the documentation parameters

The "installation date" parameter offers the possibility to document the date of installation.

In addition in the parameters "TAG" (measuring point designation), "description", "strategy", "message" and "alert key" any value can be stored.

6.2.4 Other device parameters for specific devices

The following cannot be modified: "manufacturer", "device ID", "device serial number", "software revision" and "hardware revision". They are used as additional diagnostic information when contacting Pepperl+Fuchs.

The "position write protection switch" parameter provides the feedback of the position of DIP switch 8 (hardware write protection, see section 6.4) and thus provides an important diagnostic information (see section 9). The "software write protection" is also used as a write protection and is described in section 6.4.

In the "Device Certification" parameter the number of the EC Type Examination Certificate is stored.

"Parameter revision device" indicates the number of modifications of the device parameters. The parameter itself cannot be modified.

6.3 Parameterisation of the channel specific characteristics

6.3.1 Responses of the output to the setpoint value

6.3.1.1 Introduction in the user data structure and importance of the setpoint value

This section gives information of the arrangement of user data, the setpoint value and the status, knowledge which is required in the following sections.

Importance of the setpoint value

The setpoint value controls the set position of the whole actuator. The setpoint value is a number from 0 to 255 (1 byte). The set position may be either "closed" or "open".

Such a setpoint value specification is contrary to quite a number of conventional devices in which e. g. the number "0" is coded with "valve current OFF" and "1" with "valve current ON". Thus it is important for the device to know, whether the current for the auxiliary valve must be ON or OFF in the "Open" position. This is specified by the "actuator fail action" parameter (see section 6.3.2.1). This parameter shows which status is assumed by the actuator when the current of the auxiliary valve is OFF.

Which number(s) correspond to which set position depends on the setting of the "invert setpoint" parameter. If this parameter is set to "OFF", the setpoint value is not inverted and setpoint value "0" controls the drive into the "closed" position, setpoint values "unequal to 0" (i.e., 1 ... 255) into the "open" position.

However, if this parameter is set to "ON", the coding of the setpoint value is inverted, i. e., setpoint value "0" controls the drive into the "open" position, setpoint values "unequal to 0" (i.e., 1 ... 255) into the "closed" position.

Three examples:

1. "Invert setpoint" is OFF. The actuator moves into the closed position ("closed"), when the current of the auxiliary valve is OFF. "Actuator fail action" must be set to "closed".
If the setpoint value is "0" ("closed"), the auxiliary valve is not triggered. In this case, "0" means "current OFF".
2. "Invert setpoint" is OFF. The actuator moves into the open position ("open"), when the current of the auxiliary valve is OFF. "Actuator fail action" must be set to "open".
If the setpoint value is "0" ("closed"), the auxiliary valve is triggered. In this case, "0" means "current ON".
3. "Invert setpoint" is ON. The actuator moves into the closed position ("closed"), when the current of the auxiliary valve is OFF. "Actuator fail action" must be set to "closed".
If the setpoint value is "0" ("open"), the auxiliary valve is triggered. In this case, "0" means "current ON".

Arrangement of user data

The setpoint value is specified by the variables SP_D or RIN_D. These variables consist of two bytes each. The first byte contains the setpoint value for the valve position, the second the related status. Setting the status correctly is very important as commands are given via the status and the changeover of operating modes ("RCas", section 6.3.1.4) is controlled.

Feedbacks are given by the variables RB_D and ROUT_D. These variables, too, consist of two bytes each. The first byte contains the feedback of the PFCs and/or the setpoint value feedback of the valve position, the second byte includes status information about failure of the channel (LB/SC) and the request to change over the operating mode ("RCas", section 6.3.1.4), thus to evaluate the status correctly is of utmost importance.

The status bytes consist of 2 quality bits (bits 6 and 7), the sub-status (bits 2 ... 5) and 2 limit value bits (bits 0 and 1).

The following table explains the states used in this chapter, a detailed description of all user data and states is given in section 7.6. It should be noted here that the states of the setpoint value specifications and feedbacks may assume different values and should be set and/or evaluated independently of each other.

PROFIBUS-PA Valve Coupler FD0-VC-Ex4.PA

Parameterisation

Binary value	Hex value	Meaning
00.....	00h ... 3Fh	"bad"
01.....	40h ... 7Fh	"uncertain"
10100000	A0h	"good (NC)-IFS" (initiate fail-safe); command for channel to go into the fault state.
10.....	≥ 80h	"good (NC)-OK"; valid setpoint value; all values 80h ... BFh except A0h.
11000001	C1h	"good (C)-IA" (initialisation acknowledge); clearance by master to change over to mode "RCas".
11000010	C2h	"good (C)-IR" (initialisation request); clearance request by slave to master to change over in the "RCas" mode.
11100000	E0h	"good (C)-IFS" (initiate fail-safe); command for channel to go into the fault state.
11.....	C0h	"good (C)-OK"; valid setpoint value.

(C) is for the "RCas" mode (Cascade).

(NC) is for all other modes (Not Cascade).

The status of the setpoint value must be set by the control system. Abortion of communication with the activated DP watchdog is an exception; in this case, the status is set automatically to "bad".

If, for example, a setpoint value shall be transferred to the valve, the setpoint value must be provided with the "good-OK" (80h) status.

6.3.1.2 Introduction into the operating modes (parameter target mode)

The "target mode" parameter determines the desired operating mode of the channel.



Note

The target mode is possibly set also via special software functions depending on the tool used.

It is possible to select one of four modes.

The two following modes are used for device maintenance:

- "O/S" (Out of Service): The channel is out of service; the valve output is made dead so that the drive moves into the mechanical safety position.
This setting is the standard setting for channels which are not used. In addition it should be used - when parameterising the channel - to avoid unintended control of the valve (this may happen e.g. if the "actuator fail action" or "invert setpoint" parameter is modified).
- "Man" (Manual): In this mode it is possible to manually control a channel by acyclic data exchange, e.g. using a separate tool, and to carry out maintenance and servicing functions. This operating mode is described in section 8.1.

The two following modes are used for operating:

- "Auto" (Automatic): This is the standard operating mode (default setting) for the cyclic user data exchange. Setpoint value specification is made by a higher-level control system via the variable SP_D. In a failure case, the valve is set to the parameterised fault state position (specified by "fail safe mode").
- "RCas" (Remote Cascade): This is a modified form of the "Auto" mode. This mode specifies a certain behaviour in a failure case.
In a failure case, the channel changes over to the "Auto" mode and returns to "RCas" only if requested by the master (control system). In this way it is possible to prevent the channel from automatically re-starting when the status of the setpoint value changes from "good" to "bad" and back to "good". This behaviour is described in section 6.3.1.4.

First of all, "out of service" should be selected for the phase of parameterisation and configuration.
 If the valve coupler shall then be put into operation it is necessary to change over the target mode to "Auto" or "RCas".
 To check the function of the valve coupler it is possible to bring it into the manual mode (see section 8.1).

6.3.1.3 Behaviour in the "Auto" mode of operation, case of a fault

If the device is in the "Auto" mode, the setpoint value is specified via the variable SP_D as long as the related state is at "good (NC)-OK".

If the status changes over to "bad", the valve is set to the fault state position after a time set in the "fail safe time" parameter which is then reported by a bit in the variable CB_D (section 7.6.7). The fault state position can be approached with the status "good-IFS" without waiting for the "fail safe time".

The "fail safe time" indicates the time interval, in seconds, between the occurrence of the fault and the release of the fault treatment routine (valve to be set into fault state position).

The fault state position is determined by the "fail safe mode" parameter. Here it is possible to select whether the valve shall keep the last position in case of failure (last valid setpoint value), or move into the mechanical safety position (specified by "actuator fail action"; current of auxiliary valve OFF) or whether it shall move into that position which has been set under "fail safe default value". The "fail safe default value" can be set to "open" or "closed".

Figure 6.2 shows when to set the fault state position. This is the case when

- a changeover is made explicitly by the "good (NC)-IFS" status. In this case, the fail safe time is not awaited, but the safe position is approached immediately.
- the status of the specified setpoint value is at "bad". If communication is aborted with the DP watchdog activated, the status automatically changes over to "bad".
- when switching ON the device.

The fault state position is left as soon as the conditions for approaching the fault state position have ceased to exist, i.e., when the status of the specified setpoint value has been reset to "good (NC)-OK" by the control system.

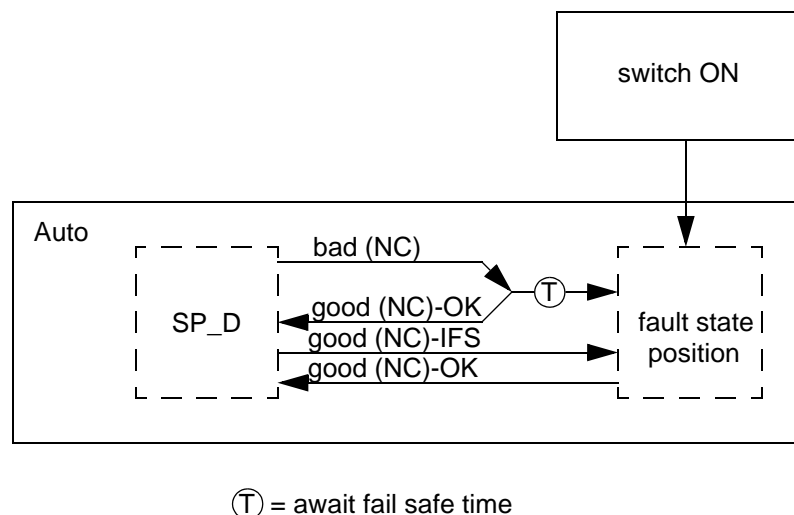


Figure 6.2: Behaviour in the "Auto" mode of operation, case of a fault

6.3.1.4 Behaviour of the device in the "RCas" mode of operation

Principle of operation

The "RCas" mode is used to prevent the channel from automatically re-starting when switching ON the device or when the status of the setpoint value became "bad". The setpoint value is specified via the variable RIN_D.

In the "Auto" mode a valve which is connected to the valve coupler leaves the fault state position and follows the setpoint value as soon as the condition for approaching the fault state position has ceased to exist.

In the "RCas" mode it is a particular feature that the channel can move to another mode than that operating mode which had been set. This is called "current mode". If the status of the setpoint value RIN_D is at "bad" for a longer period than the "fail safe time" the current mode changes over to "Auto" and the channel behaves as described in section 6.3.1.3. Thus an alternative setpoint value specification via SP_D can take place if the status of SP_D is at "good (NC)-OK" or the valve is set to the fault state position if the status of SP_D is at "bad". In this case it is not necessary to await for the fail safe time again.

Changeover back into the "RCas" operating mode is done only when a handshake took place via the status values of RIN_D and ROUT_D.

Handshake

When changing the current operating mode to "Auto" the status of ROUT_D changes to "good(C)-IR" at the same time in order to indicate that the current mode does not correspond to the target mode.

The status "good (C)-IR" of ROUT_D must be acknowledged by the status "good (C)-IA" to RIN_D. Thus the channel changes over back to "RCas" and the status of ROUT_D is set to "good (C)-OK". Now the status of RIN_D should also be set to "good (C)-OK" to prevent the channel to change over immediately to RCas by the status "good (C)-IA" in case of abortion and subsequent restart of communication.

Figure 6.3 shows these associations in graphical form.

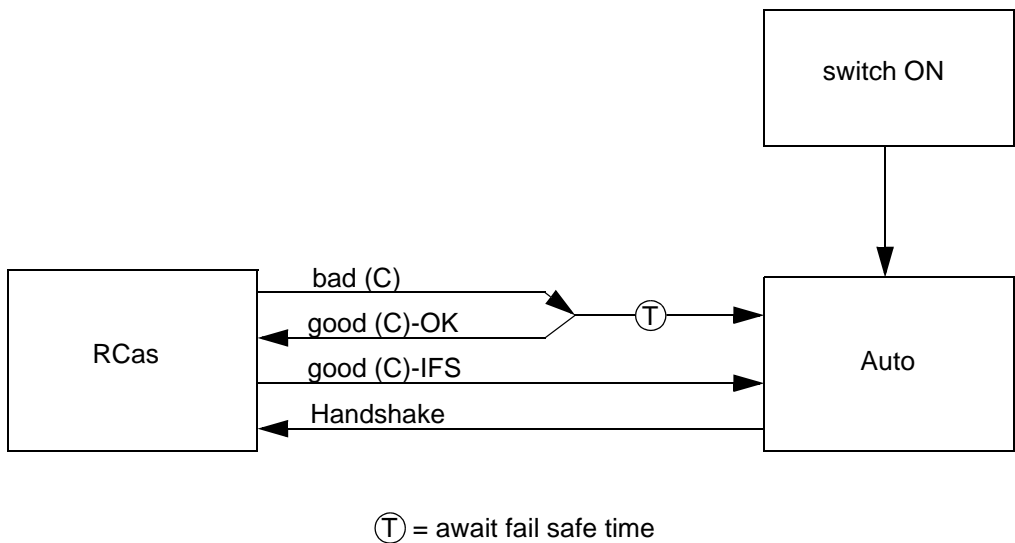


Figure 6.3: Behaviour in the "RCas" mode of operation, mode change over by handshake

6.3.2 Parameters concerning actuator and final position feedback



Note

For the "actuator fail action" parameter and the valve setting times (section 6.3.3.3) an initialisation run is provided (section 8.1.1) which determines these parameters independently. "Sensor mode", however, must always be set correctly.

6.3.2.1 Actuator fail action (mechanical safety position)

This is to identify the type of valve to be used (self-opening or self-closing) (see also section 6.3.1.1); the whole chain consisting of auxiliary valve, actuator and final controlling element must be taken into consideration right here. Setting must be made according to the mechanical drive.

Default setting is "closed", i.e., self-closing. This setting can be changed to "open" (self-opening). Setting of the actuator fail action indicates the status of the actuator if the current of the auxiliary valve is OFF.

6.3.2.2 Sensor mode

This parameter indicates whether the PFCs are "low active" (default setting), "high active" or there is "No Position Check". The setting must be made in correspondence with the mechanical and electrical conditions (see also section 4.4.3). Here the PFCs must give feedbacks in the valve positions "open", "intermediate position" and "closed", which correspond to one of three possible versions. "No Position Check" is equal to "high active", but if the position of the actuator is undefined the variable Readback (RB_D) is not set to "BAD".

Position of actuator	Version 1 low active		Version 2 high active		Version 3 No Position Check	
	PFC A	PFC B	PFC A	PFC B	PFC A	PFC B
Open	0	1	1	0	1	0
Close	1	0	0	1	0	1
Intermediate position	0	0	1	1	1	1
undefined	1	1	0	0	0	0

The signals of the PFCs are coded as follows:

high current ⇒ logical 1

low current ⇒ logical 0

Example:

- Mechanical switches are used as final position feedback contacts (PFCs) which have a high current flow in actuated state (switch pressed = actuated ⇒ high current, logical 1).
- The valve is closed when not controlled.
- If the valve is closed ("closed" position), PFC A is not actuated (0) and PFC B is actuated (1).
- Both PFCs are not actuated (0) in the intermediate position.

This setting is not possible as both PFCs are not actuated in the intermediate position like in version 1, in the "closed" position, however PFC A is not actuated and PFC B is actuated, i.e., exactly reversed as compared with version 1. To solve this problem, the supply cables to the PFCs must be exchanged. So the feedback of both PFCs is exchanged and PFC A is actuated (1) in the "closed" position and PFC B is not actuated (0).

Now the settings have to be made as follows:

- "Actuator fail action" is "closed" (determined by the valve only).
- "Sensor mode" is "low active" (default setting).

6.3.3 Channel specific parameters for diagnosis

6.3.3.1 Wire check

The most important diagnosis parameters include wire check for lead breakage (LB) and short circuit (SC). Following monitoring modes are possible:

Monitoring mode	Sampled device
LB + SC monitoring	Valve + PFC A + PFC B
LB- monitoring	Valve + PFC A + PFC B
SC-monitoring	Valve + PFC A + PFC B
IO-specific	Individual user settings

If the monitoring mode IO-specific is enabled, the settings can be independently made for each PFC or valve. In the case that the software version of the valve coupler is less than 1.5, no other settings than OFF can be made (IO-specific means OFF).



Note

SC monitoring of the auxiliary valve is possible only, for technical reasons, when the auxiliary valve is triggered. If the valve is triggered rarely but shall be checked for lead short circuit at regular intervals it is possible to activate the cyclic function test (section 6.3.3.4). During this test the supply leads of the auxiliary valve are checked for short circuit.

6.3.3.2 Stroke counter

The valve coupler can monitor the strokes of the valve. A stroke is beginning in the valve status "open" and continues with a closing and opening procedure. The stroke counter thus increases by 1 after the valve is closed and opened again. The number of strokes can be compared with a freely adjustable limit value. A message is released if this limit value is exceeded.

To activate the stroke monitoring process, either "stroke counter" or "time monitor and stroke counter" is set in the "valve monitor" parameter. For "time monitor and stroke counter" monitoring of the valve setting times is activated in addition (see section 6.3.3.3). The current counter reading is in the "stroke counter" parameter and can also be changed over to a specified value if the valve e. g. has already been in operation. The limit value is entered in the "limit stroke counter" parameter. Only when this limit value is exceeded, the message "limit stroke counter exceeded" is given (bit 16 in CB_D, see section 7.6.7).

6.3.3.3 Time monitoring

The valve coupler can monitor the breakaway and transit times of the valve. In the "valve monitor" parameter either "time monitor" or "time monitor and stroke counter" is set. For "time monitor and stroke counter" the stroke counter is activated in addition (see section 6.3.3.2).

A reference value and a tolerance value can be set for the breakaway and transit times. The tolerance value is used to avoid fault messages due to normal variations of the process and ambient conditions.

Depending on the parameterisation tool used, the unit of these time values can be different. This is why it is necessary to take into consideration the units indicated by the parameterisation tool when parameterising. If no unit is indicated, the time is set in multiples of 10 ms.

The breakaway and transit times are monitored during the opening and closing process. Exceeding a time is indicated if the time measured by the valve coupler is larger than the reference value plus tolerance or smaller than the reference value minus tolerance.

Blocking of the valve is indicated if the new final position is not reached after control and after the 5fold time of the breakaway time plus transit time.

The indications are given via the variable CB_D (see section 7.6.7).

For the definition of the breakaway and transit times refer to figure 6.4. The feedbacks of the PFCs are given both for the setting "low active" and "high active" of the "Sensor mode".

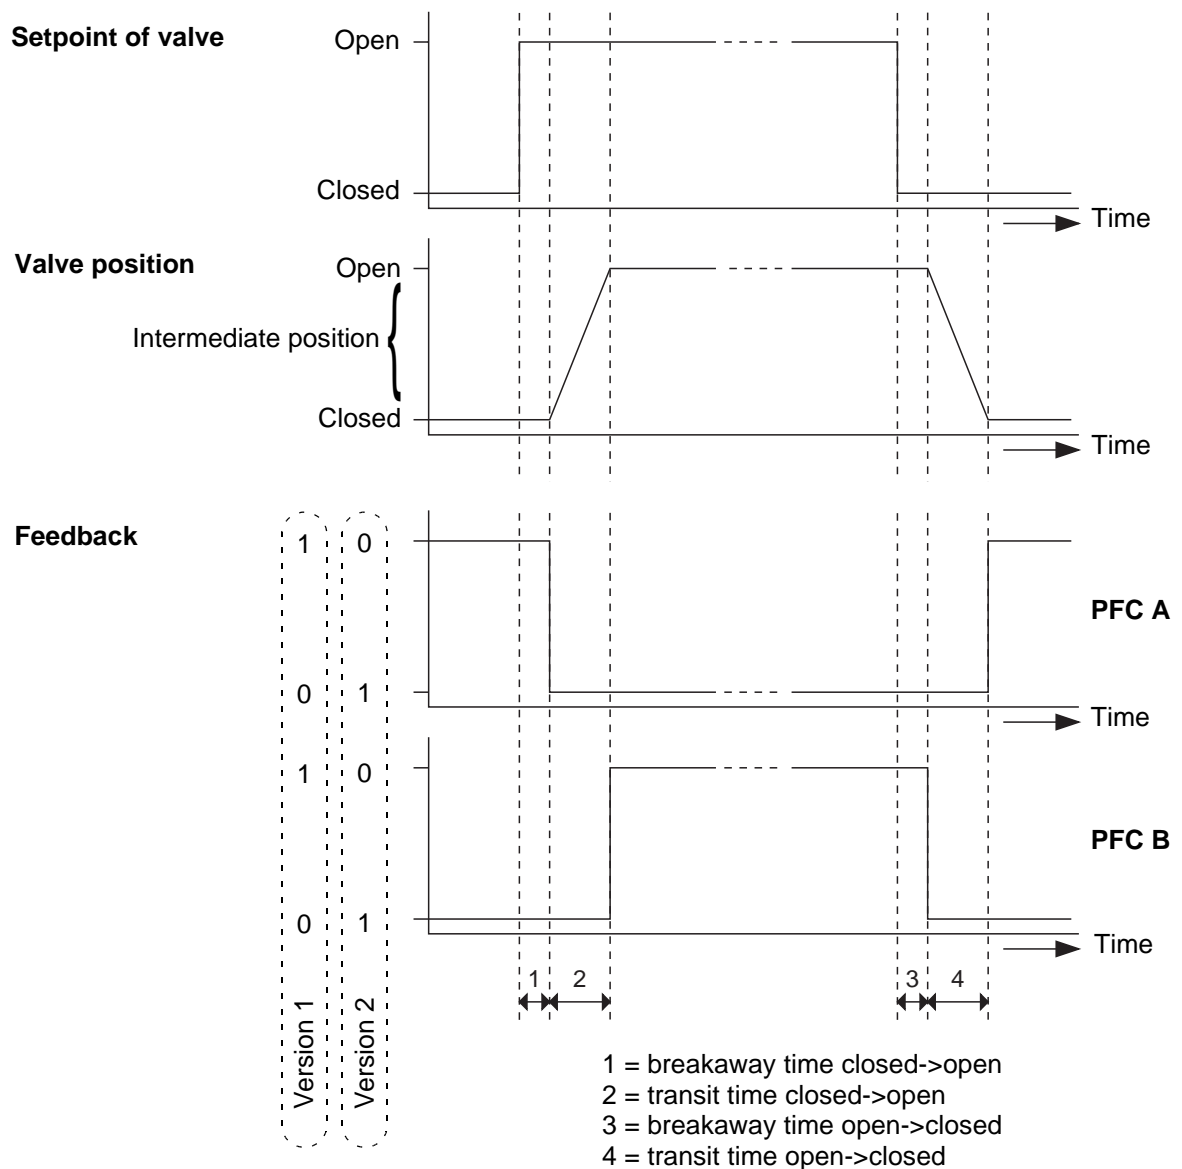


Figure 6.4: Definition of breakaway and transit times

6.3.3.4 Cyclic function test

A cyclic function test can be activated for each channel. This is appropriate e. g. if a valve is controlled rarely but shall be monitored for correct functioning at regular intervals. To do so, the "cyclic function test" parameter must be set to "ON" (factory setting is "OFF") and in the "period of cyclic function test" parameter the intervals are specified in which the test shall be carried out (see "sequence"). Depending on the tool used, the unit of the time to be set can be different. Thus it is necessary to take into consideration the unit specified by the parameterisation tool when parameterising. If no unit is specified, time adjustment is done in seconds.

Sequence

After the set time elapsed, the valve is controlled - for a short period of time - into the position opposite to the current position until breakaway of the valve is indicated by the relevant final position sensor. Thereupon the valve is controlled back immediately, i.e. a running process does not suffer interference from the test. This procedure is repeated periodically.

Monitoring of the valve times is active during the tests. The indication that the breakaway time, measured during the test, is exceeded or fallen below is given via the variable CB_D (see section 7.6.7). It also detects and indicates that the valve is blocked.

6.3.4 Setting the documentation parameters

The data "manufacturer", "product type" and "serial number" can be stored for the actuator and the actuating drive. "Parameter revision control drive" indicates the number of changing the parameters of the actuator and the actuating drive. The parameter itself cannot be modified.

In addition, "Identification" can be used to store information about the batch process (recipe) and the operating unit (measuring point). "Parameter revision output" indicates the number of changing the parameters of the output and identification. The parameter itself cannot be modified.

6.4 Write protection

The write protection is used to protect the parameters from modification. All acyclic write accesses are blocked. Also the write accesses to user data are blocked if these are transferred in an acyclic manner (e.g. some tools offer the opportunity to read and write user data in an acyclic manner).


There are two possibilities to activate the write protection:

- Activation via the DIP switch 8. This is the "Hardware write protection" (see figure 6.5).
- Activation via the "Software write protection" parameter.

The effects are the same, however, it is possible - in the case of the software write protection to overwrite the "write protection" parameter so that the write protection can be deactivated, too.



The "Software write protection" parameter is set in general via a specific software function. Representation and operation of this parameter thus depends on the parameterisation tool used.

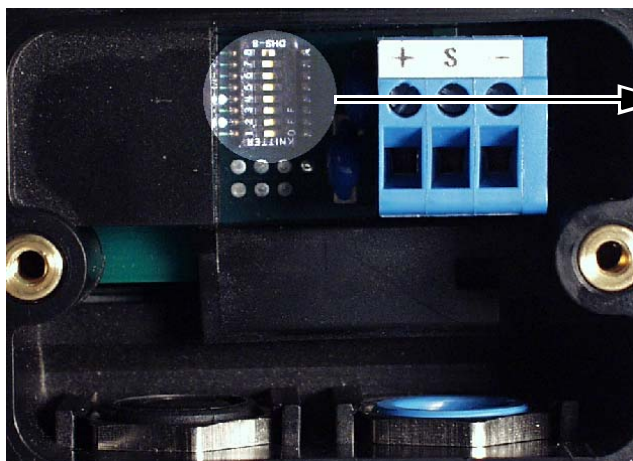

Hardware write protection			
8	<input type="checkbox"/>	2 ⁶	} PROFIBUS address
7	<input type="checkbox"/>	2 ⁵	
6	<input type="checkbox"/>	2 ⁴	
5	<input type="checkbox"/>	2 ³	
4	<input type="checkbox"/>	2 ²	
3	<input type="checkbox"/>	2 ¹	
2	<input type="checkbox"/>	2 ⁰	
1	<input type="checkbox"/>		
ON			
OFF			

Figure 6.5: Setting the hardware write protection

7 Configuration

7.1 General

This chapter describes how to set up the cyclic communication and the structure of user data with status. The check list from section 5.3 is continued.

7.2 Log in valve coupler at DP master

Before communication is possible with a PROFIBUS field device it must be designed in the PROFIBUS master.

In section 6.2.2 design has been prepared by specifying the GSD file to be used by selecting the PROFIBUS Ident Number.

Now a new slave must be created in the DP slave configuration in the design tool. If the manufacturer specific Ident Number was selected, now select the valve coupler FDO-VC-Ex4.PA from the device catalogue of the design tool and add this to the list of new slaves. If the profile specific Ident Number was selected, select a 4-channel digital output (4 DO). For details to these procedures please refer to the documentation of the design tool.



Note

Generally, the manufacturers of design tools include all available devices in the device catalogue of the design tool. If the valve coupler is not included in the catalogue, the necessary GSD file can be installed as described in section 7.3. Furthermore, it is possible to implement the catalogue via the manufacturer of the design tool.

7.3 Installation of GSD file

If the manufacturer specific Ident Number was selected and the valve coupler is not included as a slave in the device catalogue of the design tool, the catalogue can be updated by installing the GSD file which is provided on the enclosed data carrier. The GSD file is also available at the Pepperl+Fuchs homepage www.pepperl-fuchs.com.

The profile specific GSD file is available via the homepage of PNO (www.profibus.com).

How to import the GSD file in the design tool is described in the operating instructions.

7.4 Select module identifiers

If the valve coupler was designed in the PROFIBUS master, it is possible to select "module identifiers". This selection establishes whether and with what characteristics a channel is used. To do so, select for each of the four channels a text description (identifier) of the data to be exchanged with the field device from the GSD file of the field device, or, if necessary, enter the identifier bytes directly. The identifier bytes are given in plain language in the GSD file.



Note

The modules of a PROFIBUS-PA slave are so-called virtual slots. Depending on the manufacturer and software, different terms are used. The terms module, slot and channel are partially used as synonyms.

Different module identifiers can be selected for the four channels. The module identifier defines which user data are transferred in the cyclic data exchange.



Note

If not all four channels of the valve coupler shall be operated, the free channels between used channels must be assigned the empty module identifier. No identifier need to be assigned to unused channels which follow the last used channel.

PROFIBUS-PA Valve Coupler FD0-VC-Ex4.PA Configuration

The module identifiers consist of a combination of possible user data variables. To be able to represent the available module identifiers in a clear form, the individual user data variables are explained at first.

The variables may be input or output data. Output data are data which are transmitted from the control system to the process (device). Input data are transmitted from the process (device) to the control system.

The following user data variables can be used:

- SP_D: Specified setpoint value of valve position in the "Auto" mode. User data length 2 bytes output data.
- RB_D: Feedback of valve position and the states of the PFCs and their lead faults. User data length 2 bytes input data.
- CB_D: Detailed status, alarm, and fault signals of the valve. User data length 3 bytes input data.
- RIN_D: Specified setpoint value of host in the "RCas" operating mode. User data length 2 bytes output data.
- ROUT_D: Setpoint value feedback to host in the "RCas" operating mode. User data length 2 bytes input data.



Note

The contents and codes are described in section 7.6.

The following table gives all possible module identifiers (the combinations offered by the device) with the user data lengths which are transferred in the cyclic data exchange:

Identifier	User data length		Note
	Output data	Input data	
EMPTY_MODULE	0	0	Empty module
SP_D	2	0	Specified setpoint value
SP_D+RB_D	2	2	Setpoint value + feedback PFC
SP_D+CB_D	2	3	Setpoint value + diagnosis
SP_D+RB_D+CB_D	2	5	Setpoint value + feedback PFC + diagnosis
RIN_D+ROUT_D	2	2	Setpoint value host
RIN_D+ROUT_D+CB_D	2	5	Setpoint value host + diagnosis
SP_D+RB_D+RIN_D+ROUT_D+CB_D	4	7	Setpoint value host + feedback PFC + diagnosis



Note

The most frequently used module identifiers are SP_D+RB_D as well as SP_D+RB_D+CB_D. The channel is operated in the "Auto" mode. The "RCas" mode is used to implement a certain behaviour in case of failure.

The modes of operation and their use is described in section 6.3.1.2.

7.5 Example of configuration

The second and third out of four possible valves are assigned. Lead monitoring shall be carried out for both valves (CB_D). For the third valve, an additional final position feedback and monitoring shall be made (RB_D). The operating mode for the second valve is "Auto", for the third "RCas".

The list of the modules used should then have the following structure:

Pos.	Module	Use
1	EMPTY_MODULE	Valve 1: Empty module as the valve is not used
2	SP_D+CB_D	Valve 2: Specified setpoint value of valve with fault feedback in "Auto" mode
3	SP_D+RB_D+RIN_D+ROUT_D+CB_D	Valve 3: Specified setpoint value of valve with fault feedback and final position monitoring (likewise with fault feedback) in "RCas" mode. The identifier must contain the variable "RB_D" for the final position feedback.
4	EMPTY_MODULE or no specification	Valve 4: Empty module or no assignment as the valve is not used and no used channels follow.

The user data transferred to the device (output data) have a length of $0 + 2 + 4 + 0 = 6$ bytes.

The user data transferred from the device (input data) have a length of $0 + 3 + 7 + 0 = 10$ bytes.

7.6 Description of user data

7.6.1 General

The available variables have been described in section 7.4. These variables are explained in more detail in this section.

The variables SP_D, RB_D, RIN_D and ROUT_D consist of two bytes each. The first byte includes the setpoint value or the setpoint value feedback for valve control, the second byte contains the associated status. SP_D and RIN_D are output data (data to the device), RB_D and ROUT_D are input data (data from device).

7.6.2 Arrangement of the status of SP_D, RB_D, RIN_D and ROUT_D

Correct setting (output data) and evaluation (input data) of the status is very important as here the fault is reported, commands are given and the change over of operating modes is controlled. The status byte consists of 2 quality bits (bits 6 and 7), the sub-status (bits 2 ... 5) and 2 limit value bits (bits 0 and 1).

Initially, the quality bits define the quality of the data value roughly in the first byte; the sub-status gives detailed information of the quality.

Here only the two quality bits are explained for orientation; details will follow for the individual user data.

Bit no.								Meaning
Quality		Sub-status				Limit value		
7	6	5	4	3	2	1	0	
0	0							<i>bad</i>
0	1							<i>uncertain</i>
1	0							<i>good (NC) (Not Cascade)</i>
1	1							<i>good (C) (Cascade)</i>

7.6.3 Variable SP_D

This variable includes the specified setpoint value of the valve position in the "Auto" mode of operation. The setpoint value controls the set position of the whole actuating drive. The setpoint value is a number from 0 to 255 (1 byte). The set position can be "closed" or "open".



Note

*If the setpoint value shall be taken over by the valve coupler, **it is necessary** to transfer the value "good" (NC)-OK" (80h) in the status (second byte)!*

Such a specified setpoint value is contradictory to many conventional devices at which e. g. the number "0" is coded by "valve current OFF" and "1" by "valve current ON". Thus the device has to know whether the current for the auxiliary valve must be ON or OFF in the "open" position. This is defined by the "actuator fail action" parameter (see section 6.3.2.1). It indicates the status of the actuator when the current of the auxiliary valve is OFF.

Which number(s) correspond(s) to which set position depends on the setting of the "invert setpoint" parameter. If this parameter is at "OFF", the setpoint value is not inverted and the setpoint value "0" controls the drive into the "closed" position, setpoint value "unequal to 0" (i.e. 1 ... 255) into position "open".

However, if this parameter is at "ON", the coding of the setpoint value is inverted, i. e. the setpoint value "0" controls the drive into the "open" position, setpoint values "unequal to 0" (i.e., 1 ... 255) into the "closed" position.

Three examples:

1. Setpoint inversion is OFF. The actuator moves into the closed position ("closed"), if the current of the auxiliary valve is OFF.
If the setpoint value is "0" ("closed"), the auxiliary valve is not triggered. In this case "0" corresponds to "current OFF".
2. Setpoint inversion is OFF. The actuator moves in the open position ("open"), if the current of the auxiliary valve is OFF.
If the setpoint value is "0" ("closed"), the auxiliary valve is triggered. In this case "0" corresponds to "current ON".
3. Setpoint inversion is ON. The actuator moves in the closed position ("closed"), if the current of the auxiliary valve is OFF.
If the setpoint value is "0" ("open"), the auxiliary valve is triggered. In this case "0" corresponds to "current ON".

The status of SP_D makes a difference - except "good-IFS" - according to the quality only. There is no other differentiation. The relevant status values are:

Binary value	Hex value	Meaning
10100000	A0h	"good (NC)-IFS" (initiate fail-safe); command for channel to move to the fault state
10000000	80h	"good (NC)-OK"; valid setpoint value; which should be used as the standard value for "good".
11..... 10..... 01.....	≥ 40h	"uncertain", "good (C)", "good (NC)"; valid setpoint value; all values 40h ... BFh except A0h; The value 80h should be used preferably.
00.....	≤ 3Fh	"bad"; all values 00h ... 3Fh.

7.6.4 Variable RIN_D

This variable contains the specified setpoint value of the valve position in the "RCas" mode (see section 6.3.1.4). Coding is analogue to SP_D (see section 7.6.3), i. e. if RIN_D is 0 with the inversion switched OFF, the valve is closed, the valve is opened at all other values (1 ... 255); if RIN_D is 0 with the inversion switched ON, the valve is opened, the valve is closed at all other values (1 ... 255). The relevant status values are:

Binary value	Hex value	Meaning
11000000	C0h	"good (C)-OK"; valid setpoint value
11000001	C1h	"good (C)-IA" (initialisation acknowledge); clearance from control system to change to the "RCas" mode
11100000	E0h	"good (C)-IFS" (initiate fail-safe); command for channel to change to the "Auto" mode
10..... 01..... 00.....	≤ C0h	"good (NC)", "uncertain", "bad"; invalid setpoint value; change to "Auto" mode



Note

If the setpoint value shall be taken over by the valve coupler the value "good (C) - OK" (C0h) must be transferred after the handshake described in section 6.3.1.4 in the status (second byte)!

7.6.5 Variable RB_D

RB_D gives the feedback of the valve position and the states of the PFCs and their lead faults. Coding of information is given in the following table:

Bit	Meaning of feedback	
0+1	Valve position	0 = unknown, 1 = closed, 2 = open, 3 = intermediate position
2	Proximity sensor A	0 = actuated, 1 = not actuated
3		0 = no lead short circuit, 1 = lead short circuit
4		0 = no lead interruption, 1 = lead interruption
5	Proximity sensor B	0 = actuated, 1 = not actuated
6		0 = no lead short circuit, 1 = lead short circuit
7		0 = no lead interruption, 1 = lead interruption

The following table shows the status messages relevant to RB_D. Here the limit value bits in the "bad - sensor failure" error condition are used, also.

Binary value	Hex value	Meaning
10000000	80h	"good (NC)-OK"; feedback value valid
10000100	84h	"good (NC)-UE" (update event); 10 second message for parameter changes
00001100	0Ch	"bad (NC)-DF" (device failure); electric hardware fault. Send the device to Pepperl+Fuchs for repair.
00010000	10h	"bad (NC)-SF", sensor combination not allowed (section 9.5)
00010001	11h	"bad (NC)-SF", lead short circuit
00010010	12h	"bad (NC)-SF", lead interruption



Note

The failure states ("bad") have a higher priority than the "good" states, so that e. g. the "Update Event" is no longer transferred to the control system in case of a lead fault!

PROFIBUS-PA Valve Coupler FD0-VC-Ex4.PA Configuration

7.6.6 Variable ROUT_D

This variable provides the setpoint value of the valve which is re-transferred by RIN_D for monitoring. It does not include information of the states of the PFCs. The status is used chiefly to control the sequence of module change in case of failure (see section 6.3.1.4).

Relevant status values:

Binary value	Hex value	Meaning
11000000	C0h	"good (C)-OK"; valid setpoint value
11000010	C2h	"good (C)-IR" (initialisation request); clearance request by slave to master to change to the "RCas" mode.
11001100	CCh	"good (C)-NI" (not invited); "RCas" is not set as the target mode.
00001100	0Ch	"bad-DF" (device failure); electric hardware fault. Send device to Pepperl+Fuchs for repair.
00011100	1Ch	"bad-OS" (out of service); is set in the "O/S" mode

7.6.7 Variable CB_D

The variable CB_D provides detailed status, alarm and fault signals of the valve which are coded in bits. It consists of 3 bytes (24 bits):

Bit	Meaning	Reference
0	The valve is set to fault state	Section 6.3.1.3
1	unused	
2	unused	
3	unused	
4	After a correct switching process, the valve has left the related final position	Section 9.7
5	Lead breakage of valve	Section 6.3.3.1
6	Lead short circuit of valve	Section 6.3.3.1
7	unused	
8	Valve is just opening	
9	Valve is just closing	
10	Update-Event; 10 second message when changing the parameters of this channel	Section 7.6.5
11	The channel is in simulation mode	Section 8.2
12	PROFIBUS-DP diagnosis is currently active	Section 7.7
13	unused	
14	Valve moved into the mechanical safety position • in case of fault, if fault state = "actuator fail action" • in "Man" mode, if status of manual setpoint of valve is at "bad"	Section 6.3.2.1
15	A cyclic functional test is currently carried out	Section 6.3.3.4
16	The limit value for the stroke counter has been exceeded	Section 6.3.3.2
17	The breakaway time OPEN-CLOSED incl. tolerance has been exceeded/fallen below	Section 6.3.3.3
18	The breakaway time CLOSED-OPEN incl. tolerance has been exceeded/fallen below	Section 6.3.3.3
19	A fault occurred during the cyclic function test of the valve	Section 9.7
20	The transit time OPEN-CLOSED incl. tolerance has been exceeded/fallen below	Section 6.3.3.3
21	The transit time CLOSED-OPEN incl. tolerance has been exceeded/fallen below	Section 6.3.3.3
22	Actuating drive or valve mechanically blocked	Section 6.3.3.3
23	unused	

Part No.: 054340, Date of issue 26.01.2006

7.7 Description of slave diagnosis

If a fault occurs in the device or at a channel, the slave diagnosis is automatically transferred event-controlled. The exact cause can then be looked for using a parameterisation tool.

The slave diagnosis consists of 14 bytes and is structured as follows:

Byte no.	Bit	Value	Meaning
1 ... 6			Standard diagnosis acc. to PROFIBUS standard
7		08h	The bytes 7 ... 10 are provided for future extensions. The bytes 7 ... 9 for the valve coupler are assigned with fixed values. Byte 10 specifies the content of the bytes 11 ... 14 in a more detailed way.
8		FEh	
9		00h	
10		01h	a fault appears
		02h	a fault disappears
		03h	a fault appears and a fault disappears
11	0		Electrical hardware failure. Please return device to Pepperl+Fuchs for repair.
	1		Actuator blocked or fault during cyclic function test.
	2 ... 3		unused
	4		Checksum error EEPROM. Please return device to Pepperl+Fuchs for repair.
	5 ... 6		unused
	7		Initialisation run completed incorrectly
12	0 ... 4		unused
	5		Limit value of stroke counter exceeded, breakaway or transit time outside of limits
	6		unused
	7		During an existing cyclic connection the PROFIBUS Ident Number was parameterised with a different value. Consequence: After the next clearance time, e. g. triggered by a short-term voltage failure, no connection to the master can be re-established as this was configured with a different Ident Number.
13 ... 14			unused



Note

Bits of the diagnosis remain set as long as the cause for the message exists
If one of the bits of diagnosis is set, Bit 12 is set in the variable CB_D of all channels as a sign that a new diagnosis information is provided.

8 Operation

8.1 Manual operating mode

In this mode of operation it is possible to manually control a channel by acyclic data exchange, e.g. using a separate parameterisation tool, and maintenance and servicing functions can be executed.

When selecting the "Man" mode, the last status of the "Auto" or "RCas" mode is frozen.

8.1.1 Initialisation run

The "actuator fail action" (mechanical safety position) and the reference values for the breakaway and transit times and their tolerances can be taught in automatically by an "initialisation run". The initialisation run must be carried out individually for each channel. Whether and how the initialisation run can be started depends on the parameterisation tool used.

Sequence

Starting at the current valve position, the opposite final position is controlled and the breakaway and transit time is measured. As soon as the final position is reached, the valve remains in this position for a fifth of the transit time measured and returns then into the initial position. The breakaway and transit time is also measured here.

The measured times are taken over in the parameterisation of the relevant channel as reference value parameters for the breakaway and transit times. 30 % of the measured times are entered as tolerance values.



Note

During initialisation run the valve time parameters are write-protected in order to exclude access conflicts.

The "actuator fail action" (mechanical safety position) is detected and stored in the device based on the feedbacks of the PFCs (a prerequisite here is that the "sensor mode" parameter is set correctly).

8.1.2 Direct setpoint value specification

In the "Man" mode it is possible to specify a valve position with status bypassing the control system. The valve responds directly on this specified setpoint value without taking into account other parameters e.g. "invert setpoint").

This type of setpoint value specification is used primarily for test purposes to check the valve or the valve coupler for proper functioning.

8.2 Simulation

Simulation is available in any mode of operation. If activated, it is possible to specify the variable RB_D manually both of the data value and the status. Simulation is primarily used to check the implementation of the control system by simulating line faults (LB/SC) at the device or faulty set positions.

9 Diagnosis and error correction

9.1 General

This chapter gives hints on how to behave in case of faults and describes possible causes of fault.



Note

Faults and failures are reported by the valve coupler via the following (data) objects:

- *Light emitting diodes (see section 9.2)*
- *Variable "RB_D" and its status (see section 7.6.5)*
- *Variable "ROUT_D" and its status (see section 7.6.6)*
- *Variable "CB_D" (see section 7.6.7)*
- *Slave-diagnosis (see section 7.7)*

9.2 LEDs

The valve coupler is provided with 6 LEDs at the front side of the device which inform of the status of the device and of faults related to the hardware which must be eliminated in situ in general

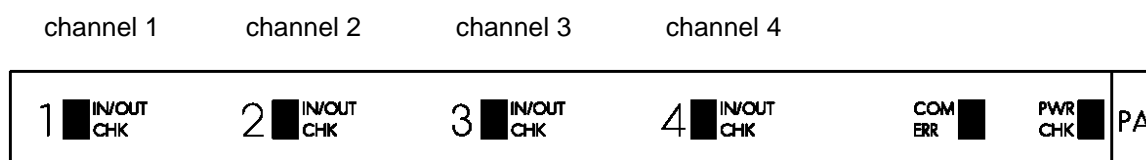


Bild 9.1: LEDs on the device

LED	States	Description
PWR CHK ¹	OFF	No power supply
	Permanently green	Power supply available, device is ready to operate
COM/ERR	OFF	Cyclic communication established to a class 1 master
	Red (flashing)	<ul style="list-style-type: none"> • Device was not configured with a class 1 master • Timeout in the cyclic communication
	Permanently red	Fault in device hardware, e. g. writing/reading error in EEPROM or valve voltage not available
IN/OUT CHK: (channel 1...4)	OFF	No faults detected
	Red (flashing)	<ul style="list-style-type: none"> • Lead breakage or short circuit of valve and/or of one PFC (only with activated line testing and operating modes unequal to O/S) • Fault in cyclic function test (only if this option had been activated)

¹ Note: The light intensity is low for reasons of power saving.




Attention

The LEDs "IN/OUT CHK" of the four channels indicate only fault states of the valves or final position feedback contacts, not the valve control!

9.3 Functional check without connected valves


The valve control outputs of the valve coupler can also be checked for correct functioning without connected valves by simulating the valve by a 3 kΩ resistor.




Note

The operating mode "Man" is used to manually control the channel, see section 8.1.2.

The voltage drop above the resistor, measured by means of a multimeter, indicates whether the output current for the auxiliary valve is ON or OFF:

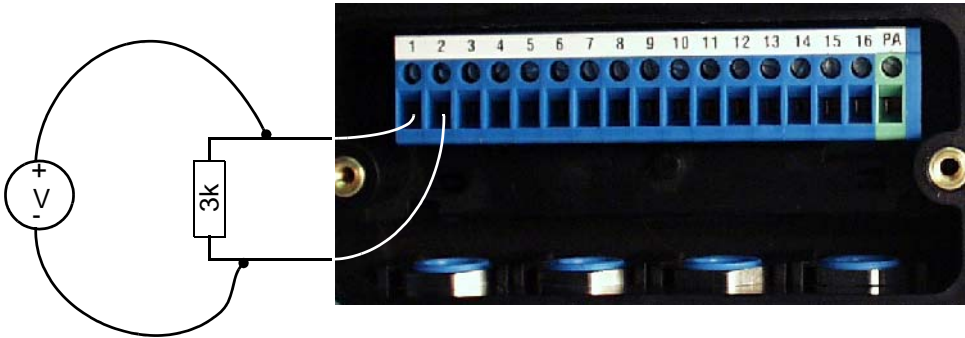

Voltage above the 3 kΩ resistance	Status of output
approx. 0.3 VDC	current switched off
approx. 3 VDC	current switched on



Note

The status of the output cannot be determined by simply measuring the voltage at the open terminal of a valve output.
In this case, always a voltage of 6.8...7.4 VDC is measured!

9.4 Possible faults during the initialisation run (section 8.1.1)

Fault signal	Cause	Elimination
<i>prior to start:</i>	<i>Valve is justly set</i>	<ul style="list-style-type: none"> • Re-start the initialisation run after the valve has reached the set position
	<i>Lead breakage or short circuit at PFCs or the auxiliary valve</i>	<ul style="list-style-type: none"> • Check wiring of sensors and auxiliary valve
	<i>Valve is in wrong position</i>	<ul style="list-style-type: none"> • Check PFCs for connection and proper functioning • Check parameterisation of "sensor mode" • Check parameterisation of "actuator fail action" • Check auxiliary power • Check mechanical drive
<i>when carrying out the tests:</i>	<i>The PFCs indicated an unexpected valve position; open-intermediate-closed or vice versa is expected</i>	<ul style="list-style-type: none"> • Check PFCs for connection and proper functioning • Check parameterisation of "sensor mode"
	<i>Breakaway time is larger than 1 min</i>	<ul style="list-style-type: none"> • Mechanical drive or auxiliary valve defective • Check PFCs for connection and proper functioning
	<i>Transit time larger than 3 min</i>	<ul style="list-style-type: none"> • Mechanical drive or auxiliary valve defective • Check PFCs for connection and proper functioning
	<i>The line test revealed a fault</i>	<ul style="list-style-type: none"> • Check LEDs and diagnosis messages • Check wiring of PFCs and valve

9.5 Status information from RB_D

Status information	Cause	Elimination	Cross reference
<i>Bad-O/S</i>	<i>Channel is in mode "O/S" (out of service).</i>	<i>Set target mode "Auto", "RCas" or "Man".</i>	<i>Section 6.3.1.2</i>
<i>Bad-DF</i>	<i>A hardware fault was recognised. In addition, the LED "COM/ERR" lights permanently. A hardware fault is indicated in the slave diagnosis.</i>	<i>Please return device to Pepperl+Fuchs for repair.</i>	<i>Section 7.6.5 Section 7.7</i>
<i>Bad-SF</i>	<i>Lead interruption of sensor</i>	<i>Determine the affected sensor via the variable RB_D.</i>	<i>Section 7.6.5</i>
<i>Bad-SF</i>	<i>Lead short circuit of sensor</i>	<i>Determine the affected sensor via the variable RB_D.</i>	<i>Section 7.6.5</i>
<i>Bad-SF</i>	<i>"Not allowed sensor combination": The feedback of the PFCs is not assigned to a valve position.</i>	<ul style="list-style-type: none"> • Check parameterisation of "sensor mode". • Check PFCs for proper functioning. 	<i>Section 6.3.2.2</i>
<i>Good (NC)-UE</i>	<i>Parameters have been modified.</i>	<i>After 10 s this event information is reset automatically.</i>	<i>Section 7.6.5</i>

PROFIBUS-PA Valve Coupler FD0-VC-Ex4.PA

Diagnosis and error correction

9.6 Status informations from ROUT_D

Status information	Cause	Elimination	Cross reference
Bad-O/S	Channel is in mode "O/S" (out of service).	Set target mode "Auto", "RCas" or "MAN".	Section 6.3.1.2
Bad-DF	A hardware fault was recognised. In addition, the LED "COM/ERR" lights permanently. A hardware fault is indicated in the slave diagnosis.	Please return device to Pepperl+Fuchs for repair.	Section 7.6.5 Section 7.7
Good (C)-IR	Channel changed over to mode "Auto".	Eliminate that fault due to which the status of RIN_D was set to "bad" by the control system; then acknowledge with the status "good (C)-IA".	Section 6.3.1.4
Good (C)-NI	ROUT_D has been used, despite "RCas" was not set as the target mode	Set target mode "RCas".	Section 7.6.6

9.7 Variable CB_D

Bit	Signalling	Cause	Elimination
0	The valve is set to fault state	The status of SP_D or RIN_D is at "bad" or at "good-IFS"	Eliminate that fault due to which the status was set to "bad" or "good-IFS" by the control system; then set the status again to "good"
4	After a correct switching process, the valve has left the related final position	<ul style="list-style-type: none"> Auxiliary power (compressed air, etc.) dropped Mechanical drive defective PFC defective 	<ul style="list-style-type: none"> Check auxiliary power Check mechanical drive and auxiliary valve Check PFCs for connection and proper functioning
5	Lead breakage of valve		Check supply lines to auxiliary valve
6	Lead short circuit of valve		Check supply lines to auxiliary valve
10	Update-Event; 10 second message when changing the parameters of this channel	Parameters have been modified	After 10 s this event information is reset automatically
11	The channel is in simulation mode	Simulation has been switched ON	Switch OFF simulation (section 8.2)
12	PROFIBUS-DP diagnosis is currently active	A fault is indicated via the slave diagnosis	Evaluate slave diagnosis, look for cause of fault (section 7.7)
14	Valve moved into the mechanical safety position	<ul style="list-style-type: none"> The status of SP_D or RIN_D is at "bad" or "good-IFS" and "mech. safety position" is set as the fault state The status of the manual setpoint value in "Man" mode is at "bad" Target mode is "O/S" (out of service) 	<ul style="list-style-type: none"> Eliminate that fault due to which the status had been set to "bad" or "good-IFS" by the control system, then set status again to "good". Set target mode "Auto", "RCas" or "MAN"
16	The limit value for the stroke counter has been exceeded		<ul style="list-style-type: none"> Maintain valve Increase limit value Deactivate stroke counter

Part No.: 054340, Date of issue 26.01.2006

Bit	Signalling	Cause	Elimination
17 18	<i>The breakaway time incl. tolerance has been exceeded/fallen below</i>	<i>The deviation to the set time was larger than the admissible tolerance.</i>	<ul style="list-style-type: none"> • <i>Mechanical drive or auxiliary valve defective</i> • <i>Check auxiliary power</i> • <i>Check PFCs for connection and proper functioning</i>
19	<i>A fault occurred during the cyclic function test of the valve</i>	<ul style="list-style-type: none"> • <i>Line test detected a fault.</i> • <i>Monitoring of the valve times is deactivated.</i> • <i>The PFCs do not indicate the final position which corresponds to the current control.</i> 	<ul style="list-style-type: none"> • <i>Check PFCs and valve for connection and proper functioning</i> • <i>Activate time monitoring</i>
20 21	<i>The running time incl. tolerance has been exceeded/fallen below</i>	<i>The deviation to the set time was larger than the admissible tolerance.</i>	<ul style="list-style-type: none"> • <i>Mechanical drive or auxiliary valve defective</i> • <i>Check auxiliary power</i> • <i>Check PFCs for connection and proper functioning</i>
22	<i>Actuating drive or valve mechanically blocked</i>	<i>The valve is indicated as blocked when a time of $t > 5 \cdot (t_{breakaway} + t_{transit})$ elapsed since the output of the new setpoint value.</i>	<ul style="list-style-type: none"> • <i>Mechanical drive or auxiliary valve defective</i> • <i>Check auxiliary power</i> • <i>Check PFCs for connection and proper functioning</i>

9.8 Slave diagnosis

Byte.Bit	Cause	Elimination
11.0	<i>Electrical hardware failure.</i>	<i>Please return device to Pepperl+Fuchs for repair.</i>
11.1	<i>Actuator blocked or fault during cyclic function test.</i>	<i>Call CB_D of the channels to find out the exact fault cause. See section 9.7. Channel diagnosis can also be called via the parameterisation tool.</i>
11.4	<i>Checksum error EEPROM.</i>	<i>Please return device to Pepperl+Fuchs for repair.</i>
11.7	<i>Initialisation run completed incorrectly</i>	<i>See section 9.4</i>
12.5	<i>Limit value of stroke counter exceeded, breakaway or transit time outside of limits</i>	<i>Call CB_D of the channels to find out the exact fault cause. See section 9.7. Channel diagnosis can also be called via the parameterisation tool.</i>
12.7	<i>During an existing cyclic connection with a class 1 master the PROFIBUS Ident Number was parameterised with another value.</i>	<ul style="list-style-type: none"> • <i>Change Ident Number to the configured value.</i> • <i>Re-configure class 1 master, because after the next clearance time, e. g. triggered by a short-term voltage failure, no connection to the master can be re-established as this was configured with a different Ident Number.</i>

10 Appendix

10.1 Parameter Reference list

10.1.1 Legend

- ✕: characterises a function parameter. Functional decisive parameters which are required for operation and which must be set correctly so that the valves and/or PFCs can be operated properly.
- 🔧: characterises a diagnosis parameter. These parameters control additional device and diagnosis functions which have no influence on the basic functions of the valves. In addition, they provide important feedbacks for fault diagnosis and prevention. Also, this information is required for inquiries with Pepperl+Fuchs.
- 📄: characterises a documentation parameter. These are parameters which are used for the documentation and description of the device and the measuring points. They have no effect on the device functions.

M: Parameter can be modified (written).

Because all parameters can be read, no identification is used.



Note










Depending on the parameterisation tool used, the settings of some parameters are made either in plain text or according to a certain code. Coding is described under the relevant parameters.

10.1.2 Device related parameters

Charac- teristics	Parameter, Description	Range of values (bold = default settings)
📄	Parameter revision device This parameter is a counter which is incremented by 1 during each modification of a device related parameter and which documents the status of modification of parameterisation in this way.	0 ... 65535
📄 M	TAG The valve coupler can be assigned a unique tag within the plant or process via this parameter.	(32 characters)
📄 M	Description An additional description of the measuring point can be entered within the plant or process via this parameter.	(32 characters)
📄 M	Strategy A user specific code value for the classification and summary of information, e.g. for diagnosis reports, can be assigned via this parameter.	0 ... 65535
📄 M	Message An additional description of the valve coupler can be entered within the plant or process via this parameter.	(32 characters)
📄 M	Alert key A user specific code value for the classification and summary of alarm messages and events, e.g. for quick localisation, can be assigned via this parameter.	0 ... 255
📄	Manufacturer This parameter contains the unique manufacturer identification code which is implemented in the parameterisation tool in most cases into the manufacturer name.	0 ... 65535 93 (Pepperl+Fuchs)

PROFIBUS-PA Valve Coupler FD0-VC-Ex4.PA

Appendix

Characteristics	Parameter, Description	Range of values (bold = default settings)
	Device ID Device ID of the manufacturer, here the part number of the valve coupler of Pepperl+Fuchs. This information is required for inquiries with Pepperl+Fuchs.	(16 characters)
	Devices serial number This parameter includes the 14 digit serial number of the valve coupler. This information is required for inquiries with Pepperl+Fuchs.	(16 characters)
	Software revision This parameter contains the version number of the internal software of the device, e. g. "1.0". This information is required for inquiries with Pepperl+Fuchs.	(16 characters)
	Hardware revision This parameter includes the version number of the internal hardware of the device, e. g. "1.1". This information is required for inquiries with Pepperl+Fuchs.	(16 characters)
 M	Installation date User-parameter to enter the date on which the valve coupler has been installed in the plant.	(16 characters)
 M	PROFIBUS Ident Number (see section 6.2.2) This parameter indicates whether the manufacturer specific or profile specific GSD file shall be used. Coding: 0 = profile specific 1 = manufacturer specific	profile specific (0), manufacturer specific (1)
	Device Certification This parameter contains the number of the EC Type Examination Certificate of the valve coupler.	(32 characters)
	Position write protection switch (see section 6.4) This parameter informs about the current position of the switch for the read only function of the hardware. Coding: 0 = not write-protected 1 = write-protected	not write-protected (0), write-protected (1)
 M	Software write protection (see section 6.4) This parameter activates/deactivates the read only function by software. By activating the read only function by software it is not possible to modify device parameters which are thus protected from unintended modification. The "Software write protection" parameter is set in general via a specific software function. Coding: 0 = not write-protected 2457 = write-protected	not write-protected (0) , write-protected (2457),

Part No.: 054340, Date of issue 26.01.2006

Charac- teristics	Parameter, Description	Range of values (bold = default settings)
M	Reset Commands can be given via this parameter. Coding: 1 = Reset parameterisation to manufacturer setting (state as supplied). The current software bus address remains unaffected. 2506 = Make a device reset. The current parameterisation remains unaffected. 2712 = Reset software bus address to 126.	0 ... 65535

10.1.3 Channel related parameter (channel 1 ... 4), identification and output

Charac- teristics	Parameter, Description	Range of values (bold = default settings)
①	Parameter revision output This parameter is a counter which is incremented by 1 during each modification of a channel parameter for identification of the output and which documents the modification status of parameterisation in this way.	0 ... 65535
① M	TAG Each of the four channels of the valve coupler can be assigned a unique tag within the plant or process via this parameter.	(32 characters)
① M	Strategy Each of the four channels of the valve coupler can be assigned a user specific code value for the classification and summary of information, e.g. for diagnosis reports, via this parameter.	0 ... 65535
① M	Alert key Each of the four channels of the valve coupler can be assigned a user specific code value for the classification and summary of alarm messages and events, e.g. for quick localising, via this parameter.	0 ... 255
① M	Batch ID User parameter to enter the designation of a batch process with distributed field bus systems for process identification.	0 ... 4.294.967.295
① M	Batch Unit User parameter to enter the designation of the control unit of the recipe or the associated unit, e.g., reactor, centrifuge, dryer, etc.	0 ... 65535
① M	Batch Operation User parameter of the identification of the current process of recipe.	0 ... 65535
① M	Batch Phase User parameter of the identification of the current process of recipe.	0 ... 65535
✕ M	Target mode (see section 6.3.1.2) Desired mode of operation for this channel. This parameter is set via a special software function to the operational behaviour of the valve coupler - depending on the parameterisation tool used.	Auto, Man, O/S, RCas









Charac- teristics	Parameter, Description	Range of values (bold = default settings)
✕ M	Invert setpoint (see section 6.3.1.1) This parameter indicates whether the setpoint value for the valve position (SP_D, RIN_D) shall be inverted logically prior to controlling the valve in the "Auto" or "RCas" mode. Coding: 0 = inversion switched off 1 = inversion switched on	OFF (0), ON (1)
✕ M	Fail safe mode (fault state) (see section 6.3.1.3) This parameter determines the behaviour of the actuator in the "Auto" and "RCas" modes in case of fault. Coding: 0 = The specified "fail safe default value" is used to control the valve (refer to parameter "fail safe default value"). 1 = the last valid set value is used for the valve position. 2 = the valve is moved in the mechanical safety position by ceasing to control the auxiliary valve.	Fail safe default value (0), Last valid set value (1), mechanical safety position (2)
✕ M	Fail safe time (see section 6.3.1.3) The "fail safe time" indicates the time interval, in seconds, between the occurrence of the fault and the release of the fault treatment routine (valve to be set into fault state). If the safety position is activated by setting the status to "good-IFS" one must not wait for the delay time but the valve is set to the safety position immediately.	0 s ... 300 s (floating point number)
✕ M	Fail safe default value (see section 6.3.1.3) The parameter indicates the value for the fault state which shall be approached by the actuator in case of fault. This parameter is used when the parameter "fail safe mode (fault state)" is set to "fail safe default value" (0). Coding: 0 = OFF 1 = ON	OFF (0), ON (1)

 10.1.4 Channel related parameters (channel 1 ... 4), characteristics of actuator (drive) and regulation unit

 



 

 


Charac- teristics	Parameter, Description	Range of values (bold = default settings)
①	Parameter revision control drive This parameter is a nominator which is incremented by 1 when changing a channel parameter of the actuator (drive) or final control element (regulation unit) and which documents the modification status of parameterisation in this way.	0 ... 65535
① M	Manufacturer (drive) The manufacturer of the drive can be stored as text in this parameter for documentation purposes.	(16 characters)
① M	Product type (drive) The type code of the manufacturer of the drive can be stored as text in this parameter.	(16 characters)
① M	Serial number (drive) The serial number of the drive can be stored as text in this parameter.	(16 characters)
✕ M	Actuator action (mechanical safety position) (see section 6.3.2.1) This parameter indicates the mechanical safety position of the valve. This is the position of the final control element (regulation unit) when the auxiliary valve is not controlled by current. It is a must to set this parameter correctly because the information is derived inside the device how to control the auxiliary valve. Example: In the mechanical safety position "CLOSED", the auxiliary valve is controlled for opening. Coding: 1 = self opening, OPEN 2 = self closing, CLOSED	OPEN (1), CLOSED (2)
✕ M	Sensor mode (see section 6.3.2.2) This parameter describes the kind of PFCs used. These can be actuated both in the low and high state. The parameter must be set correctly otherwise the valve final position feedback cannot function properly and fault messages are given. Coding: 0 = low active 1 = high active	low active (0) , high active (1)
🔧 M	Wire check (see section 6.3.3.1) This parameter activates/deactivates the line interruption and/or short circuit test for the two PFCs and the valve of the relevant channel. Coding: 0 = lead breakage and short circuit test 1 = only lead breakage test 2 = only short circuit test 3 = no test	LB / SC (0), LB (1), SC (2), OFF (3)

PROFIBUS-PA Valve Coupler FD0-VC-Ex4.PA

Appendix

Charac- teristics	Parameter, Description	Range of values (bold = default settings)
 M	Valve monitor (see section 6.3.3.3 and 6.3.3.2) This parameter controls the type of valve monitoring. The valve breakaway/transit times specified by the user or learned in and an adjustable limit value for the stroke counter can be monitored. Coding: 0 = no valve monitoring 1 = monitoring of valve breakaway/valve transit times 2 = monitoring the limit values for the stroke counter 3 = monitoring of valve breakaway/valve transit times and monitoring the limit values for the stroke counter	OFF (0) , time monitoring (1), stroke counter (2), time monitoring and stroke counter (3)
 M	Stroke counter (counter reading) (see section 6.3.3.2) This parameter acts on a counter which is incremented by 1 after each full valve cycle (OPEN - CLOSED - OPEN). The start value from which counting is started can be set.	0 ... 4.294.967.295
 M	Limit stroke counter (see section 6.3.3.2) A limit value for the stroke counter can be specified by this parameter and a message is given via the diagnosis and variable CB_D when this value is exceeded.	0 ... 4.294.967.295
 M	Cyclic function test (see section 6.3.3.4) This parameter activates/deactivates the cyclic functional test of the connected valve. Coding: 0 = ON 1 = OFF	ON (0), OFF (1)
 M	Period of cyclic function test (see section 6.3.3.4) With the cyclic function test activated, this parameter determines the time in seconds after which a new function test is carried out.	0 ... 65535 s (approx. 18 hrs.) 43200 s (12 hrs.)
 M	Reference breakaway time OPEN→CLOSE (see section 6.3.3.3) This parameter determines the set value of the breakaway time OPEN→CLOSE for the relevant valve (refer to valve monitor parameter). If no unit is given in the parameterisation tool, the setting is made in multiples of 10 ms. When this time plus the relevant tolerance is exceeded or this time plus the relevant tolerance value is fallen below, a message is given via the diagnosis and variable CB_D if valve monitoring (see above) is activated.	0 ... 65535 x 10 ms
 M	Tolerance breakaway time OPEN→CLOSE This parameter defines the admissible tolerance value for the breakaway time OPEN→CLOSE (refer to reference breakaway time OPEN→CLOSE parameter). If no unit is given in the parameterisation tool, the setting is made in multiples of 10 ms.	0 ... 65535 x 10 ms
	Last breakaway time OPEN→CLOSE This parameter provides the breakaway time OPEN→CLOSE which was the last measured.	0 ... 65535 x 10 ms

Part No.: 054340, Date of issue 26.01.2006

Charac- teristics	Parameter, Description	Range of values (bold = default settings)
 M	Reference breakaway time CLOSE→OPEN (see section 6.3.3.3) This parameter determines the set value of the breakaway time CLOSE→OPEN for the relevant valve (refer to valve monitor parameter). If no unit is given in the parameterisation tool, the setting is made in multiples of 10 ms. When this time plus the relevant tolerance is exceeded or this time plus the relevant tolerance value is fallen below, a message is given via the diagnosis and variable CB_D if valve monitoring (see above) is activated.	0 ... 65535 x 10 ms
 M	Tolerance breakaway time CLOSE→OPEN This parameter defines the admissible tolerance value for the breakaway time CLOSE→OPEN (refer to reference breakaway time CLOSE→OPEN parameter). If no unit is given in the parameterisation tool, the setting is made in multiples of 10 ms.	0 ... 65535 x 10 ms
 i	Last breakaway time CLOSE→OPEN This parameter provides the breakaway time CLOSE→OPEN which was the last measured.	0 ... 65535 x 10 ms
 M	Reference transit time OPEN→CLOSE (see section 6.3.3.3) This parameter defines the reference value of the valve transit time OPEN→CLOSE for the relevant valve (refer to valve monitor parameter). If no unit is given in the parameterisation tool, the setting is made in multiples of 10 ms. When this time plus the relevant tolerance is exceeded or this time plus the relevant tolerance value is fallen below, a message is given via the diagnosis and variable CB_D if valve monitoring (see above) is activated.	0 ... 65535 x 10 ms
 M	Tolerance transit time OPEN→CLOSE This parameter defines the admissible tolerance value for the transit time OPEN→CLOSE (refer to reference transit time OPEN→CLOSE parameter). If no unit is given in the parameterisation tool, the setting is made in multiples of 10 ms.	0 ... 65535 x 10 ms
 i	Last time required OPEN→CLOSE This parameter provides the transit time OPEN→CLOSE which was the last measured.	0 ... 65535 x 10 ms
 M	Reference transit time CLOSE→OPEN (see section 6.3.3.3) This parameter defines the reference value of the valve transit time CLOSE→OPEN for the relevant valve (refer to valve monitor parameter). If no unit is given in the parameterisation tool, the setting is made in multiples of 10 ms. When this time plus the relevant tolerance is exceeded or this time plus the relevant tolerance value is fallen below, a message is given via the diagnosis and variable CB_D if valve monitoring (see above) is activated.	0 ... 65535 x 10 ms
 M	Tolerance transit time CLOSE→OPEN This parameter defines the admissible tolerance value for the transit time CLOSE→OPEN (refer to reference transit time CLOSE→OPEN parameter). If no unit is given in the parameterisation tool, the setting is made in multiples of 10 ms.	0 ... 65535 x 10 ms
 i	Last time required CLOSE→OPEN This parameter provides the transit time CLOSE→OPEN which was the last measured.	0 ... 65535 x 10 ms

PROFIBUS-PA Valve Coupler FD0-VC-Ex4.PA

Appendix

Charac- teristics	Parameter, Description	Range of values (bold = default settings)
① M	Manufacturer (regulation unit) The manufacturer of the regulation unit can be stored as text in this parameter for documentation purposes.	(16 characters)
① M	Product type (regulation unit) The type code of the manufacturer of the regulation unit can be stored as text in this parameter.	(16 characters)
① M	Serial number (regulation unit) The serial number of the regulation unit can be stored as text in this parameter.	(16 characters)

10.2 Literature

- /1/ Bender, Klaus:
PROFIBUS
ISBN: 3446191828, 1999

- /2/ Popp, Manfred:
PROFIBUS-DP Grundlagen, Tips und Tricks für Anwender
ISBN 3778526766, Hüthig Verlag, 1998

- /3/ PROFIBUS Nutzerorganisation e.V.:
PROFIBUS-PA Profile for Process Control Devices, Version 3.0, October 1999
Order No. 3.042, PNO Karlsruhe, 1999, www.profibus.com

- /4/ PROFIBUS Nutzerorganisation e.V.:
PROFIBUS-PA Inbetriebnahmeleitfaden
Technische Richtlinie, Entwurf, Ausgabe 1.1, September 1996
Best.-Nr. 2.091, PNO Karlsruhe, 1996, www.profibus.com

10.3 Glossary

Bus segment

→ Segment

Bus termination

→ Termination resistor

Channel

A channel of the valve coupler designates a valve with the two associated PFCs.

DO

digital output, discrete output. The output status can have the value "ON" or "OFF".

EMC

Electromagnetic compatibility is the ability of an electrical device to function properly in a specified environment without affecting the environment in an undue manner by emitting electromagnetic radiation.

FISCO

Fieldbus Intrinsically Safe Concept.

GSD File

File in which all slave specific characteristics are stored. A difference is made between manufacturer specific and profile specific GSD file.

Master Class 1

A class 1 master is used for the cyclic user data exchange. The process is controlled via this master.

Master Class 2

A class 2 master is used for the acyclic communication. It has unrestricted access to all parameters and user data at any time unless explicitly prevented by the device.

PFC

Final Position feedback contact. This can be a mechanical switch or a NAMUR sensor.

PNO

PROFIBUS Nutzerorganisation e.V. (user organisation) (www.profibus.com).

PROFIBUS

"PROcess Field BUS", European process and field bus standard, which is stipulated in the PROFIBUS standard (EN 50170). It specifies the functional, electrical and mechanical properties for a bit serial field bus system. PROFIBUS is a bus system, which networks the PROFIBUS compatible automation systems and field devices in the cell and field level. PROFIBUS are available with the protocols DP (decentralised periphery), FMS (fieldbus message specification) or PA (process automation).

PROFIBUS-DP

Bus system PROFIBUS with the protocol DP based on standard EN 50170, Volume 2, PROFIBUS. DP means decentralised periphery.

PROFIBUS-PA

PA means process automation and extends the application of the PROFIBUS family DP by the field of process engineering. Process engineering means both the intrinsically safe areas of the chemical industry and the non intrinsically safe areas, such as for instance, power station automation, foodstuff industry and sewage water equipment.

Segment

A segment or bus segment is a closed part of a serial bus system. The bus line between two termination resistors forms a segment. A segment contains 0 to 32 bus participants. Segments can be coupled via field bus repeaters.

Segment coupler

A DP/PA segment coupler connects a PROFIBUS-PA segment with a PROFIBUS-DP segment. PROFIBUS-PA and PROFIBUS-DP coupled with each other in terms of data engineering but separated from each other in relation to the physics of transmission.

Slave

A slave must exchange data with a master only after requested so by the latter. Slaves are for instance the valve coupler FD0-VC-Ex4.PA and the sensor interface FD0-BI-Ex12.PA from Pepperl+Fuchs.

TAG


Clear designation of the control engineering point of the field device within the process plant.

Termination resistor

A termination resistor is a resistor to terminate the data transfer line in order to avoid cable reflections; termination resistors are required in any case at the cable or segment ends.

The general terms of delivery for products and services produced or provided by the electrical industry as published by the Zentralverband Elektrotechnik und Elektroindustrie (ZVEI) e.V. in its most recent edition as well as the supplementary proviso: "Extended property proviso" are applicable.

We at Pepperl+Fuchs feel obligated to contribute to the future;
this publication is, therefore, printed on paper bleached without the use of chlorine.

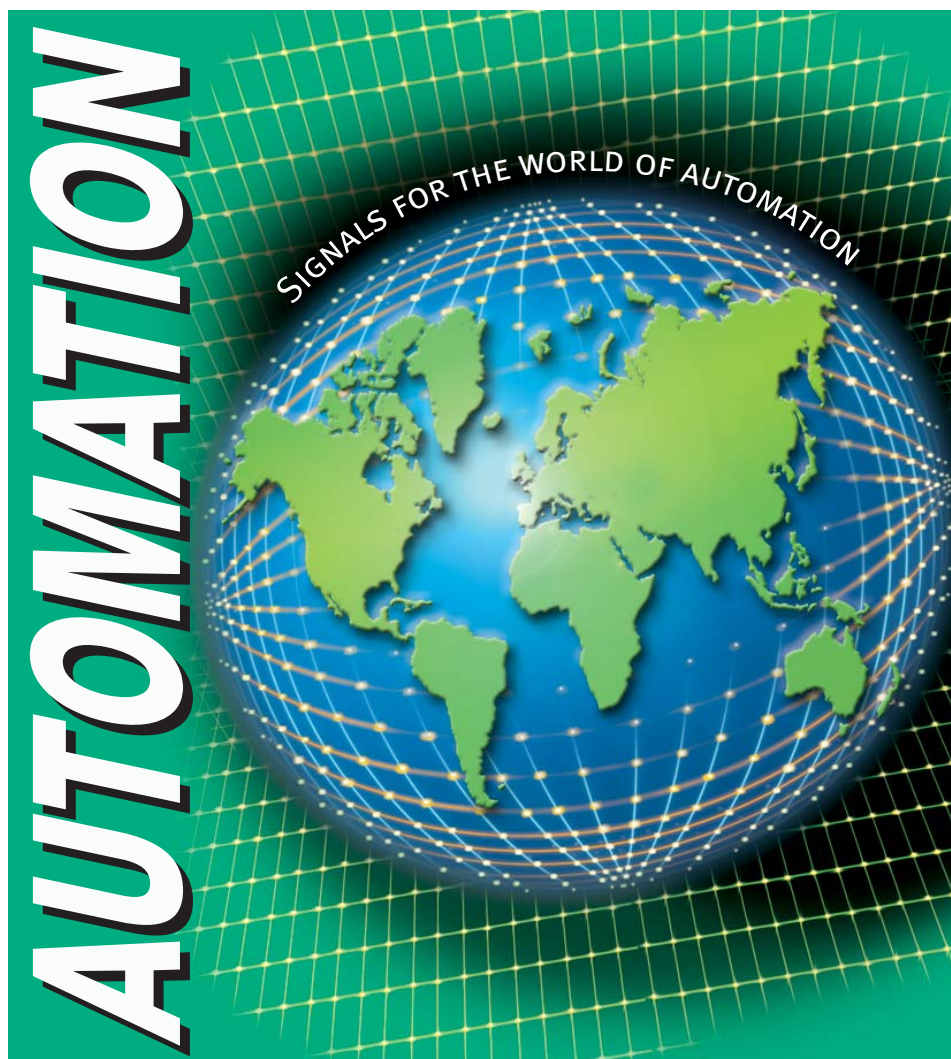

www.pepperl-fuchs.com

Worldwide Headquarters

Pepperl+Fuchs GmbH · Königsberger Allee 87
68307 Mannheim · Germany
Tel. +49 621 776-0 · Fax +49 621 776-1000
e-mail: info@de.pepperl-fuchs.com

Asia Pacific Headquarters

Pepperl+Fuchs Pte Ltd. · P+F Building
18 Ayer Rajah Crescent · Singapore 139942
Tel. +65 67799091 · Fax +65 68731637
e-mail: sales@sg.pepperl-fuchs.com

USA Headquarters

Pepperl+Fuchs Inc. · 1600 Enterprise Parkway
Twinsburg, Ohio 44087 · Cleveland-USA
Tel. +1 330 4253555 · Fax +1 330 4 25 93 85
e-mail: sales@us.pepperl-fuchs.com

 **PEPPERL+FUCHS**
SIGNALS FOR THE WORLD OF AUTOMATION