


Ultrasonic sensor UB1500-F42-UK-V95

- Relay output for high power
- Extremely small unusable area
- TEACH-IN
- Interference suppression (adjustable divergence of sound cone in close range)
- Temperature compensation
- NO/NC selectable

Single head system



Dimensions

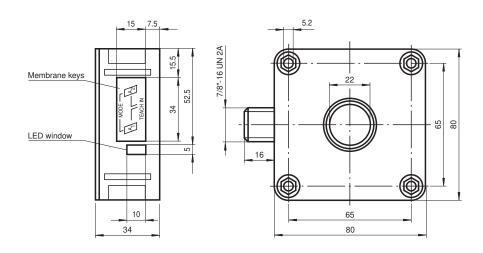

Technical Data

General specifications	
Sensing range	70 1500 mm
Adjustment range	90 1500 mm
Dead band	0 70 mm
Standard target plate	100 mm x 100 mm
Transducer frequency	approx. 175 kHz
Response delay	approx. 150 ms
Indicators/operating means	
LED green	solid green: Power on

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"


Pepperl+Fuchs Group www.pepperl-fuchs.com USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com




Technical Data		
LED yellow		solid: switching state switch output flashing: program function
LED red		normal operation: "fault" program function: no object detected
Electrical specifications		
Fusing		\leq 3 A Slow-blow fuse in accordance with IEC 60127-2 Sheet 5 required. Recommendation: after a short circuit, check that the device is functioning correctly.
Operating voltage	UB	22 253 V AC/DC
No-load supply current	I ₀	≤ 60 mA
Time delay before availability	t _v	≤ 800 ms
Output		
Output type		1 relay output
Rated operating current	le	3 A
Repeat accuracy		≤ 0.5 % of switching point
Switching frequency	f	≤ 3 Hz
Range hysteresis	Н	1 % of the set operating distance
Temperature influence		± 1 % of full-scale value
Compliance with standards and directives		
Standard conformity		
Standards		EN IEC 60947-5-2:2020 IEC 60947-5-2:2019
Ambient conditions		
Ambient temperature		-25 70 °C (-13 158 °F)
Storage temperature		-40 85 °C (-40 185 °F)
Mechanical specifications		
Degree of protection		IP65
Connection		5-pin V95 connector (7/8"-16 UN 2A)
Material		
Housing		PBT
Transducer		epoxy resin/hollow glass sphere mixture; foam polyurethane, cover PBT
Mass		260 g

 Connection




Connection Assignment

 

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Characteristic Curve

Characteristic response curve

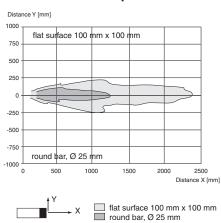

Possible operating modes

1. Switch point operation

normally open A1 -> ∞	A2	
normally closed A2 -> ∞	A1	
2. Window operation		
normally open A1 < A2	A1 A2	
normally closed A2 < A1	A2 A1	
3. Hysteresis operati	on	
normally open A1 < A2	A1 A2	

4. Object presence detection mode

A1 -> ∞ , A2 -> ∞ : Sensor detects object presence within sensing range Note A1 -> ∞ , A2 -> ∞ means: cover sensor with hand or remove all objects from sensing range

A2

Accessories

normally closed

A2 < A1

SIL	V95-G-Y	Female connector, 7/8" - 16 UN, 5-pin, field attachable
•	V95-W-5M-PVC	Female cordset, 7/8", 5-pin, PVC cable
	V95-W	Female connector, field-attachable
•	V95-W-2M-PVC	Female cordset, 7/8", 5-pin, PVC cable
	MH 04-3505	Mounting aid for FP and F42 sensors

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

MHW 11

Accessories



Mounting brackets for sensors

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

4

Additional Information

Safety notes:

The supply circuit is separated from the relay circuit by basic insulation.

Safety class II is only guaranteed when using cable connectors listed in the accessories. The connector cable may only be separated from the unit when the power is off.



CAUTION:

The UB...-F42(S)-UK-V95 ultrasonic sensor is <u>not</u> suitable for use in environments subject to explosion hazards.

Conformity:	EN 60947-5-2
Housing insulation:	Safety class II
Degree of contamination:	3
Overvoltage category:	III

Parameterisation:

You can use 2 keys to parameterise the sensor. In order to start the switch point 1 learning mode, press the A1 key; in order to start the switch point 2 learning mode, press the A2 key.

If you keep both keys pressed as you switch on the power supply, the sensor will switch over to the sensitivity adjustment mode of operation.

In case the parameterisation procedure is not completed within 5 minutes, the sensor will discontinue the process and retain all previous settings.

Teaching in switch points:

Teaching in A1 switch point by pressing A1 key.	
Keep A1 key pressed for > 2 s	The sensor enters the switch point 1 learning mode
Position target object in the desired distance	The sensor indicates via LED lights whether the target object has been detected. In case the object has been detected, the yellow LED will flash; if the object has not been detected, the red LED flashes.
Briefly press the A1 key	The sensor completes the switch point 1 TEACH-IN process and saves this value in non-volatile memory. In the event of an uncertain object (flashing red LED), the value learned is invalid. The system exits the TEACH-IN mode.

Analogously, the A2 switch point is learned in the same fashion as described above using the A2 key.

Switching hysteresis operation mode <--> switch point/window operation mode:

Keep both A1 and A2 keys pressed	The sensor indicates the current operation mode through the green LED. permanent green: Switch point/window operation mode flashing green: Hysteresis operation mode
after 2 seconds:	The sensor changes the operation mode which can be identified through the green LED. permanent green: Switch point/window operation mode flashing green: Hysteresis operation mode
Release keys	The green LED of the sensor keeps indicating the operation mode selected for additional 5 seconds

Suppression of disturbing targets

 
Some types of installation or particular conditions during operation of an ultrasonic sensor may admit that undesired objects (such as shelf brow posts, edges of machines) are closer than the actual target as they enter the recording range. In this case, the sensor would normally detect these objects rather than the desired target. So in order to ensure an error-free operation, in may be necessary to suppress those objects.

Objects can be suppressed if they meet the following conditions:


- The disturbing target must not hide the actual target completely.
- The amplitude of the disturbing signal must be smaller than the amplitude of the desired signal.
- The disturbing target must remain in the edge region of the sound lobe and must not enter its center.



Ultrasonic sensor



The suppression of the disturbing target is effected through reduction of the response sensitivity. This figure shows its effect on the response characteristics of the sensor. The sensor is preset on step 1 by the manufacturer.

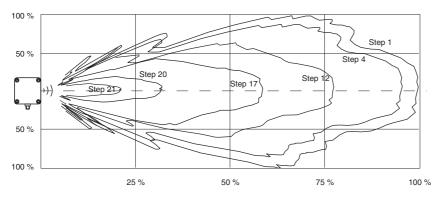

Sensitivity adjustment for suppression of disturbing targets Remove the actual target object from the detection range.

Keep A1 and A2 keys pressed as you switch on power supply	The sensor enters the sensitivity adjustment mode of operation. The sensor sensitivity can be adjusted in 24 steps. Step 1 = high response Step 24 = low response
Briefly press the A1 key	 Response is increased. The LED lights indicate the actual state of the sensor. flashing red: no disturbing target detected flashing yellow: disturbing target detected permanent red: upper setting limit is reached.
Briefly press the A2 key	 Response is decreased. The LED lights indicate the actual state of the sensor. flashing red: no disturbing target detected flashing yellow: disturbing target detected permanent red: lower setting limit is reached.
Press both A1 and A2 keys at once	Exiting sensitivity adjustment. The sensor response is saved in non-volatile memory. In the event the sensitivity adjustment is not exited through this procedure, the sensor will exit this operation mode automatically

Accessories

Cable connector V95-W-2M-PVC

Mounting aid

MH 04-3505 MHW 11

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

after 5 minutes, and the previous sensitivity value remains valid.