



# Safety light curtain


## SLC30-1200-S



- Sensing range up to 15 m
- Resolution 30 mm (hand protection)
- Protection field height up to 1650 mm
- Self-monitoring (type 4 according to IEC/EN 61496-1)
- Master/Slave detection, Plug and Play
- Start/Restart disable
- Degree of protection IP67
- Integrated function display
- Pre-fault indication
- Safety outputs OSSD in potential-separated semiconductor design or with monitored, compelled connection NC-contacts
- Optional with ATEX certificates for zone 2 and 22 and degree of protection IP66 (Option 133)



### Dimensions

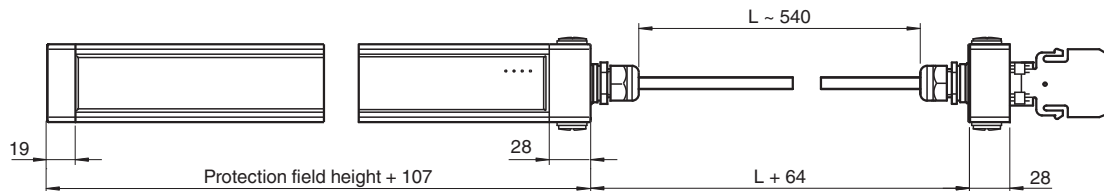

### Technical Data

<b>System components</b>	
Emitter	SLC30-1200-T-S
Receiver	SLC30-1200-R-S
<b>General specifications</b>	
Effective detection range	0.2 ... 15 m
Light source	IRED

Release date: 2020-03-20 Date of issue: 2020-10-06 Filename: 117593\_eng.pdf

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group  
www.pepperl-fuchs.com

USA: +1 330 486 0001  
fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111  
fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091  
fa-info@sg.pepperl-fuchs.com

**pf** PEPPERL+FUCHS

## Technical Data

Light type	modulated infrared light	
LED risk group labelling	exempt group	
Tests	IEC/EN 61496	
Safety type according to IEC/EN 61496	4	
Width of protected area	0.2 ... 15 m	
Protection field height	1200 mm	
Number of beams	64	
Operating mode	in the master	
Optical resolution	30 mm	
Angle of divergence	< 5 °	
<b>Functional safety related parameters</b>		
Safety Integrity Level (SIL)	SIL 3	
Performance level (PL)	PL e	
Category	Cat. 4	
Mission Time (T <sub>M</sub> )	20 a	
PFH <sub>d</sub>	1.5 E-8	
Type	4	
<b>Indicators/operating means</b>		
Operation indicator	in the master	
Diagnostics indicator	in the master	
Function indicator	in the master	
Pre-fault indicator	in the master	
Control elements	in the master	
<b>Electrical specifications</b>		
Operating voltage	U <sub>B</sub>	from master
No-load supply current	I <sub>0</sub>	from master
Protection class	III	
<b>Input</b>		
Test input	in the master	
Function input	in the master	
<b>Output</b>		
Safety output	in the master	
Signal output	in the master	
Response time	depends on height of protective field	
<b>Conformity</b>		
Functional safety	ISO 13849-1	
Product standard	EN 61496-1 ; IEC 61496-2	
<b>Approvals and certificates</b>		
CE conformity	CE	
UL approval	cULus Listed	
CCC approval	CCC approval / marking not required for products rated ≤36 V	
TÜV approval	TÜV	
<b>Ambient conditions</b>		
Ambient temperature	0 ... 55 °C (32 ... 131 °F)	
Storage temperature	-25 ... 70 °C (-13 ... 158 °F)	
Relative humidity	max. 95 %, not condensing	
<b>Mechanical specifications</b>		
Housing length L	1310 mm	
Degree of protection	IP67	
Connection	M20 cable gland , terminal compartment with screw terminals, lead cross-section max. 1.5 mm <sup>2</sup>	
Material		
Housing	extruded aluminum profile, RAL 1021 (yellow) coated	

Release date: 2020-03-20 Date of issue: 2020-10-06 Filename: 117593\_eng.pdf

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".


Pepperl+Fuchs Group  
www.pepperl-fuchs.comUSA: +1 330 486 0001  
fa-info@us.pepperl-fuchs.comGermany: +49 621 776 1111  
fa-info@de.pepperl-fuchs.comSingapore: +65 6779 9091  
fa-info@sg.pepperl-fuchs.com

**PEPPERL+FUCHS**


**Technical Data**

Optical face	Plastic pane
Mass	Per 3900 g



**Connection**

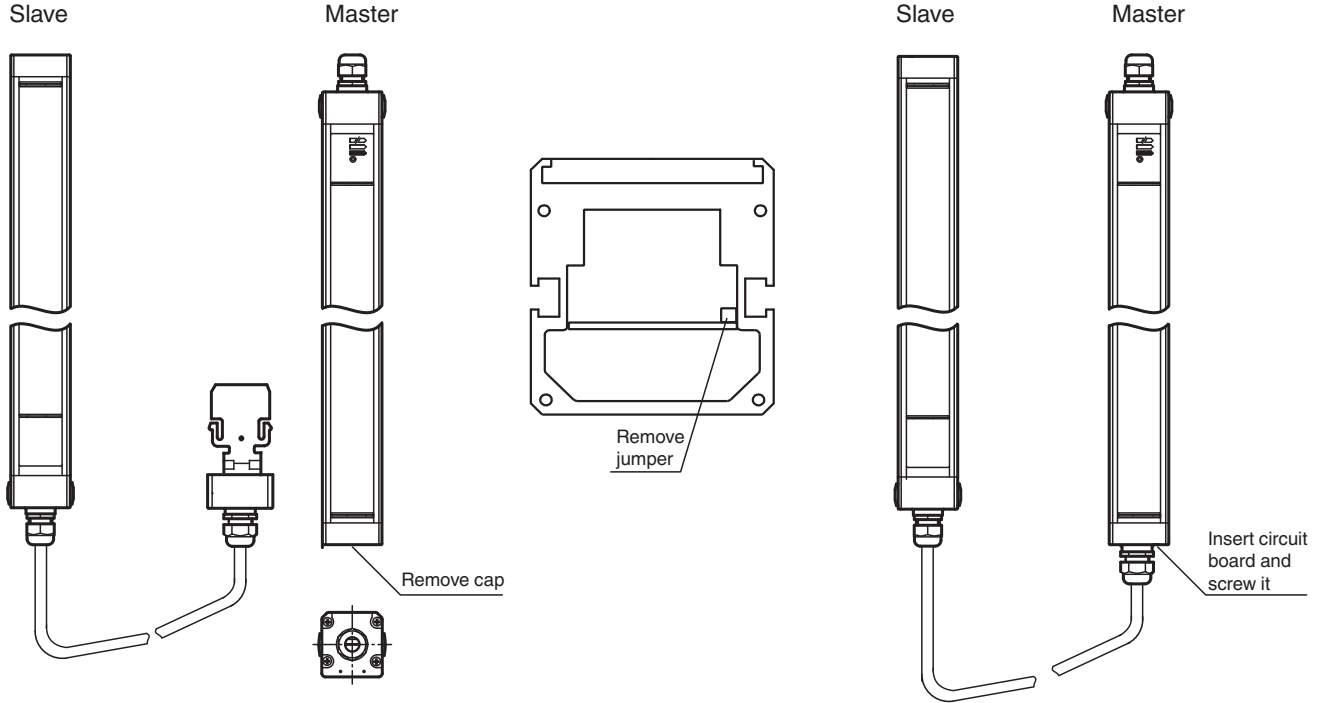

**Characteristic Curve**

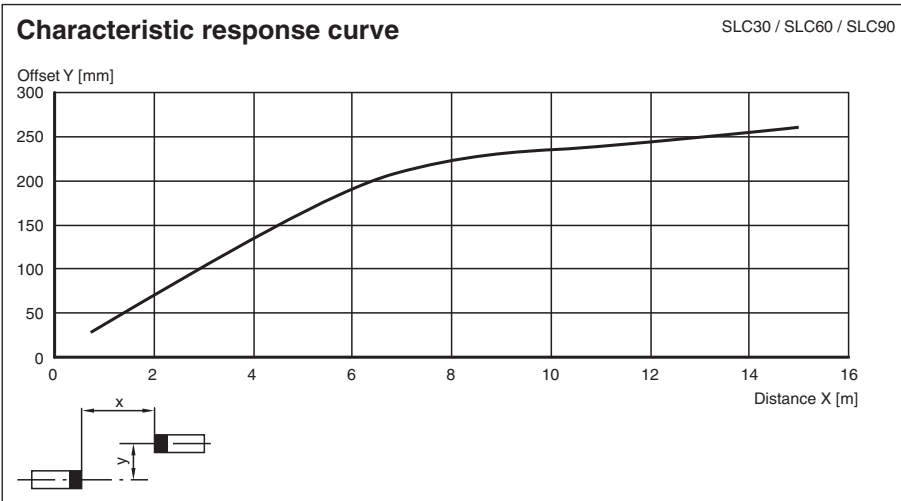

Release date: 2020-03-20 Date of issue: 2020-10-06 Filename: 117593\_eng.pdf

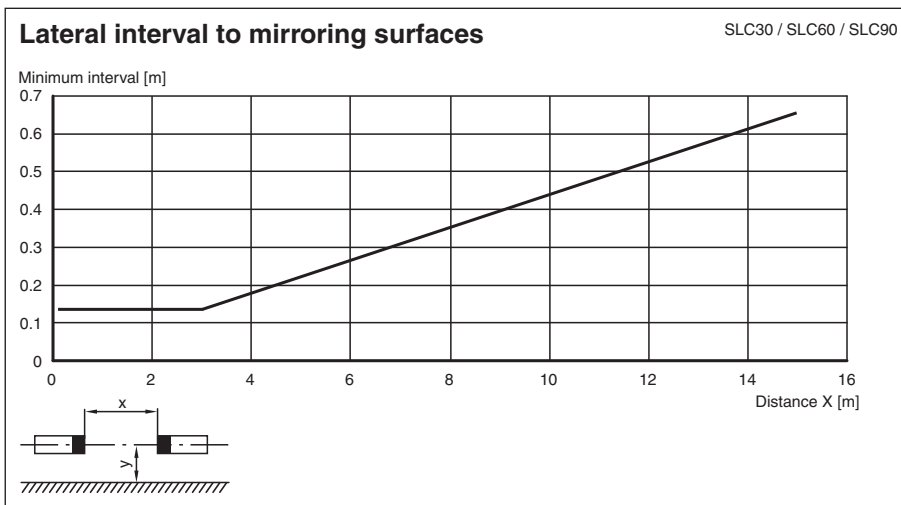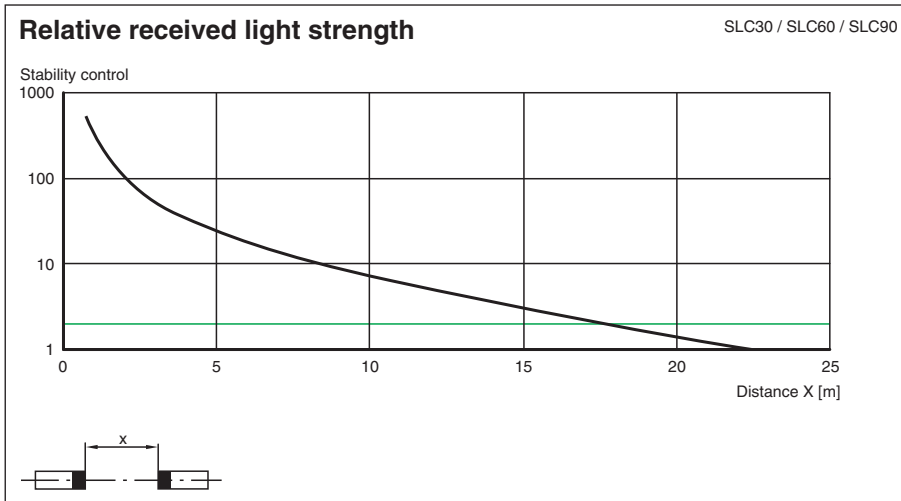





**Matching system components**

	<b>SB4-OR-4XP-B-4159</b>	Safety control unit
	<b>SB4-OR-4XP</b>	Safety control unit
	<b>SB4-OR-4XP-B</b>	SB4 series safety control unit with 1 optional module slot for functional enhancement
	<b>SB4-OR-4XP-B-B</b>	SB4 series safety control unit with optional module slots for functional enhancement
	<b>SB4-OR-4XP-B-B-B</b>	SB4 series safety control unit with optional module slots for functional enhancement
	<b>SB4-OR-4XP-B-B-B-B</b>	SB4 series safety control unit with optional module slots for functional enhancement
	<b>SB4-OR-4XP-B-B-B-B-B</b>	SB4 series safety control unit with optional module slots for functional enhancement
	<b>SB4-OR-4XP-B-4158</b>	Safety control unit
	<b>SB4-OR-4XP-3819</b>	Safety control unit

Release date: 2020-03-20 Date of issue: 2020-10-06 Filename: 117593\_eng.pdf

### Matching system components

	<b>SB4-OR-4XP-4M</b>	Safety control unit
	<b>SB4-OR-4XP-4MD</b>	Safety control unit
	<b>SB4-OR-4XP-4M-4136</b>	Safety control unit of series SB4
	<b>SB4-OR-4XP-4X</b>	Safety control unit
	<b>SB4-OR-4XP-4X-3819</b>	Safety control unit
	<b>SB4-OR-4XP-4136</b>	Safety control unit of series SB4

### Accessories

	<b>PG SLC-1200</b>	Protective glass panes for SLC series
---	--------------------	---------------------------------------

Release date: 2020-03-20 Date of issue: 2020-10-06 Filename: 117593\_eng.pdf

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group  
www.pepperl-fuchs.com

USA: +1 330 486 0001  
fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111  
fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091  
fa-info@sg.pepperl-fuchs.com

## Notes

### Response times of cascading units

If cascading units are set up, the response time of the entire SLC, consisting of a master and a slave, must be determined. The overall number of beams for master and slave can be determined from technical data sheets. Depending on the type of output, the resulting response time can be read from the table.

Number of beams	Response time in milliseconds	
	Semiconductor output	Relay output
8	10	30
16	10	30
24	12	32
32	14	34
40	16	36
48	18	38
56	20	40
64	22	42
72	24	44
80	26	46
88	28	48
96	30	50

**Example:** Master: SLC14-300/31 32 beams  
 Slave: SLC60-90-S+ 24 beams  
56 beams

56 beams, OSSD relay --> response time = 40 ms.

## Notes

### Master slave mode

Master: SLC... (semiconductor)  
 or  
 SLC.../31 (relay)  
 Slave: SLC...-S

Using slaves makes it possible to lengthen protective fields or to form protective fields that lie in more than just one level. When you select slaves that can be connected, you should take into consideration that the maximum number of 96 light rays must not be exceeded.

There are slaves for transmitters and receivers. These may simply be connected to the master light curtain. As many as 2 slaves may be connected respectively to the transmitter and receiver unit.

Installation:

1. The end cap should be screwed off for the light curtain (without cable gland).
2. The plug-in jumper on the connectors of the printed circuit board, which is now visible, should be removed.
3. The slave is designed so that the cap located on the cable connector can be plugged directly onto the open end of the light curtain with the printed circuit board.
4. After you have screwed on the connection cap, the system is complete.

## System accessories

- Mounting set SLC
- Test rods SLC14/SLC30/SLC60
- Protective glass pieces for SLC (to protect the optically functional surface)
- Lateral screwed connection SLC
- Profile alignment aid
- Laser alignment aid SLC
- Mirror for SLC (for securing hazardous areas on multiple sides)
- Ground pillar UC SLP/SLC
- Housing for pillar  
Enclosure UC SLP/SLC
- Collision protector  
Damping UC SLP/SLC