

## AS-Interface sensor/actuator module VBA-4E3A-KE-ZEJQ/E2L

- Housing with removable and color coded terminals
- Communication monitoring
- Inputs for 2- and 3-wire sensors
- Addressing jack
- Power supply of outputs from the external auxiliary voltage
- Selectable supply to the sensors: External or from the module
- Function display for bus, external auxiliary voltage, internal sensor supply, inputs, and outputs
- Red LED per channel, lights up in the event of output overload
- Switchable lead breakage detection (outputs)
- A/B node with extended addressing possibility for up to 62 nodes

KE switch cabinet module, 4 inputs and 3 outputs



### Function

The AS-Interface I/O module VBA-4E4A-KE-ZEJQ/E2L is a control cabinet module with 4 inputs and 3 electronic outputs. The housing is only 22.5 mm wide and takes up little space in the control cabinet. The module is mounted by snapping onto the 35-mm DIN rail in compliance with EN 50022.

The connection is made via plug-in terminals. Four-terminal blocks (black) are used for the inputs. The connection of the outputs, the external bulk power and the AS-Interface is via 2-terminal blocks (output black, bulk power grey, AS-Interface yellow). The supply to the inputs and the connected sensors can be fed either from the internal supply of the module (from the AS-Interface) or via an external voltage source.

A switch located on the side of the module changes the supply source. The choice of internal input supply is displayed via the INT LED. The IN and OUT LEDs display the current switching status of the relevant inputs and outputs. The OUT LED also indicates an overload or a lead breakage at the associated output.

#### Note:

The device is equipped with a communication monitor, which deactivates the outputs if the AS-Interface does not communicate with the module for more than 40 ms.


The communication monitor can be deactivated via the parameter P0.

Filters that suppress pulses with a duration of 2 ms or less at the inputs can be connected via the parameter P1.

Parameter P2 activates a lead breakage detection system for the outputs. This function detects and reports a missing load, providing the relevant output is deactivated. The associated OUT LED and the "peripheral fault" function display the signal transmitted to the AS-Interface master.

A signal indicating an overload of the internal input supply or the outputs is also transmitted to the AS-Interface master via the "peripheral fault" function. Communication via the AS-Interface continues even if a peripheral fault is set.

### Dimensions

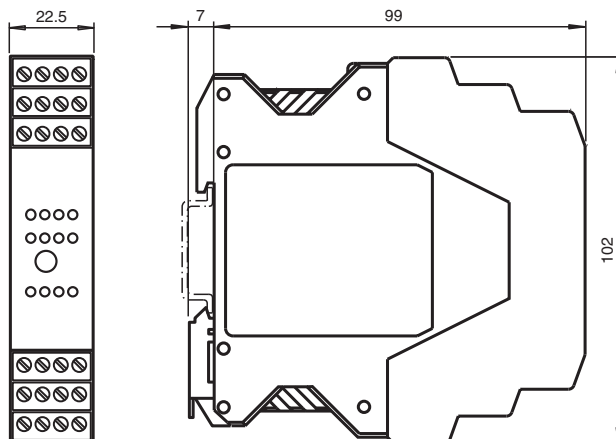

### Technical Data

#### General specifications

Release date: 2023-03-28 Date of issue: 2023-03-28 Filename: 228630\_eng.pdf

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group  
www.pepperl-fuchs.com

USA: +1 330 486 0001  
fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111  
fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091  
fa-info@sg.pepperl-fuchs.com

**PF** PEPPERL+FUCHS

## Technical Data

Node type	A/B node	
AS-Interface specification	V3.0	
Required gateway specification	≥ V2.1	
Profile	S-7.A.0	
IO code	7	
ID code	A	
ID1 code	7	
ID2 code	0	
UL File Number	E223772	
<b>Indicators/operating means</b>		
LED FAULT	Error display; red LED red: communication error, i.e. address is 0 red flashing: overload internal input supply, i.e. overload or lead interruption outputs	
LED INT	Internal input supply active; LED green	
LED PWR	AS-Interface voltage; green LED green: voltage OK flashing green: address 0	
LED AUX	ext. auxiliary voltage $U_{AUX}$ ; dual LED green/red green: voltage OK red: reverse voltage	
LED IN	switching state (input); 4 LED yellow	
LED OUT	Switching state (output); 3 LED yellow/red yellow: Output active red: Output overload or lead breakage	
<b>Electrical specifications</b>		
Auxiliary voltage (input)	$U_{EXT}$	12 ... 30 V DC PELV
Auxiliary voltage (output)	$U_{AUX}$	20 ... 30 V DC PELV
Rated operating voltage	$U_e$	26.5 ... 31.6 V from AS-Interface
Rated operating current	$I_e$	≤ 35 mA (without sensors) / max. 190 mA
Protection class	III	
Surge protection	$U_{EXT}$ , $U_{AUX}$ , $U_e$ : Over voltage category III, safe isolated power supplies (PELV)	
<b>Input</b>		
Number/Type	4 inputs for 2- or 3-wire sensors (PNP), DC	
Supply	from AS-Interface (switch position INT, default settings) or external $U_{EXT}$ (switch position EXT)	
Voltage	21 ... 31 V DC (INT)	
Current loading capacity	≤ 150 mA, overload- and short-circuit protected (INT)	
Input current	≤ 9 mA (limited internally)	
Switching point	according to DIN EN 61131-2 (Type 2)	
0 (unattenuated)	≤ 3 mA	
1 (attenuated)	≥ 5 mA	
Signal delay	< 1 ms (input/AS-Interface)	
<b>Output</b>		
Number/Type	3 electronic outputs, PNP, overload and short-circuit proof	
Supply	from external auxiliary voltage $U_{AUX}$	
Voltage	≥ ( $U_{AUX}$ - 0.5 V)	
Current	O1 max. 3 A, O2/O3 max. 1.5 A, total 6 A ( $T_B \leq 40 \text{ °C}$ ) O1 max. 2 A, O2/O3 max. 1 A, total 4 A ( $T_B \leq 60 \text{ °C}$ )	
Usage category	DC-13	
<b>Directive conformity</b>		
Electromagnetic compatibility		
Directive 2014/30/EU	EN 62026-2:2013 EN 61000-6-2:2005, EN 61000-6-4:2007	
<b>Standard conformity</b>		
Degree of protection	EN 60529:2000	
Fieldbus standard	EN 62026-2:2013	
Input	EN 61131-2:2004	
Emitted interference	EN 61000-6-4:2007	

Release date: 2023-03-28 Date of issue: 2023-03-28 Filename: 228630\_eng.pdf

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".


## Technical Data

AS-Interface	EN 62026-2:2013
Noise immunity	EN 61000-6-2:2005, EN 61326-1:2006, EN 62026-2:2013
<b>Ambient conditions</b>	
Ambient temperature	-25 ... 60 °C (-13 ... 140 °F)
Storage temperature	-25 ... 85 °C (-13 ... 185 °F)
Relative humidity	85 % , noncondensing
Climatic conditions	For indoor use only
Altitude	≤ 2000 m above MSL
Pollution degree	2
<b>Mechanical specifications</b>	
Degree of protection	IP20
Connection	removable terminals rated connection capacity: rigid/flexible (with and without wire-end ferrules): 0.25 mm <sup>2</sup> ... 2.5 mm <sup>2</sup> for multiple-wire connection with two wires of equal cross-section: flexible with twin wire-end ferrules: 0.5 mm <sup>2</sup> ... 1.5 mm <sup>2</sup>
Material	
Housing	PA 66-FR
Mass	150 g
Mounting	DIN mounting rail
Tightening torque of clamping screws	0.5 Nm ... 0.6 Nm

## Connection

Do not connect inputs and outputs, which are supplied via the module from AS-interface or via auxiliary power, with power supply and signal circuits with external potentials.

## Assembly

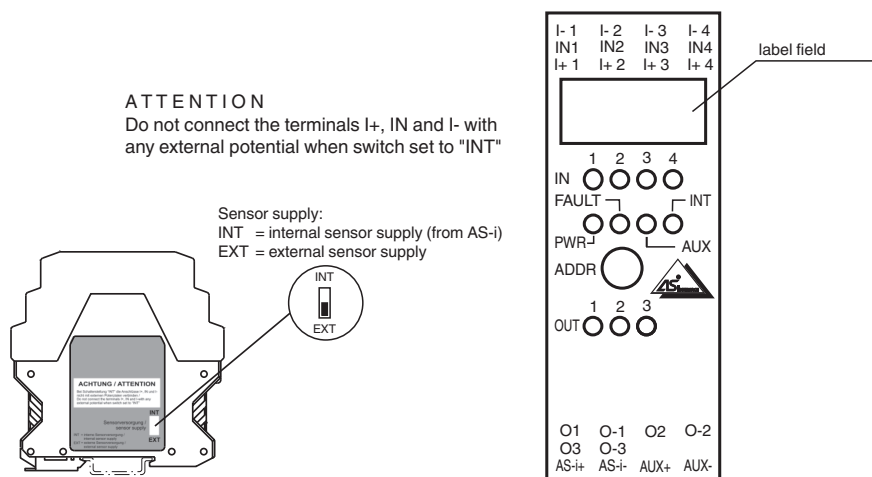

## Programming

**Data bits**  
(function via AS-Interface)

Data bits	Input	Output
D0	IN1	O1
D1	IN2	O2
D2	IN3	O3
D3	IN4	-



 
**Parameter bits**  
(programmable via AS-Interface)

## Programming

Parameter bit	Function
P0	Communication monitoring P0=0 monitoring off, the outputs maintain the status if communication fails P0=1 monitoring on, if communication fails, the outputs are deenergised, default setting
P1	Input filter P1=0 input filter on, pulse suppression $\leq 2$ ms P1=1 input filter off, default setting
P2	Lead breakage outputs P2=0 lead breakage on P2=1 lead breakage off, default setting
P3	not used

## Connection

## Accessories

	<b>VBP-HH1-V3.0-KIT</b>	AS-Interface Handheld with accessory
	<b>VAZ-PK-1,5M-V1-G</b>	Adapter cable module/hand-held programming device
	<b>VAZ-CHAIN-BU/BN70MM/1,0-25</b>	25-point wiring link for control cabinet modules with screw terminals