

Triangulation sensor with background suppression


Function

The optical sensors in the series are the first devices to offer an end-to-end solution in a medium-sized standard design - from the thru-beam sensor through to the measuring distance sensor. As a result of this design, the sensors are able to perform practically all standard automation tasks.

The entire series enables sensors to communicate via IO-Link. The DuraBeam laser sensors are durable and can be used in the same way as a standard sensor.

Multi Pixel Technology (MPT) ensures that the standard sensors are flexible and can be adapted to the application environment.

Dimensions

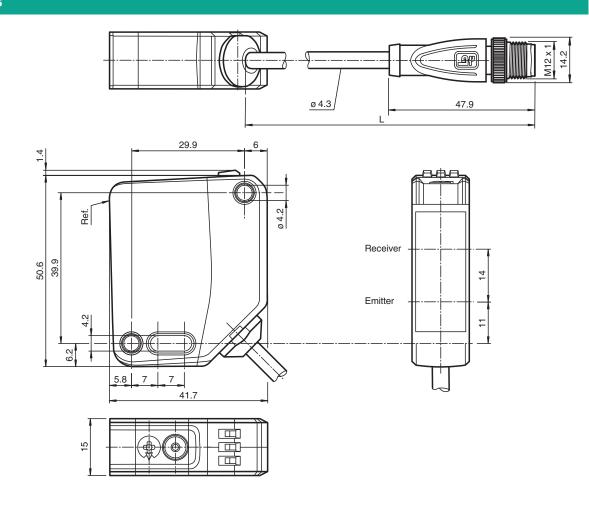

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

Pepperl+Fuchs Group www.pepperl-fuchs.com

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

Technical Data

| General specifications | | |
|--|----------------|---|
| Detection range | | 30 300 mm |
| Detection range min. | | 30 80 mm |
| Detection range max. | | 30 300 mm |
| Adjustment range | | 80 300 mm |
| Reference target | | standard white, 100 mm x 100 mm |
| Light source | | |
| • | | |
| Light type | | modulated visible red light |
| LED risk group labelling | | exempt group |
| Black-white difference (6 %/90 %) | | < 5 % at 300 mm |
| Diameter of the light spot | | approx. 8 mm x 8 mm at a distance of 300 mm |
| Opening angle | | approx. 1.5 ° |
| Ambient light limit | | EN 60947-5-2 : 70000 Lux |
| Functional safety related parameters | | |
| MTTF _d | | 600 a |
| Mission Time (T _M) | | 20 a |
| Diagnostic Coverage (DC) | | 0 % |
| Indicators/operating means | | |
| Operation indicator Function indicator | | LED green: constantly on - power on flashing (4Hz) - short circuit flashing with short break (1 Hz) - IO-Link mode LED yellow: constantly on - object detected |
| | | constantly off - object not detected |
| Control elements | | Light-on/dark-on changeover switch |
| Control elements | | Sensing range adjuster |
| Electrical specifications | | |
| Operating voltage | UB | 10 30 V DC |
| Ripple | | max. 10 % |
| No-load supply current | I ₀ | < 26 mA at 24 V supply voltage |
| Protection class | | III |
| Interface | | |
| Interface type | | IO-Link (via C/Q = pin 4) |
| IO-Link revision | | 1.1 |
| Device profile | | Identification and diagnosis Smart Sensor type 2.4 |
| Device ID | | 0x111602 (1119746) |
| Transfer rate | | COM2 (38.4 kBit/s) |
| Min. cycle time | | 2.3 ms |
| Process data width | | Process data input 1 Bit Process data output 2 Bit |
| SIO mode support | | yes |
| Compatible master port type | | A |
| Output | | |
| Switching type | | The switching type of the sensor is adjustable. The default setting is: C/Q - Pin4: NPN normally open / light-on, PNP normally closed / dark-on, IO-Link /Q - Pin2: NPN normally closed / dark-on, PNP normally open / light-on |
| Signal output | | 2 push-pull (4 in 1) outputs, short-circuit protected, reverse polarity protected, overvoltage protected |
| Switching voltage | | max. 30 V DC |
| Switching current | | max. 100 mA , resistive load |
| Usage category | | DC-12 and DC-13 |
| Voltage drop | U_d | ≤ 1.5 V DC |
| Switching frequency | f | 500 Hz |
| Response time | | 1 ms |
| Conformity | | |

 Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

 Pepperl+Fuchs Group
 USA: +1 330 486 0001
 Get


 www.pepperl-fuchs.com
 fa-info@us.pepperl-fuchs.com
 fa-info@us.pepperl-fuchs.com

OBT300-R200-2EP-IO-0,3M-V1

| | | | - |
|-----|--------|--|----|
| Tec | | | |
| | -a | | La |
| | | | |

| Communication interface | IEC 61131-9 |
|----------------------------|--|
| Product standard | EN 60947-5-2 |
| Approvals and certificates | |
| UL approval | E87056 , cULus Listed , class 2 power supply , type rating 1 |
| CCC approval | CCC approval / marking not required for products rated ≤36 V |
| Ambient conditions | |
| Ambient temperature | -40 60 °C (-40 140 °F) , fixed cable -20 60 °C (-4 140 °F) , movable cable not appropriate for conveyor chains |
| Storage temperature | -40 70 °C (-40 158 °F) |
| Mechanical specifications | |
| Housing width | 15 mm |
| Housing height | 50.6 mm |
| Housing depth | 41.7 mm |
| Degree of protection | IP67 / IP69 / IP69K |
| Connection | 300 mm fixed cable with M12 x 1, 4-pin connector |
| Material | |
| Housing | PC (Polycarbonate) |
| Optical face | РММА |
| Mass | approx. 45 g |
| Cable length | 0.3 m |
| | |

Connection

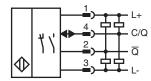


Connection Assignment

Wire colors in accordance with EN 60947-5-2

| BN WH | (brown) | | |
|----------|-------------------|--|--|
| BU | (white) (blue) | | |
| BK | (black) | | |


Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Assembly

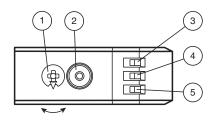

| 1 | Sensitivity adjustment | |
|---|--------------------------------------|----|
| 2 | Light-on / dark-on changeover switch | |
| 3 | Operating indicator / dark on | GN |
| 4 | Signal indicator | YE |
| 5 | Operating indicator / light on | GN |

Characteristic Curve

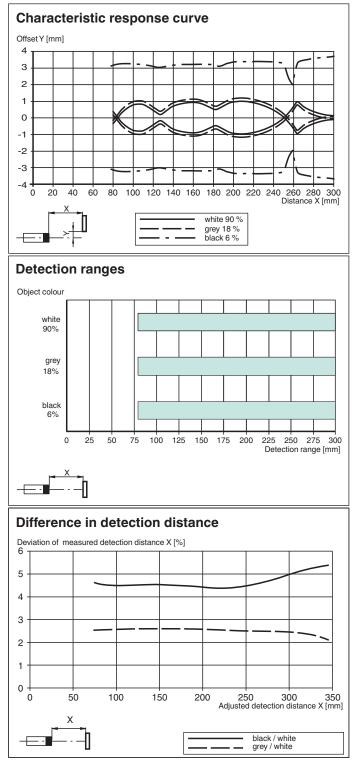

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

Pepperl+Fuchs Group www.pepperl-fuchs.com USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Triangulation sensor (BGS)

| MH-MLV12-HWG | Mounting bracket for series MLV12 sensors |
|---------------------|---|
| MH-R200-01 | Mounting aid for round steel ø 12 mm or sheet 1.5 mm 3 mm |
| MH-MLV12-HWK | Mounting bracket for series MLV12 sensors |
| MH-R20x-Quick-Mount | Quick mounting accessory |
| CE2-8IOL-G65L-V1D | EtherNet/IP IO-Link master with 8 inputs/outputs |
| CE3-8IOL-G65L-V1D | PROFINET IO IO-Link master with 8 inputs/outputs |
| CE2-8IOL-K45S-RJ45 | EtherNet/IP IO-Link master with 8 inputs/outputs, DIN rail, screw terminal |
| CE3-8IOL-K45P-RJ45 | PROFINET IO IO-Link master with 8 inputs/outputs, DIN rail, push-in terminals |
| CE3-8IOL-K45S-RJ45 | PROFINET IO IO-Link master with 8 inputs/outputs, DIN rail, screw terminal |
| D-Link-Master02-USB | IO-Link master, supply via USB port or separate power supply, LED indicators, M12 plug for sensor connection |
| CE1-8IOL-G30L-V1D | Ethernet IO-Link module with 8 inputs/outputs |
| CE1-8IOL-G60L-V1D | Ethernet IO-Link module with 8 inputs/outputs |
| CE2-8IOL-K45P-RJ45 | EtherNet/IP IO-Link master with 8 inputs/outputs, DIN rail, push-in connectors |
| 1-G-2M-PUR | Female cordset single-ended M12 straight A-coded, 4-pin, PUR cable grey |
| 1-W-2M-PUR | Female cordset single-ended M12 angled A-coded, 4-pin, PUR cable grey |
| | MH-R200-01 MH-MLV12-HWK MH-R20x-Quick-Mount E2-8IOL-G65L-V1D E2-8IOL-G65L-V1D E2-8IOL-K45S-RJ45 E3-8IOL-K45S-RJ45 E3-8IOL-K45S-RJ45 E3-8IOL-K45P-RJ45 E1-8IOL-G60L-V1D E1-8IOL-G60L-V1D E1-8IOL-G60L-V1D |

 Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

 Pepperl+Fuchs Group
 USA: +1 330 486 0001
 Gr

 www.pepperl-fuchs.com
 fa-info@us.pepperl-fuchs.com
 fa-info@us.pepperl-fuchs.com

Configuration

To unlock the adjustment functions, rotate the sensing range/sensitivity adjuster by more than 180°.

Sensing Range/Sensitivity

To increase the sensing range/sensitivity, rotate the sensing range/sensitivity adjuster clockwise.

To reduce the sensing range/sensitivity, rotate the sensing range/sensitivity adjuster counter-clockwise.

As soon as the end of the adjustment range is reached, the signal indicator flashes at 8 Hz.

Configuring Light On/Dark On

Press the light-on/dark-on changeover switch for more than 1 second (but less than 4 seconds). "Light on/dark on" mode changes and the relevant operating indicator lights up.

If you press the light-on/dark-on changeover switch for longer than 4 seconds, the "light on/dark on" mode will switch back to the original setting. The current status is activated when the light-on/dark-on changeover switch is released.

Restoring Factory Settings

Press the light-on/dark-on changeover switch for more than 10 seconds (but less than 30 seconds) until all LEDs go out. When the light-on/dark-on changeover switch is released, the signal indicator lights up. After 5 seconds, the sensor resumes operation with the factory settings.

The adjustment functions are locked after 5 minutes of inactivity. To unlock the adjustment functions, rotate the sensing range/sensitivity adjuster again by more than 180°.

Refer to "General Notes Relating to Pepperl+Fuchs Product Information

