


Commissioning sheet

classic mode
1.12A
 advanced display mode

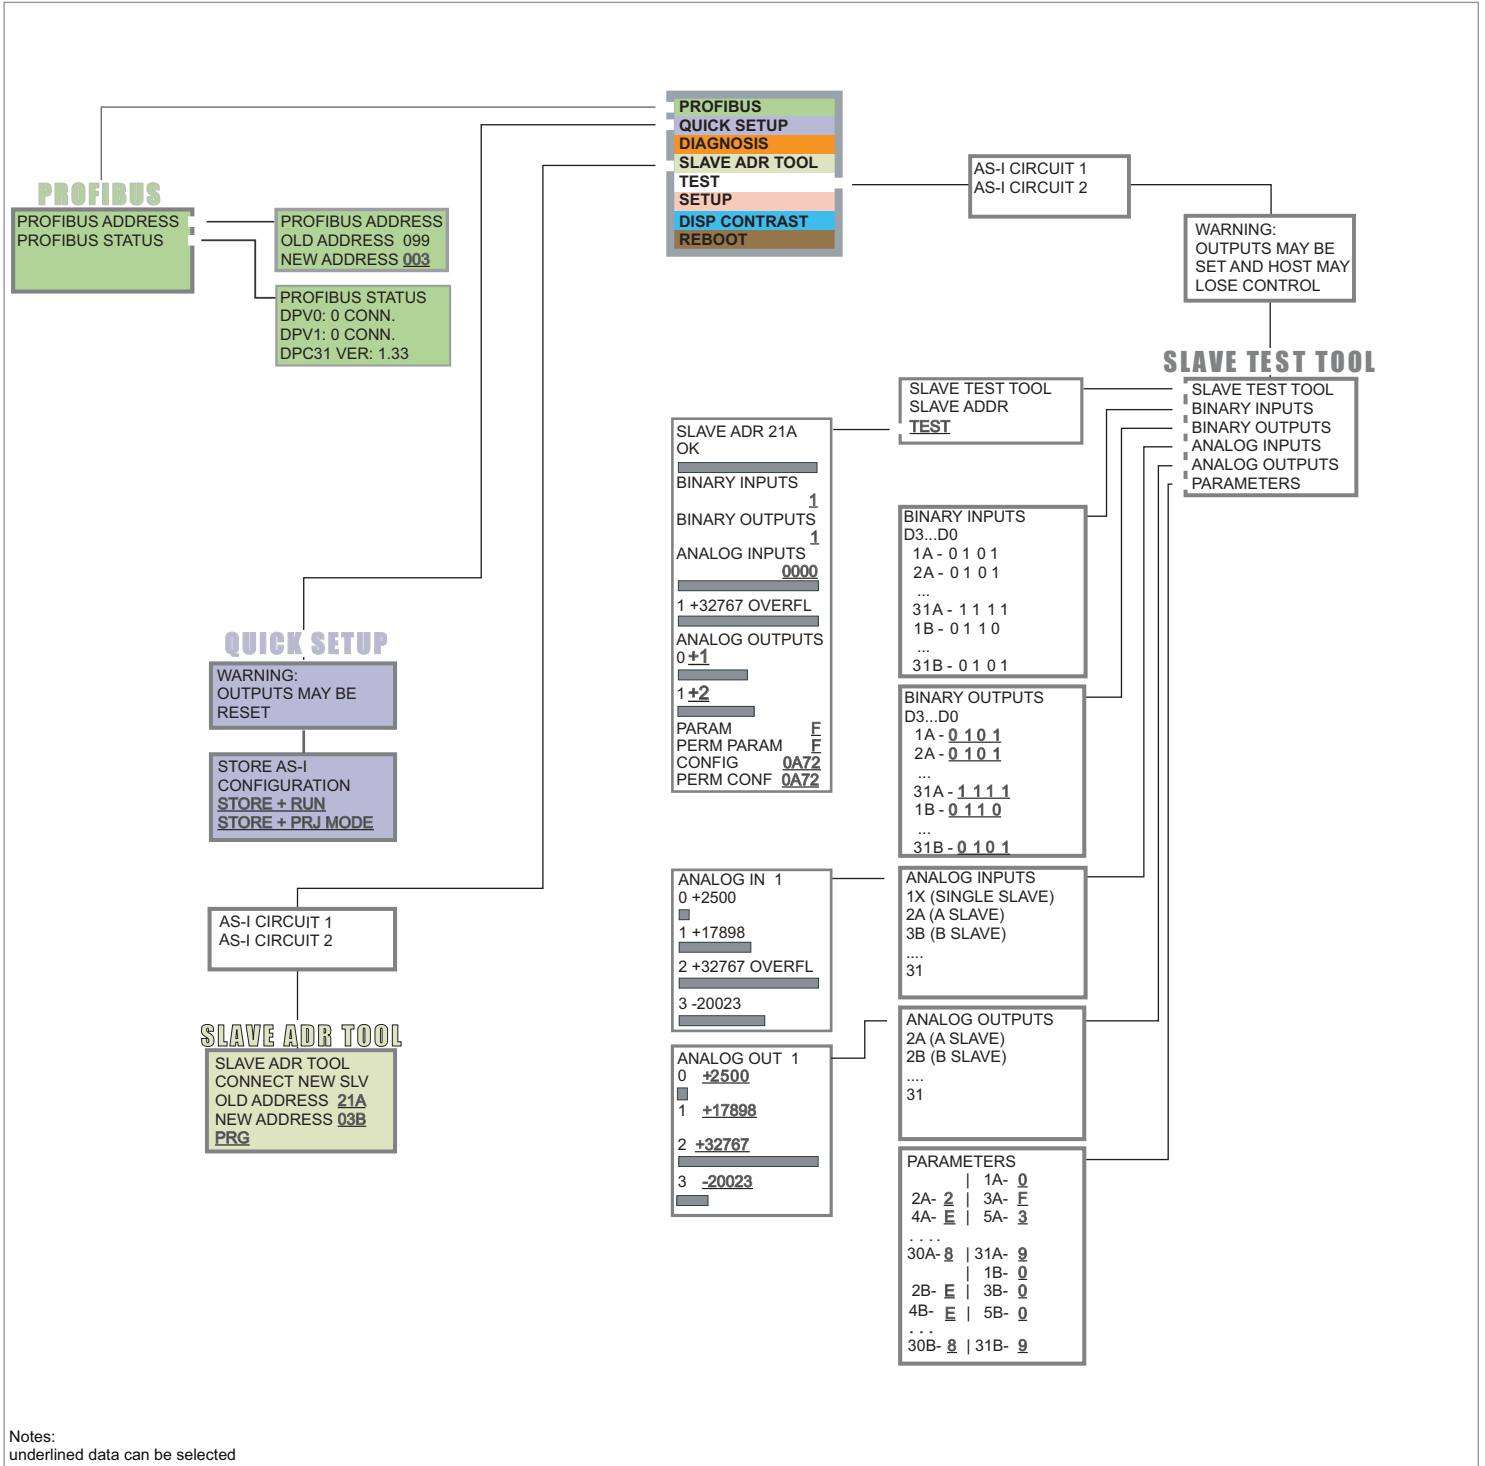


Notes:
 underlined data can be selected

Commissioning sheet



classic mode



advanced display mode

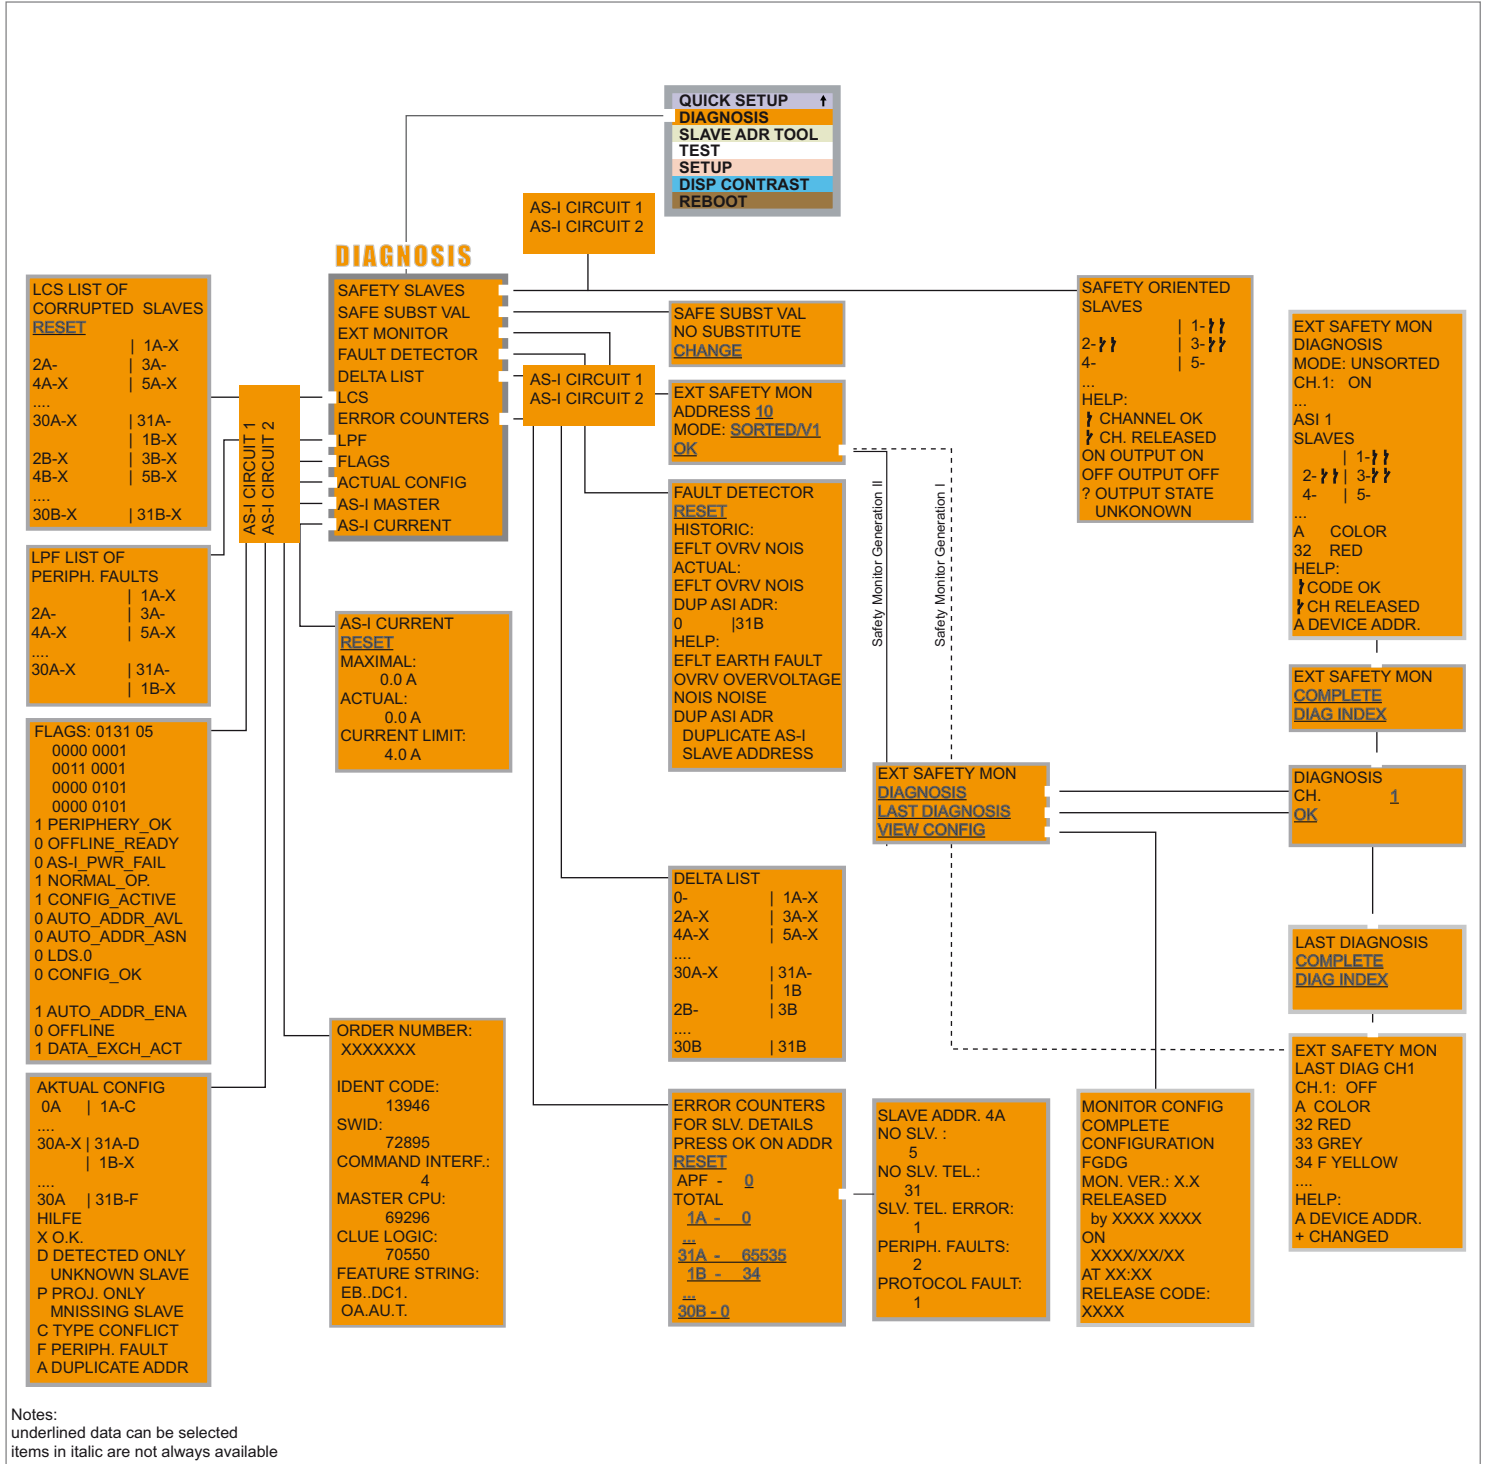

Commissioning sheet

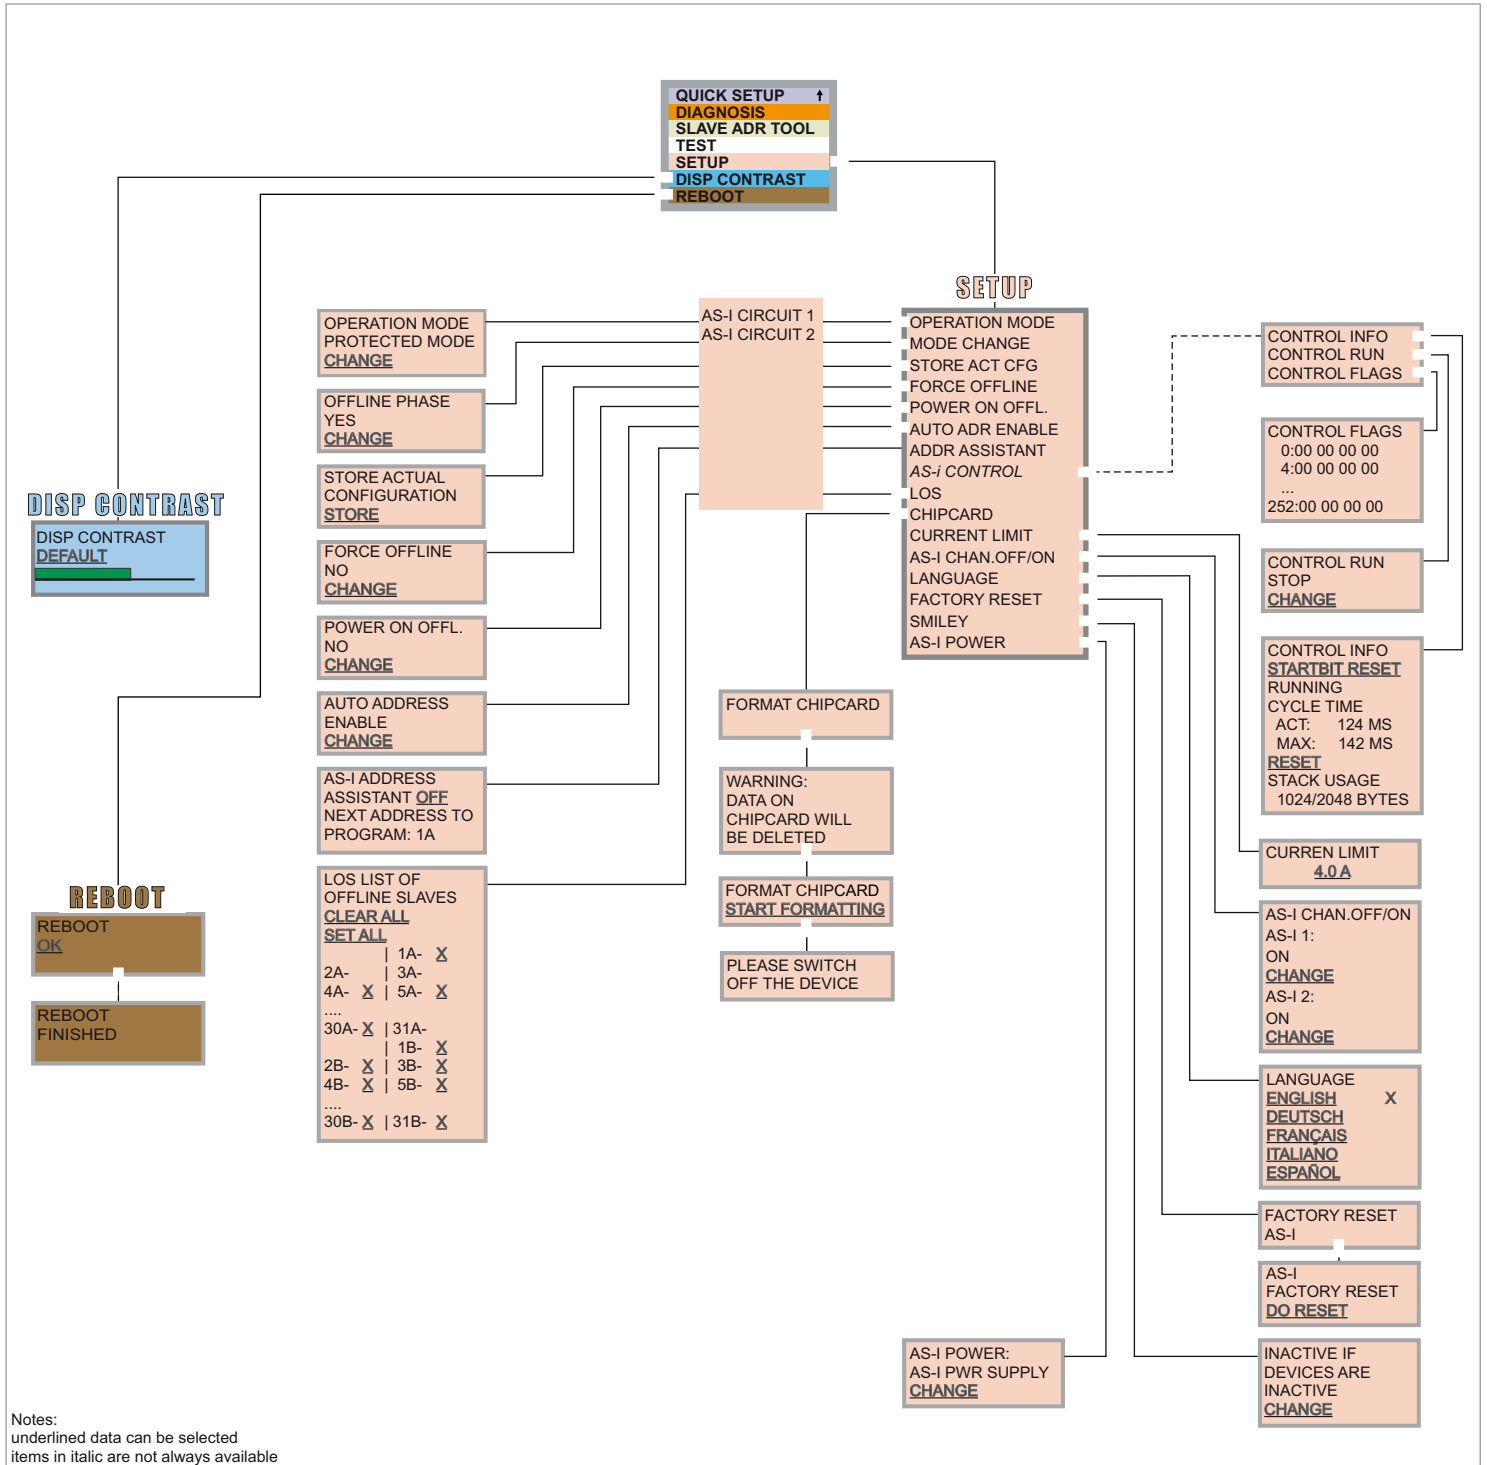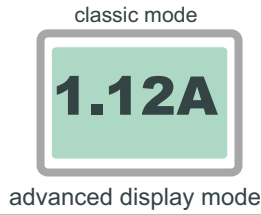

Notes:
underlined data can be selected
items in *italics* are not always available

Basic Operation

The device starts in the traditional mode. You can switch between the two modes with **ESC** or **OK**. In the advanced mode the cursor is moved by both arrow buttons. Pushing **OK** puts you to the superior menu (in the drawing one step to the right side). **ESC** puts you back to the previous menu. To edit data you first mark them with the cursor and then select them with **OK**, change them with the arrow buttons and finally apply them with **OK**. Pushing **ESC** cancels the editing.

Commissioning sheet

classic mode



advanced display mode

- QUICK SETUP ↑
- DIAGNOSIS
- SLAVE ADR TOOL
- TEST
- SETUP
- DISP CONTRAST
- DIAG.INTERFACE
- REBOOT

DIAG.INTERFACE

DIAG.INTERFACE
STATUS
CONFIGURATION

STATUS
DEVICE NAME
ASI-PB-GW
IP ADDRESS
192.168.42.53
NETMASK
255.255.255.0
GATEWAY
192.168.42.213
CONFIGURATION
STATIC
MAC ADDRESS
00:16:77:00:
5D:77
LINK STATE
100BASE-T HDX

CONFIGURATION
DHCP

CONFIGURATION
STATIC
IP ADDRESS
192.168.42.53
NETMASK
255.255.255.0
GATEWAY
192.168.42.213

Notes:
underlined data can be selected
items in italic are not always available

Basic Operation

The device starts in the traditional mode. You can switch between the two modes with **ESC** or **OK**. In the advanced mode the cursor is moved by both arrow buttons. Pushing **OK** puts you to the superior menue (in the drawing one step to the right side). **ESC** puts you back to the previous menue. To edit data you first mark them with the cursor and then select them with **OK**, change them with the arrow buttons and finally apply them with **OK**. Pushing **ESC** cancels the editing.