

Original Instructions

1. Marking

Ultrasonic Sensor UB*, UC*, UM*, 3RG6*, 6GR6*
Double Sheet Sensor UD*
Splice Sensor UG*
Label Sensor UL*

The *-marked letters of the type code are placeholders for versions of the device.

Pepperl+Fuchs Group Lilienthalstraße 200, 68307 Mannheim, Germany
Internet: www.pepperl-fuchs.com

2. Target Group, Personnel

Responsibility for planning, assembly, commissioning, operation, maintenance, and dismantling lies with the plant operator.

The personnel must be appropriately trained and qualified in order to carry out mounting, installation, commissioning, operation, maintenance, and dismantling of the device. The trained and qualified personnel must have read and understood the instruction manual.

Prior to using the product make yourself familiar with it. Read the instruction manual carefully.

3. Reference to Further Documentation

Observe directives, standards, and national laws applicable to the intended use and the operating location.

The corresponding datasheets, manuals, declarations of conformity, EU-type examination certificates, certificates, and control drawings if applicable supplement this document. You can find this information under www.pepperl-fuchs.com.

For specific device information such as the year of construction, scan the QR code on the device. As an alternative, enter the serial number in the serial number search at www.pepperl-fuchs.com.

For specific device information such as the year of construction, scan the QR code on the packaging of the device. As an alternative, enter the serial number in the serial number search at www.pepperl-fuchs.com.

4. Intended Use

The device is only approved for appropriate and intended use. Ignoring these instructions will void any warranty and absolve the manufacturer from any liability.

Only use the device in the industrial location.

The device is an electrical apparatus and is designed for use in the medium air. The device detects objects using ultrasonic waves.

Use the device only within the specified ambient and operating conditions.

5. Improper Use

Protection of the personnel and the plant is not ensured if the device is not used according to its intended use.

6. Mounting and Installation

Do not mount a damaged device.

Mount the device in a way that the device is protected against mechanical hazard.

Ensure that all fasteners are present.

Observe the tightening torque of the screws.

Only use accessories specified by the manufacturer.

The device must be disconnected from the power supply prior to installation and maintenance. The power supply may be activated only after all the circuits required for operation have been fully assembled and connected.

Disconnect the device, before you plug or unplug the terminals.

Disconnect the device, before you plug or unplug the plugs.

7. Operation, Maintenance, Repair

Do not use a damaged device.

Do not repair, modify, or manipulate the device.

If there is a defect, always replace the device with an original device.

Disconnect the device, before you plug or unplug the terminals.

Disconnect the device, before you plug or unplug the plugs.

8. Delivery, Transport, Disposal

Check the packaging and contents for damage.

Check if you have received every item and if the items received are the ones you ordered.

Keep the original packaging. Always store and transport the device in the original packaging.

Store the device in a clean and dry environment. The permitted ambient conditions must be considered, see datasheet.

The device, built-in components, packaging, and any batteries contained within must be disposed in compliance with the applicable laws and guidelines of the respective country.