

Instruction Manual

1. Marking

Solenoid Driver KFD2-SLD-Ex2.1045-Y1, KFD2-SLD-Ex2.1245-Y1, KFD2-SLD-Ex2.1545-Y1
ATEX certificate: FIDI 21 ATEX 0091 X ATEX marking: Ⓜ II 3(1)G Ex ec [ia Ga] IIC T4 Gc Ⓜ II (1)D [Ex ia Da] IIIC Ⓜ I (M1) [Ex ia Ma] I
IECEX certificate: IECEX FIDI 21.0009X IECEX marking: Ex ec [ia Ga] IIC T4 Gc [Ex ia Da] IIIC [Ex ia Ma] I
North America Certificates: E106378 (UL) Class I, Division 2, Groups A-D, T4 Class I, Zone 2, Group IIC T4 Associated apparatus with intrinsically safe circuits for: Class I, Division 1, Groups A-D; Class II, Division 1, Groups E-G; Class III [AEx ia Ga] IIC, [AEx ia Da] IIIC, [Ex ia Ga] IIC, [Ex ia Da] IIIC
Pepperl+Fuchs Group Lilienthalstraße 200, 68307 Mannheim, Germany Internet: www.pepperl-fuchs.com

2. Target Group, Personnel

Responsibility for planning, assembly, commissioning, operation, maintenance, and dismantling lies with the plant operator.

The personnel must be appropriately trained and qualified in order to carry out mounting, installation, commissioning, operation, maintenance, and dismantling of the device. The trained and qualified personnel must have read and understood the instruction manual.

Prior to using the product make yourself familiar with it. Read the instruction manual carefully.

3. Reference to Further Documentation

Observe directives, standards, and national laws applicable to the intended use and the operating location.

For mining applications, observe directives, standards, and national laws applicable to the operating location.

The corresponding datasheets, manuals, declarations of conformity, EU-type examination certificates, certificates, and control drawings if applicable supplement this document. You can find this information under www.pepperl-fuchs.com.

For specific device information such as the year of construction, scan the QR code on the device. As an alternative, enter the serial number in the serial number search at www.pepperl-fuchs.com.

4. Intended Use

The device is only approved for appropriate and intended use. Ignoring these instructions will void any warranty and absolve the manufacturer from any liability.

Only use the device in the industrial location.

The device is used in control and instrumentation technology (C&I technology) for the galvanic isolation of signals such as 20 mA and 10 V standard signals or alternatively for adapting or standardizing signals. The device has intrinsically safe circuits that are used for operating intrinsically safe field devices in hazardous areas.

The device supplies power to solenoids, LEDs and audible alarms located in the explosion-hazardous area.

The device is controlled with a loop powered signal or a bus powered logic signal.

Use the device only within the specified ambient and operating conditions. Only use the device stationary.

The device is an associated apparatus according to IEC/EN 60079-11.

The device is an electrical apparatus for hazardous areas of Zone 2.

The device may be installed in the non-hazardous area.

5. Improper Use

Protection of the personnel and the plant is not ensured if the device is not used according to its intended use.

If circuits with type of protection Ex i are operated with non-intrinsically safe circuits, they must no longer be used as circuits with type of protection Ex i.

6. Mounting and Installation

Do not mount a damaged or polluted device.

The device is designed for mounting on a 35 mm DIN mounting rail according to EN 60715.

Mount the device in a way that the device is protected against mechanical hazard. Mount the device in a surrounding enclosure for example.

Ensure that the surrounding enclosure can only be opened with a tool.

The device fulfills a degree of protection IP20 according to IEC/EN 60529.

The device must be installed and operated only in a controlled environment that ensures a pollution degree 2 (or better) according to IEC/EN 60664-1.

If used in areas with higher pollution degree, the device needs to be protected accordingly.

Do not mount the device in the dust hazardous area.

The device must be installed and operated only in an environment of overvoltage category II (or better) according to IEC/EN 60664-1.

Supply the device with a power supply that meets the requirements for safety extra-low voltage (SELV) or protective extra-low voltage (PELV).

If you are using the Power Rail, supply the Power Rail only via the corresponding power feed modules or power supplies. Do not supply the Power Rail via isolators.

Observe the installation instructions according to IEC/EN 60079-14.

Requirements for Cables and Connection Lines

Observe the permissible core cross section of the conductor.

When using stranded conductors, crimp wire end ferrules on the conductor ends.

Use only copper conductors.

Use only one conductor per terminal.

When installing the conductors the insulation must reach up to the terminal.

Observe the tightening torque of the terminal screws.

Use conductors rated for a temperature of 90 °C or conductors whose temperature is suitable for the application.

Requirements for Usage as Associated Apparatus

If circuits with type of protection Ex i are operated with non-intrinsically safe circuits, they must no longer be used as circuits with type of protection Ex i.

Observe the respective peak values of the field device and the associated apparatus with regard to explosion protection when connecting intrinsically safe field devices with intrinsically safe circuits of associated apparatus (verification of intrinsic safety). Also observe IEC/EN 60079-14 and IEC/EN 60079-25.

Intrinsically safe circuits of associated apparatus can be led into hazardous areas. Observe the compliance of the separation distances to all non-intrinsically safe circuits according to IEC/EN 60079-14.

Observe the compliance of the separation distances between two adjacent intrinsically safe circuits according to IEC/EN 60079-14.

Requirements for Equipment Protection Level Gc

The device must be installed and operated only in surrounding enclosures that

- comply with the requirements for surrounding enclosures according to IEC/EN 60079-0,
- are rated with the degree of protection IP54 according to IEC/EN 60529.

Connection or disconnection of energized non-intrinsically safe circuits is only permitted in the absence of a potentially explosive atmosphere.

7. Operation, Maintenance, Repair

Do not repair, modify, or manipulate the device.

If there is a defect, always replace the device with an original device.

Do not use a damaged or polluted device.

Requirements for Equipment Protection Level Gc

Connection or disconnection of energized non-intrinsically safe circuits is only permitted in the absence of a potentially explosive atmosphere.

Only use operating elements in the absence of a potentially explosive atmosphere.

8. Delivery, Transport, Disposal

Check the packaging and contents for damage.

Check if you have received every item and if the items received are the ones you ordered.

Always store and transport the device in the original packaging.

Store the device in a clean and dry environment. The permitted ambient conditions must be considered, see datasheet.

The device, built-in components, packaging, and any batteries contained within must be disposed in compliance with the applicable laws and guidelines of the respective country.