

# Instruction Manual

## 1. Marking

Advanced diagnostic module, type HD2-DM-A*
ATEX certificate: TÜV 04 ATEX 2500 X
ATEX marking: Ⓜ II 3 G Ex nA IIC T4 Gc
IECEX certificate: IECEX TUN 13.0038X
IECEX marking: Ex nA IIC T4 Gc

Basic diagnostic module, type HD2-DM-B*
ATEX certificate: TÜV 04 ATEX 2500 X
ATEX marking: Ⓜ II 3 G Ex nA nC IIC T4 Gc
IECEX certificate: IECEX TUN 13.0038X
IECEX marking: Ex nA nC IIC T4 Gc

The \*-marked letters of the type code are placeholders for versions of the device.

Pepperl+Fuchs Group Lilienthalstraße 200, 68307 Mannheim, Germany
Internet: <a href="http://www.pepperl-fuchs.com">www.pepperl-fuchs.com</a>

## 2. Target Group, Personnel

Responsibility for planning, assembly, commissioning, operation, maintenance, and dismantling lies with the plant operator.

The personnel must be appropriately trained and qualified in order to carry out mounting, installation, commissioning, operation, maintenance, and dismantling of the device. The trained and qualified personnel must have read and understood the instruction manual.

## 3. Reference to Further Documentation

Observe laws, standards, and directives applicable to the intended use and the operating location. Observe Directive 1999/92/EC in relation to hazardous areas.

The corresponding datasheets, manuals, declarations of conformity, EU-type examination certificates, certificates, and control drawings if applicable supplement this document. You can find this information under [www.pepperl-fuchs.com](http://www.pepperl-fuchs.com).

For specific device information such as the year of construction, scan the QR code on the device. As an alternative, enter the serial number in the serial number search at [www.pepperl-fuchs.com](http://www.pepperl-fuchs.com).

Due to constant revisions, documentation is subject to permanent change. Please refer only to the most up-to-date version, which can be found under [www.pepperl-fuchs.com](http://www.pepperl-fuchs.com).

## 4. Intended Use

The device is designed to analyze signals for monitoring and measuring specific system and field device values.

The modules are intended for mounting on an appropriate fieldbus Power Hub motherboard.

The Power Hub motherboard features a special connection slot for HD2-DM\* diagnostic modules labeled "Diagnostic Module only". Do not try to plug any other modules into this connection slot. Other modules may be damaged.

The device must only be operated in the specified ambient temperature range and at the specified relative humidity without condensation.

## 5. Improper Use

Protection of the personnel and the plant is not ensured if the device is not used according to its intended use.

The device is only approved for appropriate and intended use. Ignoring these instructions will void any warranty and absolve the manufacturer from any liability.

The device is not suitable for isolating signals in power installations unless this is noted separately in the corresponding datasheet.

## 6. Mounting and Installation

Prior to mounting, installation, and commissioning of the device you should make yourself familiar with the device and carefully read the instruction manual.

Observe the installation instructions according to IEC/EN 60079-14.

Do not mount a damaged or polluted device.

The device must be installed and operated only in surrounding enclosures that

- comply with the requirements for surrounding enclosures according to IEC/EN 60079-0,
- are rated with the degree of protection IP54 according to IEC/EN 60529.

The device must be installed and operated only in a controlled environment that ensures a pollution degree 2 (or better) according to IEC/EN 60664-1.

## 6.1. Hazardous Area

If the device has already been operated in general electrical installations, the device may subsequently no longer be installed in electrical installations used in combination with hazardous areas.

### 6.1.1. Gas

#### 6.1.1.1. Zone 2

The device may be installed in gas groups IIC, IIB, and IIA.

The device may be installed in Zone 2.

Avoid electrostatic charges which could result in electrostatic discharges while installing, operating, or maintaining the device.

Connection or disconnection of energized non-intrinsically safe circuits is only permitted in the absence of a potentially explosive atmosphere.

## 7. Operation, Maintenance, Repair

Prior to using the product make yourself familiar with it. Read the instruction manual carefully.

Only use operating elements in the absence of a potentially explosive atmosphere.

Only plug and pull the energized module in the absence of a potentially explosive atmosphere.

Connection or disconnection of energized non-intrinsically safe circuits is only permitted in the absence of a potentially explosive atmosphere.

Observe IEC/EN 60079-17 for maintenance and inspection of associated apparatus.

Do not repair, modify, or manipulate the device.

If there is a defect, always replace the device with an original device.

## 8. Delivery, Transport, Disposal

Check the packaging and contents for damage.

Check if you have received every item and if the items received are the ones you ordered.

Keep the original packaging. Always store and transport the device in the original packaging.

Store the device in a clean and dry environment. The permitted ambient conditions must be considered, see datasheet.

The device, built-in components, packaging, and any batteries contained within must be disposed in compliance with the applicable laws and guidelines of the respective country.