

# Instruction Manual

## 1. Marking

Inductive sensor NJ1,5-V3-N-150-Y181591
ATEX marking Ⓢ II 3G Ex ic IIC T4...T1 Gc
IECEx marking

Pepperl+Fuchs Group Lilienthalstraße 200, 68307 Mannheim, Germany
Internet: www.pepperl-fuchs.com

The certificate may contain several Ex markings. Depending on the respective device, the Ex markings specified in the certificate may be only partially valid. You will find the Ex markings valid for the device on the respective nameplate or in this document.

## 2. Validity

Specific processes and instructions in this instruction manual require special provisions to guarantee the safety of the operating personnel.

## 3. Target Group, Personnel

Responsibility for planning, assembly, commissioning, operation, maintenance, and dismantling lies with the plant operator. The personnel must be appropriately trained and qualified in order to carry out mounting, installation, commissioning, operation, maintenance, and dismantling of the device. The trained and qualified personnel must have read and understood the instruction manual.

## 4. Reference to Further Documentation

Observe laws, standards, and directives applicable to the intended use and the operating location. Observe Directive 1999/92/EC in relation to hazardous areas.

The corresponding datasheets, manuals, declarations of conformity, EU-type examination certificates, certificates, and control drawings if applicable (see datasheet) are an integral part of this document. You can find this information under [www.pepperl-fuchs.com](http://www.pepperl-fuchs.com).

Due to constant revisions, documentation is subject to permanent change. Please refer only to the most up-to-date version, which can be found under [www.pepperl-fuchs.com](http://www.pepperl-fuchs.com).

## 5. Intended Use

The device is only approved for appropriate and intended use. Ignoring these instructions will void any warranty and absolve the manufacturer from any liability.

Technical data provided in the datasheet may be partly restrained by the information given in this instruction manual.

Use the device only within the specified ambient and operating conditions.

The device is an electrical apparatus for hazardous areas.

The certificate applies only to the use of apparatus under atmospheric conditions.

If you use the device outside atmospheric conditions, consider that the permissible safety parameters should be reduced.

The device can be used in hazardous areas containing gas, vapor, and mist.

## 6. Improper Use

Protection of the personnel and the plant is not ensured if the device is not used according to its intended use.

## 7. Mounting and Installation

Observe the installation instructions according to IEC/EN 60079-14.

Safety-relevant markings are found on the nameplate of the device or the nameplate supplied.

Attach the nameplate supplied in the immediate vicinity of the device.

Attach the nameplate so that it is legible and indelible. Take the ambient conditions into account.

Do not mount a damaged or polluted device.

Mount the device so that it complies with the specified degree of protection according to IEC/EN 60529.

If you use the device in environments subject to adverse conditions, you must protect the device accordingly.

Do not remove the warning markings.

## 7.1. Requirements for Usage as Intrinsically Safe Apparatus

When connecting intrinsically safe devices with intrinsically safe circuits of associated apparatus, observe the maximum peak values with regard to explosion protection (verification of intrinsic safety). Observe the standards IEC/EN 60079-14 or IEC/EN 60079-25.

The type of protection is determined by the connected intrinsically safe circuit.

Mount the device with at least a degree of protection of IP20 according to IEC/EN 60529.

## 7.2. Specific Conditions of Use

### 7.2.1. Requirements to Mechanics

#### 7.2.1.1. Requirements for Usage as Intrinsically Safe Apparatus

Mount the device in such a way that the bare casting resin surface is not exposed to mechanical hazards.

Protect the device from impact effects by mounting in a surrounding enclosure if it is used in the temperature range between the minimum permissible ambient temperature and -20 °C.

Mount the device with at least a degree of protection of IP20 according to IEC/EN 60529.

## 8. Operation, Maintenance, Repair

Observe the specific conditions of use.

Safety-relevant markings are found on the nameplate of the device or the nameplate supplied.

Do not use a damaged or polluted device.

Do not repair, modify, or manipulate the device.

Modifications are permitted only if approved in this instruction manual and in the device-related documentation.

If there is a defect, always replace the device with an original device.

Do not remove the warning markings.

### 8.1. Requirements for Usage as Intrinsically Safe Apparatus

Only operate the device with intrinsically safe circuits according to IEC/EN 60079-11.

The type of protection is determined by the connected intrinsically safe circuit.

## 9. Delivery, Transport, Disposal

Check the packaging and contents for damage.

Check if you have received every item and if the items received are the ones you ordered.

Keep the original packaging. Always store and transport the device in the original packaging.

Store the device in a clean and dry environment. The permitted ambient conditions must be considered, see datasheet.

The device, built-in components, packaging, and any batteries contained within must be disposed in compliance with the applicable laws and guidelines of the respective country.

## 10. Safety-Relevant Technical Data

### 10.1. Equipment protection level Gc (ic)

Type of protection	Intrinsic safety
CE marking	CE
Certificates	
ATEX certificate	PF15CERT3613X
ATEX marking	Ⓢ II 3G Ex ic IIC T4...T1 Gc
ATEX standards	EN 60079-0:2012-08, EN 60079-0/A11:2013-11, EN 60079-11:2012-01
Effective internal capacitance $C_i$	max. 80 nF A cable length of 10 m is considered.
Effective internal inductance $L_i$	max. 50 µH A cable length of 10 m is considered.

<p>Maximum permissible ambient temperature in °C</p>	<p>Also observe the maximum permissible ambient temperature stated in the general technical data. Keep to the lower of the two values.</p> <p><math>U_i = 20\text{ V}</math>, <math>I_i = 25\text{ mA}</math>, <math>P_i = 34\text{ mW}</math>  T4: 123 °C  T3: 150 °C  T2: 150 °C  T1: 150 °C</p> <p><math>U_i = 20\text{ V}</math>, <math>I_i = 25\text{ mA}</math>, <math>P_i = 64\text{ mW}</math>  T4: 116 °C  T3: 150 °C  T2: 150 °C  T1: 150 °C</p> <p><math>U_i = 20\text{ V}</math>, <math>I_i = 52\text{ mA}</math>, <math>P_i = 169\text{ mW}</math>  T4: 95 °C  T3: 150 °C  T2: 150 °C  T1: 150 °C</p> <p><math>U_i = 20\text{ V}</math>, <math>I_i = 76\text{ mA}</math>, <math>P_i = 242\text{ mW}</math>  T4: 80 °C  T3: 145 °C  T2: 149 °C  T1: 149 °C</p>
--	--