

# Instruction Manual

## 1. Marking

Digital outputs LB6005A, LB6006A
ATEX certificate: PF 08 CERT 1234 X
ATEX marking: Ⓜ II 3 G Ex nA nC IIC T4 Gc
IECEx certificate: IECEx BVS 09.0037X
IECEx marking: Ex nA nC IIC T4 Gc
CCC certificate: 2021322310003600
CCC marking: Ex ec nC IIC T4 Gc

Pepperl+Fuchs Group Lilienthalstraße 200, 68307 Mannheim, Germany
Internet: www.pepperl-fuchs.com

## 2. Validity

Specific processes and instructions in this instruction manual require special provisions to guarantee the safety of the operating personnel.

Observe directives, standards, and national laws applicable to the intended use and the operating location.

Observe Directive 1999/92/EC in relation to hazardous areas.

Observe directives, standards, and national laws applicable to the intended use and the operating location.

The corresponding datasheets, manuals, declarations of conformity, EU-type examination certificates, certificates, and control drawings if applicable (see datasheet) are an integral part of this document. You can find this information under [www.pepperl-fuchs.com](http://www.pepperl-fuchs.com).

For specific device information such as the year of construction, scan the QR code on the device. As an alternative, enter the serial number in the serial number search at [www.pepperl-fuchs.com](http://www.pepperl-fuchs.com).

Due to constant revisions, documentation is subject to permanent change. Please refer only to the most up-to-date version, which can be found under [www.pepperl-fuchs.com](http://www.pepperl-fuchs.com).

## 3. Target Group, Personnel

Responsibility for planning, assembly, commissioning, operation, maintenance, and dismantling lies with the plant operator.

The personnel must be appropriately trained and qualified in order to carry out mounting, installation, commissioning, operation, maintenance, and dismantling of the device. The trained and qualified personnel must have read and understood the instruction manual.

## 4. Intended Use

The device is only approved for appropriate and intended use. Ignoring these instructions will void any warranty and absolve the manufacturer from any liability.

Use the device only within the specified ambient and operating conditions. Only use the device stationary.

The device is an electrical apparatus for hazardous areas of Zone 2.

The I/O modules, com units, power supplies, and bus termination modules of the remote I/O system must only be used together with the associated backplanes.

The backplane connections are non-intrinsically safe.

## 5. Improper Use

Protection of the personnel and the plant is not ensured if the device is not used according to its intended use.

The device is not suitable for isolating signals in power installations unless this is noted separately in the corresponding datasheet.

## 6. Mounting and Installation

Prior to mounting, installation, and commissioning of the device you should make yourself familiar with the device and carefully read the instruction manual.

Observe the instruction manuals for the associated backplanes.

The device must only be operated in the specified ambient temperature range and at the specified relative humidity without condensation.

Do not mount the device at locations where an aggressive atmosphere may be present.

The device must be installed and operated only in a controlled environment that ensures a pollution degree 2 (or better) according to IEC/EN 60664-1.

If used in areas with higher pollution degree, the device needs to be protected accordingly.

The device must be installed and operated only in an environment of overvoltage category II (or better) according to IEC/EN 60664-1.

Do not mount a damaged or polluted device.

Only use accessories specified by the manufacturer.

Do not push the modules into the slots with too much force. The rear connections of the devices may be damaged if using excessive force. Only plug and pull the energized module in the absence of a potentially explosive atmosphere.

Observe the installation instructions according to IEC/EN 60079-14.

Connection or disconnection of energized non-intrinsically safe circuits is only permitted in the absence of a potentially explosive atmosphere.

Before connecting or disconnecting circuits in the presence of a potentially explosive atmosphere, ensure that all non-intrinsically safe circuits are voltage-free and currentless.

### Requirements for Equipment Protection Level Gc

The device must be installed and operated only in surrounding enclosures that

- comply with the requirements for surrounding enclosures according to IEC/EN 60079-0,
- are rated with the degree of protection IP54 according to IEC/EN 60529.

### Requirements for Cables and Connection Lines

Observe the following points when installing cables and connection lines:

Observe the permissible core cross section of the conductor.

The insulation stripping length must be considered.

When installing the conductors the insulation must reach up to the terminal.

When using stranded conductors, crimp wire end ferrules on the conductor ends.

Never pull the cable. A wire could become loose from the terminal and protection against electric shock can no longer be ensured. Always pull the terminal.

Unused cables and connection lines must be either connected to terminals or securely tied down and isolated.

### Requirements for Non-Hazardous Areas

The device must be installed and operated only in surrounding enclosures that

- comply with the requirements for surrounding enclosures according to IEC/EN 60079-0,
- are rated with the degree of protection IP54 according to IEC/EN 60529.

Alternatively, it is permitted to install and operate the device in a controlled environment that ensures a pollution degree 2 according to IEC/EN 60664-1.

## 7. Operation, Maintenance, Repair

Prior to using the product make yourself familiar with it. Read the instruction manual carefully.

Substitution of components may impair suitability for Zone 2.

Do not use a damaged or polluted device.

Only use accessories specified by the manufacturer.

Do not repair, modify, or manipulate the device.

If there is a defect, always replace the device with an original device.

Do not push the modules into the slots with too much force. The rear connections of the devices may be damaged if using excessive force.

Only plug and pull the energized module in the absence of a potentially explosive atmosphere.

Observe IEC/EN 60079-17 for maintenance and inspection of associated apparatus.

Connection or disconnection of energized non-intrinsically safe circuits is only permitted in the absence of a potentially explosive atmosphere.

Before connecting or disconnecting circuits in the presence of a potentially explosive atmosphere, ensure that all non-intrinsically safe circuits are voltage-free and currentless.

### Requirements for Cables and Connection Lines

Observe the following points when installing cables and connection lines:

Observe the permissible core cross section of the conductor.

The insulation stripping length must be considered.

When installing the conductors the insulation must reach up to the terminal.

When using stranded conductors, crimp wire end ferrules on the conductor ends.

Never pull the cable. A wire could become loose from the terminal and protection against electric shock can no longer be ensured. Always pull the terminal.

Unused cables and connection lines must be either connected to terminals or securely tied down and isolated.

## 8. Delivery, Transport, Disposal

Check the packaging and contents for damage.

Check if you have received every item and if the items received are the ones you ordered.

Keep the original packaging. Always store and transport the device in the original packaging.

Store the device in a clean and dry environment. The permitted ambient conditions must be considered, see datasheet.

The device, built-in components, packaging, and any batteries contained within must be disposed in compliance with the applicable laws and guidelines of the respective country.