

Instruction manual

Marking

Inductive sensor
NCN3-F31K-N4-K-Y244381
244381
Pepperl+Fuchs GmbH
Lilienthalstraße 200, 68307 Mannheim, Germany

Range of application	Certification	Group, category, type of protection
ATEX 1G	TÜV 99 ATEX 1479 X	Ⓜ II 1G Ex ia IIC T6 Ga
ATEX 2G	TÜV 99 ATEX 1479 X	Ⓜ II 1G Ex ia IIC T6 Ga
ATEX 3G (ic)	PF 13 CERT 2895 X	Ⓜ II 3G Ex ic IIC T6 Gc

Validity

Specific processes and instructions in this document require special precautions to guarantee the safety of the operating personnel.

Target group, personnel

Responsibility for planning, assembly, commissioning, operation, maintenance, and dismantling lies with the plant operator.

Mounting, installation, commissioning, operation, maintenance and disassembly of any devices may only be carried out by trained, qualified personnel. The instruction manual must be read and understood.

Reference to further documentation

Observe laws, standards, and directives applicable to the intended use and the operating location. Observe Directive 1999/92/EC in relation to hazardous areas.

The corresponding datasheets, declarations of conformity, EC-type-examination certificates, certificates and control drawings if applicable (see datasheet) are an integral part of this document. You can find this information under www.pepperl-fuchs.com.

Due to constant revisions, documentation is subject to permanent change. Please refer only to the most up-to-date version, which can be found under www.pepperl-fuchs.com.

Intended use

The device is only approved for appropriate and intended use. Ignoring these instructions will void any warranty and absolve the manufacturer from any liability.

Range of application

Manual electrical apparatus for hazardous areas

Range of application 1G

for use in hazardous areas with gas, vapour and mist

Range of application 2G

for use in hazardous areas with gas, vapour and mist

Range of application 3G (ic)

for use in hazardous areas with gas, vapour and mist

Improper use

Protection of the personnel and the plant is not ensured if the product is not being used according to its intended use.

Mounting and installation

Prior to mounting, installation and commissioning of the device you should make yourself familiar with the device and carefully read the instruction manual.

Mount the device so that it is not exposed to any mechanical hazard. For example, mount the device in a protective housing.

Range of application 1G

Protection from mechanical danger

When used in the temperature range below -20 °C the sensor should be protected from knocks by the provision of an additional housing.

Electrostatic charge

When used in group IIB/IIC non-permissible electrostatic charges should be avoided on the plastic housing parts.

Lead insertion

The connection cables should either be fixed when laid and mechanically protected or installed in such a way, that a force of 30 N applied in the direction of the cable inlet for one hour, does not lead to any visible displacement of the cable connections, even though the cable sheathing is displaced, see also IEC 60079-11. Depending on the type of installation, a suitable cable in accordance with Type A oder B of IEC 60079-14, must be used.

Range of application 2G

Protection from mechanical danger

When used in the temperature range below -20 °C the sensor should be protected from knocks by the provision of an additional housing.

Electrostatic charge

When used in group IIC non-permissible electrostatic charges should be avoided on the plastic housing parts.

Lead insertion

The connection cables should either be fixed when laid and mechanically protected or installed in such a way, that a force of 30 N applied in the direction of the cable inlet for one hour, does not lead to any visible displacement of the cable connections, even though the cable sheathing is displaced, see also IEC 60079-11. Depending on the type of installation, a suitable cable in accordance with Type A oder B of IEC 60079-14, must be used.

Range of application 3G (ic)

Protection from mechanical danger

The sensor must not be mechanically damaged.
When used in the temperature range below -20 °C the sensor should be protected from knocks by the provision of an additional housing.

Electrostatic charge

When used in group IIC non-permissible electrostatic charges should be avoided on the plastic housing parts.

Lead insertion

The connecting cable must be protected from tension and torsional loading or installed in such a way, that an applied force of 30 N, acting in the direction of the cable inlet for one hour, does not lead to any visible displacement of the cable connections, even though the cable sheathing is displaced, see also IEC 60079-11.

Connection parts

The connection parts are to be installed, such that a minimum protection class of IP20 is achieved, in accordance with IEC 60529.

Operation, maintenance, repair

The device must not be repaired, changed or manipulated.

In the event of a fault, always return the device to Pepperl+Fuchs.

If there is a defect, the device must always be replaced with an original device from Pepperl+Fuchs.

Delivery, transport, disposal

Check the packaging and contents for damage.

Check if you have received every item and if the items received are the ones you ordered.

Keep the original packaging. Always store and transport the device in the original packaging.

Store the device in a clean and dry environment. The permitted ambient conditions (see datasheet) must be considered.

Disposing of device, packaging material, and possibly contained batteries must be in compliance

with the applicable laws and guidelines of the respective country.