

Functional Safety

Relay Module

KFD2-RSH-1.2D.FL2(-Y1),
KFD2-RSH-1.2D.FL3(-Y1)

Manual



CE SIL 3 PL e

With regard to the supply of products, the current issue of the following document is applicable:
The General Terms of Delivery for Products and Services of the Electrical Industry, published by the Central Association of the Electrical Industry (Zentralverband Elektrotechnik und Elektroindustrie (ZVEI) e.V.) in its most recent version as well as the supplementary clause: "Expanded reservation of proprietorship"

Worldwide

Pepperl+Fuchs Group
Lilienthalstr. 200
68307 Mannheim
Germany
Phone: +49 621 776 - 0
E-mail: info@de.pepperl-fuchs.com

North American Headquarters

Pepperl+Fuchs Inc.
1600 Enterprise Parkway
Twinsburg, Ohio 44087
USA
Phone: +1 330 425-3555
E-mail: sales@us.pepperl-fuchs.com

Asia Headquarters

Pepperl+Fuchs Pte. Ltd.
P+F Building
18 Ayer Rajah Crescent
Singapore 139942
Phone: +65 6779-9091
E-mail: sales@sg.pepperl-fuchs.com
<https://www.pepperl-fuchs.com>

1	Introduction	5
1.1	Content of this Document	5
1.2	Safety Information	6
1.3	Symbols Used	7
2	Product Description	8
2.1	Function	8
2.2	Interfaces	8
2.3	Marking	9
2.4	Standards and Directives for Functional Safe	9
3	Planning	10
3.1	System Structure	10
3.2	Assumptions	11
3.3	Safety Function and Safe State	12
3.4	Characteristic Safety Values	13
3.5	Useful Lifetime	14
4	Mounting and Installation	15
4.1	Mounting	15
4.2	Installation	15
4.3	Configuration	15
5	Operation	17
5.1	Internal Diagnosis	18
5.2	Proof Test Procedure	19
5.3	Application Examples	21
6	Maintenance and Repair	23
7	List of Abbreviations	24

1 Introduction

1.1 Content of this Document

This document contains information for usage of the device in functional safety-related applications. You need this information to use your product throughout the applicable stages of the product life cycle. These can include the following:

- Product identification
- Delivery, transport, and storage
- Mounting and installation
- Commissioning and operation
- Maintenance and repair
- Troubleshooting
- Dismounting
- Disposal

**Note**

This document does not substitute the instruction manual.

**Note**

For full information on the product, refer to the instruction manual and further documentation on the Internet at www.pepperl-fuchs.com.

**Note**

For specific device information such as the year of construction, scan the QR code on the device. As an alternative, enter the serial number in the serial number search at www.pepperl-fuchs.com.

The documentation consists of the following parts:

- Present document
- Instruction manual
- Manual
- Datasheet

Additionally, the following parts may belong to the documentation, if applicable:

- EU-type examination certificate
- EU declaration of conformity
- Attestation of conformity
- Certificates
- Control drawings
- FMEDA report
- Assessment report
- Additional documents

For more information about Pepperl+Fuchs products with functional safety, see www.pepperl-fuchs.com/sil.

1.2 Safety Information

Target Group, Personnel

Responsibility for planning, assembly, commissioning, operation, maintenance, and dismantling lies with the plant operator.

Only appropriately trained and qualified personnel may carry out mounting, installation, commissioning, operation, maintenance, and dismantling of the product. The personnel must have read and understood the instruction manual and the further documentation.

Intended Use

The device is only approved for appropriate and intended use. Ignoring these instructions will void any warranty and absolve the manufacturer from any liability.

The device is developed, manufactured and tested according to the relevant safety standards.

Use the device only

- for the application described
- with specified environmental conditions
- with devices that are suitable for this safety application

Improper Use

Protection of the personnel and the plant is not ensured if the device is not used according to its intended use.

1.3 Symbols Used

This document contains symbols for the identification of warning messages and of informative messages.

Warning Messages

You will find warning messages, whenever dangers may arise from your actions. It is mandatory that you observe these warning messages for your personal safety and in order to avoid property damage.

Depending on the risk level, the warning messages are displayed in descending order as follows:



Danger!

This symbol indicates an imminent danger.

Non-observance will result in personal injury or death.



Warning!

This symbol indicates a possible fault or danger.

Non-observance may cause personal injury or serious property damage.



Caution!

This symbol indicates a possible fault.

Non-observance could interrupt the device and any connected systems and plants, or result in their complete failure.

Informative Symbols



Note

This symbol brings important information to your attention.



Action

This symbol indicates a paragraph with instructions. You are prompted to perform an action or a sequence of actions.

2 Product Description

2.1 Function

General

This signal conditioner provides galvanic isolation between field circuits and control circuits.

The de-energized to safe (DTS) function is permitted for SIL 3 and PL e applications.

An internal fault or a line fault is signaled by the impedance change of the relay contact input and an additional relay contact output.

A fault is signaled by LEDs and a separate collective error message output.

The output must be protected against contact welding by an internal fuse or an external current limitation.

KFD2-RSH-1.2D.FL2(-Y1)

The device is a relay module that is suitable for safely switching applications of a load circuit. The device isolates load circuits up to 60 V DC and the 24 V DC control circuit.

KFD2-RSH-1.2D.FL3(-Y1)

The device is a relay module that is suitable for safely switching applications of a load circuit. The device isolates load circuits up to 230 V AC and the 24 V DC control circuit.

Y1 Version

This device is compatible to the following control: Emerson DeltaV CHARM

Compatibility check to other ESD/DCS systems on request.

2.2 Interfaces

The device has the following interfaces:

- Safety-relevant interfaces: input, output (DTS)
- Non-safety relevant interfaces: fault indication output

Note

For corresponding connections see datasheet.



2.3 Marking

Pepperl+Fuchs Group Lilienthalstraße 200, 68307 Mannheim, Germany	
Internet: www.pepperl-fuchs.com	
KFD2-RSH-1.2D.FL2, KFD2-RSH-1.2D.FL2-Y1, KFD2-RSH-1.2D.FL3, KFD2-RSH-1.2D.FL3-Y1	Up to SIL 3 and PL e

2.4 Standards and Directives for Functional Safe

Device-specific standards and directives

Functional safety	IEC/EN 61508, part 1 – 2, edition 2010: Functional safety of electrical/electronic/programmable electronic safety-related systems (manufacturer)
Machinery regulation (EU) 2023/1230	<ul style="list-style-type: none"> EN/ISO 13849-1:2023: Safety of machinery - Safety-related parts of control systems - Part 1: General principles for design IEC/EN 62061:2021 Safety of machinery - Functional safety of safety-related control systems

3 Planning

3.1 System Structure

3.1.1 Low Demand Mode of Operation

If there are two control loops, one for the standard operation and another one for the functional safety, then usually the demand rate for the safety loop is assumed to be less than once per year.

The relevant safety parameters to be verified are:

- the PFD_{avg} value (average **P**robability of dangerous **F**ailure on **D**emand) and the T_1 value (proof test interval that has a direct impact on the PFD_{avg} value)
- the SFF value (**S**afe **F**ailure **F**raction)
- the HFT architecture (**H**ardware **F**ault **T**olerance)

3.1.2 High Demand or Continuous Mode of Operation

If there is only one safety loop, which combines the standard operation and safety-related operation, then usually the demand rate for this safety loop is assumed to be higher than once per year.

The relevant safety parameters to be verified are:

- the PFH value (**P**robability of dangerous **F**ailure per **H**our)
- Fault reaction time of the safety system
- the SFF value (**S**afe **F**ailure **F**raction)
- the HFT architecture (**H**ardware **F**ault **T**olerance)

3.1.3 Safe Failure Fraction

The safe failure fraction describes the ratio of all safe failures and dangerous detected failures to the total failure rate.

$$SFF = (\lambda_s + \lambda_{dd}) / (\lambda_s + \lambda_{dd} + \lambda_{du})$$

A safe failure fraction as defined in IEC/EN 61508 is only relevant for elements or (sub)systems in a complete safety loop. The device under consideration is always part of a safety loop but is not regarded as a complete element or subsystem.

For calculating the SIL of a safety loop it is necessary to evaluate the safe failure fraction of the elements and subsystems, but not of a single device.

Nevertheless the SFF of the device is given in this document for reference.

3.2 Assumptions

The following assumptions have been made during the FMEDA:

- Failure rates are constant, wear is not considered.
- Failure rate based on the Siemens standard SN 29500.
- The safety-related device is considered to be of type **A** device with a hardware fault tolerance of **0**.
- The device will be used under average industrial ambient conditions comparable to the classification **stationary mounted** according to MIL-HDBK-217F.
Alternatively, operating stress conditions typical of an industrial field environment similar to IEC/EN 60654-1 Class C with an average temperature over a long period of time of 40 °C may be assumed. For a higher average temperature of 60 °C, the failure rates must be multiplied by a factor of 2.5 based on experience. A similar factor must be used if frequent temperature fluctuations are expected.
- The nominal voltage at the digital input is 24 V. Ensure that the nominal voltage does not exceed 26.4 V under all operating conditions.
- The DO card must be able to supply a signal current of at least 36 mA.
- Observe the useful lifetime limitations of the output relays.
- The relay contacts must be protected against overcurrent with a suitable current limitation. For this purpose, either the internal fuse or an external current limitation with the same limit values must be used.

Applications according to IEC/EN 61508

- To build a SIL safety loop for the defined SIL, it is assumed as an example that this device uses 10 % of the available budget for PFD_{avg}/PFH .
- For a SIL 3 application operating in low demand mode the total PFD_{avg} value of the SIF (**S**afety **I**nstrumented **F**unction) should be smaller than 10^{-3} , hence the maximum allowable PFD_{avg} value would then be 10^{-4} .
- For a SIL 3 application operating in high demand mode the total PFH value of the SIF should be smaller than 10^{-7} per hour, hence the maximum allowable PFH value would then be 10^{-8} per hour.
- Since the safety loop has a hardware fault tolerance of **0** and it is a type **A** device, the SFF must be > 90 % according to table 2 of IEC/EN 61508-2 for a SIL 3 (sub) system.

Applications according to IEC/EN 62061 and EN/ISO 13849-1

- The device was qualified for use in safety functions according to IEC/EN 62061 and EN/ISO 13849-1. The device fulfills the requirements for SIL 3 according to IEC/EN 62061 and due to the equivalency between these standards PL e according to EN/ISO 13849-1.

3.3 Safety Function and Safe State

Safety Function

Whenever the input of the device is de-energized, the DTS output is not conducting.

Safe State

In the safe state of the safety function the DTS output is open (non-conducting).

Reaction Time

The reaction time is < 2 s.

3.4 Characteristic Safety Values

Parameters	Characteristic values	
Assessment type and documentation	Full assessment	
Device type	A	
Mode of operation	Low demand mode or high demand mode	
Safety function	Output is de-energized (DTS, de-energized to safe)	
	without diagnosis	with diagnosis
HFT	0	
SIL	3	
SC	3	
PL	e	
λ_s^1	453 FIT	453 FIT
λ_{dd}	0 FIT	0.82 FIT
λ_{du}^2	0.86 FIT	0.04 FIT
$\lambda_{total} \text{ (safety function)}^1$	454 FIT	454 FIT
λ_{total}	1735 FIT	1735 FIT
SFF ¹	99.8 %	99.99 %
MTBF ³	66 years	66 years
MTTF _d	1115 years (high)	1115 years (high)
DC _{avg} ⁴	0 %	95.3 %
PTC	95.3 %	95.3 %
PFH	8.55×10^{-10} 1/h	4.00×10^{-11} 1/h
PFD _{avg} for T ₁ = 1 year ⁵	5.36×10^{-6}	2.50×10^{-7}
PFD _{avg} for T ₁ = 2 years ⁵	8.95×10^{-6}	4.18×10^{-7}
PFD _{avg} for T ₁ = 3 years ⁵	1.25×10^{-5}	5.86×10^{-7}
T ₁ max. ⁶	26.5 years	564 years
Reaction time ⁷	< 2 s	

Table 3.1

- ¹ **No effect failures** are not influencing the safety function and are therefore not included in SFF and in the failure rates of the safety function.
- ² While the diagnostic function is signaling the dangerous failure of one relay, the other two redundant relays continue to provide the safety function. Exceptions are common cause failures that disrupt all three relays. While the diagnostic function is signaling the failure, the probability of a dangerous undetected failure for the remaining two relays is increasing to 2.0 FIT.
- ³ according to SN29500. This value includes failures which are not part of the safety function/MTTR = 8 h. The value is calculated for one safety function of the device.
- ⁴ Enable the internal fault detection to achieve a diagnostic coverage of 95.3 %. See chapter 5.1.
- ⁵ Since the current PTC value is < 100 % and therefore the probability of failure will increase, calculate the PFD value according to the following formula:

$$PFD_{avg} = (\lambda_{du} / 2) \times (PTC \times T_1 + (1 - PTC) \times T_{service})$$
 A service time T_{service} of 10 years was assumed for the calculation of PFD_{avg}.
- ⁶ assuming 10 % of the PFD_{avg} budget in the safety loop, T₁ = T_{service}
- ⁷ Step response time, also valid under fault conditions (including fault detection and fault reaction)

The characteristic safety values like PFD, PFH, SFF, HFT and T₁ are taken from the FMEDA report. Observe that PFD and T₁ are related to each other. The function of the devices has to be checked within the proof test interval (T₁).

3.5 Useful Lifetime

Although a constant failure rate is assumed by the probabilistic estimation this only applies provided that the useful lifetime of components is not exceeded. Beyond this useful lifetime, the result of the probabilistic estimation is meaningless as the probability of failure significantly increases with time. The useful lifetime is highly dependent on the component itself and its operating conditions – temperature in particular. For example, electrolytic capacitors can be very sensitive to the operating temperature.

This assumption of a constant failure rate is based on the bathtub curve, which shows the typical behavior for electronic components.

Therefore it is obvious that failure calculation is only valid for components that have this constant domain and that the validity of the calculation is limited to the useful lifetime of each component.

It is assumed that early failures are detected to a huge percentage during the installation and therefore the assumption of a constant failure rate during the useful lifetime is valid.

The standard EN/ISO 13849-1 proposes a useful lifetime T_M of 20 years for devices used within industrial environments. Observe that the useful lifetime can be reduced if the device is exposed to the following conditions:

- highly stressful environmental conditions such as constantly high temperatures
- temperature cycles with high temperature differences
- permanent repeated mechanical stress (vibration)

As noted in IEC/EN 61508-2 note N3, appropriate measures taken by the manufacturer and plant operator can extend the useful lifetime.

Please note that the useful lifetime refers to the (constant) failure rate of the device. The effective life time can deviate from this.

The estimated useful lifetime is greater than the warranty period prescribed by law or the manufacturer's guarantee period. However, this does not result in an extension of the warranty or guarantee services. Failure to reach the estimated useful lifetime is not a material defect.

Derating

For the safety application, reduce the number of switching cycles or the maximum current. A derating to 2/3 of the maximum value is adequate.

Maximum Switching Power of Output Contacts

The useful lifetime is limited by the maximum switching cycles of the relays under load conditions.

For requirements regarding the connected output load, refer to the documentation of the connected peripheral devices.

Note

See corresponding datasheets for further information.



4 Mounting and Installation



Mounting and Installing the Device

1. Observe the safety instructions in the instruction manual.
2. Observe the information in the manual.
3. Observe the requirements for the safety loop.
4. Connect the device only to devices that are suitable for this safety application.
5. Check the safety function to ensure the expected output behavior.

4.1 Mounting

Tighten the terminal screws with a torque of 0.5 ... 0.6 Nm.

4.2 Installation

To avoid contact welding we recommend using a serial fuse in the load circuit

The device is delivered with a replaceable fuse. Replace this fuse only with a fuse up to 5 AT. Optionally use an unfused terminal with an external current limitation.

4.3 Configuration



Note

The device configuration via DIP switches is not safety relevant.



Configuring the Device

The device is configured via DIP switches. The DIP switches are on the side of the device.

1. De-energize the device before configuring the device.
2. Remove the device.
3. Configure the device via the DIP switches.
4. Secure the DIP switches to prevent unintentional adjustments.
5. Mount the device.
6. Connect the device again.



Note

See corresponding datasheets for further information.

4.3.1 Output Configuration

Switch		Line fault detection	Internal fault detection
S1	S2		
Off	Off	disabled	disabled
On	Off	enabled	disabled
Off	On	not used	
On	On	enabled	enabled

Table 4.1

5 Operation



Danger!

Danger to life from missing safety function

If the safety loop is put out of service, the safety function is no longer guaranteed.

- Do not deactivate the device.
- Do not bypass the safety function.
- Do not repair, modify, or manipulate the device.



Danger!

Danger to life from faulty or missing fuse protection of the relay contacts

Faulty or missing fuse protection of the relay contacts can compromise the safety function and the electrical safety of the device.

- Protect the relay contacts with a suitable current limitation against overcurrent.
- Use the internal fuse for protection.
- If you do not use the internal fuse, use an external current limitation with the same limit values.



Warning!

Risk of burns from hot surface

Touching the hot surface of the device can result in burns.

- Do not touch the hot surface of the device.
- Let the device surface cool down before touching the device.
- Do not cover the warning marking on the device. Do not remove the warning marking from the device.



Operating the device

1. Observe the safety instructions in the instruction manual.
2. Observe the information in the manual.
3. Use the device only with devices that are suitable for this safety application.
4. Correct any occurring safe failures within 8 hours. Take measures to maintain the safety function while the device is being repaired.

5.1 Internal Diagnosis

With enabled internal fault detection a diagnostic coverage of 95.3 % is achieved. Monitor one of the 4 possible ways of fault detection:

- Input impedance change ¹
- Fault indication output
- Collective error message output
- LED indication

The device has three output relays. To ensure a complete diagnosis, three switching operations are necessary. You have 2 options to achieve the diagnostic coverage, see step 2 of the following section.



Internal Diagnosis Procedure

1. Enable the internal fault detection. See chapter 4.3.1.
2. You have 2 options to achieve the diagnostic coverage:
 - Switch on the output manually three times.
or
Observe whether the output switches on three times during the normal operation.



Note

Maintain a distance of at least 2 s between the switching processes.

or

- Check the output function at periodic intervals. Switch on the output at least three times a year as described in the steps 1 and 2.

¹ In this case only use a safety PLC with digital output and line fault detection.

5.2 Proof Test Procedure

This section describes a possible proof test procedure. The user is not obliged to use this proposal. The user may consider different concepts with an individual determination of the respective effectiveness, e. g. concepts according to NA106:2018.

According to IEC/EN 61508-2 a recurring proof test shall be undertaken to reveal potential dangerous failures that are not detected otherwise.

Check the function of the subsystem at periodic intervals depending on the applied PFD_{avg} in accordance with the characteristic safety values. See chapter 3.4.

It is under the responsibility of the plant operator to define the type of proof test and the interval time period.

Conditions

	KFD2-RSH-1.2D.FL2(-Y1)	KFD2-RSH-1.2D.FL3(-Y1)
Load power supply	> 5 V DC	> 35.5 V AC
Device power supply (LED PWR is on)	24 V DC	24 V DC
Output load	$13.2 \Omega < R < 7.3 \text{ k}\Omega$	$39.2 \Omega < R < 45 \text{ k}\Omega$
Current through load	$14 \text{ mA} < I < 1.9 \text{ A}$	$13.5 \text{ mA AC} < I < 4.9 \text{ A AC}$
Input current	$\geq 36 \text{ mA}$	$\geq 36 \text{ mA}$

Table 5.1

If the conditions are met, you can also check the device in the application.



Proof Test Procedure

1. Enable the internal fault detection and the line fault detection. See chapter 4.3.1.
2. Check the device as shown in the following tables.
3. After check reset the device to the necessary settings.
4. Check the correct behavior of the safety loop. Is the configuration correct?

Test No.	Input	Output
1	V = 0 V DC between terminals 7+ and 8-	
2	Wait at least 2 seconds.	<ul style="list-style-type: none"> • LED OUT is off. • LED FLT is off ¹.
3	V = 24 V DC between terminals 7+ and 8-	
4	Wait at least 2 seconds.	<ul style="list-style-type: none"> • LED OUT is on. • LED FLT is off ¹.
5	V = 0 V DC between terminals 7+ and 8-	
6	Wait at least 2 seconds.	<ul style="list-style-type: none"> • LED OUT is off. • LED FLT is off ¹.
7	V = 24 V DC between terminals 7+ and 8-	
8	Wait at least 2 seconds.	<ul style="list-style-type: none"> • LED OUT is on. • LED FLT is off ¹.
9	V = 0 V DC between terminals 7+ and 8-	
10	Wait at least 2 seconds.	<ul style="list-style-type: none"> • LED OUT is off. • LED FLT is off ¹.
11	V = 24 V DC between terminals 7+ and 8-	
12	Wait at least 2 seconds.	<ul style="list-style-type: none"> • LED OUT is on. • LED FLT is off ¹.

Table 5.2 Expected test results for the proof test

¹ When the FLT LED flashes, a line fault is present. Check whether the supply voltage and the connected load are in the OK area of the line fault detection.

When the FLT LED is lit continuously, an internal fault is present. Reset the internal fault by interrupting the power supply (terminals 14+/15-).

Only if all tests are successfully done, the proof test is successful.

5.3 Application Examples

5.3.1 Standard Application for Dual Pole Switching

For a switching application, the device has to be attached to the process control system and the load the following way.

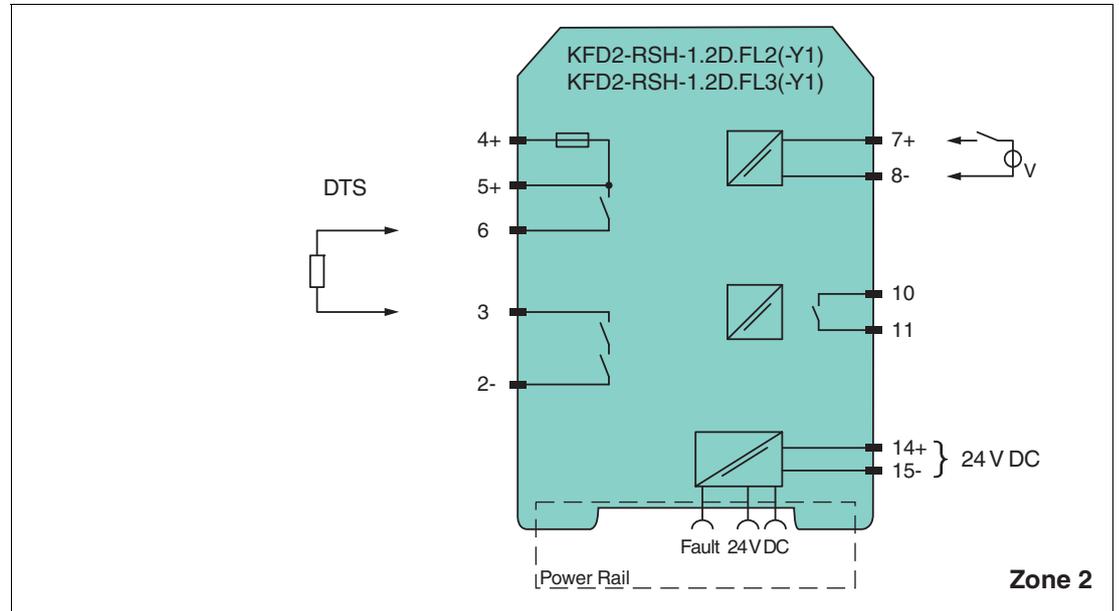


Figure 5.1 Standard application for dual pole switching

In the standard application, the process control system is connected to terminals 7+ and 8-. The line fault transparency (LFT) of the safety relay must be compatible with the line fault detection of the process control system output. Terminals 10 and 11 can be used as fault indication output to the process control system.

The characteristic safety values valid for the standard application can be found in Table 3.1.

5.3.2 Application with Fault Indication Output in the Signal Loop of the Dual Pole Switching

Some process control systems are not working with test pulses or with specific test pulses that do not recognize the impedance change of the device output signaling a line fault. Where the output of the process control system can detect an open circuit in the signal loop, the fault indication output of the device may be put in series to the input. See figure.

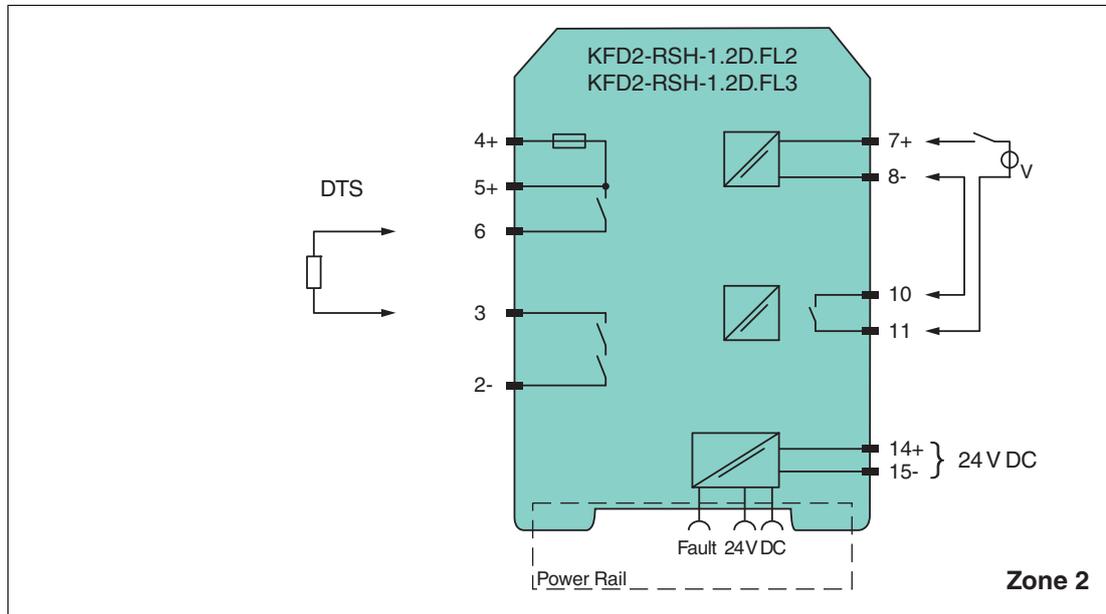


Figure 5.2 Application with fault indication output in the signal loop of the dual pole switching

If the fault indication output is open, the output relay contacts cannot be enabled. But as the fault is detected by the process control system a suitable reaction can be planned. The user must ensure that a suitable reaction on this detected fault is implemented.

For this application, the characteristic safety values are the same. The characteristic safety values can be found in Table 3.1.

6 Maintenance and Repair



Danger!

Danger to life from missing safety function

If the safety loop is put out of service, the safety function is no longer guaranteed.

- Do not deactivate the device.
- Do not bypass the safety function.
- Do not repair, modify, or manipulate the device.



Warning!

Risk of burns from hot surface

Touching the hot surface of the device can result in burns.

- Do not touch the hot surface of the device.
- Let the device surface cool down before touching the device.
- Do not cover the warning marking on the device. Do not remove the warning marking from the device.



Maintaining, Repairing or Replacing the Device

In case of maintenance, repair or replacement of the device, proceed as follows:

1. Implement appropriate maintenance procedures for regular maintenance of the safety loop.
2. While the device is maintained, repaired or replaced, the safety function does not work. Take appropriate measures to protect personnel and equipment while the safety function is not available. Secure the application against accidental restart.
3. Do not repair a defective device. A defective device must only be repaired by the manufacturer.
4. If there is a defect, always replace the device with an original device.



Reporting Device Failure

If you use the device in a safety loop according to IEC/EN 61508, it is required to inform the device manufacturer about possible systematic failures.

Report all failures in the safety function that are due to functional limitations or a loss of device function – especially in the case of possible dangerous failures.

In these cases, contact your local sales partner or the Pepperl+Fuchs technical sales support (service line).

It is not necessary to report failures in the safety function that are due to external influences or damage.

7 List of Abbreviations

ESD	Emergency Shutdown
FIT	Failure In Time in 10^{-9} 1/h
FMEDA	Failure Mode, Effects, and Diagnostics Analysis
λ_s	Probability of safe failure
λ_{dd}	Probability of dangerous detected failure
λ_{du}	Probability of dangerous undetected failure
$\lambda_{\text{no effect}}$	Probability of failures of components in the safety loop that have no effect on the safety function.
$\lambda_{\text{not part}}$	Probability of failure of components that are not in the safety loop
$\lambda_{\text{total (safety function)}}$	Probability of failure of components that are in the safety loop
HFT	Hardware Fault Tolerance
MTBF	Mean Time Between Failures
MTTR	Mean Time To Restoration
PCS	Process Control System
PFD_{avg}	Average Probability of dangerous Failure on Demand
PFH	Average frequency of dangerous failure per hour
PLC	Programmable Logic Controller
PTC	Proof Test Coverage
SC	Systematic Capability
SFF	Safe Failure Fraction
SIF	Safety Instrumented Function
SIL	Safety Integrity Level
SIS	Safety Instrumented System
T₁	Proof Test Interval
T_{service}	Time from start of operation to putting the device out of service
DTS	De-energized To Safe function
ETS	Energized To Safe function
B_{10d}	Number of switching cycles until 10 % of the components fail dangerously
DC	Diagnostic Coverage of dangerous faults
MTTF_d	Mean Time To dangerous Failure
PL	Performance Level

Your automation, our passion.

Explosion Protection

- Intrinsic Safety Barriers
- Signal Conditioners
- FieldConnex® Fieldbus
- Remote I/O Systems
- Electrical Ex Equipment
- Purge and Pressurization
- Industrial HMI
- Mobile Computing and Communications
- HART Interface Solutions
- Surge Protection
- Wireless Solutions
- Level Measurement

Industrial Sensors

- Proximity Sensors
- Photoelectric Sensors
- Industrial Vision
- Ultrasonic Sensors
- Rotary Encoders
- Positioning Systems
- Inclination and Acceleration Sensors
- Fieldbus Modules
- AS-Interface
- Identification Systems
- Displays and Signal Processing
- Connectivity

Pepperl+Fuchs Quality

Download our latest policy here:

www.pepperl-fuchs.com/quality

