


# Instruction Manual

## 1. Marking

Relay module KCD0-RSH-1.1D.4
Certificate: PF 15 CERT 3932 X Marking:  II 3G Ex nC ec IIC T4 Gc [device in zone 2] North America Certificates: Class I, Division 2, Groups A, B, C, D; T4 or non-hazardous area
Pepperl+Fuchs GmbH Lilienthalstraße 200, 68307 Mannheim, Germany Internet: www.pepperl-fuchs.com

## 2. Target Group, Personnel

Responsibility for planning, assembly, commissioning, operation, maintenance, and dismantling lies with the plant operator.

The personnel must be appropriately trained and qualified in order to carry out mounting, installation, commissioning, operation, maintenance, and dismantling of the device. The trained and qualified personnel must have read and understood the instruction manual.

Prior to using the product make yourself familiar with it. Read the instruction manual carefully.

## 3. Reference to Further Documentation

Observe laws, standards, and directives applicable to the intended use and the operating location.

The corresponding datasheets, manuals, declarations of conformity, EU-type examination certificates, certificates, and control drawings if applicable supplement this document. You can find this information under [www.pepperl-fuchs.com](http://www.pepperl-fuchs.com).

If you use the device in safety-related applications, observe the requirements for functional safety. You can find these requirements in the functional safety documentation under [www.pepperl-fuchs.com](http://www.pepperl-fuchs.com).

## 4. Intended Use

The device is only approved for appropriate and intended use. Ignoring these instructions will void any warranty and absolve the manufacturer from any liability.

The device is used in control and instrumentation technology (C&I technology). The device is designed for safety-related switching of load circuits.

Use the device only within the specified ambient and operating conditions.

The device is designed for mounting on a 35 mm DIN mounting rail according to EN 60715.

Only use the device stationary.

The device is an electrical apparatus for hazardous areas of Zone 2.

The device is an electrical apparatus for hazardous areas of Class 1, Division 2 or Class I, Zone 2.

If you use the device in safety-related applications, observe the information for safety function and safe state.

## 5. Improper Use

Protection of the personnel and the plant is not ensured if the device is not used according to its intended use.

The device is not suitable for isolating signals in power installations unless this is noted separately in the corresponding datasheet.

## 6. Mounting and Installation

Do not mount a damaged or polluted device.

Observe the installation instructions according to IEC/EN 60204-1.

Do not mount the device in the dust hazardous area.

Mount the device in a way that the device is protected against mechanical hazard.

The device fulfills a degree of protection IP20 according to IEC/EN 60529.

The device must be installed and operated only in surrounding enclosures that are rated with the degree of protection IP54 according to IEC/EN 60529.

The device must be installed and operated only in a controlled environment that ensures a pollution degree 2 (or better) according to IEC/EN 60664-1.

If used in areas with higher pollution degree, the device needs to be protected accordingly.

The device must be installed and operated only in an environment of overvoltage category II (or better) according to IEC/EN 60664-1.

If you install the device in safety-related applications, observe the requirements for functional safety.

## Requirements for Cables and Connection Lines

Observe the permissible core cross section of the conductor.

When using stranded conductors, crimp wire end ferrules on the conductor ends.

Use only one conductor per terminal.

When installing the conductors the insulation must reach up to the terminal.

Observe the tightening torque of the terminal screws.

If the voltage is greater than 50 V AC or 120 V DC, switch off the voltage before connecting or disconnecting the device.

## Requirements for Equipment Protection Level Gc

Observe the installation instructions according to IEC/EN 60079-14.

The device must be installed and operated only in surrounding enclosures that

- comply with the requirements for surrounding enclosures according to IEC/EN 60079-0,
- are rated with the degree of protection IP54 according to IEC/EN 60529.

Connection or disconnection of energized circuits is only permitted in the absence of a potentially explosive atmosphere.

## Requirements for Division 2

Observe the instructions according to NEC article 501.

## 7. Operation, Maintenance, Repair

If you operate the device in safety-related applications, observe the requirements for functional safety. For the proof test, plan appropriate intervals for the operation in low demand mode.

The device must not be repaired, changed, or manipulated. In case of failure, always replace the device with an original device.

If the voltage is greater than 50 V AC or 120 V DC, switch off the voltage before connecting or disconnecting the device.

The following safety instruction is symbolized via the warning marking on the device.

Only change the replaceable fuse, when the device is de-energized.

Do not touch the hot surface of the device. Let cool down the device surface before touching the device.

## Requirements for Equipment Protection Level Gc

Connection or disconnection of energized circuits is only permitted in the absence of a potentially explosive atmosphere.

## 8. Delivery, Transport, Disposal

Check the packaging and contents for damage.

Check if you have received every item and if the items received are the ones you ordered.

Always store and transport the device in the original packaging.

Store the device in a clean and dry environment. The permitted ambient conditions must be considered, see datasheet.

Disposing of device, packaging, and possibly contained batteries must be in compliance with the applicable laws and guidelines of the respective country.