# Instruction Manual

# 1. Marking

SMART Current Driver/Repeater
KFD0-SCS-Ex1.55
ATEX certificate: PTB 02 ATEX 2064
ATEX marking: 🐼 II (2)G [Ex ib Gb] IIC
ATEX certificate: PF 11 CERT 0902 X
ATEX marking: 😰 II 3G Ex nA IIC T4 Gc

Pepperl+Fuchs GmbH

Lilienthalstraße 200, 68307 Mannheim, Germany Internet: www.pepperl-fuchs.com

## 2. Target Group, Personnel

Responsibility for planning, assembly, commissioning, operation, maintenance, and dismounting lies with the plant operator.

The personnel must be appropriately trained and qualified in order to carry out mounting, installation, commissioning, operation, maintenance, and dismounting of the device. The trained and qualified personnel must have read and understood the instruction manual.

Prior to using the product make yourself familiar with it. Read the instruction manual carefully.

# 3. Reference to Further Documentation

Observe laws, standards, and directives applicable to the intended use and the operating location.

The corresponding datasheets, manuals, declarations of conformity, EUtype examination certificates, certificates, and control drawings if applicable supplement this document. You can find this information under www.pepperl-fuchs.com.

If you use the device in safety-related applications, observe the requirements for functional safety. You can find these requirements in the functional safety documentation under www.pepperl-fuchs.com.

## 4. Intended Use

The device is only approved for appropriate and intended use. Ignoring these instructions will void any warranty and absolve the manufacturer from any liability.

The device is used in control and instrumentation technology (C&I technology) for the galvanic isolation of signals such as 20 mA and 10 V standard signals or alternatively for adapting or standardizing signals. The device has intrinsically safe circuits that are used for operating intrinsically safe field devices in hazardous areas.

This signal conditioner is loop powered and isolates a 4 mA ... 20mA signal for transmitters and positioners and is HART compatible. Use the device only within the specified ambient and operating conditions.

The device is an associated apparatus according to IEC/EN 60079-11. The device is an electrical apparatus for hazardous areas of Zone 2.

The device may be installed in the non-hazardous area.

If you use the device in safety-related applications, observe the information for safety function and safe state.

# 5. Improper Use

Protection of the personnel and the plant is not ensured if the device is not used according to its intended use.

If circuits with type of protection Ex i are operated with non-intrinsically safe circuits, they must no longer be used as circuits with type of protection Ex i.

## 6. Mounting and Installation

Do not mount a damaged or polluted device.

The device is designed for mounting on a 35 mm DIN mounting rail according to EN 60715.

The device must be installed and operated only in a controlled environment that ensures a pollution degree 2 (or better) according to IEC/EN 60664-1.

If used in areas with higher pollution degree, the device needs to be protected accordingly.

Do not mount the device in the dust hazardous area.

The device must be installed and operated only in an environment of overvoltage category II (or better) according to IEC/EN 60664-1.

Observe the installation instructions according to IEC/EN 60079-14. If you install the device in safety-related applications, observe the requirements for functional safety.

#### **Requirements for Cables and Connection Lines**

Use only one conductor per terminal.

Observe the permissible core cross section of the conductor. Observe the tightening torque of the terminal screws.

When using stranded conductors, crimp wire end ferrules on the conductor ends.

When installing the conductors the insulation must reach up to the terminal.

#### **Requirements for Usage as Associated Apparatus**

If circuits with type of protection Ex i are operated with non-intrinsically safe circuits, they must no longer be used as circuits with type of protection Ex i.

Observe the respective peak values of the field device and the associated apparatus with regard to explosion protection when connecting intrinsically safe field devices with intrinsically safe circuits of associated apparatus (verification of intrinsic safety). Also observe IEC/EN 60079-14 and IEC/EN 60079-25.

Keep the separation distances between all non-intrinsically safe circuits and intrinsically safe circuits according to IEC/EN 60079-14. Observe the compliance of the separation distances between two adjacent intrinsically safe circuits according to IEC/EN 60079-14.

#### **Requirements for Equipment Protection Level Gc**

The device must be installed and operated only in surrounding enclosures that

- comply with the requirements for surrounding enclosures according to IEC/EN 60079-0,
- are rated with the degree of protection IP54 according to IEC/EN 60529.

Connection or disconnection of energized non-intrinsically safe circuits is only permitted in the absence of a potentially explosive atmosphere.

# 7. Operation, Maintenance, Repair

If you operate the device in safety-related applications, observe the requirements for functional safety. For the proof test, plan appropriate intervals for the operation in low demand mode.

Do not use a damaged or polluted device.

Do not repair, modify, or manipulate the device.

If there is a defect, always replace the device with an original device.

#### **Requirements for Equipment Protection Level Gc**

Connection or disconnection of energized non-intrinsically safe circuits is only permitted in the absence of a potentially explosive atmosphere.

## 8. Delivery, Transport, Disposal

Check the packaging and contents for damage.

Check if you have received every item and if the items received are the ones you ordered.

Always store and transport the device in the original packaging.

Store the device in a clean and dry environment. The permitted ambient conditions must be considered, see datasheet.

Disposing of device, packaging, and possibly contained batteries must be in compliance with the applicable laws and guidelines of the respective country.