

Instruction Manual

1. Marking

Switch Amplifier KFA4-SR2-Ex1.W, KFA4-SR2-Ex1.W.LB, KFA4-SR2-Ex2.W
ATEX certificate: PTB 00 ATEX 2081 ATEX marking: Ⓢ II (1)G [Ex ia Ga] IIC Ⓢ II (1)D [Ex ia Da] IIIC Ⓢ I (M1) [Ex ia Ma] I
IECEx certificate: IECEx PTB 11.0031 IECEx marking: [Ex ia Ga] IIC [Ex ia Da] IIIC [Ex ia Ma] I
Switch Amplifier KFA5-SR2-Ex1.W, KFA5-SR2-Ex1.W.LB, KFA5-SR2-Ex2.W, KFA5-SR2-Ex2.W.IR, KFA6-SR2-Ex1.W, KFA6-SR2-Ex1.W.LB, KFA6-SR2-Ex2.W, KFA6-SR2-Ex2.W.IR
ATEX certificate: PTB 00 ATEX 2081 ATEX marking: Ⓢ II (1)G [Ex ia Ga] IIC Ⓢ II (1)D [Ex ia Da] IIIC Ⓢ I (M1) [Ex ia Ma] I
IECEx certificate: IECEx PTB 11.0031 IECEx marking: [Ex ia Ga] IIC [Ex ia Da] IIIC [Ex ia Ma] I
North America Certificates: 1029981 (CSA), E106378 (UL) Class I, Division 2, Groups A-D, T4 Class I, Zone 2, Group IIC T4 Associated apparatus with intrinsically safe circuits for: Class I, Division 1, Groups A-D; Class II, Division 1, Groups E-G; Class III Class I, Zone 0, Group IIC USA certificates: FM19US0207X Class I, Division 2, Groups A-D, T4 Associated apparatus with intrinsically safe circuits for: Class I, Division 1, Groups A-D; Class II, Division 1, Groups E-G; Class III
Pepperl+Fuchs Group Lilienthalstraße 200, 68307 Mannheim, Germany Internet: www.pepperl-fuchs.com

2. Target Group, Personnel

Responsibility for planning, assembly, commissioning, operation, maintenance, and dismantling lies with the plant operator.

The personnel must be appropriately trained and qualified in order to carry out mounting, installation, commissioning, operation, maintenance, and dismantling of the device. The trained and qualified personnel must have read and understood the instruction manual.

Prior to using the product make yourself familiar with it. Read the instruction manual carefully.

3. Reference to Further Documentation

Observe laws, standards, and directives applicable to the intended use and the operating location.

For mining applications, observe laws, standards, and directives applicable to the operating location.

The corresponding datasheets, manuals, declarations of conformity, EU-type examination certificates, certificates, and control drawings if applicable supplement this document. You can find this information under www.pepperl-fuchs.com.

For specific device information such as the year of construction, scan the QR code on the device. As an alternative, enter the serial number in the serial number search at www.pepperl-fuchs.com.

If you use the device in safety-related applications, observe the requirements for functional safety. You can find these requirements in the functional safety documentation under www.pepperl-fuchs.com.

4. Intended Use

The device is only approved for appropriate and intended use. Ignoring these instructions will void any warranty and absolve the manufacturer from any liability.

The device is used in control and instrumentation technology (C&I technology) for the galvanic isolation of signals such as 20 mA and

10 V standard signals or alternatively for adapting or standardizing signals. The device has intrinsically safe circuits that are used for operating intrinsically safe field devices in hazardous areas.

The device transfers digital signals (NAMUR sensors/mechanical contacts) from the explosion-hazardous area to the non-explosion-hazardous area.

Use the device only within the specified ambient and operating conditions. Only use the device stationary.

The device is an associated apparatus according to IEC/EN 60079-11.

The device may be installed in the non-hazardous area.

If you use the device in safety-related applications, observe the information for safety function and safe state.

5. Improper Use

Protection of the personnel and the plant is not ensured if the device is not used according to its intended use.

If circuits with type of protection Ex i are operated with non-intrinsically safe circuits, they must no longer be used as circuits with type of protection Ex i.

6. Mounting and Installation

Do not mount a damaged or polluted device.

The device is designed for mounting on a 35 mm DIN mounting rail according to EN 60715.

Mount the device in a surrounding enclosure which provides protection against electrical, mechanical and fire hazards.

Ensure that the surrounding enclosure can only be opened with a tool.

The device fulfills a degree of protection IP20 according to IEC/EN 60529.

The device must be installed and operated only in a controlled environment that ensures a pollution degree 2 (or better) according to IEC/EN 60664-1.

If used in areas with higher pollution degree, the device needs to be protected accordingly.

Do not mount the device in the dust hazardous area.

The device must be installed and operated only in an environment of overvoltage category II (or better) according to IEC/EN 60664-1.

Provide a disconnecting means for the supply of the device.

Observe the installation instructions according to IEC/EN 60079-14.

If you install the device in safety-related applications, observe the requirements for functional safety.

Requirements for Cables and Connection Lines

Observe the permissible core cross section of the conductor.

When using stranded conductors, crimp wire end ferrules on the conductor ends.

Use only copper conductors.

Use only one conductor per terminal.

When installing the conductors the insulation must reach up to the terminal.

If the voltage is greater than 50 V AC or 120 V DC, switch off the voltage before connecting or disconnecting the device.

Observe the tightening torque of the terminal screws.

Use conductors rated for a temperature of at least 80 °C.

Only use cables and connection lines with a temperature range appropriate to the application.

Requirements for Usage as Associated Apparatus

If circuits with type of protection Ex i are operated with non-intrinsically safe circuits, they must no longer be used as circuits with type of protection Ex i.

Observe the respective peak values of the field device and the associated apparatus with regard to explosion protection when connecting intrinsically safe field devices with intrinsically safe circuits of associated apparatus (verification of intrinsic safety). Also observe IEC/EN 60079-14 and IEC/EN 60079-25.

Intrinsically safe circuits of associated apparatus can be led into hazardous areas. Observe the compliance of the separation distances to all non-intrinsically safe circuits according to IEC/EN 60079-14.

Observe the compliance of the separation distances between two adjacent intrinsically safe circuits according to IEC/EN 60079-14.

Requirements for Division 2

The device must be installed and operated only in surrounding enclosures that

- comply with the requirements for surrounding enclosures according to UL/CSA 60079-0,
- are rated with the degree of protection IP54 according to IEC/EN 60529.

Ensure that the surrounding enclosure can only be opened with a tool.

Connection or disconnection of energized non-intrinsically safe circuits is only permitted in the absence of a potentially explosive atmosphere.

7. Operation, Maintenance, Repair

If you operate the device in safety-related applications, observe the requirements for functional safety. In case of operating in low demand mode, plan appropriate intervals for the proof test.

If the voltage is greater than 50 V AC or 120 V DC, switch off the voltage before connecting or disconnecting the device.

Do not use a damaged or polluted device.

Do not repair, modify, or manipulate the device.

If there is a defect, always replace the device with an original device.

Requirements for Division 2

The device must be installed and operated only in surrounding enclosures that

- comply with the requirements for surrounding enclosures according to UL/CSA 60079-0,
- are rated with the degree of protection IP54 according to IEC/EN 60529.

Ensure that the surrounding enclosure can only be opened with a tool.

Connection or disconnection of energized non-intrinsically safe circuits is only permitted in the absence of a potentially explosive atmosphere.

8. Delivery, Transport, Disposal

Check the packaging and contents for damage.

Check if you have received every item and if the items received are the ones you ordered.

Always store and transport the device in the original packaging.

Store the device in a clean and dry environment. The permitted ambient conditions must be considered, see datasheet.

The device, built-in components, packaging, and any batteries contained within must be disposed in compliance with the applicable laws and guidelines of the respective country.