


## Control Stations Ex e, Stainless Steel SR.CS\*

### Marking

|  |
|--|
| Control Stations, Stainless Steel<br>SR.CS*  |
| ATEX certificate CML 16 ATEX 3009X<br>ATEX marking:<br> II 2 GD<br>Ex db eb IIC T* Gb<br>Ex ib IIC T* Gb<br>Ex db eb ib IIC T* Gb<br>Ex tb IIIC T** °C Db<br>T6/T80 °C @ Ta +40 °C<br>T5/T95 °C @ Ta +55 °C<br>T4/T130 °C @ Ta +55 °C |
| IECEX certificate IECEX CML 16.0008X<br>UKCA certificate CML 22 UKEX 2550X<br>ECAS certificate 22-10-53256/E22-09-052316/NB0002  |

The \*-marked letters of the type code are placeholders for versions of the device.

|  |
|--|
| Pepperl+Fuchs Group<br>Lilienthalstraße 200, 68307 Mannheim, Germany       |
| Internet: <a href="http://www.pepperl-fuchs.com">www.pepperl-fuchs.com</a> |

### Target Group, Personnel

Responsibility for planning, assembly, commissioning, operation, maintenance, and dismantling lies with the plant operator.

The personnel must be appropriately trained and qualified in order to carry out mounting, installation, commissioning, operation, maintenance, and dismantling of the device. The trained and qualified personnel must have read and understood the instruction manual.

### Reference to Further Documentation

Observe laws, standards, and directives applicable to the intended use and the operating location.  
Observe Directive 1999/92/EC in relation to hazardous areas.

The corresponding datasheets, manuals, declarations of conformity, EU-type examination certificates, certificates, and control drawings if applicable (see datasheet) are an integral part of this document. You can find this information under [www.pepperl-fuchs.com](http://www.pepperl-fuchs.com).

In order to access this documentation, enter the product name, i. e. the type code, or the item number of the product in the search field of the website.

### Intended Use

The device is only approved for appropriate and intended use. Ignoring these instructions will void any warranty and absolve the manufacturer from any liability.

The control stations are used to control electrical energy and electrical signals in hazardous areas. They must be installed in fixed installations. Intended use includes observing these operating instructions and the other applicable documents, e.g. the data sheet. Any other use of the control stations is not allowed.

### Improper Use

Protection of the personnel and the plant is not ensured if the device is not used according to its intended use.

### Mounting and Installation

Observe the installation instructions according to IEC/EN 60079-14.

If you intend to install the device or enclosure in areas that may be exposed to aggressive substances, ensure that the stated surface materials are compatible with these substances. If required, contact Pepperl+Fuchs for further information.

During installation take into account all local / national or plant specific rules and regulations regarding electricity, grounding, installation as well as hygiene and safety.

Consider the requirements of the IEC/EN 60079-31 regarding excessive dust deposits.

Ensure that adequate free air exists around the enclosure, and that it is not subjected to external sources of heating that could affect the stated temperature class.

Safety-relevant markings are found on the nameplate supplied. Ensure that the nameplate is present and legible. Take the ambient conditions into account.

Additional warnings may be on separate labels besides the main nameplate.

The permitted ambient temperatures of the built-in components must not be exceeded.

Variants equipped with non-light transmitting control functions should be installed only in areas where the risk of mechanical impact is low.

Ensure that the enclosure is not damaged, distorted, or corroded.

Ensure that all seals are clean, undamaged, and correctly fitted.

Tighten all screws of the enclosure/enclosure cover with the appropriate torque.

Cover screws are designed to be self-captive and they should remain in the cover at all times. If they ever need to be replaced, they have to be screwed through the enclosure cover into the associated spacer.

For cable glands only use incoming cable diameters of the appropriate size.


Tighten all cable glands with the appropriate torque.

Close all unused cable glands with the appropriate sealing plugs.

Only use sealing plugs that are suitably certified for the application.

Close all unused enclosure holes with the appropriate stopping plugs.

Only use stopping plugs that are suitably certified for the application.

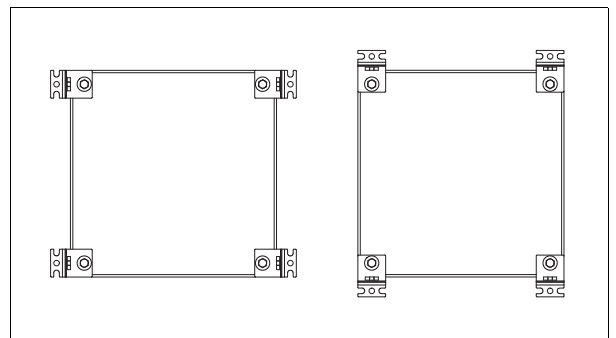


Enclosures can be installed either by means of separate mounting bracket or directly by using the screw holes in the enclosure rear.

Use all existing screw holes for mounting the enclosure.

It is recommended to use screws according to ISO 4762 or equivalent.

Follow below instructions when using the optional mounting brackets in horizontal position.

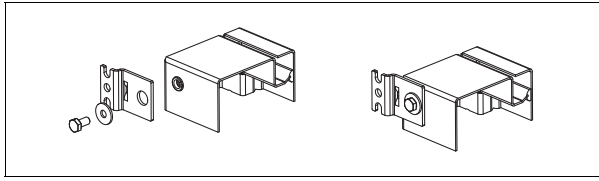

- (1) Screw the brackets to the screw holes in the enclosure rear
- (2) Mark the upper screw positions on the mounting surface
- (3) Fix all upper screws to the mounting surface
- (4) Hang the enclosure onto the screws by using the bottom notches of the upper brackets
- (5) Mark the lower screw positions using the central holes of the lower brackets
- (6) Drill the appropriate screw holes into the mounting surface
- (7) Fix the lower mounting brackets to the mounting surface by using the central holes
- (8) Tighten all mounting screws with the appropriate torque



### Note

Torque moments depend on the used screws and the material that they are screwed into.

If using the mounting brackets in vertical position always use the central bracket holes.

If mounting the enclosure on concrete use expansion anchors. When mounting the enclosure to a steel framework use vibration resistant mounting material.

Make sure that the enclosure is mounted on a flat surface to avoid distortion of the enclosure and ensure proper sealing function of the cover gasket.

If external ground connections exist, ensure they are in good condition and are not damaged or corroded.

In order to prevent condensation in the enclosure, use suitably certified breather drains.

## Requirements for Cable Glands

Only use cable glands that are suitably certified for the application.

Only use cable glands with a temperature range appropriate to the application.

Only use cable glands with an ingress protection appropriate to the application.

Ground metal cable glands.

## Requirements for Internal Components

Select suitable conductors in order to ensure that the maximum permitted temperature of the conductors fit to the maximum permitted ambient temperature of the control station.

Select cables with a suitable temperature rating.

In case of mixed Ex e / Ex i arrangements, ensure the required minimum distances according to IEC/EN 60079-11.

Ensure that the terminals are in good condition and are not damaged or corroded.

Use only one conductor per terminal conductor entry point.

Observe the tightening torque of the terminal screws.

Use the shortest possible cable lengths and avoid small core cross sections.

Observe the minimum bending radius of the conductors.

When installing the conductors the insulation must reach up to the terminal.

When using stranded conductors, crimp wire end ferrules on the conductor ends.

Unused cables and connection lines must be either connected to terminals or securely tied down and isolated.

Insulation by tape alone is not permitted.

Observe the special conditions for safe use listed in the manufacturer's documentation.

Do not bunch more than 6 conductors in order to avoid hot spots.

Arrange ground connections for incoming and outgoing cables so that the earth fault current is not carried between separate grounding plates.

When installing additional components, consult Pepperl+Fuchs in order to ensure these components are listed in the EU-type examination certificate and the maximum power dissipation of this solution is within the allowed limits.

All normally closed contacts of the 2 pole and 4 pole contact blocks are designed as positive opening contacts according to IEC 60947.

For easier wiring the internal contact modules might be removed from the DIN-Rail. Take care the small notches of the modules fit into the cutouts of the rail when mounting them back on.

With ammeters for current transformer connection the interchangeable scales can be changed via an opening at the upper side.


## Rules for bringing in additional thru-holes for cable glands

Determine if the space needed for the additional holes does not affect the stability of the enclosure wall and therefore the effectiveness of the gasket system.

In case of doubts contact Pepperl+Fuchs.

Maintain the minimum distances to enclosure rims and bottom as shown in the drawings.

Thru-holes for plain entries must have a diameter of not more than 0.7 mm greater than the nominal diameter of the entry thread of cable gland or fitting.

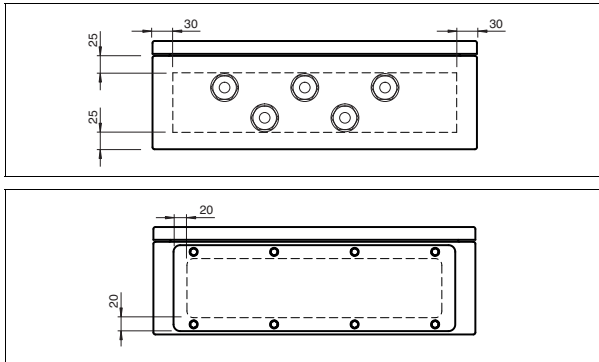

Calculate the minimum distance from the center of the additional thru-hole to the center of an already existing adjacent thru-hole by means of one of the following formulas:

1. Calculation via diameters HSN = diameter of adjacent thru-hole

HSA = diameter of additional thru-hole

Minimum distance between centers =  $1.5 \times (HSN+HSA)/2$

2. Calculation via widths across corners

WCN = width across corners of adjacent cable gland

WCA = width across corners of additional cable gland

Minimum distance between centers =  $1.2 \times (WCN+WCA)/2$

Fabricate the additional thru-holes with an appropriate tooling method.

Ensure the thru-hole diameters are fitting to the gaskets and cable glands to be installed.

Ensure the enclosure surfaces around the thru-holes are undamaged in order to maintain the IP-protection.

## Operation, Maintenance, Repair

Observe IEC/EN 60079-14 during operation.

Observe IEC/EN 60079-17 for maintenance and inspection.

Observe IEC/EN 60079-19 for repair and overhaul.

Before opening the enclosure make sure that the built-in components are de-energized.

When energized, the enclosure may only be opened for maintenance, if only intrinsically safe circuits are used inside the enclosure.

The required maintenance intervals depend on the respective application, ambient conditions and national regulations and therefore have to be determined by the user.

Labels, windows and other surfaces which are not protected against electrostatic discharge may be a potential electrostatic charge hazard and shall therefore be cleaned only with a damp cloth.

Before reassembly, make sure both gasket and sealing faces are in good and clean condition to assure the degree of protection.

If there is a defect, the device must be repaired by Pepperl+Fuchs.

Alternatively the device can be repaired by a qualified electrician in compliance with IEC/EN 60079-19.

## Delivery, Transport, Disposal


Check the packaging and contents for damage.

Check if you have received every item and if the items received are the ones you ordered.

The device, built-in components, packaging, and any batteries contained within must be disposed in compliance with the applicable laws and guidelines of the respective country.

### Technical Data

|   |  |
|---|--|
| General   |  |
| Types and variants                                      | SR.CS* - see type code table   |
| Electrical specifications                               |  |
| Operating voltage                                       | 400 V AC / DC max. Dependent on terminals and equipment fitted, but must not exceed maximum. See certification label   |
| Operating current                                       | 16 A max. Dependent on terminals and equipment fitted, but must not exceed maximum. See certification label  |
| Terminal capacity                                       | 2.5 mm <sup>2</sup>  |
| Terminal torque   | 0.8 Nm   |
| Indicators/operating means                              |  |
| Control elements  | small footprint, configuration see datasheet<br>cover-mounted max. 102<br>base-mounted max. 40<br>all NC contacts have a direct opening action for emergency stop functions                |
| Mechanical specifications                               |  |
| Dimensions  | see data table   |
| Enclosure cover   | fully detachable   |
| Cover fixing, torque                                    | see data table   |
| Degree of protection                                    | IP66   |
| Mass  | see data table<br>valid for empty enclosure, will increase according to integrated components  |
| Mounting  | see data table   |
| Cable entry   | cable glands as per specification  |
| Material  |  |
| Enclosure   | 1.5 mm AISI 316L, (1.4404) stainless steel   |
| Gland plate   | optional 3 mm or 6 mm AISI 316L (1.4404) stainless steel   |
| Finish  | brushed  |
| Cover seal  | silicone   |
| Cover fixing  | stainless steel A4 (V4A) hexagonal head screws, see data table   |
| Grounding   | M6 internal/external brass nickel-plated grounding bolt<br>M6 internal stainless steel grounding bolt welded to lid<br>M6 internal stainless steel grounding bolt welded to enclosure body |
| Ambient conditions                                      |  |
| Ambient temperature                                     | -50 ... 55 °C (-58 ... 131 °F)<br>depending on integrated components   |
| Data for application in connection with hazardous areas |  |
| EU-Type Examination Certificate                         | CML 16 ATEX 3009X  |

|                           |   |
|---------------------------|---|
| Marking                   |  II 2 GD<br>Ex db eb IIC T* Gb<br>Ex ib IIC T** Gb<br>Ex db eb ib IIC T* Gb<br>Ex tb IIC T** °C Db<br>T6/T80 °C @ Ta +40 °C<br>T5/T95 °C @ Ta +55 °C<br>T4/T130 °C @ Ta +55 °C |
| Maximum power dissipation | Dependent on enclosure size<br>See certification label  |
| International approvals   |   |
| IECEx approval            | IECEx CML 16.0008X  |
| UKCA approval             | CML 22 UKEX 2550X   |
| ECAS approval             | 22-10-53256/E22-09-052316/<br>NB0002  |
| Conformity                |   |
| Degree of protection      | EN 60529  |
| CE marking                | 0102  |

# Brief Instructions

Control Stations Ex e, Stainless Steel SR.CS\*

5

## Type Code / Model Number

| 1  | 2 | 3   | 4 | 5  | 6 | 7  | 8 | 9  |   |   |   |   |   |        |
|----|---|-----|---|----|---|----|---|----|---|---|---|---|---|--------|
| SR | . | *** | . | ** | . | ** | . | *  | . | * | . | - | * | ****   |
| SR | . | CSE | . | 38 | . | 48 | . | 16 | . | B | . | 1 | - | S 0001 |

Example: SR.CSE.38.48.16.B.1-S0001

Control Station stainless steel, size 38x48x16 cm, landscape orientation with face B at bottom, gland plate at bottom face, standard product

| 1  | Enclosure type  |
|----|-----------------|
| SR | stainless steel |

| 2   | Type of solution   |
|-----|--|
| CSE | control station (Ex e)   |
| CSI | control station (Ex i)   |
| CSM | control station, various types of explosion protection, e.g. (Ex e, Ex i) or (Ex e, Ex op r) |

| 3 | Height [cm]               |
|---|---------------------------|
| n | see dimensions data table |

| 4 | Width [cm]                |
|---|---------------------------|
| n | see dimensions data table |

| 5 | Depth [cm]                |
|---|---------------------------|
| n | see dimensions data table |


| 6 | Cable entry face orientation |
|---|------------------------------|
| B | face [B] at bottom           |
| D | face [D] at bottom           |

| 7 | Gland plates                   |
|---|--------------------------------|
| 0 | none                           |
| 1 | one gland plate at bottom face |
| 2 | two gland plates               |
| 3 | three gland plates             |
| 4 | four gland plates              |

| 8  | Variant                        |
|----|--------------------------------|
| S  | standard product               |
| C  | configured product             |
| CA | configured and adapted product |
| Y  | engineered product             |

| 9    | Variant number          |
|------|-------------------------|
| xxxx | consecutive item number |

## Variant-Specific Data - Dimensions and Enclosure Details

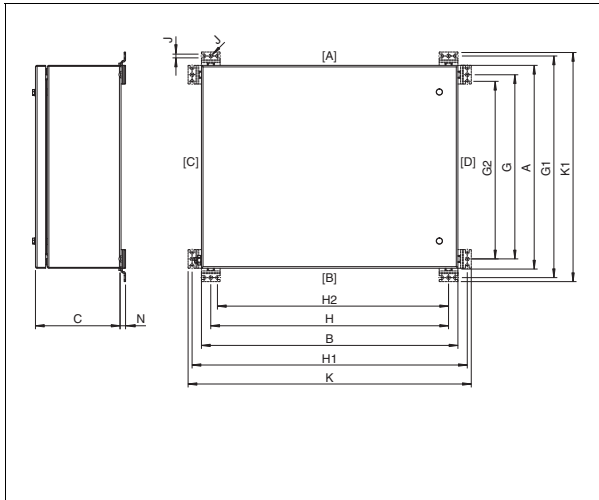

Enclosures for cover-mounted contact modules

| Enclosure type | Dimensions [mm] |     |     |     |     | Mounting [mm] |     |       |     |     |       |   |     |
|----------------|-----------------|-----|-----|-----|-----|---------------|-----|-------|-----|-----|-------|---|-----|
|                | A               | B   | C   | K   | K1  | G             | G1  | G2    | H   | H1  | H2    | J | N   |
| SRM.26.26.16   | 260             | 260 | 160 | 310 | 310 | 295           | 225 | 212.5 | 225 | 295 | 282.5 | 7 | 8.5 |
| SRM.31.31.16   | 310             | 310 | 160 | 360 | 360 | 345           | 275 | 262.5 | 275 | 345 | 332.5 | 7 | 8.5 |
| SRM.38.48.16   | 380             | 480 | 160 | 530 | 430 | 515           | 345 | 332.5 | 445 | 415 | 402.5 | 7 | 8.5 |
| SRL.48.48.16   | 480             | 480 | 160 | 530 | 530 | 515           | 445 | 432.5 | 445 | 515 | 502.5 | 7 | 8.5 |
| SRL.48.76.16   | 480             | 760 | 160 | 810 | 530 | 795           | 445 | 432.5 | 725 | 515 | 502.5 | 7 | 8.5 |

| Enclosure type | Mounting screws qty. | Mass approx. [kg] | Cover screws |      |             |
|----------------|----------------------|-------------------|--------------|------|-------------|
|                |                      |                   | Mx           | qty. | Torque [Nm] |
| SRM.26.26.16   | 4 (B)                | 5.8               | M6           | 4    | 3 - 3.5     |
| SRM.31.31.16   | 4 (B)                | 8                 | M6           | 4    | 3 - 3.5     |
| SRM.38.48.16   | 4 (B)                | 12                | M6           | 6    | 3 - 3.5     |
| SRL.48.48.16   | 4 (B)                | 14                | M6           | 8    | 3 - 3.5     |
| SRL.48.76.16   | 4 (B)                | 20                | M6           | 8    | 3 - 3.5     |

Mass is valid for empty enclosure, it will increase according to enclosure accessories, integrated components and cable glands

Values might differ slightly due to manufacturing tolerances

Screws qty.: Quantity of screws for direct mounting, (B) = optional mounting brackets included

# Brief Instructions

Control Stations Ex e, Stainless Steel SR.CS\*

7

Enclosures for base-mounted contact modules

| Enclosure type | Dimensions [mm] |     |    |     |     | Mounting [mm] |     |       |     |     |       |   |     |
|----------------|-----------------|-----|----|-----|-----|---------------|-----|-------|-----|-----|-------|---|-----|
|                | A               | B   | C  | K   | K1  | G             | G1  | G2    | H   | H1  | H2    | J | N   |
| SRM.26.26.09   | 260             | 260 | 87 | 310 | 310 | 225           | 295 | 212.5 | 225 | 295 | 212.5 | 7 | 8.5 |
| SRM.31.31.09   | 310             | 310 | 87 | 360 | 360 | 275           | 345 | 262.5 | 275 | 345 | 262.5 | 7 | 8.5 |
| SRM.38.48.09   | 380             | 480 | 87 | 530 | 430 | 345           | 415 | 332.5 | 445 | 415 | 432.5 | 7 | 8.5 |

| Enclosure type | Mounting screws qty. | Mass approx. [kg] | Cover screws |      |             |
|----------------|----------------------|-------------------|--------------|------|-------------|
|                |                      |                   | Mx           | qty. | Torque [Nm] |
| SRM.26.26.09   | 4 (B)                | 5.3               | M6           | 4    | 3 - 3.5     |
| SRM.31.31.09   | 4 (B)                | 7.2               | M6           | 4    | 3 - 3.5     |
| SRM.38.48.09   | 4 (B)                | 11                | M6           | 6    | 3 - 3.5     |

Mass is valid for empty enclosure, it will increase according to enclosure accessories, integrated components and cable glands

Values might differ slightly due to manufacturing tolerances

Screws qty.: Quantity of screws for direct mounting, (B) = optional mounting brackets included