# Instruction Manual / Original Instructions

## 1. Marking

Relay module KFD2-RSH-1.2E.L2

Pepperl+Fuchs Group

Lilienthalstraße 200, 68307 Mannheim, Germany

Internet: www.pepperl-fuchs.com

# 2. Target Group, Personnel

Responsibility for planning, assembly, commissioning, operation, maintenance, and dismounting lies with the plant operator.

The personnel must be appropriately trained and qualified in order to carry out mounting, installation, commissioning, operation, maintenance, and dismounting of the device. The trained and qualified personnel must have read and understood the instruction manual.

Prior to using the product make yourself familiar with it. Read the instruction manual carefully.

#### 3. Reference to Further Documentation

Observe directives, standards, and national laws applicable to the intended use and the operating location.

The corresponding datasheets, manuals, declarations of conformity, EU-type examination certificates, certificates, and control drawings if applicable supplement this document. You can find this information under www.pepperl-fuchs.com.

For specific device information such as the year of construction, scan the QR code on the device. As an alternative, enter the serial number in the serial number search at www.pepperl-fuchs.com.

If you use the device in safety-related applications, observe the requirements for functional safety. You can find these requirements in the functional safety documentation under www.pepperl-fuchs.com.

## 4. Intended Use

The device is only approved for appropriate and intended use. Ignoring these instructions will void any warranty and absolve the manufacturer from any liability.

The device is used in control and instrumentation technology (C&I technology). The device is designed for safety-related switching of load circuits.

Use the device only within the specified ambient and operating conditions. The device is designed for mounting on a 35 mm DIN mounting rail according to EN 60715.

Only use the device stationary.

If you use the device in safety-related applications, observe the information for safety function and safe state.

# 5. Improper Use

Protection of the personnel and the plant is not ensured if the device is not used according to its intended use.

The device is not suitable for isolating signals in power installations unless this is noted separately in the corresponding datasheet.

# 6. Mounting and Installation

Do not mount a damaged or polluted device.

Observe the installation instructions according to IEC/EN 60204-1. Mount the device in a way that the device is protected against mechanical hazard.

The device fulfills a degree of protection IP20 according to IEC/EN 60529. The device must be installed and operated only in an environment of overvoltage category II (or better) according to IEC/EN 60664-1.

If you install the device in safety-related applications, observe the requirements for functional safety.

## Requirements for Cables and Connection Lines

Observe the permissible core cross section of the conductor.

When using stranded conductors, crimp wire end ferrules on the conductor ends.

Use only one conductor per terminal.

When installing the conductors the insulation must reach up to the terminal.

Observe the tightening torque of the terminal screws.

If the voltage is greater than 50 V AC or 120 V DC, switch off the voltage before connecting or disconnecting the device.

#### Requirements for the Safety Function

Protect the relay contacts with a suitable current limitation against overcurrent

Use the internal fuse for protection.

If you do not use the internal fuse, use an external current limitation with the same limit values.

## 7. Operation, Maintenance, Repair

If you operate the device in safety-related applications, observe the requirements for functional safety. In case of operating in low demand mode, plan appropriate intervals for the proof test.

The device must not be repaired, changed, or manipulated. In case of failure, always replace the device with an original device.

If the voltage is greater than 50 V AC or 120 V DC, switch off the voltage before connecting or disconnecting the device.

The following safety instruction is symbolized via the warning marking on the device.

Do not touch the hot surface of the device. Let cool down the device surface before touching the device.

Observe the warning markings.

Do not remove the warning markings.

#### Requirements for the Safety Function

Do not disable the device.

Do not bypass the safety function.

Observe the maximum number of switching cycles according to the datasheet.

Ensure that the application responds appropriately to the triggering of the diagnostic function.

## 8. Delivery, Transport, Disposal

Check the packaging and contents for damage.

Check if you have received every item and if the items received are the ones you ordered.

Always store and transport the device in the original packaging.

Store the device in a clean and dry environment. The permitted ambient conditions must be considered, see datasheet.

The device, built-in components, packaging, and any batteries contained within must be disposed in compliance with the applicable laws and guidelines of the respective country.

