

Intrinsically Safe Tablet PC

Pad-Ex 01 P8 DZ2
User's Manual



Table of Contents

BEFORE YOU START	4
PACKAGE CONTENTS	4
PRODUCT OVERVIEW	5
<i>Front View</i>	5
<i>Back View</i>	6
<i>Right View</i>	7
<i>Left View</i>	7
<i>Bottom View</i>	8
STATUS INDICATORS	9
GETTING STARTED	10
INSTALLING THE BATTERY.....	10
<i>Charging the Battery</i>	10
<i>When to replace the Battery Pack</i>	11
<i>Removing the Battery</i>	11
CONNECTING THE POWER	12
<i>Connecting the AC Adapter</i>	12
<i>Using Battery Power</i>	12
STARTING YOUR TABLET PC.....	13
<i>Turning On Your Device</i>	13
<i>Turning Off Your Device</i>	13
OPERATING YOUR TABLET PC.....	14
USING THE QUICK MENU	14
<i>Quick Menu Overview</i>	14
<i>Viewing the Version Information</i>	15
<i>Viewing the Battery Charge Cycles</i>	15
<i>Configuring the Function Button (Barcode/Camera)</i>	15
<i>Configuring the Programmable Button (P)</i>	16
<i>Configuring the Up/Down Button</i>	16
<i>Assigning an Application to the P Button</i>	17
<i>Accessing the Mobility Center</i>	18
<i>Configuring External Antenna Switching Mode</i>	18
<i>Configuring Adaptive Brightness Setting</i>	19
USING THE CAMERA	19
<i>Opening the Camera App</i>	19
<i>Taking Photos</i>	21
<i>Recording Videos</i>	22
<i>Setting a Flash Mode</i>	23
<i>Setting Photo Timer</i>	23
<i>Adjusting Focus</i>	24
<i>Adjusting Brightness</i>	25

Configuring Camera Settings	26
Viewing Photos/Videos	27

MAKING CONNECTIONS 28

INSTALLING THE MICROSD MEMORY CARD	28
INSTALLING THE SIM CARD	29
CONNECTING THE MICROPHONE/HEADSET	29
CONNECTING USB DEVICES	30
CONNECTING TO WIRELESS CONNECTIONS	31

USING THE BIOS SETUP UTILITY 38

BIOS SETUP MENU	38
MAIN MENU	39
ADVANCED MENU	40
BOOT MENU	41
SECURITY MENU	42
SAVE & EXIT MENU	43

MAINTAINING AND CARING FOR YOUR TABLET PC 44

PROTECTING YOUR TABLET PC	44
STORING AND HANDLING YOUR TABLET PC	44
CLEANING YOUR TABLET PC	46
TRAVELING WITH YOUR TABLET PC	47

TROUBLESHOOTING 48

PRELIMINARY CHECKLIST	48
SOLVING COMMON PROBLEMS	48
DISPLAY PROBLEMS	50
HARD DISK PROBLEMS	50
OTHER PROBLEMS	54

APPENDIX 55

COPYRIGHT	55
SPECIFICATIONS	55
REGULATORY STATEMENT	58
<i>Federal Communications Commission Statement</i>	58
<i>Declaration of Conformity</i>	58
<i>RF exposure warning</i>	58
<i>Canada, Industry Canada (IC) Notices</i>	59
<i>Battery Disposal</i>	60
<i>CLASS 1 LASER PRODUCT</i>	60
SAFETY INSTRUCTIONS	62

Before You Start

Congratulations on your purchase of this tablet PC.

This rugged tablet PC is portable and provides users with maximum mobile computing experience in a wide range of working environments. Before you begin using your tablet PC, read this chapter to familiarize yourself with the main components installed in the system.

Package Contents

If any of following items is damaged, please contact your retailer.



Tablet PC



AC adapter



Power cord



Hand strap



NOTE

- The pictures are for reference only, actual items may slightly differ.

Software-Security

The Pad-Ex 01 P8 is based on the Durabook R11AH6 from Twinhead.

We do not make any changes to the operating system.

The latest Security information is available at www.durabook.com or www.microsoft.com.


Product Overview

Front View



No.	Item	Description
1	Program button	Tap to enter the chosen program (user definition) or enable Stealth mode.
2	Front camera	Use for video conference.
3	Ambient light sensor	Use to detect the current level of visible light in the surrounding environment.
4	Microphone	Record the surrounding sound.
5	Function button	The button functionality can be assigned via Quick Menu. <ul style="list-style-type: none"> Barcode trigger button: Press to trigger the Barcode scan function if the barcode scanner is enabled. Launch Windows Camera Application button. Disable
6	Window button	Tap to return to the Start screen.

Back View

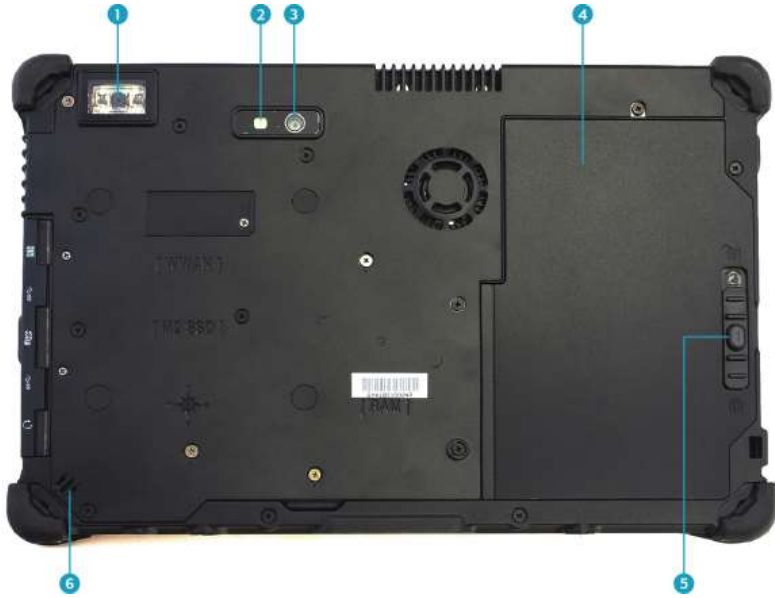

No.	Item	Description
1	Barcode scanner	Scan barcodes.
2	Camera light	Provide additional lighting when taking pictures under low light environment.
3	Rear camera	Use to take pictures.
4	Battery Pack	Battery Pack.
5	Battery latch release button	Press and hold the button to slide the battery latch to the unlock position.
6	Speaker	Emit sound.

Right View



No.	Item	Description
1	Audio Combo jack	Connect a headphone or an external speaker or microphone.
2	USB 3.0 ports (x2)	Connect USB 3.0 peripheral devices.
3	MicroSD memory card slot	Use to insert a MicroSD card to transfer pictures, music, and data between your Tablet PC and flash compatible devices.
4	SIM card slot	Use to insert a SIM card for WWAN module connection.

Left View






No.	Item	Description
1	Power button	Press to turn your tablet PC on or off.
2	Up/Down buttons	The button functionality can be assigned via Quick Menu. <ul style="list-style-type: none"> Brightness adjustment: Press to adjust the brightness level. Volume adjustment: Press to adjust the volume level. Disable
3	Kensington lock slot	A Kensington cable can be connected.

Before You Start



NOTE

- When using the tablet PC without attaching an external keyboard, the three-finger salute (Ctrl+Alt+Del) function is defined by pressing the  and  buttons simultaneously. By pressing the two-button combination, it will switch to Windows Security screen, which lets you lock the device, switch to different user, sign out, change a password, enter Task Manager, or shutdown/Restart the device.

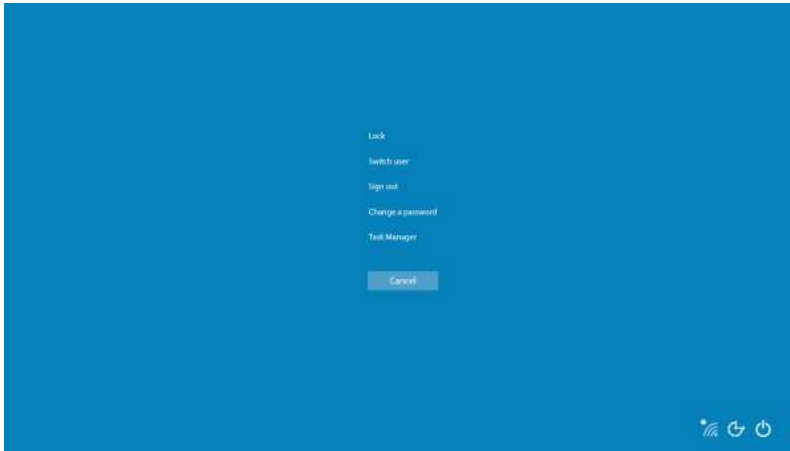

Bottom View






No.	Item	Description
1	Docking connector	Connect the tablet PC to a docking station.
2	DC-IN jack	Connect the power adapter.

Status Indicators

The status indicators in the upper side of the tablet PC light up when a particular function of the tablet PC is active.



Icon	Item	Description
	Power	Green LED always lights on when the system is running. When the system is in sleep mode, the LED blinks.
	Battery	Indicate the battery status: <ul style="list-style-type: none"> • Green: when battery is fully charged (95% or above) • Orange: when battery is charging • Flashing Red: when battery capacity is lower than 10% • Off: when discharged
	RF	Blue LED lights on when any of RF features (WLAN/ Bluetooth/ WWAN/ GPS) is on. Blue LED lights off when none of RF features (WLAN/ Bluetooth/ WWAN/ GPS) are on.



NOTE

- On Windows 10 OS, you need to install the Quick Menu application in order to verify the RF signal status.

Getting Started

This chapter will help you get started using the device.

Installing the Battery

To install the battery, follow the steps below:

1. Align and insert the battery to the battery compartment.
2. Push completely until the battery locks into place.



3. Slide the battery latch to the lock position to secure the battery.



Charging the Battery

The Lithium-ion battery is not fully-charged upon purchase.

To charge the battery, follow the steps below:

1. Install the battery to your tablet PC. See procedures above.
2. Connect the AC adapter to the DC-IN jack of your tablet PC.
3. Connect the AC adapter to the power cord.
4. Plug the power cord to an electrical outlet.

When to replace the Battery Pack

The battery performance gradually decreases over time and usage. We recommend you to replace your battery pack after 18 to 24 months of usage.

Removing the Battery

To remove the battery, follow the steps below:

1. Press and hold the battery latch release button to slide the battery latch to the unlock position.



2. Remove the battery out of the battery compartment.



Connecting the Power

Your tablet PC can be powered up using the AC adapter or the Lithium-ion battery.

Connecting the AC Adapter

The AC adapter powers up your tablet PC and charges the battery.



1. Connect the AC adapter to the DC-IN jack of your tablet PC.
2. Connect the AC adapter to the power cord.
3. Plug the power cord to an electrical outlet.

Using Battery Power

1. Install a charged battery in the battery compartment.
2. Remove the AC adapter (if plugged). Your tablet PC will automatically use the battery power.




NOTE

- If your tablet PC is connected to an electrical outlet and the battery is installed, your tablet PC uses power from the electrical outlet.

Starting Your Tablet PC

Turning On Your Device


Press the  button until the Power LED lights up.

Turning Off Your Device

It is important to properly shut down your tablet PC to avoid the loss of unsaved data. To shut down your tablet PC, do the following:

Tap  > **Power** > **Shut down**.

Wait for your notebook to turn off power completely before removing the power source (if necessary).

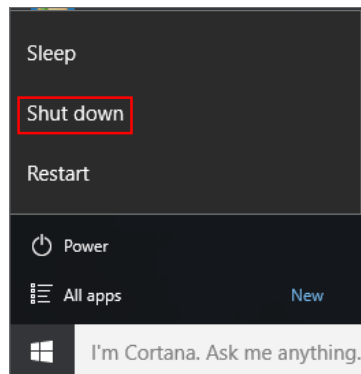


Operating Your Tablet PC

This chapter will guide you on how to use your Tablet PC.

Using the Quick Menu


To enter the Quick menu, tap the arrow on the task bar to display hidden icons. Then tap the Quick Menu icon (⚙️). You can also access the Quick menu in the *All apps* list.

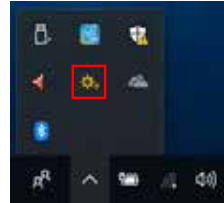

Quick Menu Overview




NOTE

- If the tab is green (i.e. ) , this indicates the current function is activated.


Viewing the Version Information

On the **Version** section, you can view the Bios version, EC version, and Quick Menu version.

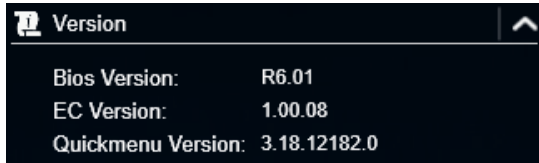

Viewing the Battery Charge Cycles

On the **Battery Charge Cycles** section, you can view the battery charge cycle and battery status.

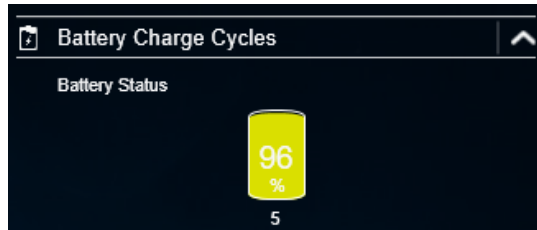

Configuring the Function Button (Barcode/Camera)

On the **Barcode/Camera Button Setting** section, you can assign the function for the **Barcode/Camera** button.



There are three available options:

- **Barcode trigger:** Scan the barcode (if the barcode scanner is integrated).
- **Launch Windows Camera Application:** Shortcut key for launching the Windows Camera application.
- **Disable:** No function.

Configuring the Programmable Button (P)

On the **P Button Setting** section, you can assign the function for the **P** button.




There are three available options:

- **Stealth Mode:** Turn off the LCD backlight, LEDs, speakers, camera flash, and RF devices.
- **Launch Application:** Shortcut key for launching a specific application. To assign the application, refer to the "Assigning an Application to the P Button" section.
- **Disable:** No function.

Configuring the Up/Down Button

On the **Up/Down Button Setting** section, you can assign the function for the **Up/Down** button.

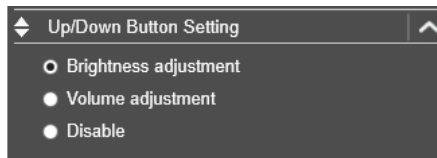


There are three available options:

- **Brightness adjustment:** To adjust screen brightness level;
- **Volume adjustment:** To adjust volume level;
- **Disable:** No function.



Assigning an Application to the P Button

Tap the **P-Key** tab to assign an application to the **P** button. Select the desired application and click **Open**.

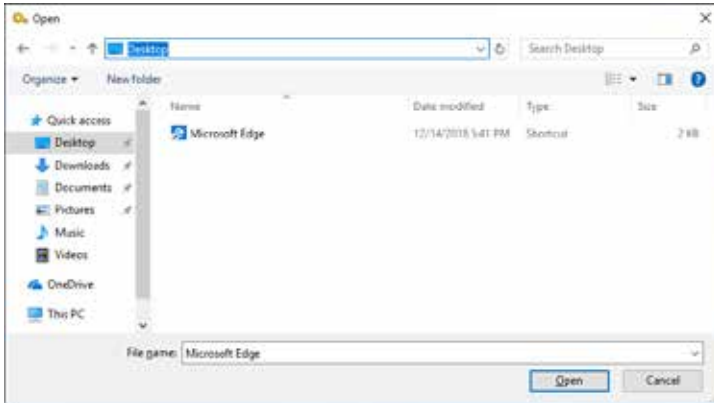


Accessing the Mobility Center

Tap the **Mobility Center** tab to adjust or configure the brightness, volume level, battery status, screen orientation, external display, sync, and presentation settings.



Configuring External Antenna Switching Mode

Select the respective external antenna tab to configure the setting.

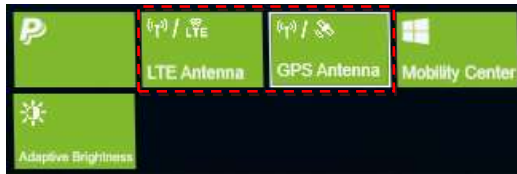

- Tap the **LTE Antenna** tab to enable/disable the device to automatically switch to the external WWAN antenna when it is affixed on a docking station.
- Tap the **GPS Antenna** tab to enable/disable the device to automatically switch to the external GPS antenna when it is affixed on a docking station.



NOTE

- If the tab is green, this indicates the current function is activated.

Configuring Adaptive Brightness Setting

Tap the **Adaptive Brightness** tab to enable/disable the device to automatically adjust the brightness level according to the ambient light.




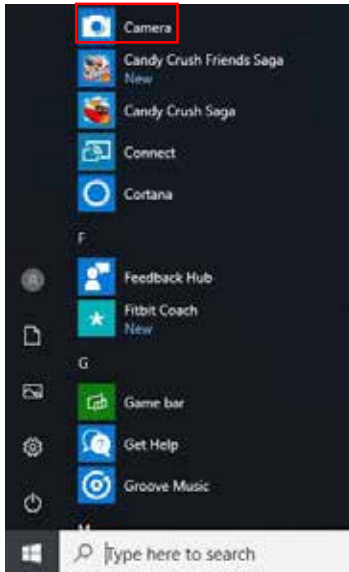
Using the Camera

Using the Camera application, you can use this tablet PC to take photos or videos.


Opening the Camera App

To access the Camera application, do one of the following:


- a. Tap  > **Camera**.



- b. In Cortana search box, enter 'camera'. Then tap **Camera**.

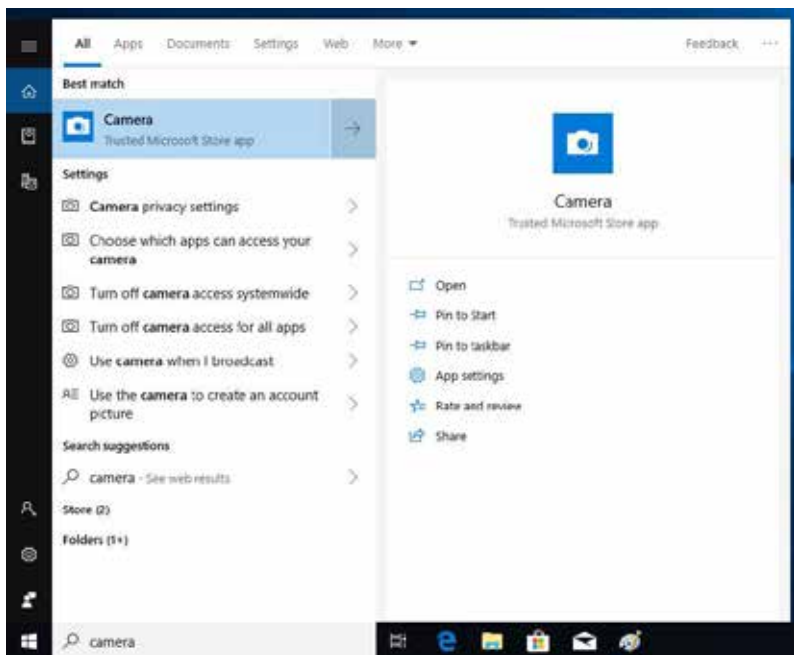

Taking Photos

Tap  to capture a photo.





NOTE

- To switch between front and rear cameras, tap .


Recording Videos



 
1. Tap  to switch to Video mode.





2. Press  to start recording a video. The recording time appears on the bottom on the screen.
3. To stop recording the video, tap .


Setting a Flash Mode





In photo capturing mode, tap  to select the desired flash mode.

- : Flash is off
- : Flash is on
- : Automatic flash

In video recording mode, tap / to toggle the camera LED flash on or off.

Setting Photo Timer

Tap  to toggle the desired time delay.

- : Self-timer is off
- : 2-second self-timer
- : 5-second self-timer
- : 10-second self-timer

Adjusting Focus

1. Tap **>** to switch to Pro mode.
2. Tap **Ⓜ** to display the focus control slider.
3. Do the following:
 - Tap and drag **Ⓜ** upwards (or downwards if necessary) to focus automatically (**auto**), manually (**M**), or use infinity focus (**∞**).




Adjusting Brightness

1. Tap > to switch to Pro mode.
2. Tap ☺ to display the brightness control slider.
3. Do the following:
 - Tap and drag ☺ upwards to brighten your photo or video.



- Tap and drag ☺ downwards to darken your photo or video.

Configuring Camera Settings

1. Tap  to enter the Settings menu.



2. Select the desired menu option and setting.

Menu Option	Description
Press and hold camera button	Set the action when you tap and hold the Camera button. <ul style="list-style-type: none">• Video – Tap and hold the Camera button to record a video.• Photo burst – Tap and hold the Camera button to take photos continuously.• Disabled – Disable the function.
Aspect ratio	Select the aspect ratio of the photos.

Menu Option	Description
Framing grid	Show or hide the framing grid lines.
Time lapse	If the setting is set to On, the system will keep taking photos until the Camera button is pressed.
Video recording	Set the video resolution.
Flicker reduction	Select the flicker reduction setting: <ul style="list-style-type: none"> • Disabled: To disable the function. • 50 Hz/60 Hz: To reduce the flickering that may occur when recording video under fluorescent light. • Auto: To set flicker reduction automatically.
Digital video stabilization	If the setting is set to On, digital video stabilization helps you to keep your footage steady.
Related settings	Select the related settings that can only be configured in Settings app.

Viewing Photos/Videos

After taking a photo or recording a video, tap the thumbnail (in the bottom-right corner) to view the most recent photo or video taken.



Swipe right to see other photos or videos in your collection.

Making Connections

This chapter will guide you on installing peripheral devices to maximize the use of your tablet PC.

Installing the MicroSD Memory Card

To insert a MicroSD memory card:

1. Push down and pull to open the I/O port cover.
2. Push the memory card into the memory card slot until it clicks into place.



Installing the SIM Card

You can use a SIM card for wireless internet access.



NOTE

- Check the availability of service and plan rates of data connection with your network service provider.

To insert a SIM card:

1. Push down and pull to open the I/O port cover.
2. Push a valid SIM card into the SIM card slot until it clicks into place.



Connecting the Microphone/Headset

Your tablet PC is equipped with audio combo jack that enables you to use the headset or microphone.

- ❖ To connect to a headset, open the I/O port cover and plug the stereo headphone cable into the audio combo jack.



- ❖ To connect to a microphone, open the I/O port cover and plug the microphone cable into the audio combo jack.



NOTE

- The headset and microphone are not included in the package. They are sold separately.

Connecting USB Devices

You can connect your tablet PC to other USB devices, such as a mouse, keyboard, digital camera, printer, or an external hard disk drive.



1. Push down and pull to open the I/O port cover.
2. Connect one end of the USB cable to the USB port of your device.
3. Connect the other end of the cable to the USB device (if necessary).



NOTE

- The USB cable is not included in the package. It is sold separately or it may come with your USB device.

Connecting to Wireless Connections

Your tablet PC can connect and communicate with other Bluetooth-enabled devices.



NOTE

- Do not disassemble the bumper. Otherwise, the antenna may be damaged, resulting in poor reception.

Connecting to a Bluetooth Device

Your tablet PC can connect and communicate with other Bluetooth-enabled devices. By default, the Bluetooth function is disabled.


To add a device, follow the steps below:

1. Tap the arrow icon (↖) on the system tray to display hidden icons.
2. Tap the Bluetooth icon (📶) and select **Add a Bluetooth Device**.




Making Connections

3. Tap **+** and select the kind of device you want to add.

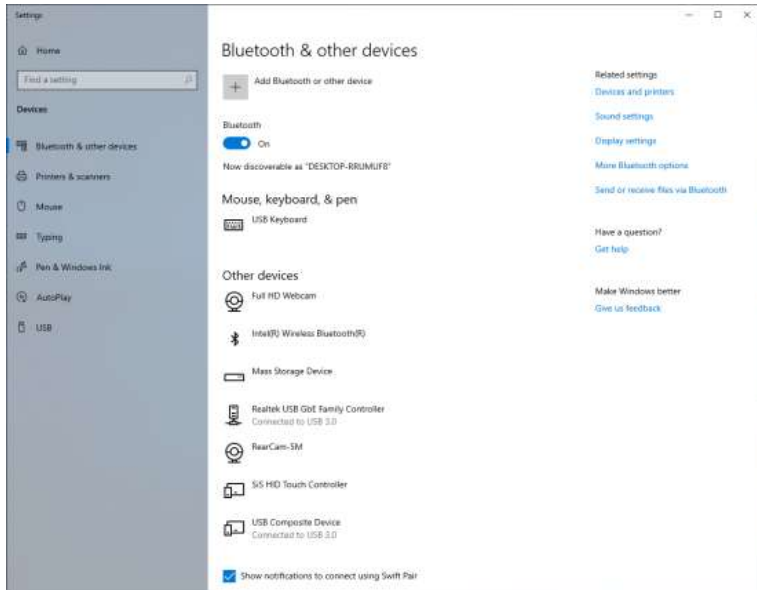


4. Select the device you want to connect. Verify the pairing code on the screen of your device and pairing device match, then tap **Connect** to start pairing.

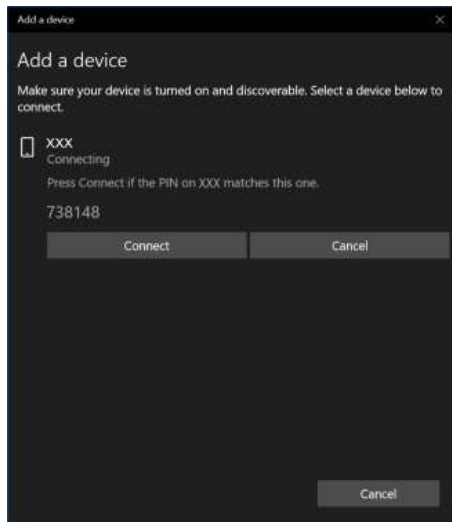



NOTE

- If the device that you want to add does not appear on the screen, please check if the device is turned on and is discoverable.
5. Tap **Done** to complete the pairing connection.

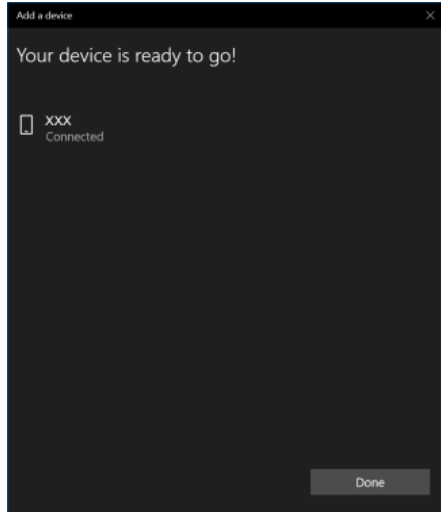

NOTE

- Most Bluetooth-enabled devices need to be paired with your tablet PC. The PIN you enter on the tablet PC must be the same PIN to be entered on the other Bluetooth device.
- Once a partnership has been created, connecting to that device again will no longer require entering the PIN.
- To disconnect from the Bluetooth-enabled device, select the device in the Bluetooth menu and tap **Remove device**.

Connecting to a Wireless Local Area Network


Your tablet PC comes with a WLAN module. A wireless network can be added either when the network is detected or by manually entering the settings information.

To connect, follow the steps below:

1. Tap the wireless network icon () on the system tray.



2. Available wireless network connections are displayed. Tap the desired wireless network.

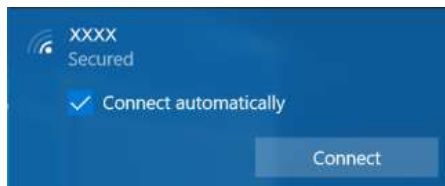

3. Tap **Connect**.


Some networks require a network security key or a password.



TIP

Check **Connect automatically** box to automatically connect to this network when it is available.

4. Enter the network security key.

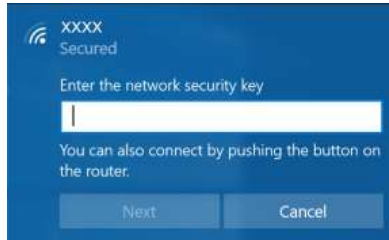

7. Tap **Next**. After the connection is established, you can see the wireless icon (📶) in the Notification area.



NOTE


- Wi-Fi access requires service from a wireless service provider. Contact your service provider for more information.
- Actual wireless connectivity will depend on system configuration. Please contact your dealer for more information.
- To disconnect from the wireless network, select the network in the wireless in the wireless network list and tap **Disconnect**.

Connecting to a Wireless Wide Area Network (WWAN)

With **WWAN** function, it allows your tablet PC to connect to the Internet using mobile or cellular data networks.

To connect, follow the steps below:

1. Insert a valid SIM card into the SIM card slot.
2. Tap the cellular network icon (📶) on the system tray. Then tap **Cellular** to enable the Internet connection via mobile data network.

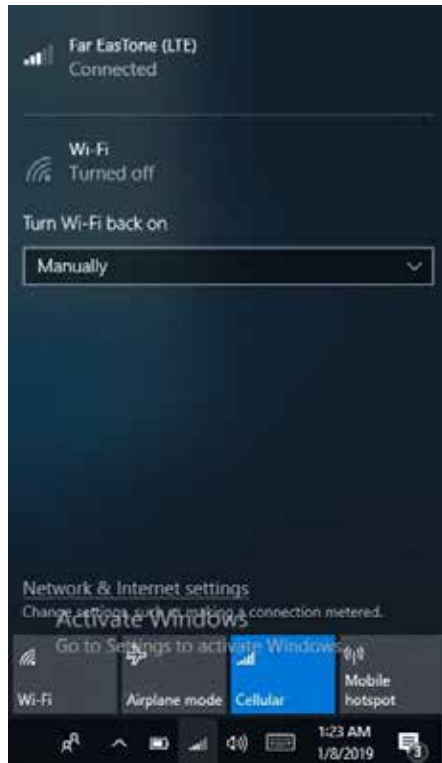

3. Select the mobile network carrier and tap **Connect** to establish the connection.



TIP

Check **Let Windows keep me connected**

box to allow the system to automatically connect to this mobile data network.

Using the BIOS Setup Utility

Your tablet PC has a BIOS setup utility which allows you to configure important system settings, including settings for various optional functions of the tablet PC. This chapter explains how to use the BIOS setup utility.

BIOS Setup Menu

The BIOS Setup Utility allows you to configure your Tablet PC basic settings. When you turn your tablet PC on, the system reads this information to initialize the hardware so that it can operate correctly. Use the BIOS setup utility to change your tablet start-up configuration. For example, you can change the security and power management routines of your system.

Starting the BIOS Setup Utility

You can enter the BIOS setup utility and press [Setup] button while the tablet PC is booting, that is between the time you turn on the tablet PC and before the Windows interface appears.




NOTE

- You can also connect your device with an external keyboard first before starting the BIOS Setup Utility. Shut down your tablet PC completely (power off) and restart it and then press the **Delete** button to enter the setup utility.



Main Menu


The Main menu displays the system overview information about the device, including the system date and time.

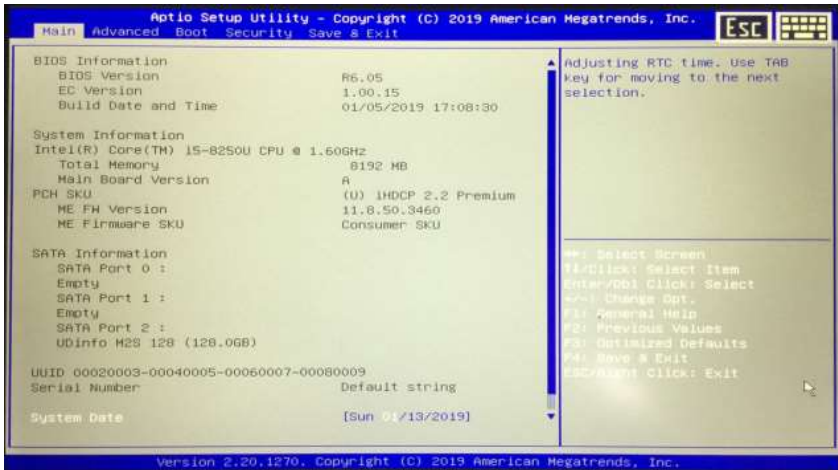

Item	Description
BIOS Information	Display the BIOS version detected during boot up.
System Information	Display the CPU type and speed, total memory, mainboard version, Intel PCH SKU name, ME FW version, and ME Firmware SKU.
System Date	Set the system date.
System Time	Set the system time.

Advanced Menu

The Advanced menu allows you to configure specific system settings.

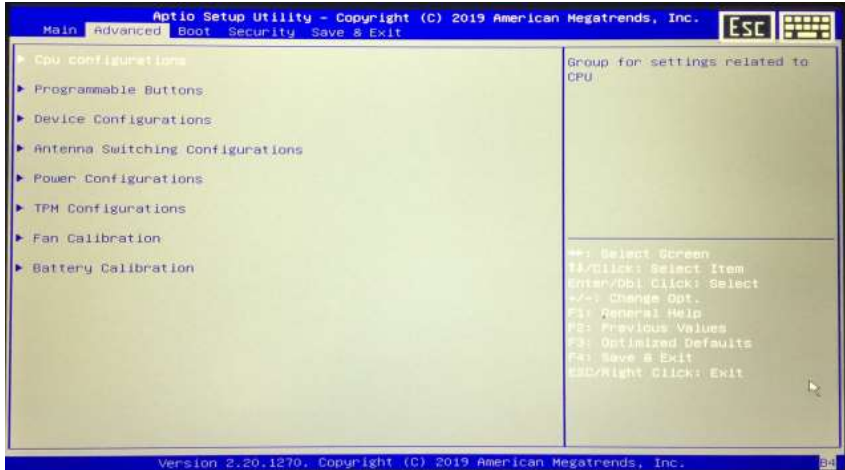


Item	Description
CPU Configuration	Configure the CPU parameters.
Programmable Buttons	Set the Up/Down buttons to adjust (a) Display Brightness, or (b) Audio Volume, or (c) Disabled.
Device Configuration	Configure the device settings including USB3.0 port, SD card reader, TPM device, HD Audio, Touch screen, Front camera, Rear camera, Barcode scanner, Wireless LAN, Bluetooth, WWAN, and GPS.
Antenna Switching Configurations	<ol style="list-style-type: none"> (1) Enable/disable the device to automatically switch to the external GPS antenna when it is affixed on a docking station. (2) Enable/disable the device to automatically switch to the external WWAN antenna when it is affixed on a docking station.
Power Configuration	Configure the power management settings including resume on AC power, Wake on WLAN from S3/S4, and USB3.0 power share.
TPM Configuration	Configure Trusted Computing settings.
FAN Calibration	Enable you to do fan calibration.

Battery Calibration	Enable you to do battery calibration.
---------------------	---------------------------------------

Boot Menu


The Boot menu allows you to configure the boot settings and boot sequence.

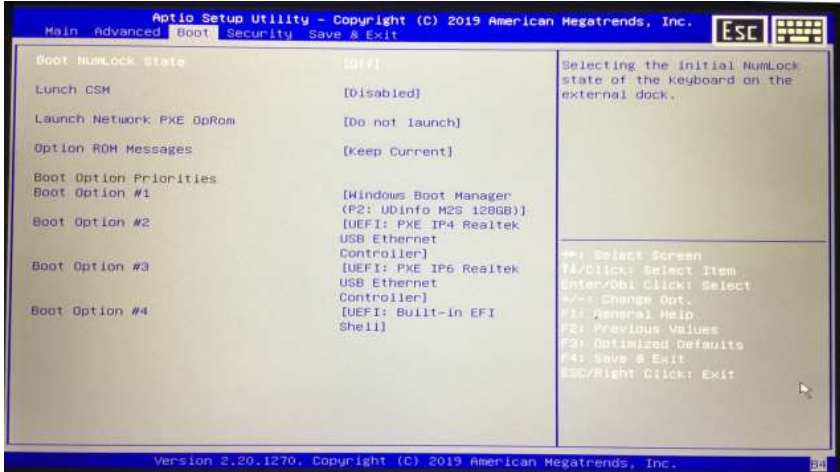

Item	Description
Boot NumLock State	Select the keyboard NumLock state.
Launch CSM	Enable/disable the CSM Support.
Launch Network PXE OpRom	Control the execution of UEFI and Legacy PXE Option Rom.
Option ROM Messages	Set the Display mode for Option ROM.
Boot Option Priorities	Set the system boot order.

Security Menu


The Security menu allows you to set or change the Administrator and User passwords.

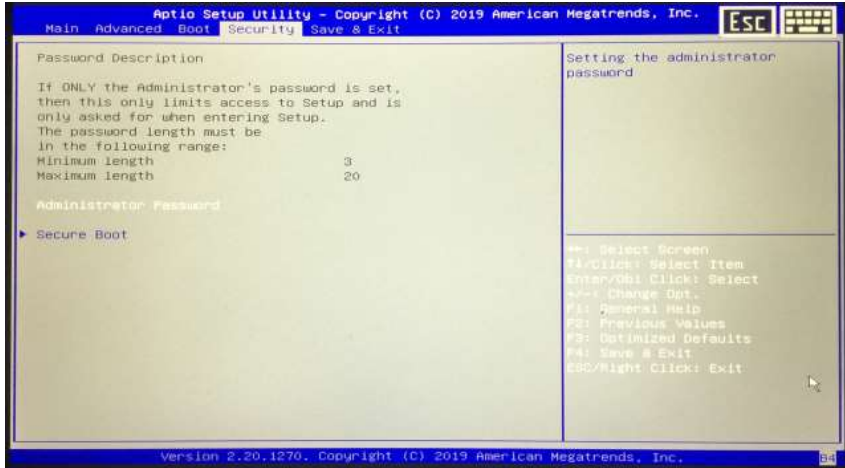

Item	Description
Administrator Password	Create or change the Administrator password.
Secure Boot	Customize the Secure Boot settings.

Save & Exit Menu

The Save & Exit menu allows you to save/discard the changes and restore the default values for all setup options before leaving the BIOS Setup Menu.

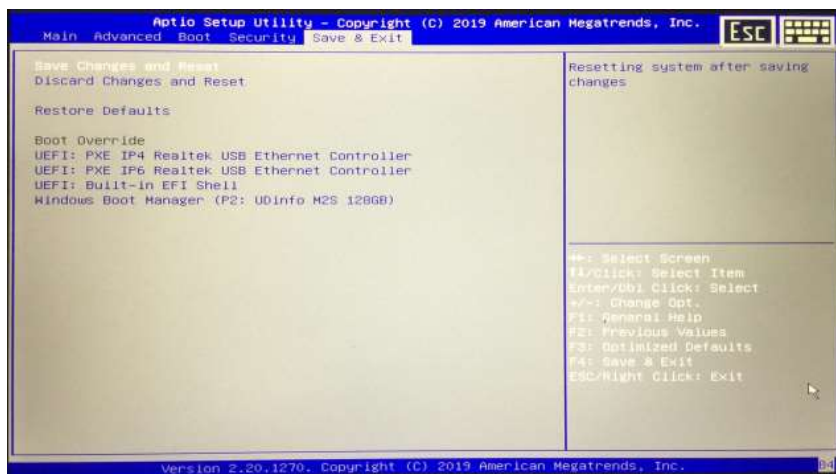

Item	Description
Save Changes and Reset	Reset the system after saving the changes.
Discard Changes and Reset	Reset the system setup without saving any changes.
Restore Defaults	Restore the default values for all the setup options.

Maintaining and Caring for Your Tablet PC

Taking care of your tablet PC will reduce the risk of damage to your device and ensure that it operates properly.

To help you maintain the quality and function of your tablet PC, this chapter provides guidelines on how to protect, store, clean, and travel with your device.

Protecting Your Tablet PC

To safeguard the integrity of the data stored on your tablet PC as well as the device, please follow the precautions described below:

- Install an anti-virus program to monitor potential viruses that could damage your files.
- Use a Kensington cable lock to protect your tablet PC against theft. Cable locks are available for purchase from online retailers and in most stores that sell computers.
- To use the lock, loop the lock cable around a stationary object such as a table. Then, insert the lock into the Kensington lock hole and turn the key to secure the lock. Store the key in a safe place.

Storing and Handling Your Tablet PC

General Storage and Handling Guidelines

- Use your tablet PC at the recommended temperature—between 0°C (32°F) and 55°C (131°F)—to ensure optimal performance (Actual operating temperature depends on product specifications.)
- Avoid placing your Tablet PC in a location subject to high humidity, extreme temperatures, mechanical vibrations, direct sunlight, or heavy dust. Using your device in extreme environments for long periods of time can result in product deterioration and a shortened product life.
- Do not place heavy objects on top of the tablet PC as this may damage the display.
- Do not operate in an environment with metallic dust.
- Store and use your tablet PC on a flat and steady surface. Do not stand the tablet PC on its side or store it in an upside-down position. The impact from

- dropping or an object hitting the device may cause damage.
- Do not cover or block any ventilation openings on the Tablet PC. For example, do not place the Tablet PC on a bed, sofa, rug, or other similar surface. Overheating may occur, which could result in damage to your tablet PC.
- Keep your tablet PC away from that are vulnerable to damage from heat, as the device can become very hot during operation,.
- Keep your tablet PC at least 13 cm (5 inches) away from electrical appliances that can generate a strong magnetic field such as a TV, refrigerator, motor, or a large audio speaker.
- Avoid moving your tablet PC abruptly from a cold to a warm place. A temperature difference of more than 10°C (18°F) may cause condensation inside the unit, which may damage storage media.

Display and Touchscreen Guidelines

- Use your finger or the included stylus on the touchscreen surface. Using a sharp or metallic object, such as a pen or pencil, may scratch and damage the display, thereby causing errors.
- Use a soft cloth to remove dirt on the display. The touchscreen surface has a special protective coating that prevents dirt from sticking to it. Not using a soft cloth may cause damage to the special protective coating on the touchscreen surface.
- Turn off the Tablet PC power when cleaning the display. Cleaning the display with the power on may cause improper operation.
- Do not use excessive force on the display. Avoid placing objects on top of the display as this may cause the glass to break, thereby damaging the device.
- Expect a slower response time when using the touchscreen at lower temperatures (less than 5°C or 41°F). A normal response time may be restored upon returning to room temperature.
- Refer to Windows online support for instructions on recalibrating the touchscreen display when there is noticeable problem with the touchscreen function (e.g., improper display resolution or unresponsive touchscreen).
- LCD image sticking occurs when a fixed pattern is displayed on the screen for a prolonged period of time. You can avoid the problem by limiting the amount of static content on the display. It is recommended that you either use a screen saver or turn off the display when it is not in use.
- To maximize the life of the backlight display, allow the backlight to automatically turn off as a result of power management.

Battery Pack Guidelines

- Do not expose the battery to temperatures below 0°C (32°F) or above 46°C (115°F). This may adversely affect the battery pack.
- While the battery may not provide 100% capacity at temperature extremes, its capacity is restored when the battery temperature return to a normal range, around 20°C (68°F).
- Your battery will last longer during the day if it is used, charged and stored between 50°F and 86°F (10°C and 30°C).
- Charge the battery nightly where the temperature will remain around 68°F (20°C). Your battery may not last as long through the day if you charge it at higher or lower temperatures.
- Allow unrestricted airflow while the device is connected to external power. Make sure that the fan inlet and outlet are unobstructed.
- Avoid exposure to extreme temperatures for long periods as this can shorten battery charge life or damage the battery.
- If your battery is charged in a cold (less than 5°C/41°F) or very warm (greater than 50°C /122°F) environment, it is possible that the Battery LED will indicate that the charge has stopped; However, this does not necessarily mean that your battery is fully charged.
- Read and follow all battery precautions in the Safety section.
- Use only batteries of the same kind as replacements.
- Turn the power off before removing or replacing batteries.
- Do not tamper with the batteries.
- Keep batteries away from children.
- Before storing your battery, read and follow the recommendations in the Battery Tips section.
- Dispose of used batteries according to local regulations.
- Recycle if at all possible.

Cleaning Your Tablet PC

Caution: Observe in addition the safety regulations and handling inside the ex-hazardous areas.

Cleaning the Outside Case

- Disconnect external power and turn off the device.
- Remove the battery.
- Add a small amount of water to a soft cloth and clean the device case. Do not use paper products because they can scratch the surface.
- Wipe off any excess liquid with a soft cloth.
- Reinstall the battery.

CAUTION: Aerosols, solvents, or strong detergents are not recommended cleaning solutions and may void your warranty. For system decontamination recommendations please contact your support representative.

Cleaning the Display

Use a soft, dry cloth. In some cases, you can use a small amount of water to remove streaks or smears. For difficult display cleaning tasks, use a 50/50 mixture of isopropyl alcohol and water. Do not use paper products because they can scratch the screen.

Cleaning the External Power Connector

The external power connector may sometimes be exposed to moisture and/or contamination causing an unreliable connection to the external power source. Clean the connector with a cotton swab dipped in electronics grade isopropyl alcohol.

Cleaning the RJ-45 / USB Connectors

If the connector pins get dirty, clean the connector with a cotton swab dipped in electronics grade isopropyl alcohol.

Traveling With Your Tablet PC

Before traveling with your tablet PC, make sure you prepare and follow the precautions described below:

- Back up the data on your hard drive to a flash drive or other storage device. As an added precaution, bring an extra copy of your important data.
- Make sure that the battery pack is fully charged.
- Ensure that your tablet PC is turned off.
- Confirm that all the connector covers are closed completely to ensure the device's waterproof integrity.
- Disconnect the AC adapter from your tablet PC and take it with you. Use the AC adapter to power the device and charge the battery.
- Hand-carry your tablets PC onto an airplane, train, or bus. Do not check it in as luggage.
- If you need to leave your tablet PC in a car, store it in the trunk to avoid exposing it to excessive heat.
- When going through airport security, do not carry your tablet PC through the magnetic detector (the device you walk through) or expose it to a magnetic wand (the handheld device used by security personnel). It is recommended that you send the tablet PC and any flash drives through the X-ray machine (the device where you set your bags).
- If you plan to travel abroad with your tablet PC, consult your dealer for the appropriate AC power cord for use in your country of destination.

Troubleshooting

This chapter advises you on what actions to take when solving common computer problems that may be caused by issues with hardware or software.

Preliminary Checklist

Here are the initial steps you should follow before taking further actions when encountering any problem:

1. Try to identify and isolate which part of the tablet PC is causing the problem.
2. Make sure that you turn on all peripheral devices before turning on the tablet PC.
3. If you are having trouble with an external device, make sure that the cable connections are correct and secure.
4. Make sure that the configuration information is properly set in the BIOS Setup program.
5. Ensure that all the device drivers are correctly installed.
6. Make note of your observations. Are there any messages on the screen? Do any indicators light up? Do you hear any beeps? Detailed descriptions are useful to the service personnel when you need to consult someone for assistance.
7. If any problem persists after you follow the instructions in this chapter, contact an authorized dealer for help.

Solving Common Problems

Battery Problems

The battery does not charge

- To prevent possible damage to the battery, the device does not allow the battery to charge if the internal temperature of the battery gets too low (< 5°C or < 41°F) or too high (> 50°C or > 122°F). If possible, charge the battery in a location with a moderate temperature of around 20°C (68°F).
- If possible, turn off the device while the battery is charging.
- If the battery is new or has been stored for a week or more, follow this procedure:
 1. Make sure the device is turned off.
 2. Remove the battery.
 3. Connect the AC adapter to the device and an AC wall outlet, and then turn on the device by pressing the POWER button.
 4. Let the device complete the boot process. Then reinstall the battery.
- Allow the system to remain idle for one hour with the AC adapter connected

to the device.

- The Battery Power LED lights when the battery starts charging.
- If the battery still fails to start charging after an hour, remove the battery, wait several seconds, and then install it again.
- If the battery does not begin charging within several minutes, return the unit for service.

The batteries take much longer than seven hours to charge.

- Under moderate temperatures, about 20°C (68°F), the device's battery takes approximately 4 to 5 hours to completely charge.
- As the battery temperature approaches the ends of its temperature range (5°C/ 41°F to 50°C/122°F), it may take longer to charge the battery.

The batteries don't last very long.

- Calibrate the battery. If your battery is new or has not been used for several weeks, calibrating the battery accurately sets the gas gauge.
- As your battery ages, its maximum capacity naturally decreases and even the best maintained batteries eventually need to be retired. Consider replacing the battery if you are not getting the usage you need from it.
- To meet ENERGY STAR® requirements, Wake on LAN is enabled by default. If running on battery power this may decrease battery run-time. To change Wake on LAN settings, open the Device Manager, Network Adapters and select the LAN device. Open the device Properties and select Power Management. Disable the Wake on LAN setting by unchecking. Allow this device to wake the computer.

The gas gauge isn't full after charging the battery.

- This may indicate that the charging process terminated prematurely.

The gas gauge reads "full," but the charging LED is still lit.

- If you charge your battery daily, rely on the gas gauge reading to determine battery capacity. The charging process may continue even if the gas gauge reads full. External power can be removed because the battery is virtually full.

My battery seems to have less and less capacity.

- If your battery is new, or if you are using it for the first time, you will need to calibrate it (see Battery Calibration) prior to using it.
- As your battery ages, the maximum capacity that it can hold naturally decreases and even the best maintained batteries eventually need to be retired. Consider replacing the battery if you are not getting the usage you need from it.

BT Wireless Transmission Problems

I cannot connect to another device with BT wireless technology.

- Ensure that you have activated BT feature on both devices.
- Make sure that the distance between the two devices is within the acceptable limit and that there are no walls or other obstructions between the devices.
- Confirm that the other device is not in “Hidden” mode.
- Verify that both devices are compatible.

Display Problems

The display performance is slow.

- The temperature may be too cold. Move the device to a warmer operating environment.

The underlined, inverse, and hypertext characters are difficult to read on the screen.

- Right click on the Windows Desktop, select Personalize, Colors to change the color and style of your Windows.

I changed my display resolution, but I see no difference on the screen.

- Select > Start, Power, Restart.

Nothing happens when I try to use the stylus on my touch screen.

- If you cannot select objects accurately with the stylus, you may need to calibrate the touch screen.

The touch screen doesn't respond after a suspend.

- The touch screen needs a few seconds to work after a suspend. Wait a moment and try again.

Hard Disk Problems

The hard disk will not spin up so the device can't boot up.

- This occurs if the unit is exposed to extreme low temperatures. This is not a hardware failure associated with the hard disk. The integrated hard disk drive heater will warm the drive to a safe operating temperature.


The device does not startup properly.

- Make sure you remove any USB drives from the unit before you start it.
- Connect the AC adapter to charge the battery if it is not charged.
- If the battery does not begin charging, perform the following:
 1. Remove the battery.


2. Connect the AC adapter.
3. Turn on the device by pressing the POWER button.
4. Reinstall the battery. The Battery LED is a steady blue while the battery is charging.

Hard disk recovery process on Win10

1. Select **Start**  > **Setting**

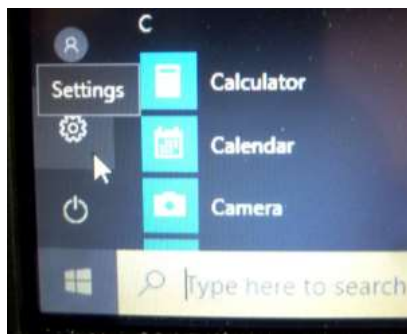


2. Select **Recovery** under **Update & Security**.
3. Under **Reset this PC**, Click **Get started**.

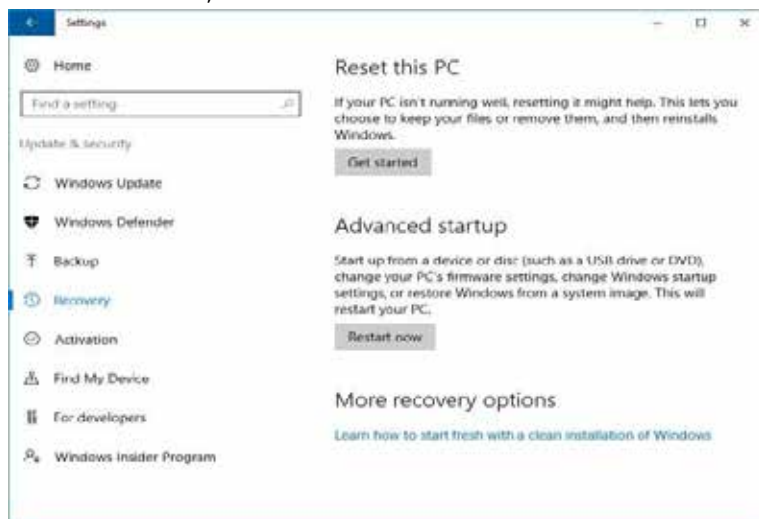


Troubleshooting

4. Select one of the two options depending on your needs.
 - **Keep my files** (requires around 3 to 4hr)
 - **Remove everything** (requires around 5 to 6hr)

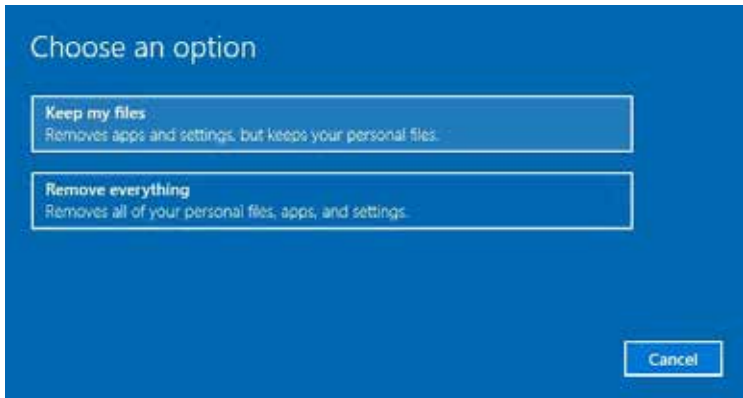

5. You are informed of the programs that will be removed. Click "**Next**" to proceed.

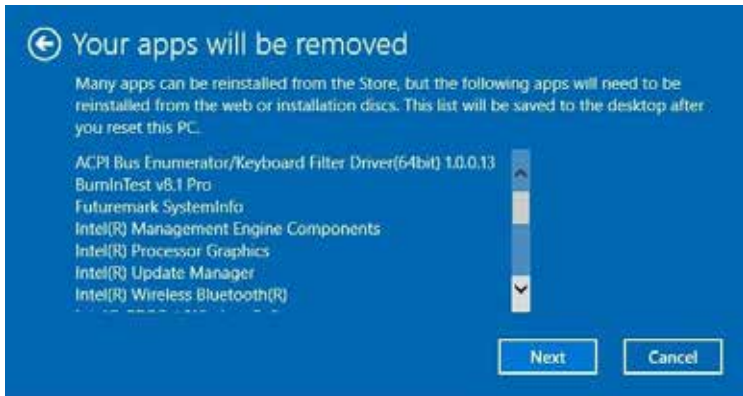


6. Click "**Reset**" to start resetting.



Note: If you see a message as shown below that means **WinRE (Windows Reset)** is disabled.



7. To enable resetting Windows, follow the steps below:

- a. Hover mouse over **Start**  menu.
- b. Select **Command Prompt (Admin)** from the pop-up menu.
- c. Key in the following command: `Reagentc /enable`
- d. Press **Enter**. Wait until you see the "Operation Successful" status on the screen.
- e. Follow steps 1 to 7 to reset your device.



Other Problems

The device won't turn on.

- Make sure a fully charged battery is properly installed.
- Connect external power to charge the battery if it is not charged.
- If you are using the AC adapter check the electrical outlet you are using to make sure it is working properly.
- If the device does not turn on, reset the device by holding down the POWER button for at least ten seconds, release it, and then press the POWER button again.

The device won't turn off.

1. Select >Start, Power, Restart.
2. If that does not work, press Ctrl + Alt + Del and then select Task Manager.
3. If any programs are open, use your arrow keys to highlight each one and select End task. Repeat this until all programs are closed.
4. If that still does not work, press and hold the POWER button for approximately ten seconds and then release it.

The device doesn't make any sounds, even during boot-up.

- You may have enabled Stealth Mode. Disable Stealth mode.

Safety precautions for built-in battery

Damaged devices and chargers should be removed from use and sent to ecom instruments GmbH for inspection. When sending batteries/battery packs or devices containing batteries/battery packs; the sender must comply with the transport regulations for dangerous goods.

Note:

- Extreme temperatures can have an adverse effect on charging the battery.
- Do not dispose of the device in a fire.
- Dispose of the device in accordance with local regulations and not with normal household waste.

Appendix

Copyright

Copyright© 2019. All rights reserved.

No part of this user manual may be transmitted, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, without the prior written permission of the manufacturer. Information is subject to change without prior notice.

Specifications

Model Name	Pad-Ex 01 P8 DZ2
Durability	<ul style="list-style-type: none"> – MIL-STD 810G certified (Drop, Shock, Vibration, Rain, Dust, Altitude, Freeze/Thaw, High/Low Temperature, Temperature Shock, Humidity) – MIL-STD 461F certified (Conduction, Radiation, Conducted Susceptibility, Radiated Susceptibility) – ANSI/ISA 12.12.01-2000, Class I, Division 2 – 4' drop 26 faces – IP 65 certified – Aluminum-magnesium alloy chassis – Port covers – Optional sunlight readable display
Operating System	Windows® 10 Pro 64-bit
Processors	<ul style="list-style-type: none"> – Intel® Core™ i7-8550U (8th Gen) 1.8GHz processor with Turbo Boost Technology up to 4.0GHz, 8MB cache – Intel® Core™ i5-8250U (8th Gen) 1.6GHz processor with Turbo Boost Technology up to 3.4GHz, 6MB cache
Graphics	Intel® UHD Graphics 620
Memory	1 slots 8GB (Standard) up to 16GB (2400MHz DDR4)
Storage	256GB SSD <ul style="list-style-type: none"> – Optional 128GB/512GB

Appendix

Display	11.6" FHD (1920 x1080) <ul style="list-style-type: none"> - 1000 nits Dynavue® sunlight readable display with capacitive multi-touch screen - User selectable touch mode for Finger/Water, Glove, or Stylus programmable function
Audio	<ul style="list-style-type: none"> - Integrated microphone - Intel® High Definition Audio Compliant - Integrated speaker x 1
Camera	<ul style="list-style-type: none"> - Integrated 2.0 MP front-facing camera - 5.0 MP auto-focus rear camera with flash
Keyboard & Input	6 buttons (1 user-definable key)
Communications	<ul style="list-style-type: none"> - Intel® Dual Band Wireless AC 9260 (802.11a/b/g/n/ac) - Bluetooth® V5.0 - Optional dedicated GPS module (UBLOX-NEO-M8N)* - Optional 4G LTE multi-carrier mobile broadband* - Optional RF antenna pass-through for GPS, WWAN

RF Bands:		
BAND	Frequency	Output Power
UMTS Band I	850 ~ 1900 MHz	20.50 dBm
UMTS Band VIII	850 ~ 2100 MHz	23.50 dBm
LTE Band 1	2110 ~ 2170 MHz	23.00 dBm
LTE Band 2	1850 ~ 1910 MHz	24.00 dBm
LTE Band 3	1805 ~ 1880 MHz	23.00 dBm
LTE Band 4	1710 ~ 1755 MHz	24.00 dBm
LTE Band 5	824 ~ 849 MHz	24.00 dBm
LTE Band 7	2620 ~ 2690 MHz	21.50 dBm
LTE Band 8	925 ~ 960 MHz	23.00 dBm
LTE Band 13	779.5 ~ 784.5 MHz	24.00 dBm
LTE Band 20	791 ~ 921 MHz	20.50 dBm
LTE Band 28	758 ~ 803 MHz	22.50 dBm
LTE Band 66	1710 ~ 1780 MHz	24.00 dBm
Bluetooth	2.4 GHz	9.00 dBm
WiFi	2.4 GHz	20.00 dBm
WiFi	5.2 ~ 5.6 GHz	20.00 dBm
WiFi	5.8 GHz	20.00 dBm

Security	<ul style="list-style-type: none"> – Intel® vPro™ Technology (per CPU options) – TPM 2.0 – NIST BIOS compliant – Stealth mode – Kensington lock – Optional RFID reader¹
I/O Ports	<ul style="list-style-type: none"> – USB 3.0 (type A) x 2 – Audio in/out (combo jack) x 1 – microSD card (microSDXC) x 1 – Docking connector (41-pin Pogo) x 1 – SIM card x 1 – DC-In jack x 1 – Optional RF antenna pass-through for GPS, WWAN
Expansion Slot	<ul style="list-style-type: none"> – Optional 1D/2D barcode reader
Power	<p>AC adapter : 100-240V, 50Hz-60Hz, 65W</p> <p>Main battery Li-Ion, 11.1V, 3950mAh, 8 hours²</p> <ul style="list-style-type: none"> – Optional long life battery Li-Ion 11.1V, 7800mAh 16 hours²
Environment	<ul style="list-style-type: none"> – Temperature <li style="padding-left: 20px;">Operating : - 10°C ~ 55°C / 14°F ~ 131°F – Humidity : 5% ~ 95%
Dimension	298 mm (L) x 192 mm (W) x 20 mm (H)
Weight	1.2 kg



NOTE

- Specifications are subject to change without any prior notice.
- * WWAN and GPS are mutually exclusive.
- ¹ Contact your sales representative for feature availability.
- ² Tested using the MobileMark 2014 battery life benchmark. Results may vary under different situations including hardware configuration, software, operating conditions, power management settings and other factors.

Regulatory Statement

EU Declaration of Conformity and Certificate

CE



Delclaration of Conformity (DoC)

We declare that this product is in compliance with the essential requierments and other relevant provisions of EU Council Directives

The EU declaration and the certificate of conformity is enclosed with the sales packaging as a separate document.

Please also observe the information provided underneath the table of contents.

This product complies with national SAR10g limit (**2.0W/kg for Body**).

The maximum Body - SAR10g is 1.875W/Kg”

Federal Communications Commission

Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Shielded interconnect cables and shielded AC power cable must be employed with this equipment to insure compliance with the pertinent RF emission limits governing this device. Changes or modifications not expressly approved by the system's manufacturer could void the user's authority to operate the equipment.

Declaration of Conformity

This device complies with part 15 of the FCC rules. Operation is subject to the following conditions:

- This device may not cause harmful interference
- This device must accept any interference received, including interference that may cause undesired operation.

RF exposure warning

- Any changes or modifications not expressly approved by the party responsible for compliance could void the authority to operate equipment.
- This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.
- End-users and installers must be provided with antenna installation instructions and transmitter operating conditions for satisfying RF exposure compliance.
- For product available in the USA/Canada market, only channel 1~11 can be operated. Selection of other channels is not possible

FCC RF Radiation Exposure Statement: Portable Device

- This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment for body-worn configuration in direct contact to the phantom.
- This device complies with FCC radiation exposure limits set forth for an uncontrolled environment.

RF Exposure Information (SAR)

- This device meets the government's requirements for exposure to radio waves. This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.
- The exposure standard for wireless devices employing a unit of measurement is known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. The maximum Body - SAR_{1g} is 1.269W/Kg.
- The FCC has granted an Equipment Authorization for this device with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines.
- SAR information on this device is on file with the FCC and can be found under the Display Grant section of www.fcc.gov/oet/ea/fccid after searching on FCC ID: FKGR1101

Canada, Industry Canada (IC) Notices

This Class B digital apparatus complies with Canadian ICES-003 and RSS-210. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Radio Frequency (RF) Exposure Information

The radiated output power of the Wireless Device is below the Industry Canada (IC) radio frequency exposure limits. The Wireless Device should be used in such a manner such that the potential for human contact during normal operation is minimized.

This device has been evaluated for and shown compliant with the IC Specific Absorption Rate ("SAR") limits when installed in specific host products operated in portable exposure conditions.

Canada, avis d'Industry Canada (IC)

Cet appareil numérique de classe B est conforme aux normes canadiennes ICES-003 et RSS-210.

Son fonctionnement est soumis aux deux conditions suivantes : (1) cet appareil ne doit pas causer d'interférence et (2) cet appareil doit accepter toute interférence, notamment les interférences qui peuvent affecter son fonctionnement.

Informations concernant l'exposition aux fréquences radio (RF)

La puissance de sortie émise par l'appareil de sans fil est inférieure à la limite d'exposition aux fréquences radio d'Industry Canada (IC). Utilisez l'appareil de sans fil de façon à minimiser les contacts humains lors du fonctionnement normal.


Ce périphérique a été évalué et démontré conforme aux limites SAR (Specific Absorption Rate – Taux d'absorption spécifique) d'IC lorsqu'il est installé dans des produits hôtes particuliers qui fonctionnent dans des conditions d'exposition à des appareils portables.

Battery Disposal

THIS PRODUCT CONTAINS A LITHIUM-ION OR NICKEL-METAL HYDRIDE BATTERY. IT MUST BE DISPOSED OF PROPERLY. CONTACT LOCAL ENVIRONMENTAL AGENCIES FOR INFORMATION ON RECYCLING AND DISPOSAL PLANS IN YOUR AREA.

CLASS 1 LASER PRODUCT

CAUTION (ATTENTION): THIS APPLIANCE CONTAINS A LASER SYSTEM AND IS CLASSIFIED AS A "CLASS 1 LASER PRODUCT." TO USE THIS MODEL PROPERLY, READ THE INSTRUCTION MANUAL CAREFULLY AND KEEP THIS MANUAL FOR FUTURE REFERENCE. IN CASE OF ANY TROUBLE WITH THIS MODEL, PLEASE CONTACT YOUR NEAREST "AUTHORIZED SERVICE STATION." TO PREVENT DIRECT EXPOSURE TO THE LASER BEAM, DO NOT TRY TO OPEN THIS ENCLOSURE.

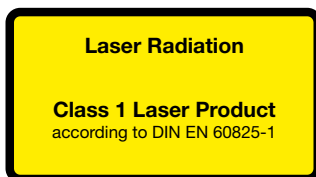

- Never direct the laser beam to people
- Never look at the direct beam from the laser or from a hand piece or one of its reflections

ANNEX IV

Symbol for the marking of electrical and electronic equipment

The symbol indicating separate collection for electrical and electronic equipment consists of the crossed-out wheeled bin, as shown below. The symbol must be printed visibly, legibly and indelibly.



CAUTION FOR ADAPTER

THE TABLET PC IS FOR USE WITH DEDICATED AC ADAPTER.

BATTERY SAFETY

DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED.
REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE RECOMMENDED BY THE
MANUFACTURER. DISPOSE OF USED BATTERIES ACCORDING TO THE
MANUFACTURER'S INSTRUCTIONS.

CAUTION FOR RJ-45 (Optional)

The RJ-45 jack is not used for telephone line connection.

Ex - Data

1. ATEX	
EC type approval test certificate no.	EPS 16 ATEX 1 163 X
Ex-marking	Ⓜ II 3G Ex ic IIC T4 Gc IP64 Ⓜ II 3D Ex ic IIIB T135°C Dc IP64
Ambient temperature	-10 °C ≤ Ta ≤ +55 °C
2. IECEx	
IECEx Certificate of Conformity no.	IECEx EPS 16.0072X
Ex-marking	Ex ic IIC T4 Gc IP64 Ex ic IIIB T135°C Dc IP64
Ambient temperature	-10 °C ≤ Ta ≤ +55 °C

Safety regulations

Use of this unit assumes that the user observes the conventional safety regulations and has read the certificate in order to eliminate faulty operation of the unit.

- Do not open the device inside the Ex-area
- For safe use it is required that the device is fitted with protection screen and cover for docking connector (see picture page 49).
- Do not open the I/O port cover inside the Ex-area.
- The batteries may only be exchanged outside the Ex-area
- The battery may only be charged outside the Ex-area
- Before entering the Ex-area the I/O port cover must be closed
- The device must be protected against strong impacts
- The device must be protected against high electrostatic charge generating processes
- In hazardous areas including IIC gases it is only allowed to clean the unit and applied accessory with damp cloth
- Only those accessories approved by ecom instruments GmbH may be used
- Only for use with battery pack Model R11AH and R11AH2

Appendix

These safety instructions should always be observed to ensure safe operation when handling the device.

- Do not place this device on an unstable table or surface. The device may fall, causing serious damage to its housing and components.
- Do not cover the device, or block the air ventilation holes of the device with any other objects.
- Do not use any sharp object to tap on the display screen.
- Do not expose the device to direct sunlight.
- Keep the device away from any magnetic emitting devices as this may affect the quality of the wireless signal reception.
- When using an AC adapter:
 - ✓ Place this device in a location that is close enough to an electrical outlet to accommodate the length of the power cord.
 - ✓ Disconnect the AC adapter from the electrical outlet if the device is not being used for an extended period of time.
- Do not attempt to disassemble or repair this device. Doing so will void the warranty.



Ex - Data**NEC / CEC**

SGS contract no.: 800606
 Ex-marking: CI I, II, III, Div.2, GRPS A-G, T4, T135°C
 Class I, Zone 2, Group IIC, T4
 Ambient temperature: $-10\text{ °C} \leq T_a \leq +55\text{ °C}$

Safety regulations

Use of the device assumes that the user observes the conventional safety regulations and has read the certificate in order to eliminate faulty operation of the device.

Specific conditions of safe use :

- Do not open the device inside the Ex-area
- Do not open the I/O port cover inside the Ex-Area
- The batteries may only be exchanged outside the Ex-area
- The battery may only be charged outside the Ex-area
- Before entering the Ex-area the I/O port cover must be closed
- Only those accessories approved by ecom instruments GmbH may be used
- Only for use with battery pack Model R11AH and R11AH2

Control Drawing Pad-Ex 01 P8 D2 and Pad-Ex 01 P8 DZ2

Ordinary non-hazardous classified locations

- Charging is allowed
- Use of I/O connectors (docking connector, USB etc.) is allowed

Hazardous classified locations

- Do not charge or open the device inside the Ex-area
- Do not replace the battery inside the Ex-area
- The I/O port cover must be closed before entering the Ex-area

Battery Charger

The device can be charged with following chargers

Manufacturer	Model	Output	UL Listed
FSP Group Inc.	FSP065-REBN2	DC: 19 V / 3.42 A	E190414
FSP Group Inc.	FSP065-REBN3	DC: 19 V / 3.42 A	E190414

Données Ex



NEC / CEC

Numéro de contract SGS: 800606

Classification Ex: CI I, II, III, Div.2, GRPS A-G, T4, T135°C

Class I, Zone 2, Group IIC, T4

Température ambiante: $-10\text{ °C} \leq T_a \leq +55\text{ °C}$

Règles de sécurité

Avant d'utiliser l'appareil, l'utilisateur doit s'assurer du respect des consignes de sécurité et lire le certificat d'essai afin d'éviter une utilisation incorrecte.

Conditions spéciales d'utilisation en toute sécurité :

- Ne pas ouvrir l'appareil à l'intérieur des zones Ex
- Ne pas ouvrir le couvercle du port d'E/S à l'intérieur des zones Ex
- Les batteries ne doivent être remplacées qu'à l'extérieur de la zone Ex
- La batterie ne doit être chargée qu'à l'extérieur de la zone Ex
- Le couvercle du port d'E/S doit être fermé avant d'entrer dans la zone Ex
- Seuls les accessoires agréés par ecom instruments GmbH doivent être utilisés
- Uniquement pour une utilisation avec la batterie modèle R11AH et R11AH2

Schéma de contrôle Pad-Ex 01 P8 D2 and Pad-Ex 01 P8 DZ2

Endroits ordinaires classés non dangereux

- La charge est autorisée
- L'utilisation de connecteurs d'E / S (connecteur d'accueil, USB, etc.) est autorisée

Endroits classés dangereux

- Ne chargez pas et n'ouvrez pas l'appareil à l'intérieur de la zone Ex
- Ne remplacez pas la batterie à l'intérieur de la zone Ex
- Le couvercle du port d'E / S doit être fermé avant d'entrer dans la zone Ex

Chargeur de batterie

L'appareil peut être chargé avec les chargeurs suivants

Fabricant	Modèle	Puissance de sortie	Listé UL
FSP Group Inc.	FSP065-REBN2	DC: 19 V / 3.42 A	E190414
FSP Group Inc.	FSP065-REBN3	DC: 19 V / 3.42 A	E190414

MAS-0088B | 06/2021
WEEE-Reg.-Nr. DE 934 99306

Subject to change without notice.