

 
Thru-beam sensor for standard applications, miniature design, 2000 mm detection range, red light, dark on, NPN output, fixed cable


The nano sensor has been developed for a broad range of applications. It offers excellent durability and is exceptionally easy to install. The housing is compact and, with its 45° cable outlet, can be installed in the smallest spaces. New functional principles and functionality open up a range of new options.

 
Dimensions

 
Transmitter

 
Receiver

 


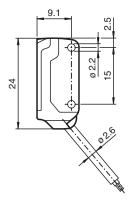


 


 






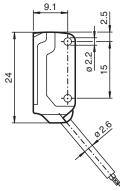





Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

Pepperl+Fuchs Group www.pepperl-fuchs.com

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

Technical Data

System components		
Emitter		OBE2000-R2
Receiver		OBE2000-R2-E0
General specifications		
Effective detection range		Long range mode: 0 2 m High precision mode: 0 200 mm
Threshold detection range		Long range mode: 2.5 m High precision mode: 300 mm
Light source		LED
Light type		modulated visible red light , 630 nm
Angle deviation		approx. 2 °
Diameter of the light spot		Long range mode: 150 mm at a distance of 2000 mm High precision mode: 0.5 mm at a distance of 50 mm
Opening angle		approx. 2 °
Optical face		frontal
Ambient light limit		EN 60947-5-2 : 30000 Lux
Functional safety related parameters		
MTTFd		806 a
Mission Time (T _M)		20 a
Diagnostic Coverage (DC)		0 %
Indicators/operating means		
Operation indicator		LED green, statically lit Power on , short-circuit : LED green flashing (approx. 4 Hz)
Function indicator		Receiver: LED yellow, lights up when light beam is free, flashes when falling short of
		the stability control; OFF when light beam is interrupted
Electrical specifications		
Operating voltage	UB	10 30 V DC , class 2
No-load supply current	I ₀	Emitter: ≤ 11 mA Receiver: ≤ 8 mA
Input		
Control input		Emitter selection BK: not connected, Long Range mode BK: 0 V, High Precision Mode
Switching threshold		Teach-In input
Output		
Switching type		NO contact
Signal output		1 NPN output, short-circuit protected, reverse polarity protected, open collector
Switching voltage		max. 30 V DC
Switching current		max. 50 mA
Voltage drop	U_d	≤ 1.5 V DC
Switching frequency	f	approx. 800 Hz
Response time		600 µs
Conformity		
Product standard		EN 60947-5-2
Approvals and certificates		
EAC conformity		TR CU 020/2011
UL approval		cULus Recognized, Class 2 Power Source
CCC approval		CCC approval / marking not required for products rated ≤36 V
Ambient conditions		
Ambient temperature		-25 60 °C (-13 140 °F)
Storage temperature		-30 70 °C (-22 158 °F)
Mechanical specifications		
Housing width		7.5 mm
Housing height		24 mm
Housing depth		11.2 mm
Degree of protection		IP67
Connection		2 m fixed cable

 Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

 Pepperl+Fuchs Group
 USA: +1 330 486 0001
 Get

 www.pepperl-fuchs.com
 fa-info@us.pepperl-fuchs.com
 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com


Thru-beam sensor

OBE2000-R2-SE0-Y264206


Technical Data

Housing	PC/ABS and TPU
Optical face	glass
Cable	PUR
Installation	2 x thru-holes 2,2 mm , 2 x M2 allen head screws included with delivery
Mass	approx. 20 g per sensor
Cable length	2 m

 
Connection Assignment




Connection

 

Assembly

 

 

1	Operating display	green	
2	Signal display	yellow	
3	Emitter long range		
4	Emitter high precision		
5	Receiver		

Characteristic Curve

Characteristic response curve Long Range Modus Offset Y [mm] 80 60 40 20 0 -20 -40 -60 -80 0 500 1000 1500 2000 2500 3000 Х Distance X [mm] ≻ -----

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

Pepperl+Fuchs Group www.pepperl-fuchs.com

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com


Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

 



Х

<u>≻</u>]

Characteristic Curve

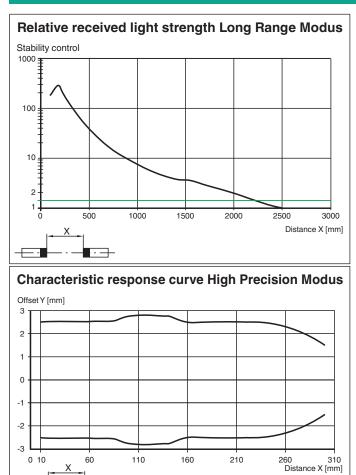




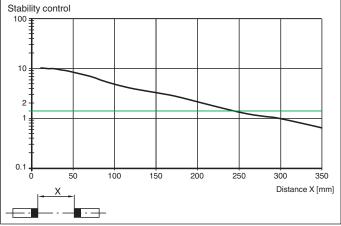


Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

4

Characteristic Curve

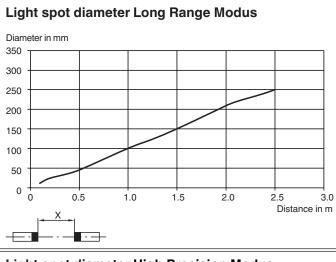

Light spot diameter High Precision Modus

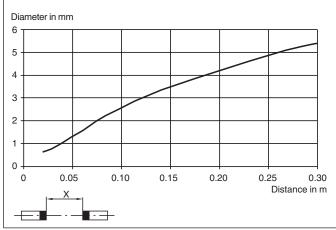

Accessories

	MH-R2-01	Mounting aid for R2 series, Mounting bracket
(T)	MH-R2-02	Mounting aid for R2 series, Mounting bracket
	MH-R2-03	Mounting aid for R2 series, Mounting bracket
	MH-R2-04	Mounting aid for R2 series, Mounting bracket

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

5

Teach-In

The thru-beam sensor enables the switching points to be taught in for optimum adaptation to specific applications. This eliminates the need for additional components such as apertures.

Essentially, all Teach-in methods can be used in both "High Precision" and "High Power" operating modes.

The sensitivity of the thru-beam sensor can be adjusted using three Teach-in methods:

Position Teach

When using this Teach-in method, the following settings are made on the thru-beam sensor:

- The gain is set to an optimum value
- The signal threshold is set to a minimum



Recommended application:

This method enables extremely small differences in contrast to be detected, as well as minuscule particles in the beam path, and provides exceptional positioning accuracy.

The best results are achieved in "High Precision" mode.


- 1. Make sure that there are no objects in the beam path and that the sensor is connected to the power supply.
- 2. Connect the white cable on the receiver (WH/IN) to the blue cable (BU/0 V) on the receiver.
- The green and yellow LED indicators flash simultaneously at 2.5 Hz
- 3. Disconnect the white cable on the receiver (WH/IN) from the blue cable (BU/0 V) on the receiver.
- The green and yellow LED indicators flash alternately at 2.5 Hz
- The end of the Teach-in process is indicated when the green LED indicator lights up sold and yellow LED blinks.

Two-Point Teach-In

When using this Teach-in method, the following settings are made on the thru-beam sensor:

- The gain is set to an optimum value
- The signal threshold is set in the center between the two taught signal values

Signal s	trength	
Max		
	Teach-in value 1 (avg))
	Threshold level	Contrast leve
	Teach-in value 2 (avg)	

 

Recommended application:

Enables detection of transparent objects.

The best results are achieved in "High Precision" mode.

- Make sure that there are no objects in the beam path and that the sensor is connected to the power supply. 1.
- 2. Connect the white cable on the receiver (WH/IN) to the blue cable (BU/0 V) on the receiver.
- The green and yellow LED indicators flash simultaneously at 2.5 Hz 3. Position the object in the beam path.
- 4.
- Disconnect the white cable on the receiver (WH/IN) from the blue cable (BU/0 V) on the receiver. The green and yellow LED indicators flash alternately at 2.5 Hz


5. The end of the Teach-in process is indicated when the green LED indicator lights up sold.

Maximum Teach-In

When using this Teach-in method, the following settings are made on the thru-beam sensor:

- The gain is set to a maximum
- The signal threshold is set to a minimum

Signal str	renath					
	longui					
Max						
		Threshold	level		_	
0 -						

 

Thru-beam sensor

Recommended application:

Enables an object to be detected with a high excess gain. This can be useful if there is severe environmental contamination or to achieve long operating times.

The best results are achieved in "High Precision" mode.

- 1. Make sure that there are no objects in the beam path and that the sensor is connected to the power supply.
- 2. Cover the receiver or transmitter.
- 3. Connect the white cable on the receiver (WH/IN) to the blue cable (BU/0 V) on the receiver.
- The green and yellow LED indicators flash simultaneously at 2.5 Hz
 Disconnect the white cable on the receiver (WH/IN) from the blue cable (BU/0 V) on the receiver. The green and yellow LED indicators flash alternately at 2.5 Hz
- 5. The end of the Teach-in process is indicated when the green LED indicator lights up sold.

