


Stainless steel bracket to mount IDM-Zx-x6x-B-Jx-BT-N0 base station to AG-XX00 housing

Function

The HOLDER-BRACKET-XX00-IDMx61-B-N comes with an adapter and suitable screws for mounting to the AG-XX00 housing.

Dimensions

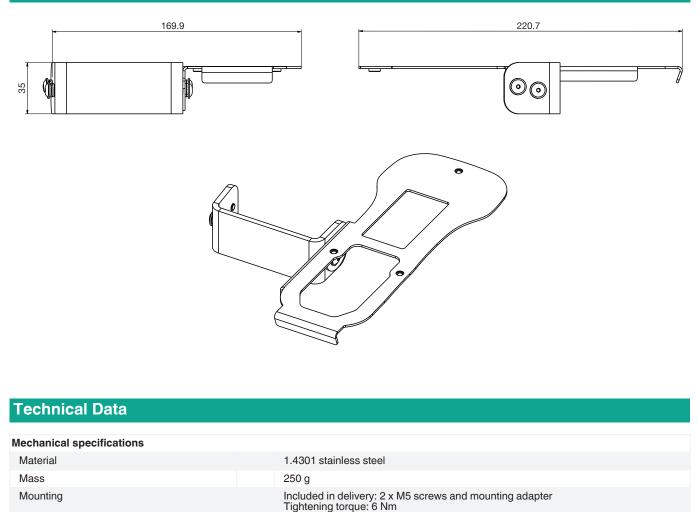

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

Pepperl+Fuchs Group www.pepperl-fuchs.com USA: +1 330 486 0002 pa-info@us.pepperl-fuchs.com

Germany: +49 621 776 2222 pa-info@de.pepperl-fuchs.com Singapore: +65 6779 9091 pa-info@sg.pepperl-fuchs.com

Use the enclosed 3 x M4 screws to tighten the base station to the holder bracket. Refer to the dimension drawing concerning the different lengths of screws. For more information, refer to the VisuNet GXP *-22F* system manual

