



Distance sensor VDM28-8-L-IO/115b/136



- Distance measurement using object
- Measuring method PRT (Pulse Ranging Technology)
- Accurate, clear, and reproducible measuring results
- Minimal black-white difference
- Red laser as the light emitter
- Version with IO-Link interface
- Version with laser class 2

Universal distance sensor, measurement to object, IO-Link interface, measuring method PRT, 8 m detection range, red laser light, laser class 2, push-pull output, fixed cable with M12 plug




IO-Link

Function

The VDM28 distance measurement device employs Pulse Ranging Technology (PRT). It has a repeat accuracy of 5 mm with an operating range of 0.2 ... 50 m and an absolute accuracy of 25 mm. The compact housing of the Series 28 photoelectric sensors, with dimensions of 88 mm (height), 26 mm (width) and 54 mm (depth), make it the smallest device available in its class.

Dimensions

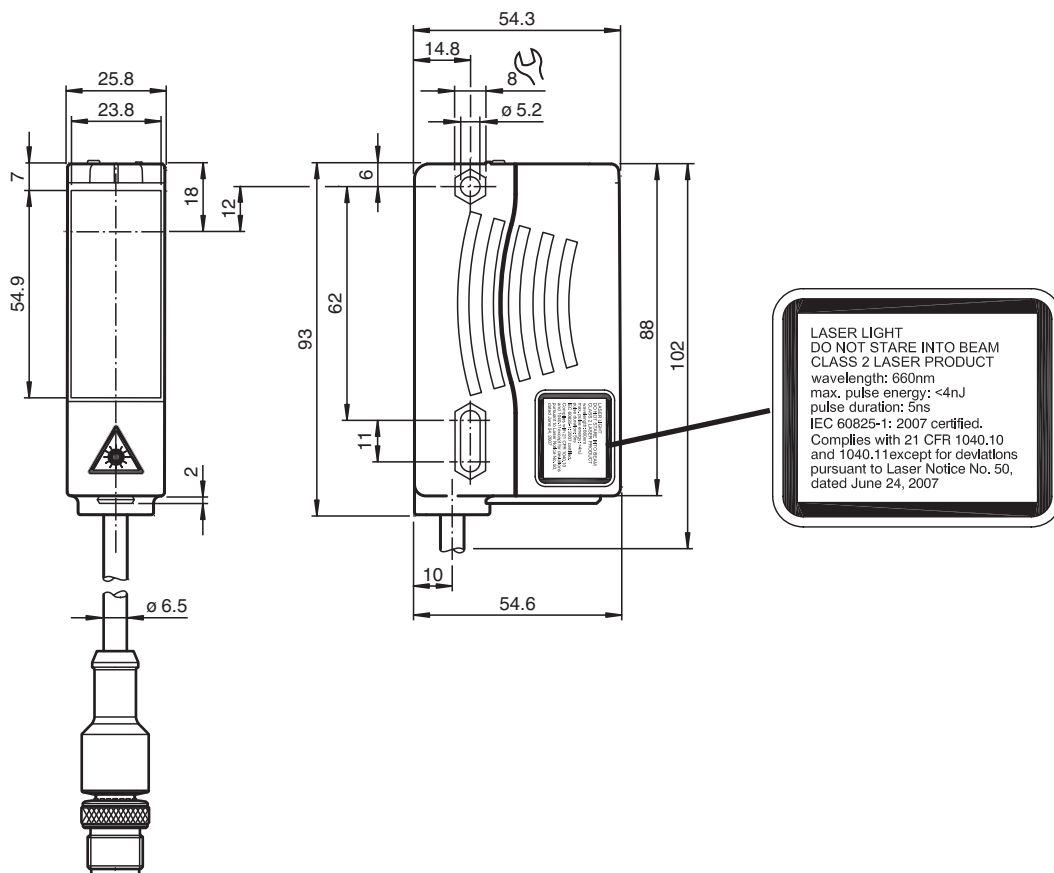

Release date: 2023-03-28 Date of issue: 2023-03-28 Filename: 219475_eng.pdf

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group
www.pepperl-fuchs.com

USA: +1 330 486 0001
fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111
fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091
fa-info@sg.pepperl-fuchs.com

PEPPERL+FUCHS

Technical Data

| General specifications | | | |
|--------------------------------------|----------------|--|-----------------------------------------------------------------------------------------------------------------------|
| Measurement range | | | 0.2 ... 8 m |
| Reference target | | | Kodak white (90%) |
| Light source | | | laser diode typ. service life 85,000 h at Ta = +25 °C |
| Light type | | | modulated visible red light |
| Laser nominal ratings | | | |
| Note | | | LASER LIGHT , DO NOT STARE INTO BEAM |
| Laser class | | | 2 |
| Wave length | | | 660 nm |
| Beam divergence | | | 1 mrad |
| Pulse length | | | 5 ns |
| Repetition rate | | | 250 kHz |
| max. pulse energy | | | < 4 nJ |
| Angle deviation | | | max. ± 2° |
| Measuring method | | | Pulse Ranging Technology (PRT) |
| Diameter of the light spot | | | < 10 mm at a distance of 8 m at 20 °C |
| Ambient light limit | | | 50000 Lux |
| Temperature influence | | | typ. ≤ 0.25 mm/K |
| Functional safety related parameters | | | |
| MTTF _d | | | 200 a |
| Mission Time (T _M) | | | 10 a |
| Diagnostic Coverage (DC) | | | 0 % |
| Indicators/operating means | | | |
| Operation indicator | | | LED green |
| Function indicator | | | 2 LEDs yellow for switching state |
| Teach-In indicator | | | Teach-In: LED green/yellow equiphase flashing; 2.5 Hz Teach Error: LED green/yellow non equiphase flashing; 8.0 Hz |
| Control elements | | | 5-step rotary switch for operating modes selection (threshold setting and operating modes) |
| Control elements | | | Switch for setting the threshold values |
| Electrical specifications | | | |
| Operating voltage | U _B | | 10 ... 30 V DC / when operating in IO-Link mode: 18 ... 30 V |
| Ripple | | | 10 % within the supply tolerance |
| No-load supply current | I ₀ | | ≤ 70 mA / 24 V DC |
| Time delay before availability | t _v | | 1.5 s |
| Interface | | | |
| Interface type | | | IO-Link |
| Protocol | | | IO-Link V1.0 |
| Cycle time | | | min. 2.3 ms |
| Mode | | | COM2 (38.4 kBit/s) |
| Process data width | | | 16 bit |
| SIO mode support | | | yes |
| Output | | | |
| Signal output | | | 2 push-pull (4 in 1) outputs, short-circuit protected, reverse polarity protected |
| Switching voltage | | | max. 30 V DC |
| Switching current | | | max. 100 mA |
| Switching frequency | f | | 50 Hz |
| Response time | | | 10 ms |
| Conformity | | | |
| Product standard | | | EN 60947-5-2 |
| Laser safety | | | IEC 60825-1:2007 |
| Measurement accuracy | | | |
| Absolute accuracy | | | ± 25 mm |

Release date: 2023-03-28 Date of issue: 2023-03-28 Filename: 219475_eng.pdf

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

 Pepperl+Fuchs Group
www.pepperl-fuchs.com

 USA: +1 330 486 0001
fa-info@us.pepperl-fuchs.com

 Germany: +49 621 776 1111
fa-info@de.pepperl-fuchs.com

 Singapore: +65 6779 9091
fa-info@sg.pepperl-fuchs.com


 PEPPERL+FUCHS

Technical Data

| | |
|-----------------------------------|--------------------------------------------------------------------------------------------------------------------------------------|
| Repeat accuracy | < 5 mm |
| Approvals and certificates | |
| Protection class | II, rated voltage ≤ 250 V AC with pollution degree 1-2 according to IEC 60664-1 |
| UL approval | cULus Listed, Class 2 Power Source, Type 1 enclosure |
| CCC approval | CCC approval / marking not required for products rated ≤36 V |
| FDA approval | IEC 60825-1:2007 Complies with 21 CFR 1040.10 and 1040.11 except for deviations pursuant to Laser Notice No. 50, dated June 24, 2007 |
| Ambient conditions | |
| Ambient temperature | -30 ... 50 °C (-22 ... 122 °F) |
| Storage temperature | -30 ... 70 °C (-22 ... 158 °F) |
| Mechanical specifications | |
| Housing width | 25.8 mm |
| Housing height | 88 mm |
| Housing depth | 54.6 mm |
| Degree of protection | IP65 |
| Connection | 300 mm fixed cable with M12 x 1, 4-pin connector |
| Material | |
| Housing | Plastic ABS |
| Optical face | PMMA |
| Mass | 90 g |


Connection Assignment

Option:

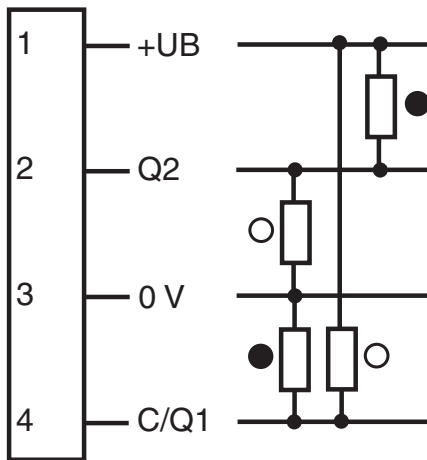

- = Light on
- = Dark on

Connection Assignment

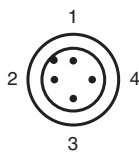


Release date: 2023-03-28 Date of issue: 2023-03-28 Filename: 219475_eng.pdf

Connection Assignment

Wire colors in accordance with EN 60947-5-2


| | | |
|---|----|---------|
| 1 | BN | (brown) |
| 2 | WH | (white) |
| 3 | BU | (blue) |
| 4 | BK | (black) |

Assembly

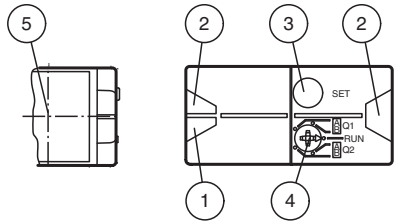

| | | |
|---|--------------------|--------|
| 1 | Operating display | green |
| 2 | Signal display | yellow |
| 3 | TEACH-IN button | |
| 4 | Mode rotary switch | |
| 5 | Laser output | |

Characteristic Curve

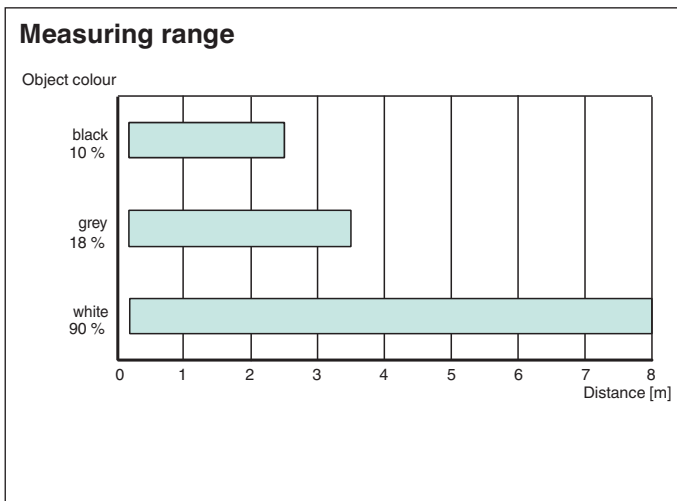



Application



Release date: 2023-03-28 Date of issue: 2023-03-28 Filename: 219475_eng.pdf

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Safety Information

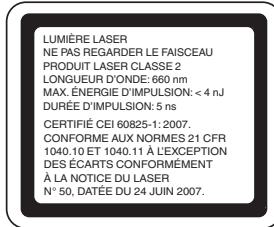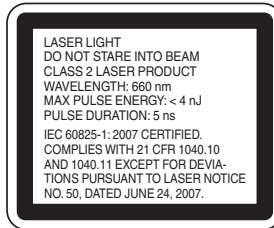

Safety Information

Laser Class 2 Information

The irradiation can lead to irritation especially in a dark environment. Do not point at people!












Caution: Do not look into the beam!

Maintenance and repairs should only be carried out by authorized service personnel!

Attach the device so that the warning is clearly visible and readable.

Caution – Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Accessories

| | | |
|-------------------------------------------------------------------------------------|---------------------|---------------------------------------------------------------------------|
|  | PACTware 4.1 | FDT Framework |
|  | OMH-05 | Mounting aid for round steel \varnothing 12 mm or sheet 1.5 mm ... 3 mm |
|  | OMH-07-01 | Mounting aid for round steel \varnothing 12 mm or sheet 1.5 mm ... 3 mm |
|  | OMH-21 | Mounting bracket: mounting aid for sensors in the RL* series |
|  | OMH-22 | Mounting aid for RL* series |
|  | OMH-VDM28-01 | Metal enclosure for inserting protective panes or apertures |
|  | OMH-VDM28-02 | Mounting and fine adjustment device for sensors from the 28 series |
|  | OMH-RLK29-HW | Mounting bracket for rear wall mounting |
|  | OMH-RL28-C | Weld slag cover model |
|  | OMH-K01 | dove tail mounting clamp |
|  | OMH-K03 | dove tail mounting clamp |

Release date: 2023-03-28 Date of issue: 2023-03-28 Filename: 219475_eng.pdf

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group
www.pepperl-fuchs.com






USA: +1 330 486 0001
fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111
fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091
fa-info@sg.pepperl-fuchs.com

 **PEPPERL+FUCHS**

Accessories

| | | |
|-------------------------------------------------------------------------------------|-----------------------------|--------------------------------------------------------------------------------------------------------------|
|  | ICE2-8IOL-G65L-V1D | EtherNet/IP IO-Link master with 8 inputs/outputs |
|  | ICE3-8IOL-G65L-V1D | PROFINET IO IO-Link master with 8 inputs/outputs |
|  | ICE1-8IOL-G30L-V1D | Ethernet IO-Link module with 8 inputs/outputs |
|  | ICE1-8IOL-G60L-V1D | Ethernet IO-Link module with 8 inputs/outputs |
|  | ICE2-8IOL-K45P-RJ45 | EtherNet/IP IO-Link master with 8 inputs/outputs, DIN rail, push-in connectors |
|  | ICE2-8IOL-K45S-RJ45 | EtherNet/IP IO-Link master with 8 inputs/outputs, DIN rail, screw terminal |
|  | ICE3-8IOL-K45P-RJ45 | PROFINET IO IO-Link master with 8 inputs/outputs, DIN rail, push-in terminals |
|  | ICE3-8IOL-K45S-RJ45 | PROFINET IO IO-Link master with 8 inputs/outputs, DIN rail, screw terminal |
|  | IO-Link-Master02-USB | IO-Link master, supply via USB port or separate power supply, LED indicators, M12 plug for sensor connection |
|  | OMH-VDM28-CID1 | Protective enclosure |

Teach-In

You can use the rotary switch to select the output **Q1** or **Q2** and the relevant switching threshold A or B for teaching in. The yellow LEDs indicate the current state of the selected output.


To store a switching threshold (distance measured value), press and hold the "SET" button until the yellow and green LEDs flash in phase (approx. 2 s). Teach-In starts when the "SET" button is released.

A successful Teach-In is indicated by rapidly alternating flashing (2.5 Hz) of the yellow and green LEDs.

An unsuccessful Teach-In is indicated by alternating flashing (8 Hz) of the yellow and green LEDs.

After an unsuccessful Teach-In, the sensor continues to operate with the previous valid setting after the relevant visual fault signal is issued.

Different switching modes can be defined by teaching in the relevant distance measured values for the switching thresholds A and B:

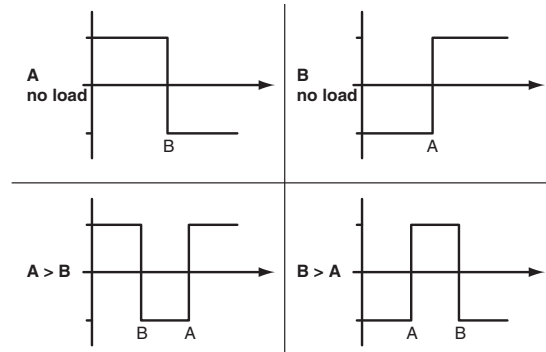

Every taught-in switching threshold can be retaught (overwritten) by pressing the SET button again.

Pressing and holding the "SET" button for > 5 s completely deletes the taught-in value. The yellow and green LEDs go out simultaneously to indicate that this procedure has been completed.

Default setting:

In general, no switching points are set at the factory. The outputs are switched to low.

Reset to default settings:

- Set the rotary switch to the "RUN" position
- Press and hold the "SET" button until the yellow and green LEDs stop flashing in phase (approx. 10 s)
- If the green LED lights up, the procedure is complete.

Error messages:

- Short circuit: In the event of a short circuit at the sensor output, the green LED flashes with a frequency of approx. 4 Hz.
- Teach error: In the event of a teach error, the yellow and green LEDs flash alternately with a frequency of approx. 8 Hz.



Note!

The difference in the taught-in distance measured values for the switching thresholds A and B must be greater than the switching hysteresis set in the sensor.

On delivery, the switching hysteresis is 15 mm.

If the difference in the taught-in measured values is the same as or smaller than the set switching hysteresis, the sensor will visually signal an unsuccessful Teach-In. The last distance measured value that was taught in will not be adopted by the sensor.

Select a new distance measured value for switching threshold A or B with a greater difference between the switching thresholds.

Teach in this distance measured value on the sensor again.