



Ultrasonic diffuse sensor with pivoting transducer



Dimensions

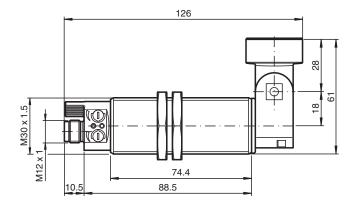



Technical Data

General specifications			
Sensing range		100 2000 mm	
Adjustment range		150 2000 mm	
Dead band		0 100 mm	
Standard target plate		100 mm x 100 mm	
Transducer frequency		approx. 200 kHz	
Response delay		≤ 100 ms	
Nominal ratings			
Temperature drift		$\leq \pm 1.5$ % of full-scale value	
Time delay before availability	t _v	≤ 125 ms	

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

Pepperl+Fuchs Group www.pepperl-fuchs.com USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com



Technical Data

Limit data			
Permissible cable length		max. 300 m	
Indicators/operating means			
LED yellow		switching state switch output	
LED green/yellow		yellow: object in evaluation range green: Teach-In	
Potentiometer		switching output adjustable	
Electrical specifications			
Rated operating voltage	Ue	24 V DC	
Operating voltage	U _B	20 30 V DC (including ripple)	
Ripple		≤ 10 %	
No-load supply current	I ₀	≤ 50 mA	
Interface			
Interface type		Infrared	
Mode		point-to-point connection	
Input/Output			
Input/output type		1 synchronization connection, bidirectional (Factory setting: synchronized mode) / Teach-In input $% \left({\left[{{\left[{{\left[{\left[{\left[{\left[{\left[{\left[{\left[{$	
0 Level		≤3V	
1 Level		≥ 15 V	
Input impedance		typ. 900 Ω	
Number of sensors		max. 10	
Switching output			
Output type		1 switch output PNP, NO (NC contact programmable)	
Default setting		150 2000 mm (adjustable via potentiometer)	
Repeat accuracy	R	± 3 mm	
Operating current	IL.	300 mA , short-circuit/overload protected	
Switching frequency		≤ 4 Hz	
Switching hysteresis		20 mm (programmable)	
Voltage drop		≤3 V	
Off-state current		≤ 10 μA	
Analog output			
Output type		1 current output 4 20 mA , ascending/descending programmable	
Default setting		rising ramp ; evaluation limit A1: 150 mm ; evaluation limit A2: 2000 mm	
Load resistor		≤ 500 Ω	
Compliance with standards and directives			
Standard conformity			
Standards		EN IEC 60947-5-2:2020 IEC 60947-5-2:2019 EN 60947-5-7:2003 IEC 60947-5-7:2003	
Approvals and certificates			
UL approval		cULus Listed, Class 2 Power Source	
CCC approval		CCC approval / marking not required for products rated \leq 36 V	
Ambient conditions			
Ambient temperature		-25 70 °C (-13 158 °F)	
Storage temperature		-40 85 °C (-40 185 °F)	
Shock resistance		30 g , 11 ms period	
Vibration resistance		10 55 Hz , Amplitude ± 1 mm	
Mechanical specifications			
Connection type		Connector plug M12 x 1 , 5-pin	
Housing diameter		30 mm	
Degree of protection		IP65	
Material			
Housing		Stainless steel 1.4571 / AISI 316Ti plastic PBT	

Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com


Ultrasonic sensor

UCC2000-30GH70S-IE2R2-V15

				-
Tec				
			6	
	 	_	-	

Transducer	FEP coated; epoxy resin/hollow glass sphere mixture; polyurethane foam
Installation position	any position
Mass	170 g
Construction type	Cylindrical

Connection



Connection Assignment




Wire colors in accordance with EN 60947-5-2

1 2 3 4	BN WH BU BK	(brown) (white) (blue) (black)
4	BK	(black)
5	GY	(gray)

Characteristic Curve

Characteristic response curve

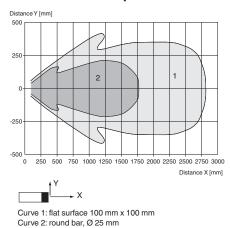


Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

3

Characteristic Curve


Analog output operating mode

Rising ramp



Switching output operating mode

Window operation mode



Accessories

	BF 30	Mounting flange, 30 mm
CO CO CO CO CO CO CO CO CO CO CO CO CO C	BF 5-30	Universal mounting bracket for cylindrical sensors with a diameter of 5 30 mm
ø /	V15-G-2M-PUR	Female cordset single-ended M12 straight A-coded, 5-pin, PUR cable grey
<u>O</u> r	ULTRA-PROG-IR	Configuration software for ultrasonic sensors
1	UC-PROG-IR-USB	Interface cable for parameterization of sensors with IrDA interface

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

4

Indication

Displays and Controls

The sensor has two potentiometers and two display LEDs

LED 1 (yellow)	On/off: Switching state of switching output Flashing: Error when setting the switching points (switching point 2 < switching point 1). This state only occurs in window function operating mode (2 switching points).	LED 1 potentiometer 2 connector yellow
LED 2 (yellow)	On/off: Object between evaluation limit A1 and evaluation limit A2 in the analog evaluation range.	
LED 2 (green)	approx. 500 ms on: Range limit taught in Off: Normal mode	
Potentiometer 1	Setting for switching point 1 of the switching output.	
Potentiometer 2	Setting for switching point 2 of the switching output	potentiometer 1 LED 2 temperature yellow / green sensor

The potentiometer function described illustrates the default function. The function of the potentiometer can be altered using the ULTRA-PROG-IR software. As soon as a configuration has been changed, the potentiometer function selected using ULTRA-PROG-IR is activated.

Function

Setting the Sensor Using the Potentiometers

The sensor is equipped with two potentiometers. These potentiometers are assigned to the switching output by default. The switching output operates in window mode by default (2 switching points). Potentiometer 1 is used to set the near switching point of the switching window. Potentiometer 2 is used to set the distant switching point of the switching window.


Note:

The function of the potentiometer can be altered using the ULTRA-PROG-IR software. As soon as a configuration has been changed, the potentiometer function selected using ULTRA-PROG-IR is activated.

Parameterization

Parameterization via ULTRA-PROG-IR

In order to be able to set the sensor parameters and adjust the sensor to the respective application, the sensor is able to communicate with a PC via the integrated infrared interface. The UC-18/30GM-IR interface cable is required to allow communication via this method. This cable is connected to an unused USB port on the PC.

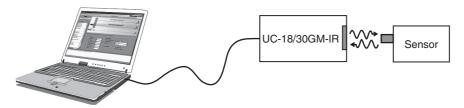

The ULTRA-PROG-IR parameterization software is also required for setting the sensor parameters. The ULTRA-PROG-IR software can be downloaded for free from the **www.pepperl-fuchs.com** website. The software allows all open parameters to be set, including:

- · All trip points and switching hystereses
- Output modes and behaviors
- Delay times
- Settings and setting ranges of the potentiometer
- Settings for teach-in and synchronization
- Definition of blind zones
- Sensor modes and measurement methods
- Filtering measurement values
- The following service functions are also available:
- Observing and recording measurement values
- Diagnosing interference reflections

Teach-in

The sensor is equipped with a function input (XI). In order to teach in a limit value, this sensor must be parameterized as the Teach-in input using the ULTRA-PROG-IR parameterization software. This parameterization software allows you to specify what limit value is taught in.

Note:

Release date: 2023-02-16 Date of issue: 2023-02-16 Filename: 238419_eng.pdf

The Teach-in function is not activated when the sensor is delivered.

Description of the Teach-in process:

Refer to "General Notes Relating to Pepperl+Fuchs Product Information



Ultrasonic sensor

- 1. Position an object at the required distance.
- 2. Connect the Teach-in input to L-.
- The green LED lights up briefly after approx. 3 seconds. This indicates that the required distance has been successfully saved.
- 3. Disconnect the Teach-in input from L-.

Note:

If the Teach-in input remains connected to L-, the Teach-in process is repeated every 3 seconds.

Commissioning

Synchronization

The sensor features a function input (XI). Using the ULTRA-PROG-IR parameterization software, this function input can be configured as a synchronization input to suppress mutual interference from external ultrasonic signals. This is illustrated in the following description. If the synchronization input is not connected, the sensor operates with internally generated cycle pulses.

External synchronization

The sensor can be synchronized by applying external rectangular pulses. The pulse duration must be $\geq 100 \ \mu$ s. Each rising pulse edge sends an individual ultrasonic pulse. If the signal at the synchronization input is high, the sensor reverts to the normal, unsynchronized operating mode. If a low signal is applied to the synchronization input, the sensor switches to standby. In this operating mode, the last recorded output statuses are retained.

Internal synchronization

Common mode operation

Up to ten sensors can be synchronized with each other. To do this, the synchronization inputs of the individual sensors are connected to each other. When configured in this state, all of the sensors send the ultrasonic signals together at the same time. The cycle rate corresponds to the cycle rate of the sensor with the lowest rate.

Multiplex mode

Up to ten sensors can work in multiplex mode; i.e. the sensors send their ultrasonic signals in succession. This prevents the sensor signals interfering with each other. In multiplex mode, the synchronization inputs of all sensors are connected to each other. An address must also be assigned to each sensor using the ULTRA-PROG-IR parameterization software, and the number of sensors to be synchronized must be determined. To start multiplex mode, all sensors are commissioned together by switching on the power supply.

Mounting

Mounting instruction

The sensor is also suitable for outdoor use. Hereby the tranducer should be protected from direct ultravioilet radiation.

