



MANUAL

Temperature Multi-Input Junction Box
F.TI0.???.A(C/G)??F(P).?.???.???.???
F.TI0.???. A(C/G)??F(P)??.???.???.-Y#####

TABLE OF CONTENTS

| | | |
|-----------|---|-----------|
| 1 | General Notes | 3 |
| 2 | Safety..... | 3 |
| 3 | Intended Use | 4 |
| 3.1 | Installation area | 4 |
| 3.2 | Marking | 4 |
| 4 | Mounting and Installation | 5 |
| 4.1 | Mounting | 5 |
| 4.2 | Installation..... | 6 |
| 4.2.1 | Cable Entries | 6 |
| 4.2.2 | Cables..... | 6 |
| 4.2.3 | Connections | 7 |
| 4.3 | Grounding and shielding..... | 8 |
| 4.3.1 | Grounding the enclosure | 8 |
| 4.3.2 | Grounding/Shielding the Sensor inputs | 8 |
| 4.3.3 | Grounding/Shielding the Fieldbus cable..... | 8 |
| 5 | Operation..... | 9 |
| 5.1 | Opening of the Enclosure..... | 9 |
| 5.2 | Sensor Disconnection | 9 |
| 5.3 | Fieldbus Disconnection..... | 9 |
| 6 | Fault elimination | 10 |
| 7 | Disposal | 10 |
| 8 | Maintenance..... | 10 |
| 9 | Technical data..... | 11 |
| 10 | Type code | 12 |

1 General Notes

Copyright © by Pepperl+Fuchs GmbH
All rights reserved

Pepperl+Fuchs endeavours to ensure that all information contained herein is accurate. Pepperl+Fuchs also reserve the right to change information contained herein without prior announcement. Pepperl+Fuchs are not liable for damages, irrespective of their nature, incurred by the use or the non-use of the information.

This manual is property of Pepperl+Fuchs and may not be reproduced or distributed in whole or part without the prior written permission of Pepperl+Fuchs.

Pepperl+Fuchs' liability is limited to typical and foreseeable damages. The liability resulting from the German Product Liability Act is not affected by this.

Applicable law is the law of the Federal Republic of Germany. Place of jurisdiction is Mannheim.

The manual is only valid when used in conjunction with the corresponding instruction manual(s) and the equipment data sheet(s).

Symbols used

This document contains information that you must read for your own personal safety and to avoid property damage. The warning signs are displayed in descending order depending on the hazard category, as follows:



Danger!

This symbol indicates a warning about a possible danger. In case of ignoring the consequences may range from personal injury to death.



Warning!

This symbol indicates a warning about a possible fault or danger. In case of ignoring the consequences may cause personal injury or heaviest property damage.

2 Safety

Refer to instruction manual(s).

3 Intended Use

The Junction Box is equipped with one or more Temperature Multi-Input(s) (TM-I) for connecting up to 8 analog inputs to the DCS via fieldbus. In addition it could be equipped with appropriated accessories like grounding bar, etc.

3.1 Installation area

The Junction Box may be installed in

- hazardous area category 2G Zone 1
- hazardous area category 2D Zone 21

in accordance with ATEX Directive.

The Junction Box may be installed in


- hazardous area Zone 1
- hazardous area Zone 21

in accordance with IECEx Scheme.

The permitted installation area depends on the configuration of the Junction Box and can be identified on the nameplate.

3.2 Marking

Each Junction Box is labelled as shown below:

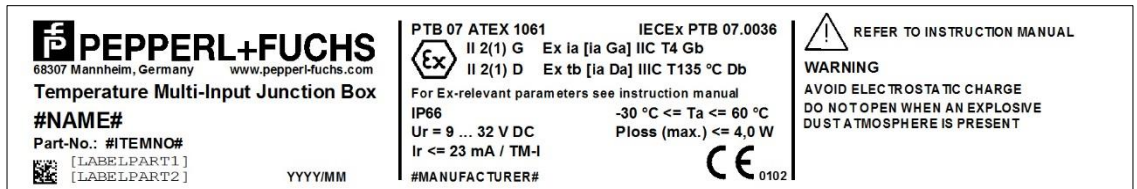

Note: The nameplate shows a typical content.

Allocation variables:

#NAME#: Type code (e.g. F.T10.P12.A08.F.0.GP2.GP2.C000)
 #ITEMNO#: Part-No. (e.g. 264776-100007)
 [LABELPART1]: Serial-No. digit 1-7 (e.g. 4 000 002)
 [LABELPART2]: Serial-No. digit 8-14 (e.g. 0 995 101)
 YYYY/MM: Date of production (e.g. 2017/07)
 #MANUFACTURER#: Country of production (e.g. Made in Germany)

Electrical data:

Ur: Rated voltage
 Ir: Rated current
 Ploss (max): max. allowed power loss inside the enclosure based on the given ambient temperature

The Ex-marking, the warnings and the electrical data depend on the configuration of the Junction Box.

For the Ex-relevant parameters please refer to the attached datasheets.



The ratings shown are the maximum values for explosion protection and must not be exceeded for safe operation. Also refer to the technical data in the corresponding datasheets.

4 Mounting and Installation

Refer also to 3rd. party instruction manual(s) supplied with the Junction Box.

4.1 Mounting

Mounting should only be performed by suitably qualified personnel.

The Glass Fibre Reinforced Polyester (GRP) enclosure can be mounted via the through-holes that are exposed when the lid is removed.

The metal enclosure can be mounted via the external mounting brackets that are attached to the enclosure.

The following steps need to be considered during the mounting process:

1. Remove any temporary protection or packing materials.
2. Expanding anchors should be used when mounting on concrete, or suitably sized bolts, nuts and anti-vibration washers when mounting to a steel framework.
3. When the boxes are mounted directly onto the wall, they shall rest evenly only on the fastening points provided for this purpose, and they shall be fixed in such a way that they cannot twist or turn.
4. The screw used shall match the fixing hole and must not damage the opening (e.g. use of a washer).
5. The Junction Box shall be fixed with a minimum of two diagonally opposed screws (for GRP enclosures) or at all mounting brackets (for metal enclosures).
6. Use the enclosure as a template when marking fixing points, alternatively, the dimensions of the fixing centres are moulded into the rear face of the GRP enclosure or the dimensions of the fixing centres are provided in the drawing.
7. During mounting the accepted technical rules and installation regulations must be considered.



Excessive tightening of fixing screws can result in damage to the Junction Box.



The improper installation and operation of the enclosures can result in invalidating the guarantee.

4.2 Installation

4.2.1 Cable Entries

The Junction Box can be supplied either with cable glands, stopping plugs or clearance holes or a mixture of them.

If cable glands are already assembled it has to be ensured that:

1. the tightening torque for the cap is applied according the instruction manual of the cable glands
2. unused cable glands must be fitted either with sealing plugs (if supplied) or must be replaced with stopping plugs

If cable glands or stopping plugs will be assembled on site it has to be ensured that:

1. the devices used are suitably certified for the hazardous area of application
2. the devices used do not reduce the IP rating given on the nameplate
3. the devices used do not reduce the ambient temperature range given on the nameplate
4. the cable glands are correctly dimensioned for the cable diameters
5. the devices are installed according the installation instruction of the manufacturer
6. the tightening torques are applied according the installation instruction of the manufacturer
7. unused cable entries must be fitted either with cable glands and sealing plugs or with stopping plugs

4.2.2 Cables

The requisite cable parameters should be taken from the installation instructions of the particular fieldbus system.

The cables enter the enclosure via cable glands fitted at the bottom of the enclosure.

It has to be ensured that:

1. the cable diameter fits into the range of the used cable gland
2. the cabling is not strained and adequate strain relief is provided
3. creepage and clearance distances have been maintained

4.2.3 Connections

For connection details see wiring schematic of the Junction Box.

The terminals provided are suitable for the following conductor cross sections:

| Type | Conductor cross section | | Torque (Nm) | Stripping length (mm) |
|---|-------------------------|---------|-------------|-----------------------|
| | (mm ²) | AWG | | |
| Temperature Multi-Input RD0-TI-Ex8.*.ST | 0,2 - 2,5 | 24 - 14 | 0,5 - 0,6 | 10 |
| Temperature Multi-Input RD0-TI-Ex8.*.SC | 0,2 - 2,5 | 24 - 14 | - | 10 |
| Earth clamp | 0,5 - 4,0 | 20 - 12 | 1,2 | 16 |

It has to be ensured that:

1. only one wire per terminal clamp has been installed
2. unused conductors are terminated correctly or securely tied down and insulated and not left floating within the enclosure
3. clearance and creepage distances have been maintained
4. all unused terminal screws are tightened down



Tightening torque: If screw terminals are used the above given torque values need to be applied.

Ensure that connectors are mechanically locked.



If stranded cables cores are used in an explosion hazardous area, the un-insulated strands must be protected from spreading e.g. by fitting bootlace ferrules.



The diameter of individual conductors in explosion hazardous areas must be greater than 0.1mm. This also applies to the wires in stranded conductors.

4.3 Grounding and shielding

4.3.1 Grounding the enclosure

The Junction Box is provided with an internal/external earth stud for a plant safety earth. A bonding conductor with a minimum cross-sectional area of 4 mm² must be connected to the earth stud. Depending on the size of the earth stud the following torque values need to be applied:

| Size | Conductor cross section | Torque |
|------|--------------------------|------------|
| M6 | up to 25 mm ² | 3 Nm |
| M10 | up to 70 mm ² | 10 – 20 Nm |

4.3.2 Grounding/Shielding the Sensor inputs

The Junction Box provides 1 option for the shield connection of the Sensor inputs:

1. All sensor cable shields are connected together if connected to the separate screen bar. Depending on the selected screen bar option the screen bar itself is either connected to the earth stud and so therefore to local earth or the screen bar is isolated.

For more details see Temperature Multi-Input Device Manual.

4.3.3 Grounding/Shielding the Fieldbus cable

The Junction Box provides 1 option for the shield connection of the Fieldbus:

1. The Fieldbus cable shield is connected to local earth if connected to the screen terminal “S” of the Temperature Multi-Input Device.

For more details see Temperature Multi-Input Device Manual

5 Operation

Once wiring has been completed and before closing the lid, a visual inspection must be performed to ensure that there are no visible signs of damage on the lid gasket. In the event of damage, the gasket must be suitably repaired or replaced.

Ensure that the lid is correctly located and properly locked down using the screws provided.

The Junction Box could be equipped in addition to the lid screws also with captive clamps. These captive clamps are an additionally accessory whereas the lid screws are still required to meet the ingress protection.



Lid screws should be tightened with a torque of 2 Nm.
Over tightening can impair the degree of protection.

5.1 Opening of the Enclosure

The enclosure can be opened while energized only if no warning “DO NOT OPEN WHILE ENERGIZED” is attached to the enclosure (e.g. on the nameplate) or when no explosive atmosphere is present.

5.2 Sensor Disconnection

The intrinsically safe sensor connections may be connected or disconnected while the circuit is live even if combustible gases are present.

5.3 Fieldbus Disconnection

The intrinsically safe fieldbus connections may be connected or disconnected while the circuit is live even if combustible gases are present.

6 Fault elimination

Junction Boxes and the electrical and electronic devices which are used in explosion hazardous area applications must not be altered in any way. In the event of a fault, the Junction Box or the device(s) must be replaced. Defective enclosure parts must be replaced with original parts only. Fault elimination work may only be performed by suitably qualified and authorised personnel.

7 Disposal

The packaging materials and the Junction Box must be disposed of in accordance with the regulations pertaining to the country in which they are installed. No batteries which need to be separately disposed of are contained within the Junction Box.

8 Maintenance

The equipment supplied is essentially maintenance free, however the following maintenance procedure or checks should be undertaken in order to ensure the safe operation of the equipment:

| No. | Activity | Frequency |
|-----|--|-----------------------------------|
| 1 | Check that the lid seal is not damaged and is in place | Each time the enclosure is opened |
| 2 | Check that all lid screws are in place and secured | Each time the enclosure is opened |
| 3 | Check that the mounting bolts are tight and corrosion free | Annually |
| 4 | Check the security of all cable glands | Annually |
| 5 | Check the enclosure for damage | Annually |
| 6 | Check that all screw terminals are secured | Annually |
| 7 | Check that all leads are not damaged and secured | Annually |
| 8 | Check that the condensation drain is clean and functioning | Each time the enclosure is opened |



To avoid electrostatic charging, the enclosure or installed equipment should only be wiped or cleaned using a damp cloth.

9 Technical data

| | F.TI0.S* | F.TI0.P* | Others |
|---|---|--|----------------------------------|
| Manufacturer | Pepperl+Fuchs GmbH Lilienthalstraße 200 68307 Mannheim Germany | | |
| Mechanical specifications | | | |
| Enclosure cover | detachable hinged door with captive retaining screws | detachable cover with captive retaining screws | see documentation |
| Degree of protection | see nameplate | see nameplate | see nameplate |
| Material | | | |
| Housing | stainless steel 1.4404 / AISI 316L | polyester, impact resistant, glass fiber reinforced | see documentation |
| Surface | electropolished | black molded finish | see documentation |
| Seal | neoprene, fire-resistant, one piece | silicone, one piece | see documentation |
| Material thickness | body: 1.5 mm cover: 1.5 mm gland plate: 3.0 mm | body: 4.0 mm cover: 4.0 mm grounding plate: 3.0 mm | see documentation |
| Dimensions | see type code or documentation | see type code or documentation | see documentation |
| Mounting | thru-holes Ø11 mm | thru-holes Ø6.5 mm | see documentation |
| Grounding | grounding bolt M10 , brass | grounding bolt M6 , stainless steel | see documentation |
| General specifications | | | |
| Installed components | see type code and documentation For technical data on installed electronic component see data sheet. | | |
| Data for application in connection with Ex-areas | | | |
| EU-Type Examination Certificate | PTB 07 ATEX 1061 | PTB 07 ATEX 1061 | PTB 07 ATEX 1061 |
| Group, category, type of protection | see nameplate | see nameplate | see nameplate |
| Directive conformity | see EU-Declaration of conformity | see EU-Declaration of conformity | see EU-Declaration of conformity |
| IECEx approval | IECEx PTB 07.0036 | IECEx PTB 07.0036 | IECEx PTB 07.0036 |
| Type of protection | see nameplate | see nameplate | see nameplate |

| Family | | | | Housing | | | | Ex | Channels / Outputs | Fieldbus | Terminals | Cable entries Trunk | Cable entries Spurs | Accessories | Product -No. | | | | | | Description | | | | | | | | | | | | | | | | | |
|-------------------------------|---|---|---|---------|---|---|---|----|--------------------|------------|-----------|---------------------|---------------------|-------------|--------------|----|----|-----|-----|-----|-------------|-----|-----|-----------------|-----|----|----|---|----------------------------|----------------------|-----|-----|-----|-----|------------|-----|-----|--|
| 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 | 25 | 26 | 27 | 28 | 29 | 30 | N/A | N/A | N/A | N/A | N/A | N/A | N/A | N/A | Type code position no. for standard junction boxes |
| 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | N/A | N/A | N/A | N/A | N/A | N/A | N/A | N/A | 19 | 20 | 21 | 22 | 23 | 24 | 25 | 26 | 27 | 28 | 29 | 30 | Type code position no. for engineered junction boxes |
| F | T | I | O | ? | ? | ? | ? | ? | ? | ? | ? | ? | ? | ? | ? | ? | ? | ? | ? | ? | ? | ? | ? | ? | ? | ? | ? | ? | ? | ? | ? | ? | ? | ? | ? | ? | ? | F.TI0.???.???.?.?..???.???.???.??? |
| F | T | I | O | ? | ? | ? | ? | ? | ? | ? | ? | ? | ? | ? | ? | ? | ? | | | | | | | | | ? | ? | ? | ? | - | Y | # | # | # | # | # | # | F.TI0.???.???.???.???.???.???.???.???.-Y##### |
| Entries | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | Bus | | Field | | | | | | | | | | | | Size M20 | | | | | | | | | | | | | | |
| | | | | | | | | | | H | 0 | 2 | . | H | 0 | 2 | . | | | | | | | | | | | Blanking plug plastic | | | | | | | | | | |
| | | | | | | | | | | H | 0 | 3 | . | H | 0 | 3 | . | | | | | | | | | | | Blanking plug brass nickel plated | | | | | | | | | | |
| | | | | | | | | | | H | 0 | 4 | . | H | 0 | 4 | . | | | | | | | | | | | Blanking plug stainless steel | | | | | | | | | | |
| | | | | | | | | | | G | P | 2 | . | G | P | 2 | . | | | | | | | | | | | Cable gland plastic | | | | | | | | | | |
| | | | | | | | | | | G | B | 2 | . | G | B | 2 | . | | | | | | | | | | | Cable gland brass nickel plated | | | | | | | | | | |
| | | | | | | | | | | G | S | 2 | . | G | S | 2 | . | | | | | | | | | | | Cable gland stainless steel | | | | | | | | | | |
| | | | | | | | | | | G | N | 2 | . | G | N | 2 | . | | | | | | | | | | | Cable gland brass nickel plated for armoured cables | | | | | | | | | | |
| | | | | | | | | | | G | A | 2 | . | G | A | 2 | . | | | | | | | | | | | Cable gland stainless steel for armoured cables | | | | | | | | | | |
| Tag plate | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | 0 | | | | | | | | | | | without | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | A | | | | | | | | | | | Plastic (120x30mm) | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | B | | | | | | | | | | | Stainless steel (120x30mm) | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | C | | | | | | | | | | | Plastic (95x20mm) | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | D | | | | | | | | | | | Stainless steel (95x20mm) | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | O | | | | | | | | | | | Others | | | | | | | | | |
| Screen bar | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | 0 | | | | | | | | | | | without | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | 1 | | | | | | | | | | | with (connected to PA) | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | 2 | | | | | | | | | | | with (isolated) | | | | | | | | | |
| Surge protection | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | 0 | | | | | | | | | | | without | | | | | | | | | |
| Additional accessories | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | 0 | - | | | | | | | | | | | without | | | | | | | | |
| | | | | | | | | | | | | | | | | | | D | - | | | | | | | | | | | Document pocket (A4) | | | | | | | | |
| | | | | | | | | | | | | | | | | | | Y | # | # | # | # | # | # | # | # | # | # | # | # | # | # | # | # | Product ID | | | |

TDOCT-5810_ENG (07/2017)

Your automation, our passion.

Explosion Protection

- Intrinsically Safe Barriers
- Signal Conditioners
- Fieldbus Infrastructure
- Remote I/O Systems
- HART Interface Solutions
- Wireless Solutions
- Level Measurement
- Purge and Pressurization Systems
- Industrial Monitors and HMI Solutions
- Electrical Explosion Protection Equipment
- Solutions for Explosion Protection

Industrial Sensors

- Proximity Sensors
- Photoelectric Sensors
- Industrial Vision
- Ultrasonic Sensors
- Rotary Encoders
- Positioning Systems
- Inclination and Acceleration Sensors
- AS-Interface
- Identification Systems
- Logic Control Units