

**BTC22-\***

# Box Thin Client for Industrial Applications

**Manual**



---

With regard to the supply of products, the current issue of the following document is applicable:  
The General Terms of Delivery for Products and Services of the Electrical Industry, published  
by the Central Association of the Electrical Industry (Zentralverband Elektrotechnik und Elek-  
troindustrie (ZVEI) e.V.) in its most recent version as well as the supplementary clause:  
"Expanded reservation of proprietorship"

**Worldwide**

Pepperl+Fuchs Group  
Lilienthalstr. 200  
68307 Mannheim  
Germany  
Phone: +49 621 776 - 0  
E-mail: [info@de.pepperl-fuchs.com](mailto:info@de.pepperl-fuchs.com)

**North American Headquarters**

Pepperl+Fuchs Inc.  
1600 Enterprise Parkway  
Twinsburg, Ohio 44087  
USA  
Phone: +1 330 425-3555  
E-mail: [sales@us.pepperl-fuchs.com](mailto:sales@us.pepperl-fuchs.com)

**Asia Headquarters**

Pepperl+Fuchs Pte. Ltd.  
P+F Building  
18 Ayer Rajah Crescent  
Singapore 139942  
Phone: +65 6779-9091  
E-mail: [sales@sg.pepperl-fuchs.com](mailto:sales@sg.pepperl-fuchs.com)  
<https://www.pepperl-fuchs.com>

---

<b>1</b>	<b>History of the Manual .....</b>	<b>4</b>
<b>2</b>	<b>Introduction.....</b>	<b>5</b>
2.1	Content of this Document.....	5
2.2	Manufacturer .....	5
2.3	Target Group, Personnel .....	5
2.4	Symbols Used .....	6
<b>3</b>	<b>Product Description .....</b>	<b>7</b>
3.1	Application .....	7
3.2	Security Context .....	9
3.3	Firmware.....	10
3.4	Technical Data.....	12
3.5	Dimensions and Nameplates.....	14
<b>4</b>	<b>Installation.....</b>	<b>16</b>
4.1	Mounting.....	16
4.2	Electrical Connection .....	25
4.3	I/O Connection .....	26
<b>5</b>	<b>BIOS Settings.....</b>	<b>34</b>
5.1	Creating a New BIOS Password .....	36
5.2	Changing Serial Interface Mode (RS-232, RS-485) .....	37
5.3	USB Configuration.....	38
5.4	Boot Configuration .....	39
5.4.1	Advanced - Booting from USB Stick .....	42
5.5	Resetting the BIOS to Factory Settings.....	43
5.6	Secure Boot.....	44
<b>6</b>	<b>Service and Support .....</b>	<b>47</b>
<b>7</b>	<b>Accessories.....</b>	<b>48</b>

## 1 History of the Manual

The following editions of the manual have been released:

Version	Comments
11/2023	First edition
02/2024	Minor corrections
04/2024	Addition of UL approval

## 2 Introduction

### 2.1 Content of this Document

This document contains information that you need in order to use your product throughout the applicable stages of the product life cycle. These can include the following:

- Product identification
- Delivery, transport, and storage
- Mounting and installation
- Commissioning and operation
- Maintenance and repair
- Troubleshooting
- Dismounting
- Disposal



---

#### Note

This document does not substitute the instruction manual.

---



---

#### Note

For full information on the product, refer to the instruction manual and further documentation on the Internet at [www.pepperl-fuchs.com](http://www.pepperl-fuchs.com).

---



---

#### Note

For specific device information such as the year of construction, scan the QR code on the device. As an alternative, enter the serial number in the serial number search at [www.pepperl-fuchs.com](http://www.pepperl-fuchs.com).

---

The documentation consists of the following parts:

- Present document
- Instruction manual
- Datasheet

Additionally, the following parts may belong to the documentation, if applicable:

- EU-type examination certificate
- EU declaration of conformity
- Attestation of conformity
- Certificates
- Control drawings
- Functional safety manual
- Additional documents

### 2.2 Manufacturer

Pepperl+Fuchs Group Lilienthalstraße 200, 68307 Mannheim, Germany
Internet: <a href="http://www.pepperl-fuchs.com">www.pepperl-fuchs.com</a>

### 2.3 Target Group, Personnel

Responsibility for planning, assembly, commissioning, operation, maintenance, and dismantling lies with the plant operator.

Only appropriately trained and qualified personnel may carry out mounting, installation, commissioning, operation, maintenance, and dismounting of the product. The personnel must have read and understood the instruction manual and the further documentation.

Prior to using the product make yourself familiar with it. Read the document carefully.

## 2.4 Symbols Used

This document contains symbols for the identification of warning messages and of informative messages.

### Warning Messages

You will find warning messages, whenever dangers may arise from your actions. It is mandatory that you observe these warning messages for your personal safety and in order to avoid property damage.

Depending on the risk level, the warning messages are displayed in descending order as follows:



---

#### **Danger!**

This symbol indicates an imminent danger.

Non-observance will result in personal injury or death.

---



---

#### **Warning!**

This symbol indicates a possible fault or danger.

Non-observance may cause personal injury or serious property damage.

---



---

#### **Caution!**

This symbol indicates a possible fault.

Non-observance could interrupt the device and any connected systems and plants, or result in their complete failure.

---

### Informative Symbols



---

#### **Note**

This symbol brings important information to your attention.

---



---

#### **Action**

1. This symbol indicates a paragraph with instructions. You are prompted to perform an action or a sequence of actions.

## 3 Product Description

### 3.1 Application

The BTC22 is a rugged, industrial strength box thin client optimized for 24/7 operation. The BTC22 has been specially designed for immunity to shock, vibration, and temperatures within an optional extended range of -20°C to +60°C (standard temperature grade) and is characterized by a fanless construction and industrial strength components.

This compact, stand alone computer features an x6413E series Intel® Atom processor and a modern integrated graphics card. Two DisplayPort™ interfaces support up to two monitors at Ultra HD resolution (4K at 60 Hz), making the BTC22 ideal for monitoring and control applications in factory and process automation.

Additionally the device features an USB Type C connector with DisplayPort capabilities.



---

#### **Danger!**

User access!

Warning. Do not open the device. The BTC22 is a closed unit with no user-accessible parts.

---



---

#### **Note**

##### **Radio interference**

This device has been tested and found to comply with the limits for a Class A digital device pursuant to part 15 of the FCC regulations. These limits are designed to provide reasonable protection against harmful interference when the device is used in a commercial environment. This device generates, uses, and can radiate radio frequency energy. If not installed and used in accordance with the instruction manual, it may cause interference with wireless connections. Operation of this device in a residential area is likely to result in interference that the operator will have to correct at the operator's own expense.

---

### Dual Monitor Setup



Figure 3.1 Two monitors with Ultra HD resolution (4K at 60 Hz)

The BTC22 is optimized for modern, Ultra HD-compatible monitors. In a standard scenario, up to two Ultra HD-capable monitors can be connected to the native DisplayPorts™. Additionally an third Ultra HD Monitor can be connected via the USB Type C port.

The DP++ functionality in the DisplayPort™ interface also allows the connection of monitors with an HDMI interface. Passive DisplayPort™ to HDMI adapter cables can be used and are available as accessories. When using an adapter, the maximum supported resolution is limited to Full HD.

An active DisplayPort™ to HDMI 2.0 adapter is required to connect an Ultra HD-capable monitor or TV through an HDMI 2.0 interface. These adapters are available as accessories.

DisplayPort™ Multi-Stream Transport (MST) protocol technology allows a series connection of up to three monitors. This requires monitors that have a DisplayPort™ MST hub. Monitor 1 is connected direct to the BTC22 DisplayPort™ and the video signal is connected to monitor 2 and monitor 3 in series.

#### Note

The BTC22 allows a series connection of up to three monitors.





### 3.2 Security Context

The BTC22 devices are intended to be used:

1. as a thin client/PC that is connected to a known, trusted "Automation Network" or connected to a system that is located in an "Automation" or "Enterprise Network".
2. within the internal "Automation" or "Enterprise network". Both are secured networks, with known, trusted participants which is physically and logically separated from the company network.
3. with a firewall that must be configured in a way, that only specific ports are redirected into other subnets and that an external access from outside those networks is not possible.
4. within non-public environments where access is controlled and where only known persons (operators) have access to the device.

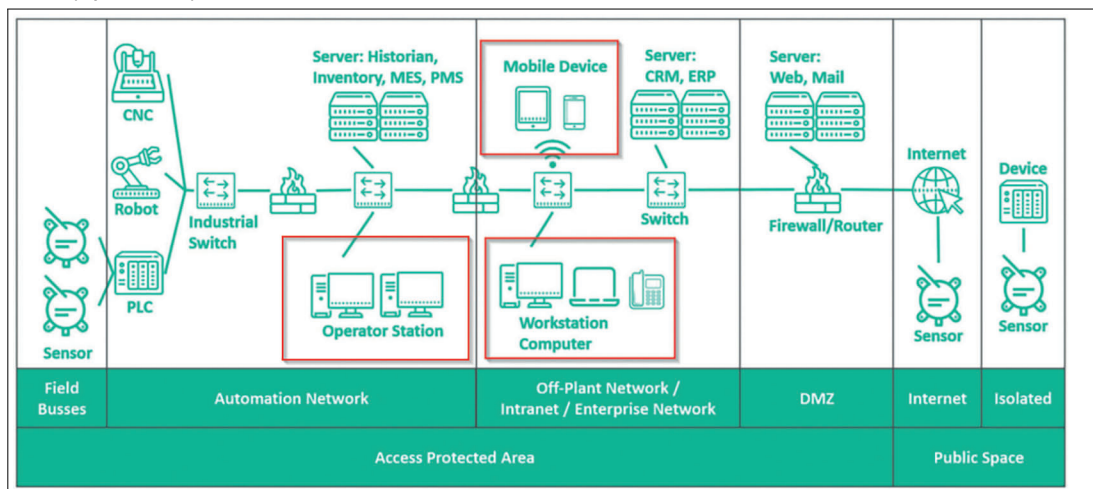


Figure 3.2

Please note and implement the following security measures:

- Change the password(s) in commissioning.
- User should encrypt OS with credential store in TPM to increase security.
- Commissioning should be fully completed before the device is installed in field.
- In commissioning, use secure boot.
- The device should be protected from external environmental influences (e.g. moisture)
- The user should encrypt the operating system using the credential store in the TPM to increase security.
- Restrict physical access so that unauthorized persons cannot access the device.

### 3.3 Firmware

#### Shell 6

Pepperl+Fuchs VisuNet Remote Monitors (RMs) and Box Thin Clients (BTC) are industrial-grade thin-client solutions that provide a simplified, modern user interface for operators. The firmware of an RM, called VisuNet RM Shell, enables users to easily access applications that run on a host system (e.g., workstation PC or server) via Ethernet.

With VisuNet RM Shell, the latest versions of common remote protocols, such as RDP 10 or VNC are supported. With these protocols, the RMs / BTCs can be easily integrated into all major process control systems—whether they are virtualized or conventional workstation-based setups.

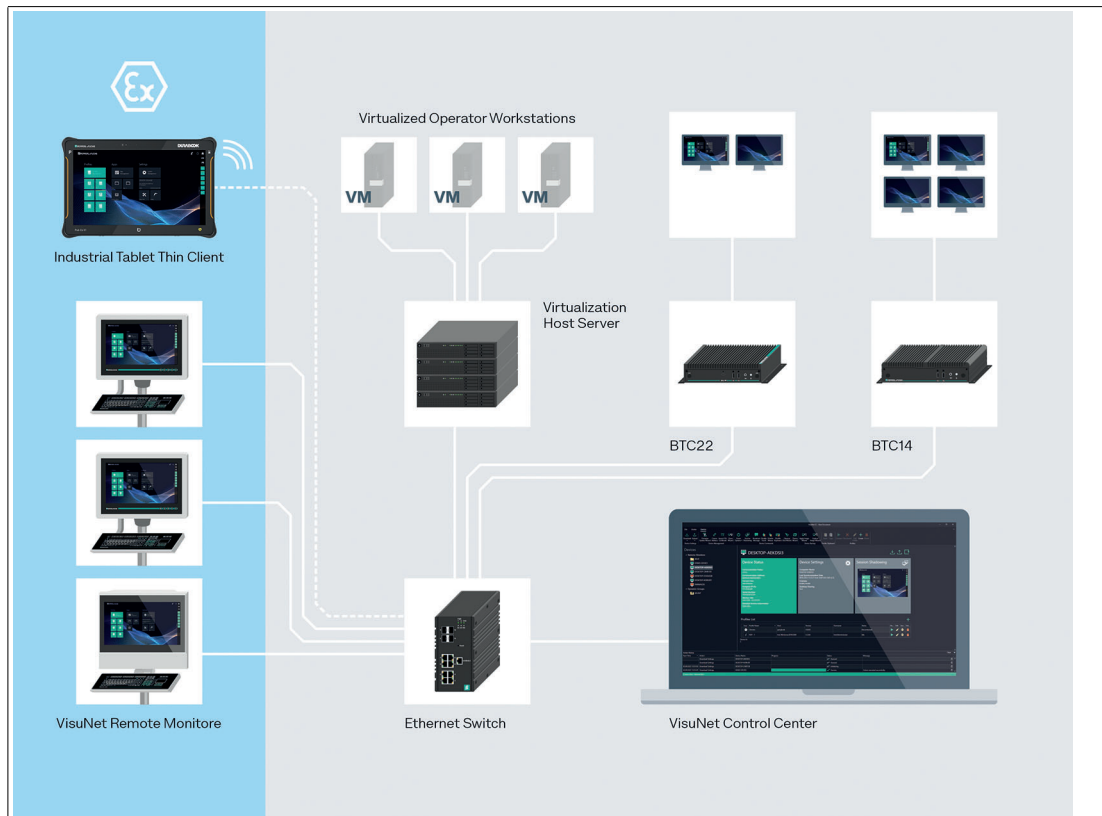


Figure 3.3

Further, VisuNet RM Shell has a tailored user interface, which only shows the important system aspects that are relevant for the configuration of the RM / BTC. This makes the integration of an RM / BTC into the process control system simpler than ever before. Configuring a new RDP connection, for example, can be done in a few steps. This is achieved via a consistent, touch-screen-optimized design across all protocol editors.

VisuNet RM Shell also helps increase process stability. It ensures a stable connection to the process control host system and an error-free display of the process pictures.

The auto-connect function can be used to configure RMs / BTCs in such a way that they automatically establish a connection to a designated host system, without any further intervention from the user. While temporarily interrupted connections are automatically re-established, backup hosts can be specified in VisuNet RM Shell to which an RM / BTC can automatically connect if a host system fails.

In addition to support for remote protocols, VisuNet RM Shell also offers restricted web browser features, which can be enabled via an optional professional license key. This allows fixed addresses to web applications like web-based Manufacturing Execution Systems (MES) to be defined. Users with administrator rights can restrict operator access to these pre-defined websites. This increases system security and reduces the risk of malware infiltration.

The Shell 6 manual describes the features and functions of VisuNet RM Shell 6 in detail.

## 3.4 Technical Data



### Note

The standard version of the BTC22 is BTC22-NA-1BA1-NN0.

Hardware	
Processor	Intel® Elkhart Lake Atom x6413E
RAM	8 GB DDR4
Mass storage	64-GB eMMC

Supply	
Power supply	Input voltage: 12 ... 28 V DC Input current: max. 2 A - 1 A Input via 2.5-mm power socket (with double insulation from the mains)
Maximum load (2x FHD Display, CPU full load, 14 W USB loads)	
4 GB RAM:	Maximum load (@1.56A): max. 29.6 W
8 GB RAM:	Maximum load (@1.7A): max. 32.3 W

Interface	
Interface type	Front side: 1x USB 3.2 Gen1 w/ DP alt mode, Type C 2x USB 2.0 Type A, power button, audio line out  Back side: 3x 1000Base-T Ethernet, 2x DisplayPort 1.4, 1x DC (DC jack 5.5 x 2.5 mm with lock mechanism), 2x USB 3.2 Gen 1 Type A, 1x RS-232/RS-485 with RJ45 connector

Directive conformity	
<b>Electromagnetic compatibility</b>	
Directive 2014/30/EU	EN 61326-1:2013 EN 55032:2015, AC:2016
<b>RoHS</b>	
Directive 2011/65/EU (RoHS)	EN 50581:2012

Software	
Operating system	VisuNet RM Shell 6.x (based on Microsoft® Windows® 10 IoT Enterprise 2021 LTSC)

Ambient conditions	
Operating temperature	<b>Temperature classes:</b> A: Industrial temperature grade 0° ... 55° C (32 ... 131 °F)
Storage temperature	-20 ... 60 °C (-4 ... 140 °F)
Relative humidity	≤ 95% at 40°C (non-condensing acc. to EN 60068-2-78)
Shock resistance	40 g (11 ms) when operating
Vibration resistance	3 g <sub>rms</sub> 5 ... 500 Hz

Mechanical specifications	
Housing material	Aluminum body and sheet metal, painted/powder-coated
Degree of protection	IP40
Mass	1.32 kg
Dimensions	216 mm x 130 mm x 47 mm
Mounting	Desktop or wall mounting, VESA mount (100 x 100 mm and 75 x 75 mm) and DIN rail mounting via optional adapter
Note	Passive cooling, no moving parts <b>Power supply not included.</b>

International approvals	
Approved for	CE (EN61326-1/ EN55032/ EN55035 Class A) FCC Class B and ICES-003 Issue 7
UL approval	"UL Listed" for Canada and USA, E223772 (Ordinary Location)

### 3.5 Dimensions and Nameplates

#### Dimensions

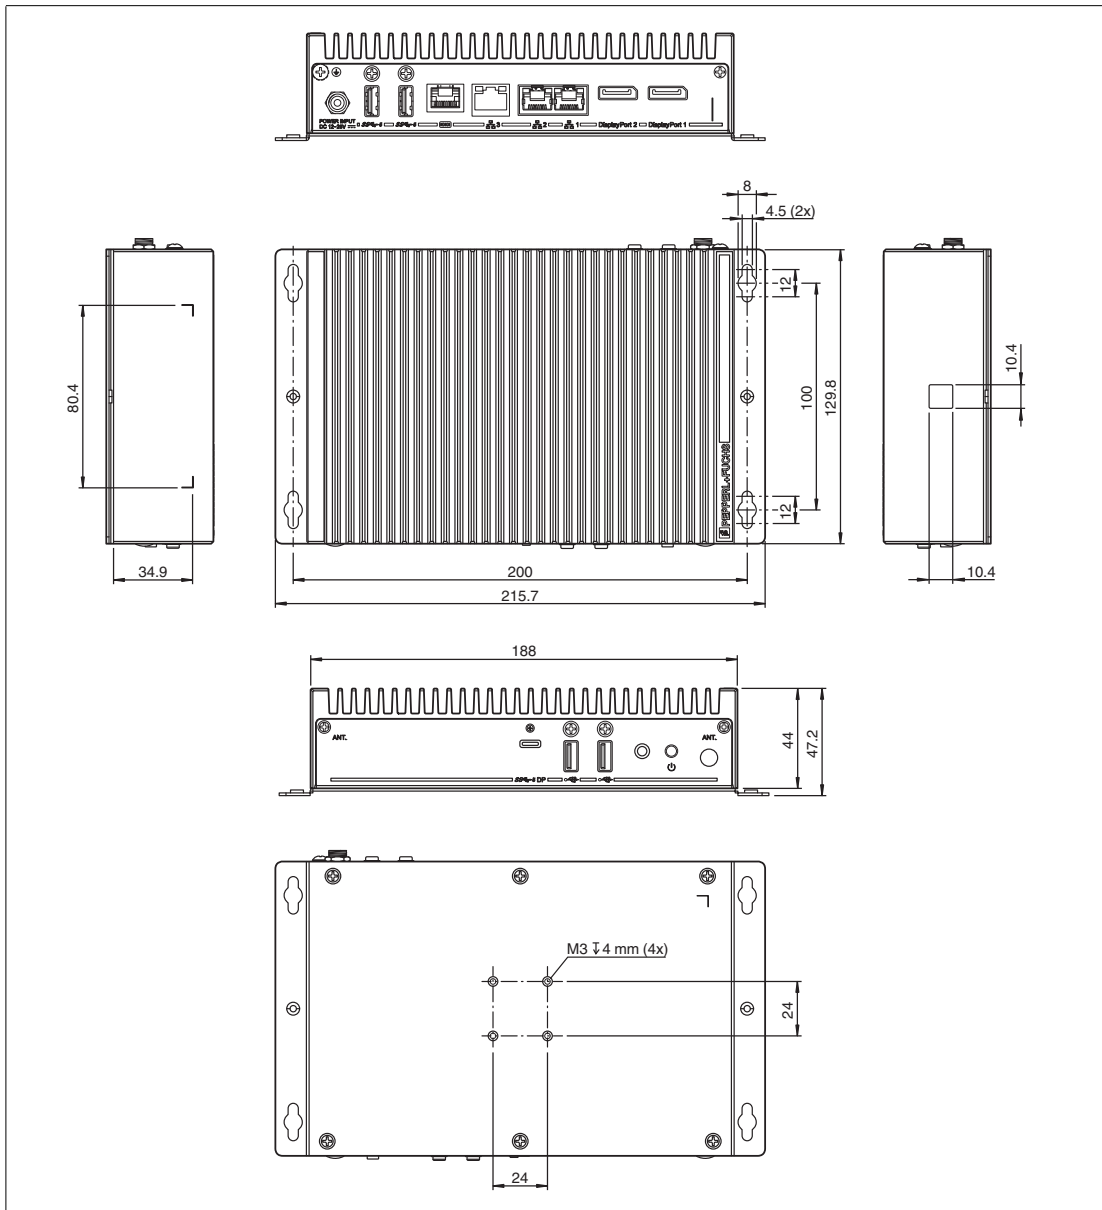


Figure 3.4 BTC22 dimensions

#### Labels

The following labels are attached to the BTC22.

Nameplate



Operator needs consult this manual, all warnings as applicable need to be taken into consideration.



Hot surface



Certificate of Authenticity (COA)



(Label example)

The data can be found on the product marking and on the COA label. The product marking is located on the side of the device. The COA label is only available with pre-installed Windows® operating systems and is affixed to the back of the device.

## 4 Installation

### 4.1 Mounting



#### Warning!

Installation!

The device must be installed by competent personnel in accordance with the instructions. All applicable laws and regulations must be carefully observed.

#### Preparation for Installation

Check the package contents and all accessories ordered for completeness and signs of damage. If the contents are incomplete, damaged, or do not match your order, contact your delivery service immediately.

#### Mounting

The device is intended for indoor use. If placed in a suitable housing, the device can also be used outdoors.



#### Note

If the device is used in a manner not prescribed by the manufacturer, the built-in protective function of the device may be impaired.

The device is cooled passively. Natural airflow is required to ensure proper cooling. If the device is installed in a housing, power dissipation from the device must be taken into account (see chapter 4.2).

Vertical installation provides optimal cooling since air passes through the cooling fins.

Observe the following recommended distances to other electrical components or to a housing wall:

- Below the device (if mounted vertically):  $\pm 100$  mm
- All other sides:  $\pm 50$  mm

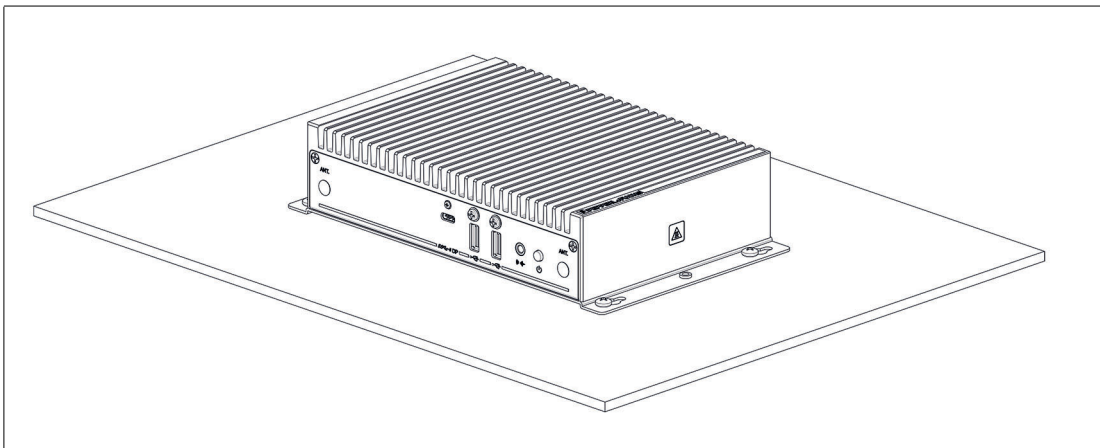


Figure 4.1 Horizontal mounting/desktop mounting



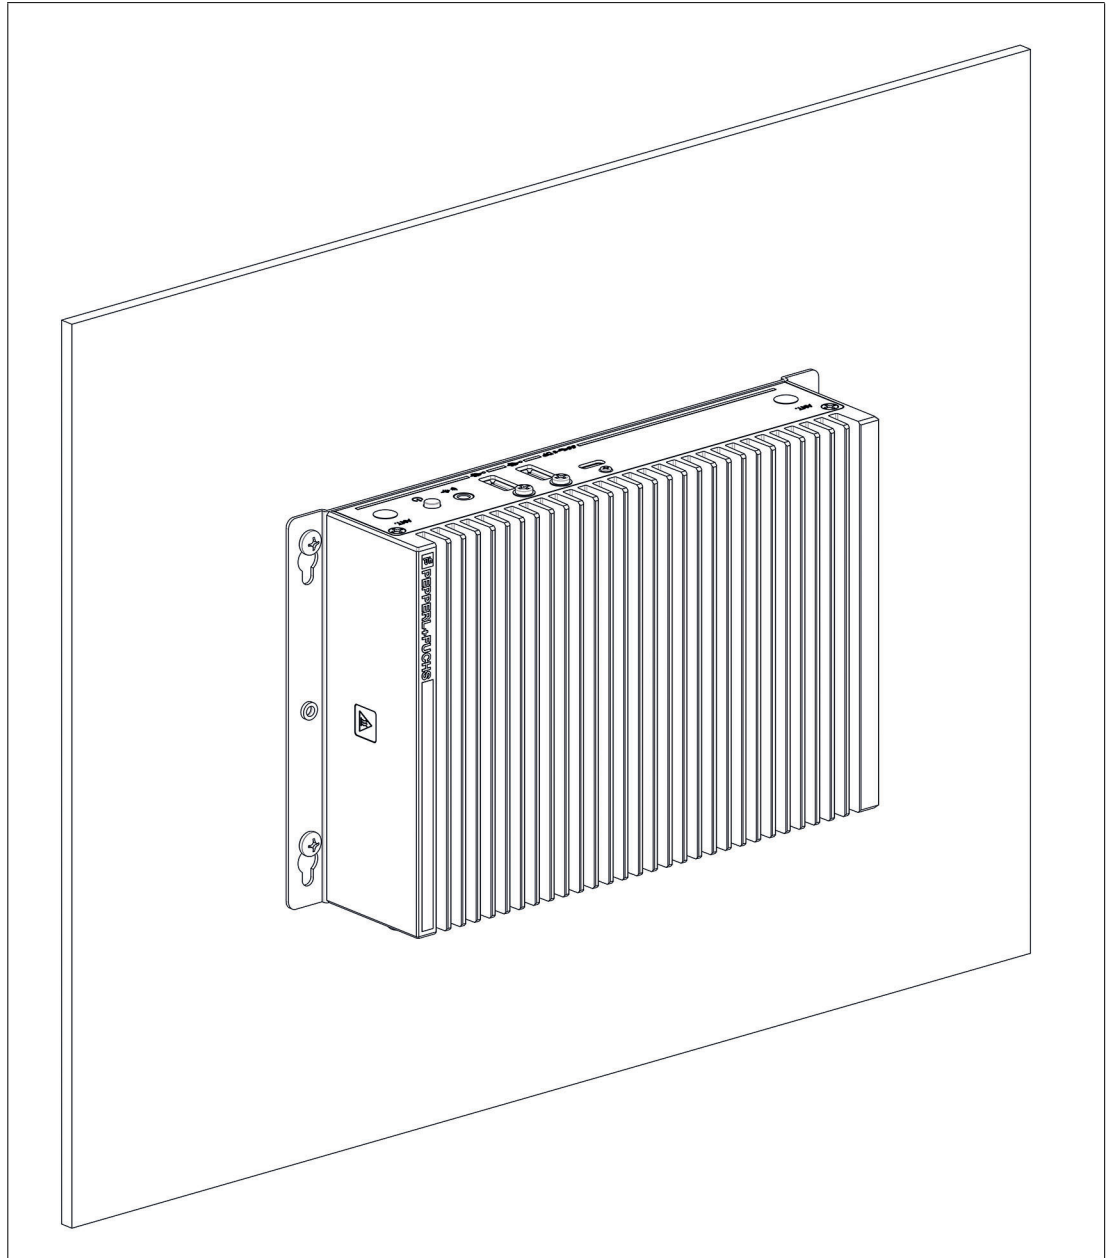


Figure 4.2 Vertical mounting



**Danger!**

Ambient conditions!

Do not operate the device outside the specified ambient temperature.

---



**Warning!**

Hot surface!

The surface of the device may become hot during operation.

---



## DIN Rail Mounting

Following tools and installation materials required:

- Screwdriver,
- 4 anchors,
- 4 screws (included in scope of delivery).

1. Attach the DIN rail adapter to the back of the BTC22. Use the thread on the bottom of the BTC22 to secure the adapter. Tighten the supplied screws to a tightening torque of 0.4 Nm.

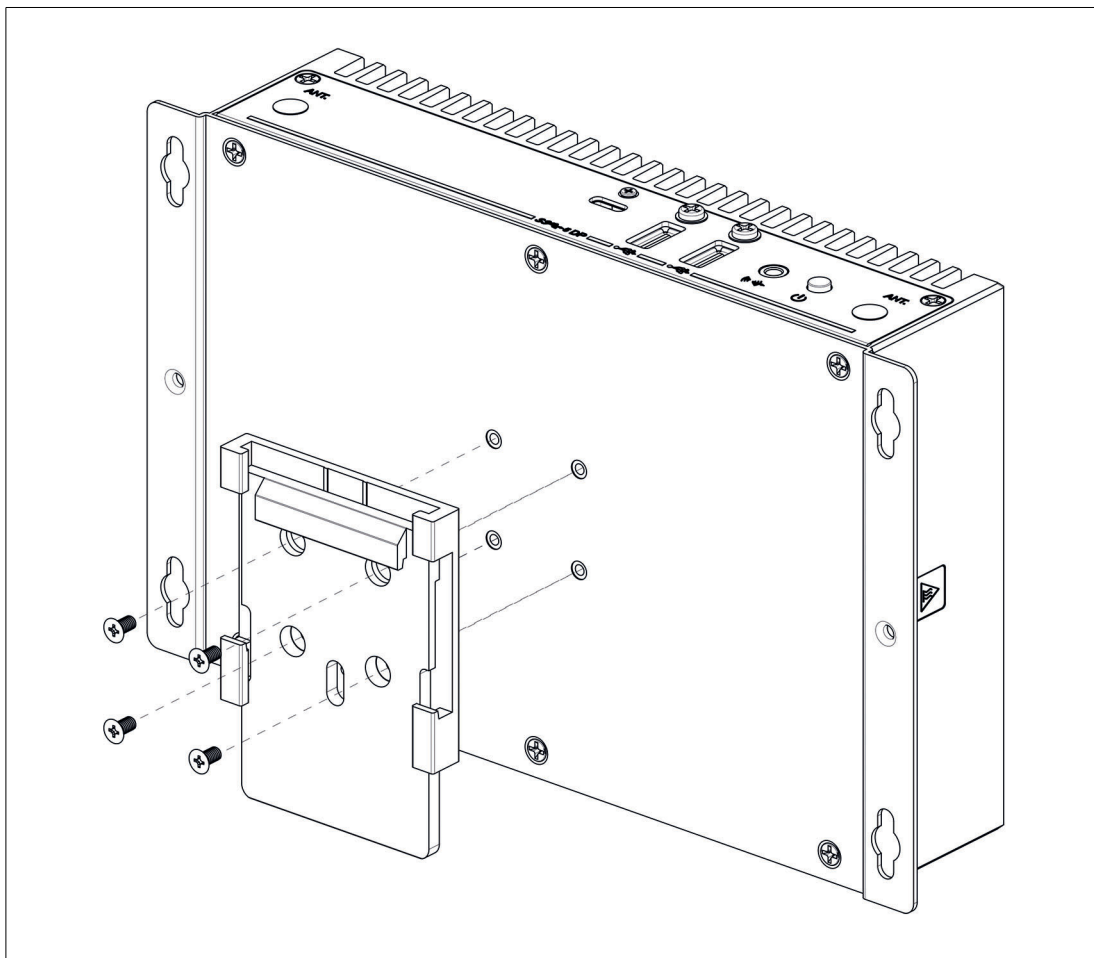


Figure 4.3

2. There is a movable clamp on the top of the DIN rail adapter. Install the BTC22 at a slight angle with the movable clamp over the DIN mounting rail. Apply light pressure to pull the BTC22 downward and clamp the adapter into the rail.

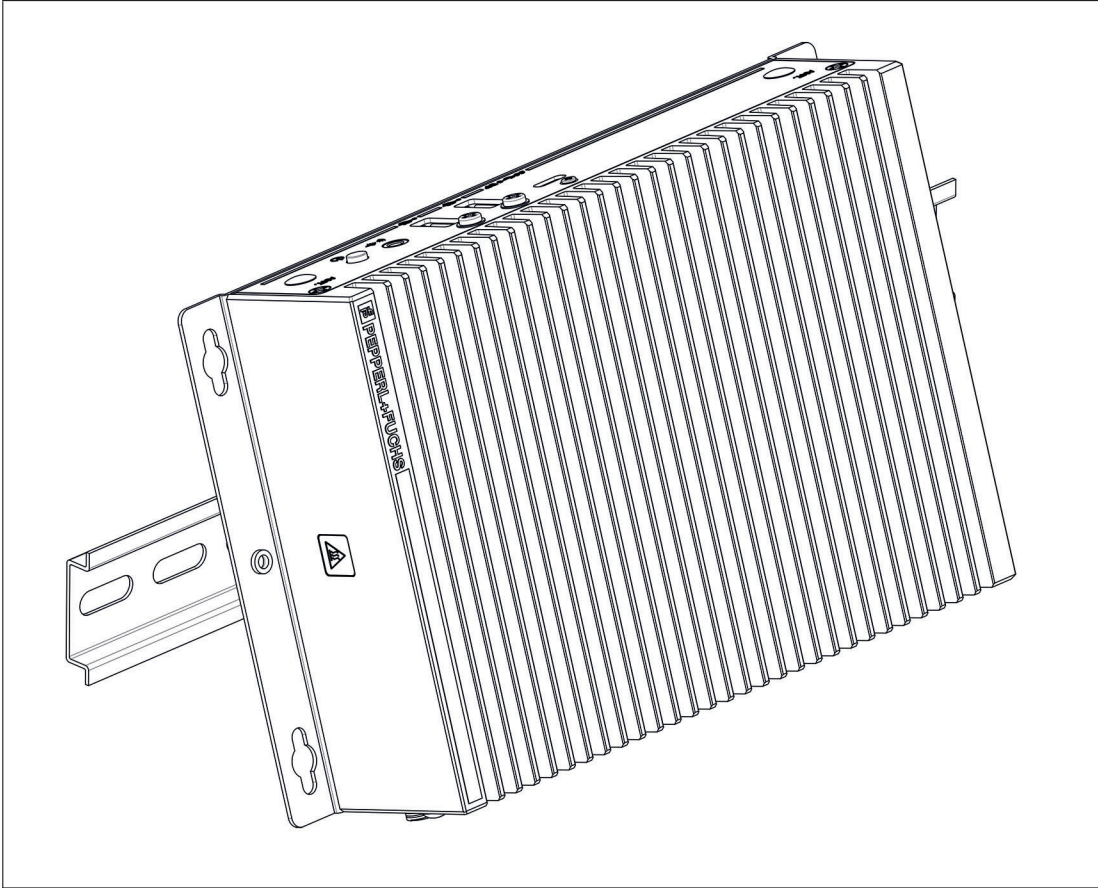


Figure 4.4

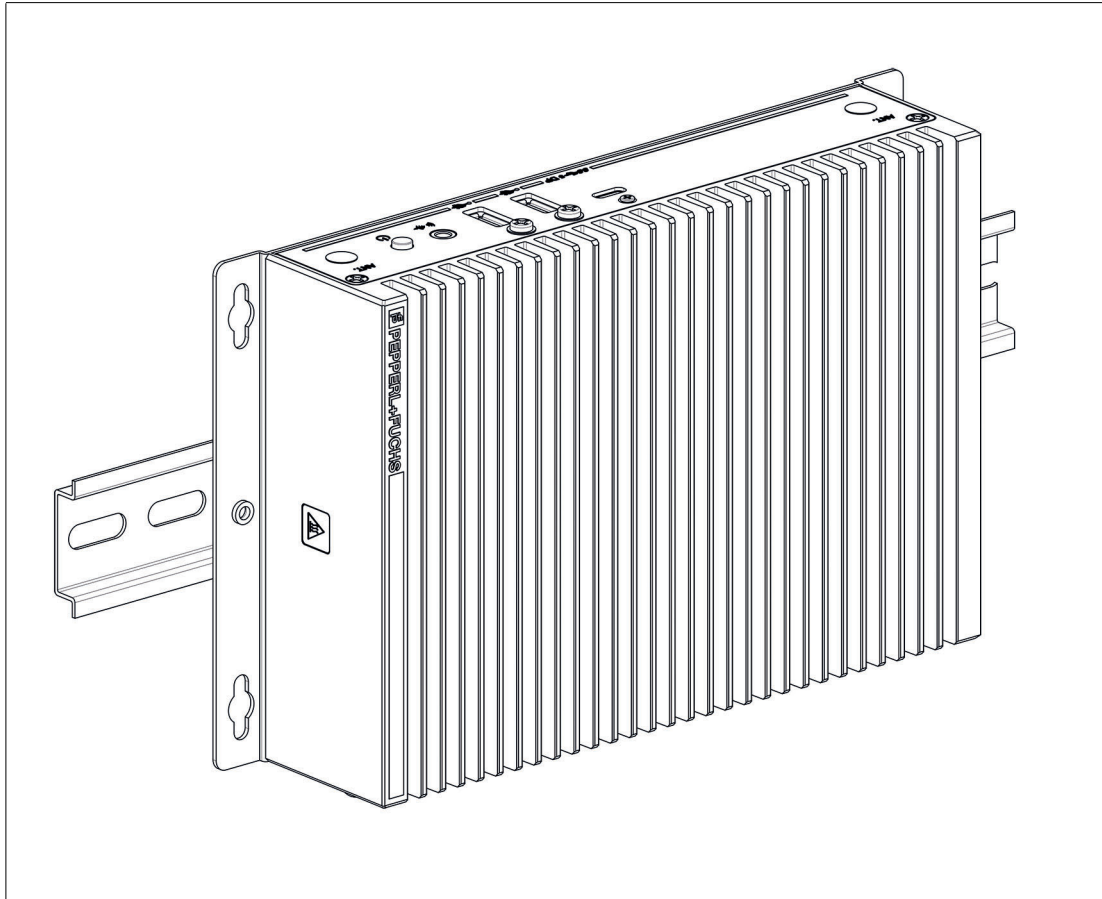


Figure 4.5



## Wall Mounting



### Caution!

Insufficient load capacity!

If the mounting surface for wall and vertical mounting does not have sufficient load capacity, the device may fall and be damaged.

It is the responsibility of the installer to select a suitable location with sufficient strength for the equipment.

Use suitable mounting screws with a diameter of 4 mm (not included in the scope of delivery) and the following installation diagram to secure the device to the wall. Use wall anchors if necessary.

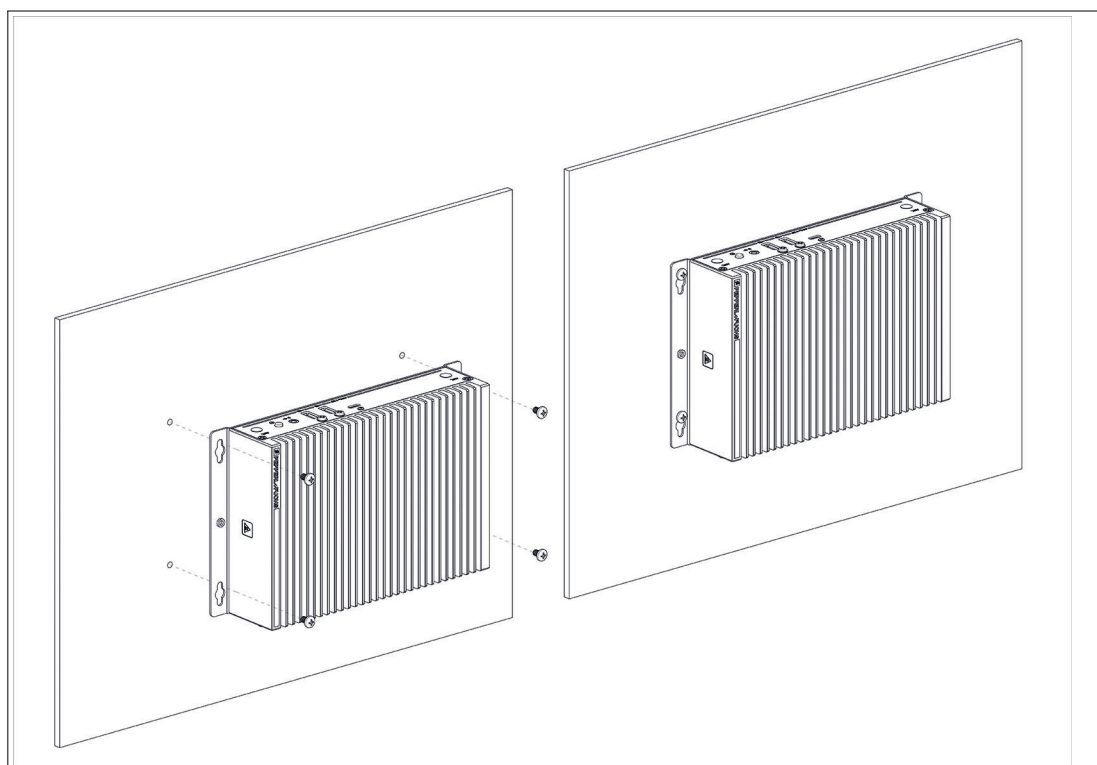


Figure 4.6

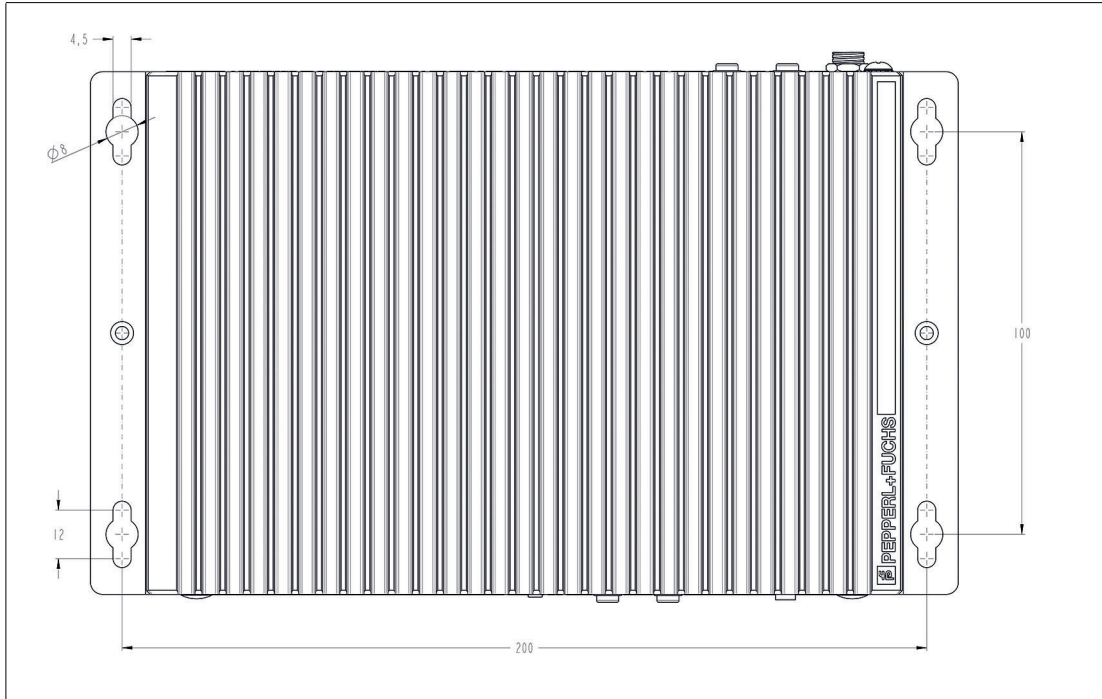


Figure 4.7 Installation diagram



## VESA Mounting

1. Attach the VESA fixture (100 x 100 mm or 75 x 75 mm) to the VESA arm or the back panel of the monitor (using the screws provided by the monitor manufacturer).

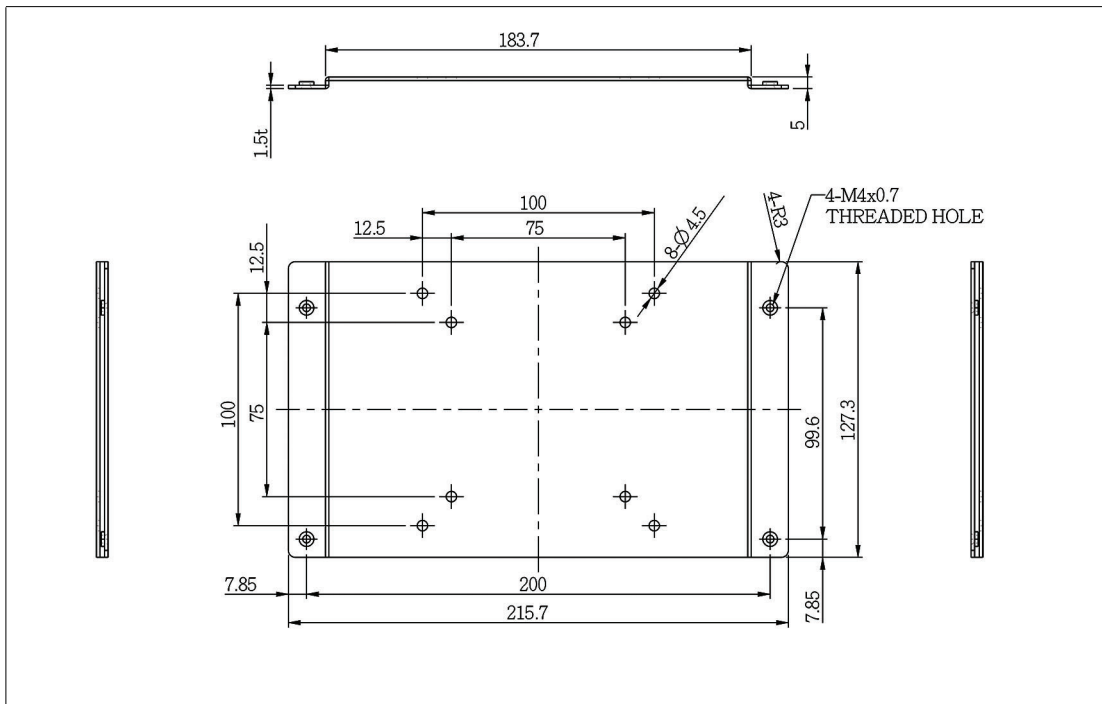


Figure 4.8

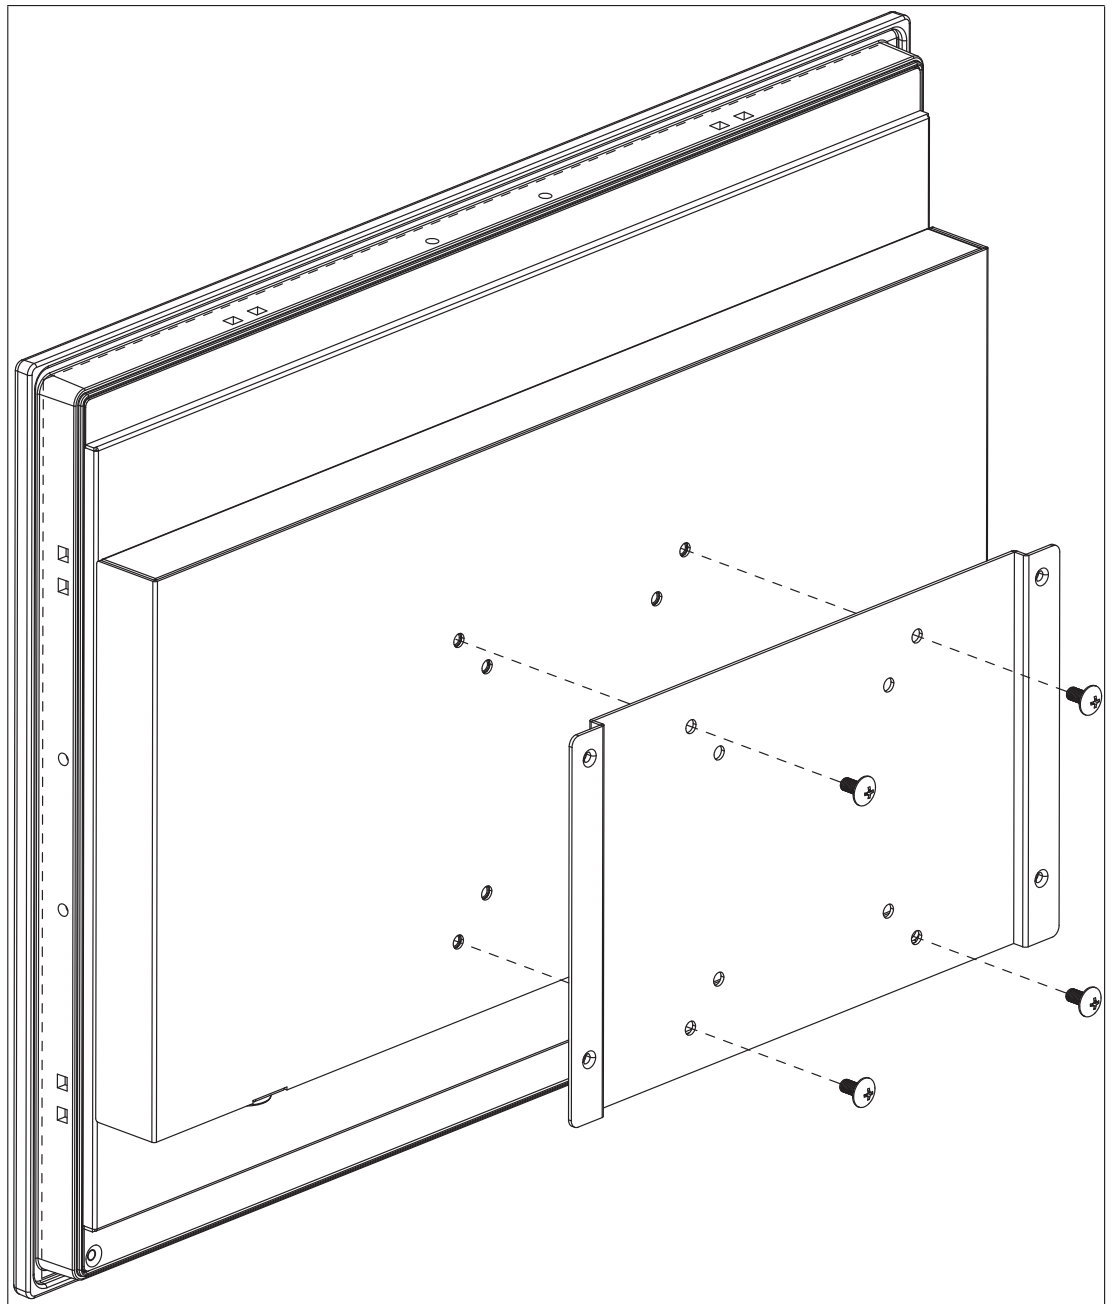


Figure 4.9



**Danger!**

Ambient temperature range

Warning. The ambient temperature range needs to be taken into consideration for use in hazardous locations.

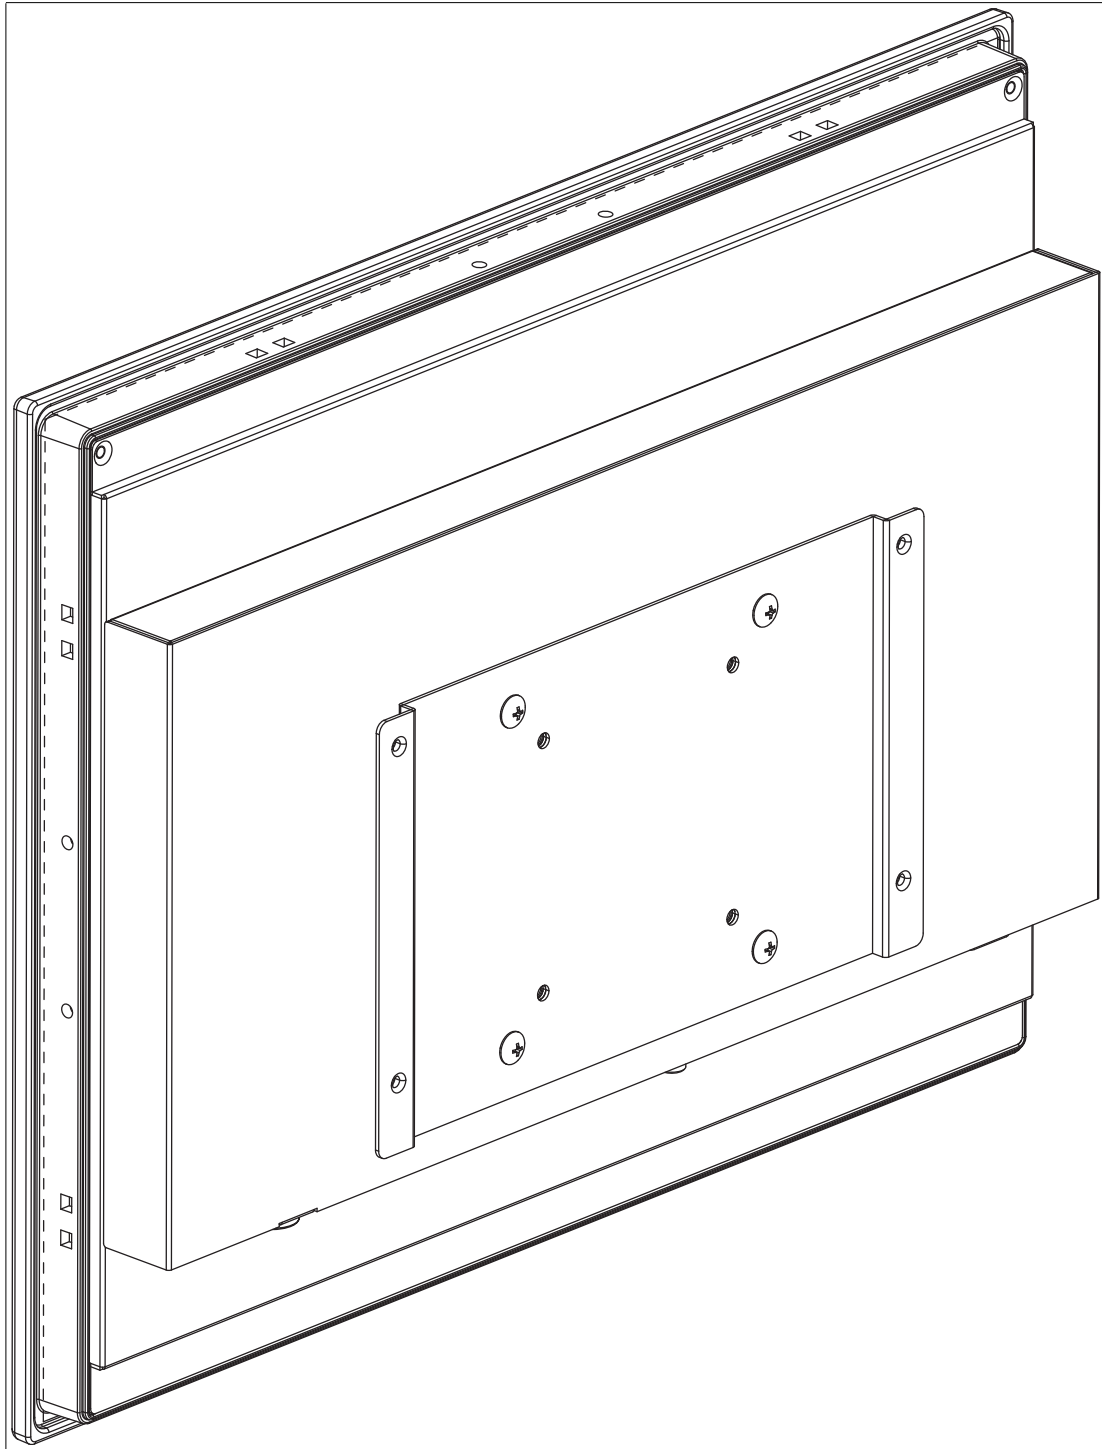


Figure 4.10

2. Secure the BTC22 to the VESA fixture using the supplied screws.
3. Screw M4, tightening torque:  $0.7 \pm 0.1$  Nm



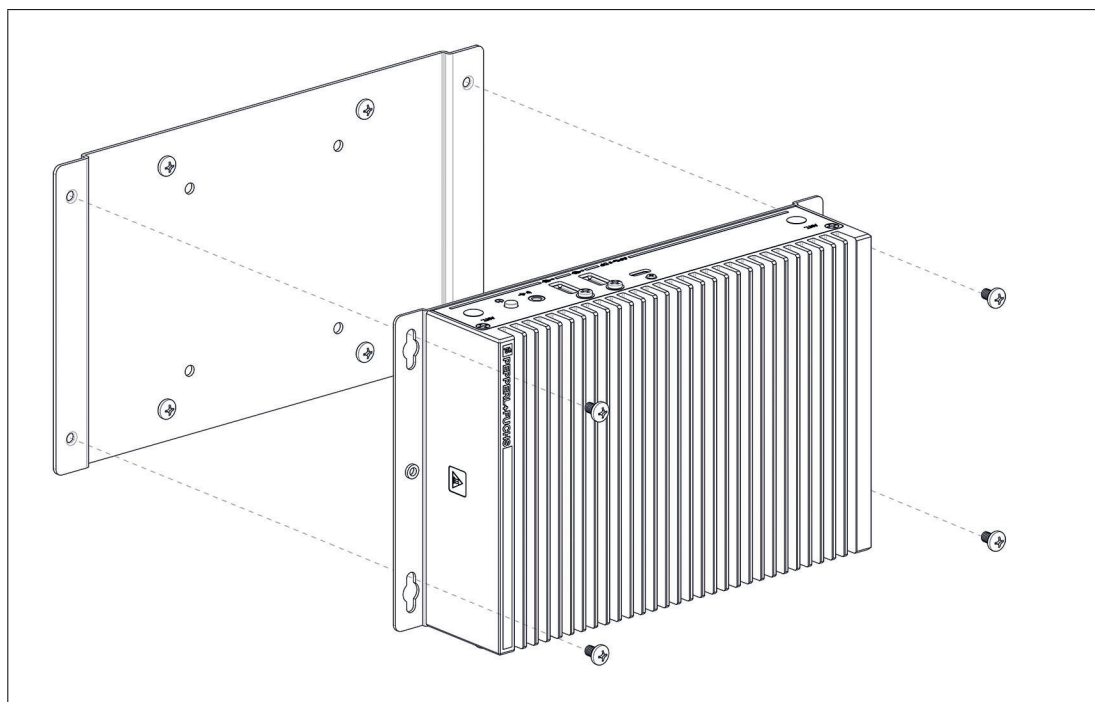


Figure 4.11

## 4.2 Electrical Connection

Power consumption at 19 V supply voltage:

- Maximum load: 33 W (2x FHD Monitor, CPU full load, 14W USB loads)
- Normal operation: 18.5 (2x FHD Monitor, CPU full load, Mouse, Keyboard)



### Commissioning

1. Remove the dummy plugs from the ports where connections are to be made. To prevent dust ingress, leave the dummy plugs in ports that are not in use.
2. Connect the BTC22 to the network via the Ethernet port.
3. Connect the BTC22 to the mouse and keyboard via the USB 2.0 port.
4. Connect the BTC22 to the display via a DisplayPort™. The DisplayPort™ interface provides mechanical strain relief to protect against vibration. Locking mechanisms are available as accessories for additional strain relief.
5. Optional strain-relief locking mechanisms can also be attached to the USB ports.
6. Connect the BTC22 to the AC/DC power supply (e.g., FSP065-REBN2).



#### Note

Strain-relief locking mechanisms are available as accessories. The screws required to secure the locking mechanisms are supplied in the scope of delivery for the BTC22.

## 4.3 I/O Connection



### Tip

Connections should be mechanically secured by e.g. the "yellow" cable retainer and/or the screws for each type of connection.

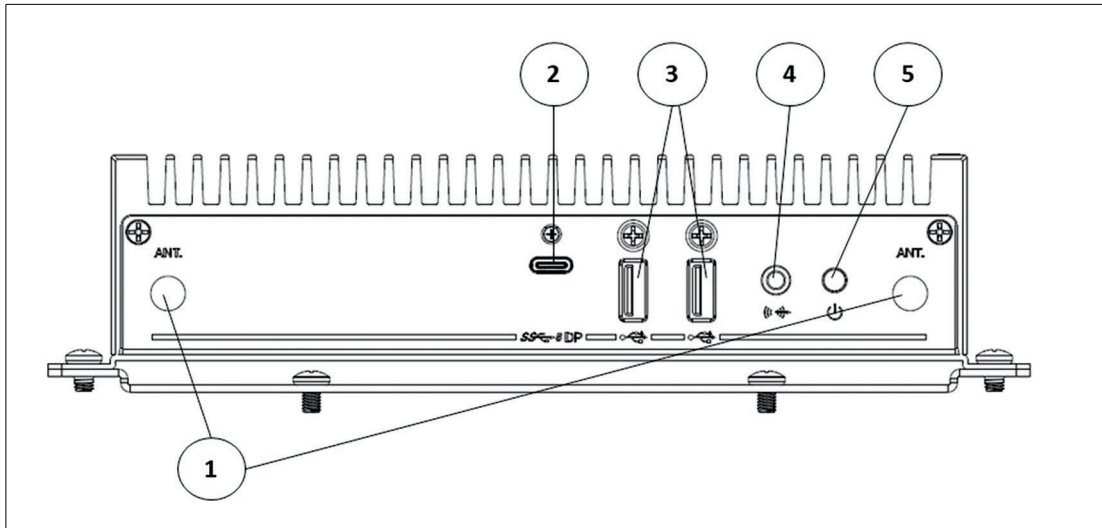


Figure 4.12 BTC22 ports, front

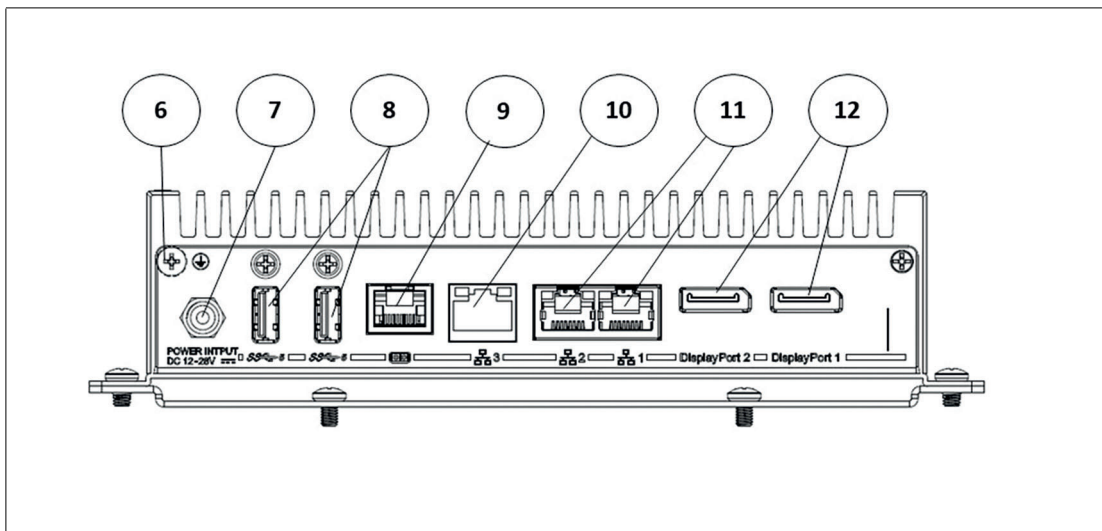



Figure 4.13 BTC22 ports, rear

### Port Overview

Number	Interface type	Description
<b>Front</b>		
1	Antenna opening x 2 (dummy plug)	Dummy plug antenna connections, one on the left and one on the right
2	USB Type C	3.2 Gen 1 with DisplayPort alt mode
3	USB <sup>1</sup>	USB 2.0 x 2

2024-04

Number	Interface type	Description
④	Audio	Line output x 1
⑤	Symbol	On/off switch
<b>Back</b>		
⑥	Ground connection	Not required for standard installations
⑦	Power plug	5.5 x 2.5 mm DC jack bush with locking mechanism (M8 screw) 12 VDC to 28 VDC   Polarity
⑧	USB <sup>2</sup>	USB 3.1 (Gen 1) x 2
⑨	COM	RS-232/RS-485 port with RJ45 connector x 1
⑩	Ethernet 3 (tertiary port) 1000BaseT RJ45 plug	1000BaseT RJ45 plug
⑪	(Secondary port) Ethernet 1 (Primary port)	1000BaseT RJ45 plug
⑫	DisplayPort™ 1 DisplayPort™ 2	DP 1.2 up to 2 x 4K (Ultra-HD) at 60 Hz (Up to 3 Full HD monitors via series connection)

1. Only four of these USB ports can be operated simultaneously in high-current mode, max. 14 W.

2. This port is not to be used in a hazardous location

## RJ45 Port RS-232 Pinout



Figure 4.14 RJ-45

Pin	RJ-45	DSUB DE-9	Description
1	DSR	DCD	Data Carrier Detect (E)
2	DCD	RXD	Received Data (E)
3	DTR	TXD	Transmitted Data (A)
4	GND	DTR	Data Terminal Ready (A)
5	RXD	GND	Ground
6	TXD	DSR	Data Set Ready (E)
7	CTS	RTS	Request to Send (E)
8	RTS	CTS	Clear to Send (E)

## RJ45 Port RS-485 Pinout

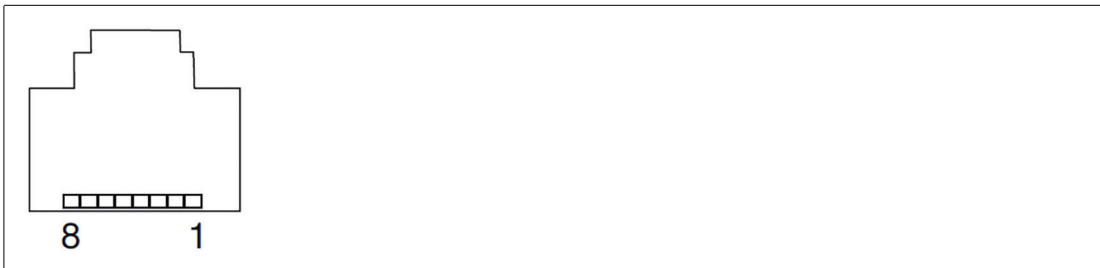


Figure 4.15 RJ-45

Pin	RJ-45	DSUB DE-9
1	COM_POWER (Jumper option)	RS-485_D-
2	RS-485_D-	RS-485_D+
3		-
4	GND	-
5	RS-485_D+	GND
6		COM_POWER (Jumper option)
7		-
8		-

### RJ45 Port RS-422 Pinout

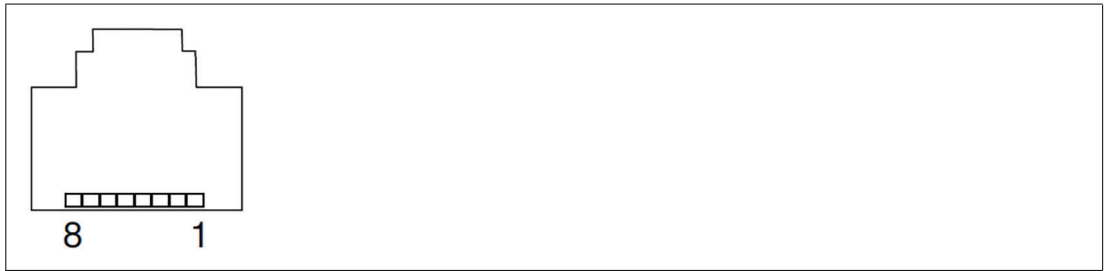


Figure 4.16 RJ-45

Pin	RJ-45	DSUB DE-9
1	COM_POWER (Jumper option)	RS-422_TX-
2	RS-422_TX-	RS-422_TX+
3	RS-422_RX-	RS-422_RX+
4	GND	RS-422_RX-
5	RS-422_TX+	GND
6	RS-422_RX+	COM_POWER (Jumper option)
7		
8		

### RJ45 Port

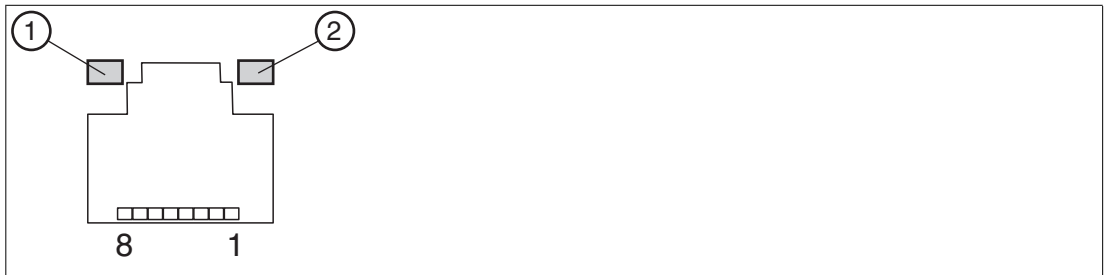


Figure 4.17 RJ45 pinout with LED display

Pin	Type	Color
1	Transceive Data+	WH/OR
2	Transceive Data-	OR/WH or OR
3	Receive Data+	WH/GN
4	Bidirectional Data+	BU/WH or BU
5	Bidirectional Data-	WH/BU
6	Receive Data-	GN/WH or GN
7	Bidirectional Data+	WH/BN
8	Bidirectional Data-	BN/WH or BN

**LED Indicator**

No.	Type	Description
①	Right LED	Yellow Off – No Connection / No Link Yellow On – Connection / Link Established Yellow Flashing – Connection / Link Established with Data actively being transmitted
②	Left LED	LED Off – 10 Mbps Speed detected Green On – 100 Mbps Speed detected Orange – 1 Gbps Speed detected

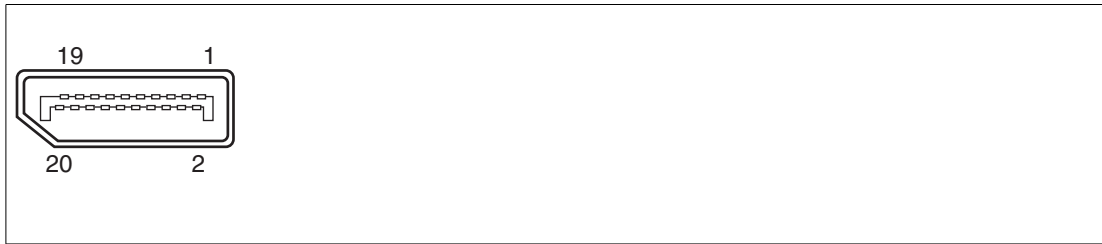
**DisplayPort™**

Figure 4.18

Pin	Type	Description	Input/output
1	ML_Lane0+	DP Data 0+	Output
2	GND	Ground	-
3	ML_Lane0-	DP Data 0-	Output
4	ML_Lane1+	DP Data 1+	Output
5	GND	Ground	-
6	ML_Lane1-	DP Data 1-	Output
7	ML_Lane2+	DP Data 2+	Output
8	GND	Ground	-
9	ML_Lane2-	DP Data 2-	Output
10	ML_Lane3+	DP Data 3+	Output
11	GND	Ground	-
12	ML_Lane3-	DP Data 3-	Output
13	CONFIG1 CAD	Cable-adapter detection	Input
14	CONFIG2	Ground (pull down)	-
15	AUX_CH+	Auxiliary channel+	Input/output
16	GND	Ground	-
17	AUX_CH-	Auxiliary channel-	Input/output
18	HPD	Hot Plug Detect	Input
19	GND	Ground	-
20	DP_PWR	+3.3 V (fused)	Output

### USB Ports



Figure 4.19 USB 2.0

Pin	Type	Description
1	USB_P5V_-fused (A)	+5 V (fused)
2	USB_D0M (I/O)	Data-
3	USB_D0P (I/O)	Data+
4	USB_GND	GND



Figure 4.20 USB 3.0

Pin	Type	Description	Input/output
1	VBUS	+ 5 V (fused)	Output
2	D-	Data channel USB 2.0	Input/output
3	D+	Data channel USB 2.0	Input/output
4	GND	Ground	-
5	RX-	Data channel USB 3.0	Input
6	RX+	Data channel USB 3.0	Input
7	GND	Ground	-
8	TX-	Data channel USB 3.0	Output
9	TX+	Data channel USB 3.0	Output

## USB Type C 3.2 Pinout

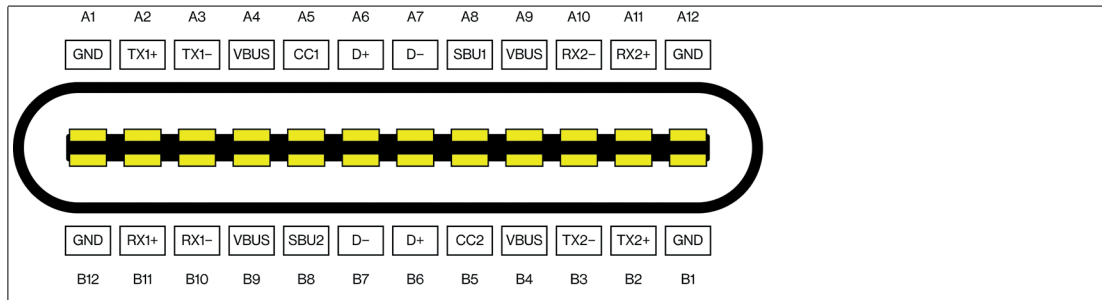


Figure 4.21

Pin	USB Type C 3.2
A1	GND
A2	TX1+
A3	TX1-
A4	VBUS
A5	CC1
A6	D+
A7	D-
A8	SBU1
A9	VBUS
A10	RX2-
A11	RX2+
A12	GND
B1	GND
B2	TX2+
B3	TX2-
B4	VBUS
B5	CC2
B6	D+
B7	D-
B8	SBU2
B9	VBUS
B10	RX1-
B11	RX1+
B12	GND



### Ethernet Port



Figure 4.22

Pin	Type	Description
1	BI_DA+	Bidirectional data A+, input/output
2	BI_DA-	Bidirectional data A-, input/output
3	BI_DB+	Bidirectional data B+, input/output
4	BI_DC+	Bidirectional data C+, input/output
5	BI_DC-	Bidirectional data C-, input/output
6	BI_DB-	Bidirectional data B-, input/output
7	BI_DD+	Bidirectional data D+, input/output
8	BI_DD-	Bidirectional data D-, input/output

### LED Indicator

No.	Type	Description
①	Right LED	Yellow Off – No Connection / No Link Yellow On – Connection / Link Established Yellow Flashing – Connection / Link Established with Data actively being transmitted
②	Left LED	LED Off – 10 Mbps Speed detected Green On – 100 Mbps Speed detected Orange – 1 Gbps Speed detected

## 5 BIOS Settings



### Caution!

#### Warranty

Access to the BIOS is prohibited. Any access to the BIOS is at your own risk and is not covered by the warranty for repairs. Arbitrary changes to BIOS settings may affect device functionality. The BIOS is set according to customer requirements by default.



### Note

All BIOS settings are optimized for standard applications (use cases of BTC22). The BIOS is protected by the default password: `pepper1`. You must enter the password each time you enter the BIOS. To prevent unauthorized access and changes to the BIOS, we advise you to set your own strong administrator password once you have installed the device.



### Getting Started

1. Switch on the device.
2. During power-on, press DELETE on the keyboard.
3. Enter "pepper!" for the password.
4. Press ENTER.

### Navigation

Shortcut	Function	Description
Left/right arrow keys	Select screen	Menu bar and select a BIOS setup page, e.g., the main page
Up/down arrow key and click	Select element	Select a BIOS setup element or a subpage
Enter/double-click	Select	Select an option to edit its value or access a submenu
+ -	Change option	Change the field value of a specific setup element, e.g., date, time
F1	General Help	Displays the general Help window.
F2	Previous values	Loads previous values into the BIOS setup menu
F9	Optimized default values	Loads optimized default values into the BIOS setup menu
F10	Save and exit	Saves the current configuration and exits the BIOS setup menu
ESC	Exit	The <ESC> key allows the user to discard all changes and exit the BIOS setup menu. Press the <ESC> key to exit the BIOS setup menu without saving any changes. The following screen appears: Press the <Enter> key to discard changes and exit the menu. Or use the arrow keys to select "No" and then press the <Enter> key to cancel this function and return to the previous screen.

### BIOS Setup Menu

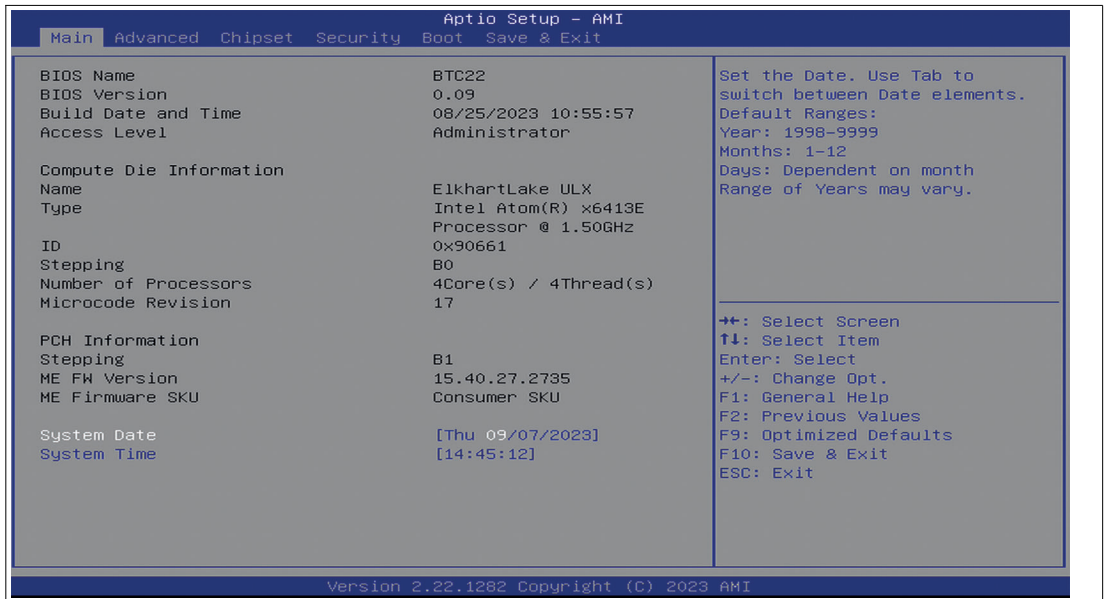


Figure 5.1 BIOS setup menu—home screen



#### Setting the System Date

1. Use the arrow keys to set the date.
2. Navigate to month, day, and year in sequence. Enter the appropriate value. Press ENTER to move to the next field.
3. Press F10 to save the changes.



#### Setting the System Time

1. Use the arrow buttons to set the time.
2. Navigate to hour, minute, and seconds in sequence. Enter the appropriate value. Press ENTER to move to the next field.
3. Press F10 to save the changes.

## 5.1 Creating a New BIOS Password

Select *Security* from the BIOS setup page to open the "Security" BIOS setup page.

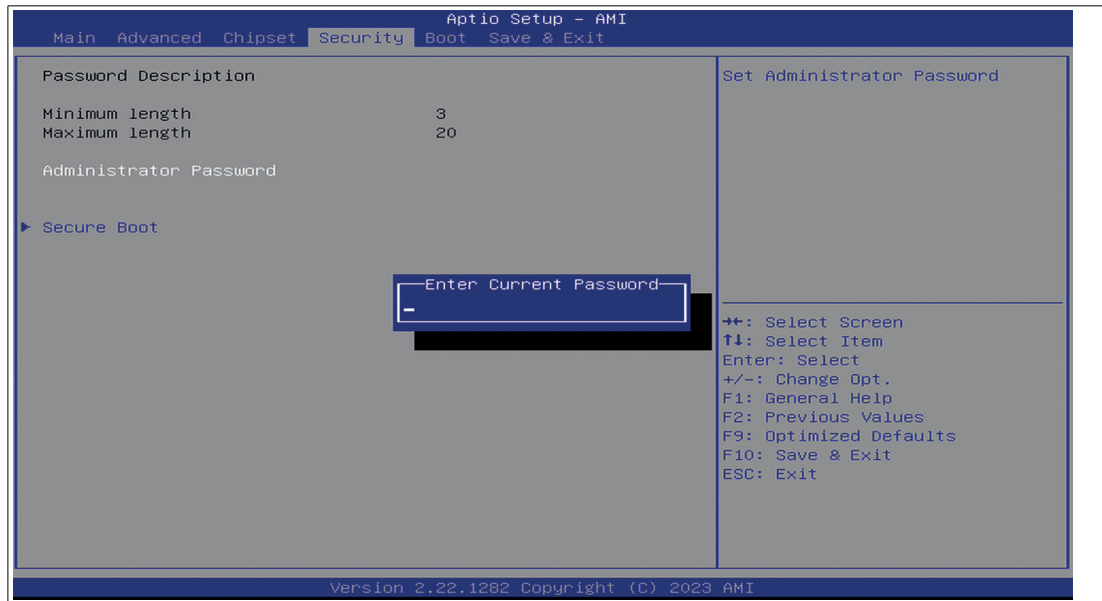


Figure 5.2 "Security" BIOS menu



### Changing the BIOS Password

The "Security" setup page allows you to set an administrator password for the BIOS.

1. Select *Setup Administrator Password* using the arrow keys and press Enter.
2. Enter a password of at least 3 characters. The password can be up to 20 characters long and is case sensitive.
3. Re-enter the password when the pop-up window appears prompting you to confirm the password.



#### Note

After changing, note down the password and keep it in a safe place. Pepperl+Fuchs assumes no liability in the event that the password is lost. If you forget the password, the device must be returned to Pepperl+Fuchs for a complete reset.

## 5.2 Changing Serial Interface Mode (RS-232, RS-485)

Select Advanced from the BIOS setup page.

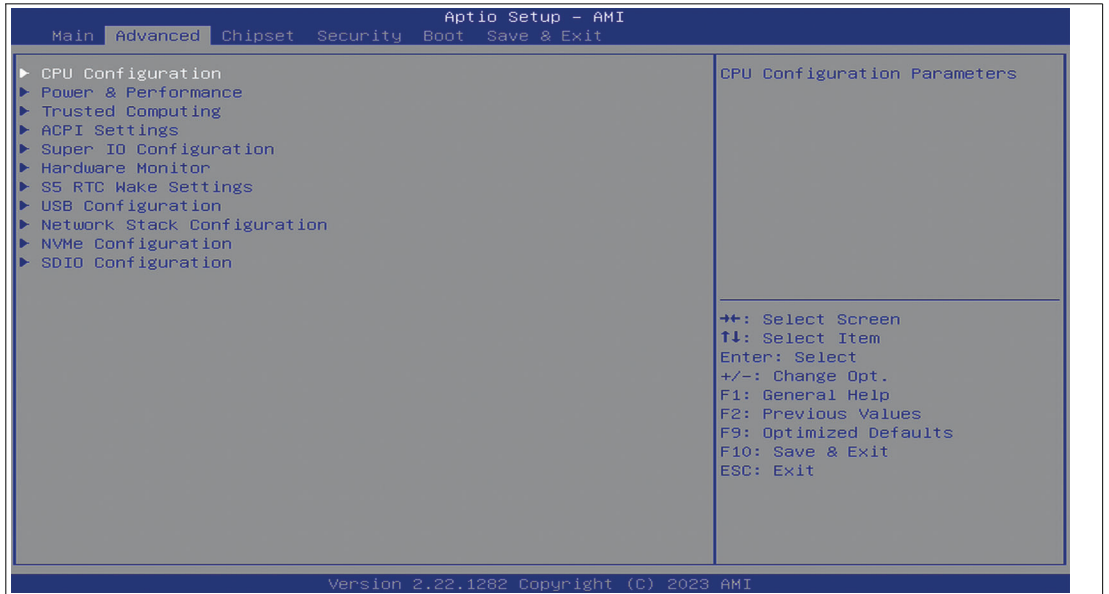


Figure 5.3 "Advanced" BIOS menu



### Configuring Advanced Settings

Super IO Configuration allows you to view and configure the Super I/O Chip parameters.

1. Select "Serial Port 1 Configuration". Press ENTER.
2. Select Enabled or Disabled. Press ENTER in the pop-up window.
3. Select the desired serial mode.

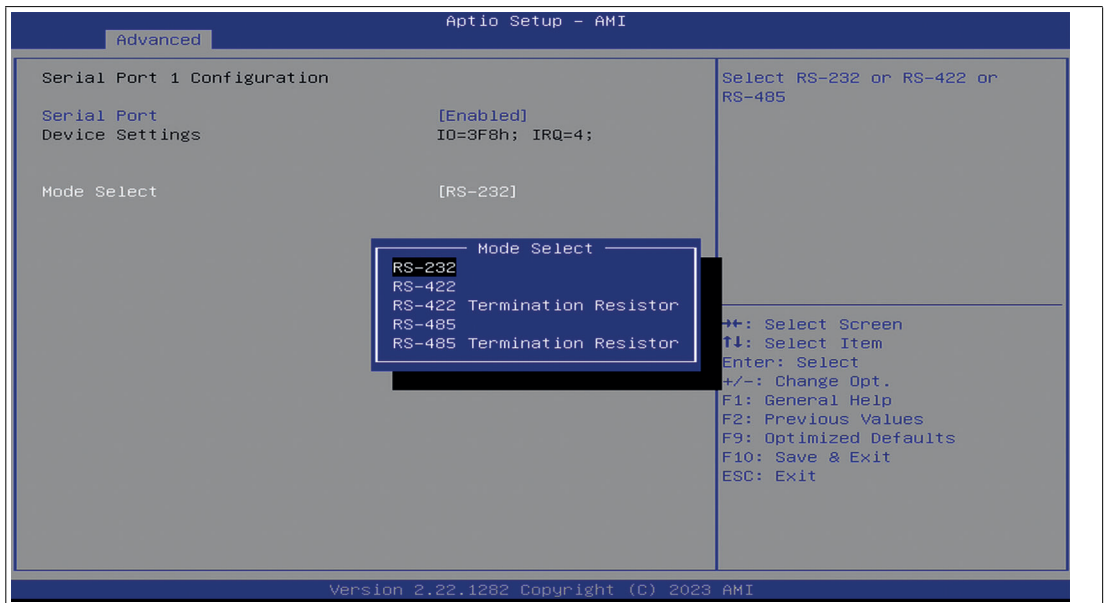


Figure 5.4 Select mode

### Settings for Serial Port 1

Mode select
RS-232
RS-422
RS-422 Termination Resistor
RS-485
RS-485 Termination Resistor

## 5.3 USB Configuration

USB Configuration allows you to view and configure USB parameters.

The USB device displays the USB device detected by the BIOS during the power-on self-test.

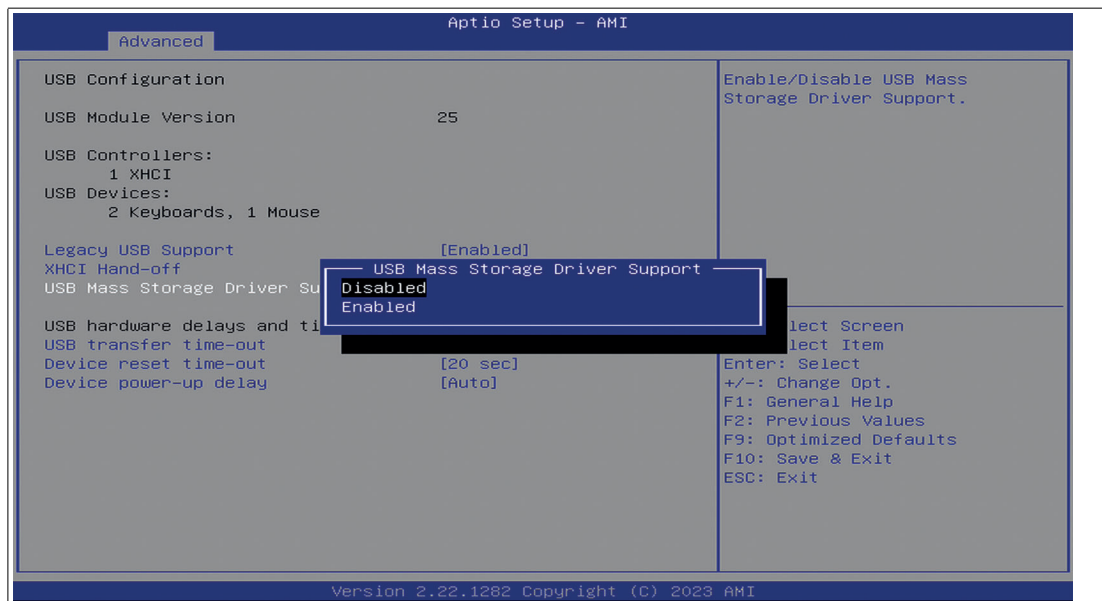


Figure 5.5 Enabling and disabling the USB device



### Enabling and Disabling the USB Device

1. Select `USB Mass Storage Driver Support` using the arrow keys and press `Enter`.
2. Select `Enabled` or `Disabled` as needed. Press `Enter` in the pop-up window.

## 5.4 Boot Configuration

Select **Boot** from the BIOS setup page.

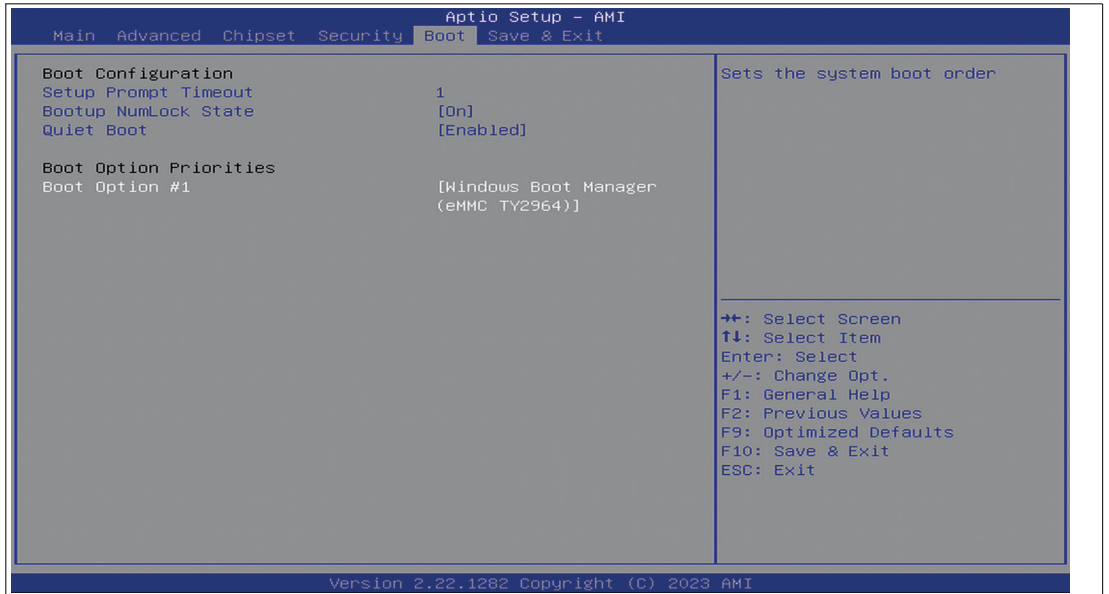


Figure 5.6 "Boot" BIOS menu

You can change the following settings on the "Boot" configuration page:

- Setup Prompt Timeout: Sets the time period within which the Delete key must be pressed to enter the BIOS at power-on.
- BootUp NumLock State: Enables and disables the numeric keys on the keyboard.

Set the PXE-ROM before changing boot options.



### Enabling Boot via LAN (PXE)

1. Select the "Advanced" tab.
2. Select **Network Stack Configuration** with the arrow keys and press ENTER.

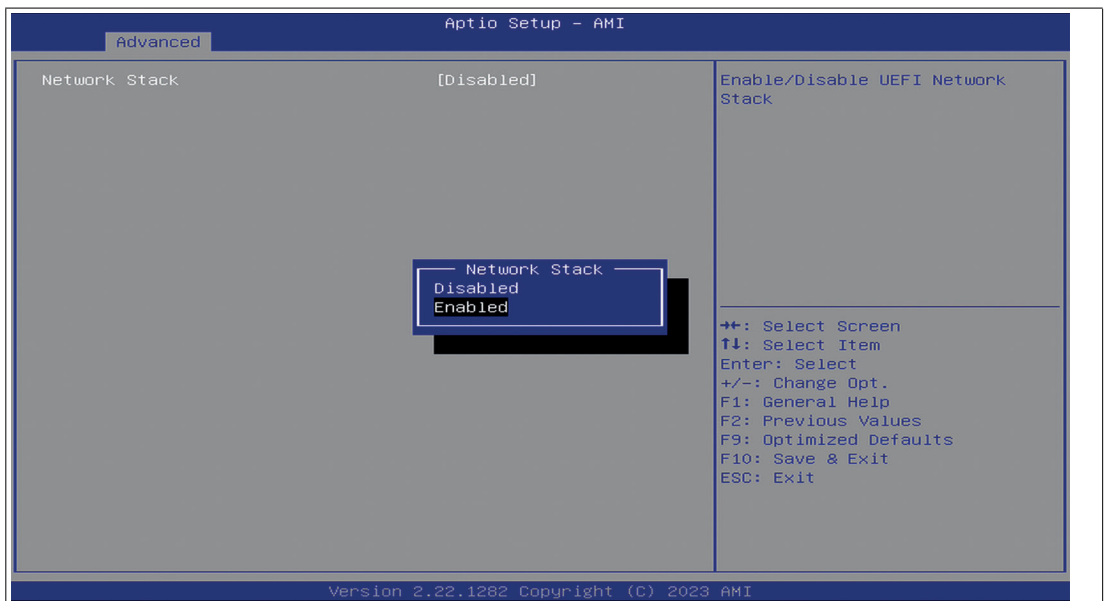


Figure 5.7 Configuring the compatibility support module

3. Enable "Network Stack" to enable network boot.

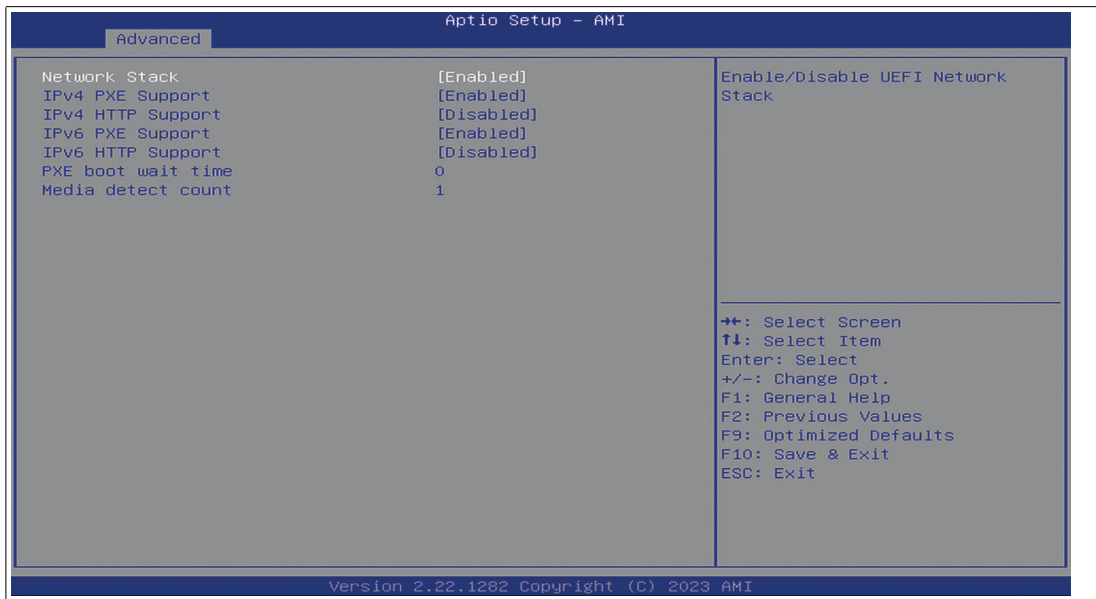


Figure 5.8



### Setting Priorities for Boot Options

The "Boot" page allows you to set the priority of all boot devices.

1. Using the arrow keys, select the Boot Option Priority you wish to change. Press ENTER. The options window will open.

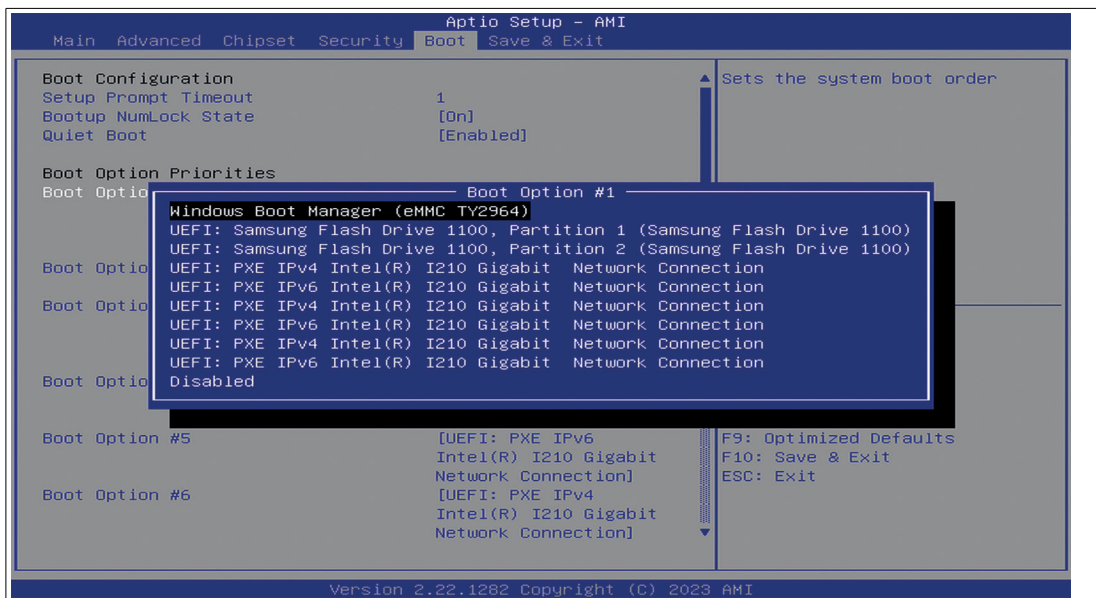


Figure 5.9 Boot option priorities

2. When enabled and connected a Network or USB Boot, those options are additionally shown to the default boot option "Windows Boot Manager (eMMC TY2964)".



## Power Management

The system starts automatically when the power supply is turned on. In the event of a power failure, the device will also automatically power up after the power supply has been restored. Can be changed at section "Chipset" --> PCH-IO Configuration --> Power on after power fail  
Add a screenshot too like BTC14 and BPC.

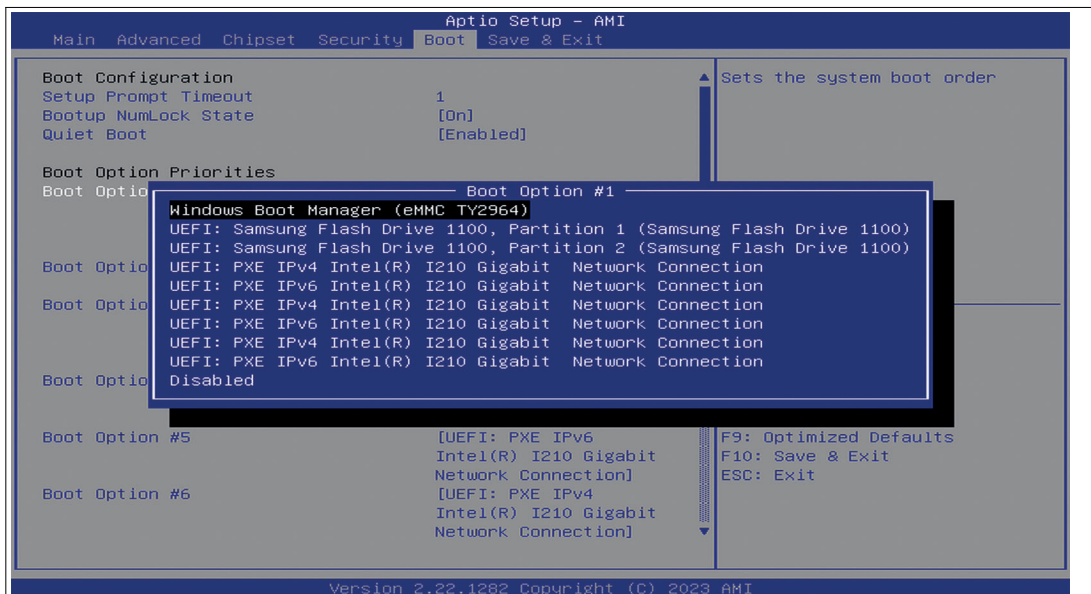


Figure 5.10

## Save Options

Select "Save & Exit" from the BIOS setup page.

Save the changes and exit the system.

When you have finished making changes to the system configuration, save the changes using the following instructions.



### Saving Configuration Changes

1. Select **Save Changes** and "Exit" using the arrow keys. Press ENTER.
2. Select **Yes**. Press ENTER to save the changes and exit the system.
3. Select **No** to exit the process without saving the changes.

The new system configuration settings take effect after the system is restarted.



### Discarding Changes and Exiting the System

Use the following instructions to exit the system without saving the changes.

1. Using the arrow keys, select **Discard Changes** and "Exit." Press ENTER.
2. Select **Yes**. Press ENTER to discard the changes and exit the system.
3. Select **No** to exit the process.

## 5.4.1 Advanced - Booting from USB Stick



1. Go to the "Advanced" tap
2. Go to USB Configuration If you want to boot with USB stick, USB Mass Storage Driver Support must be set to Enabled.

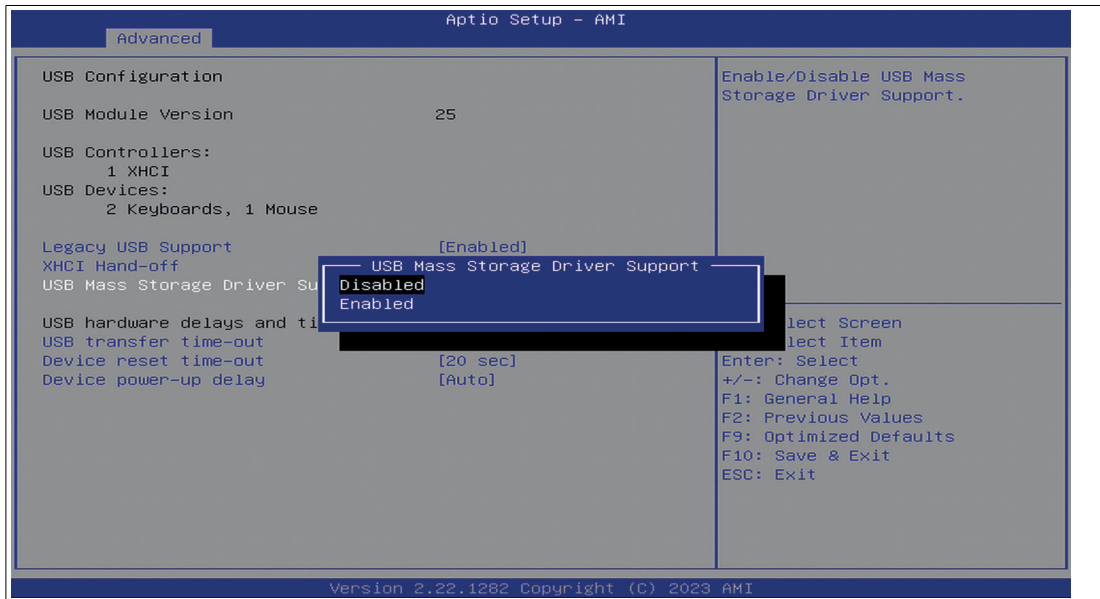


Figure 5.11

3. Select "Save and exit" or press the F10 key.
4. The system reboots automatically.
5. Click "Delete" to enter BIOS again.

6. Go to "Boot" tab and select the USB flash drive as boot option (Boot Option #1).

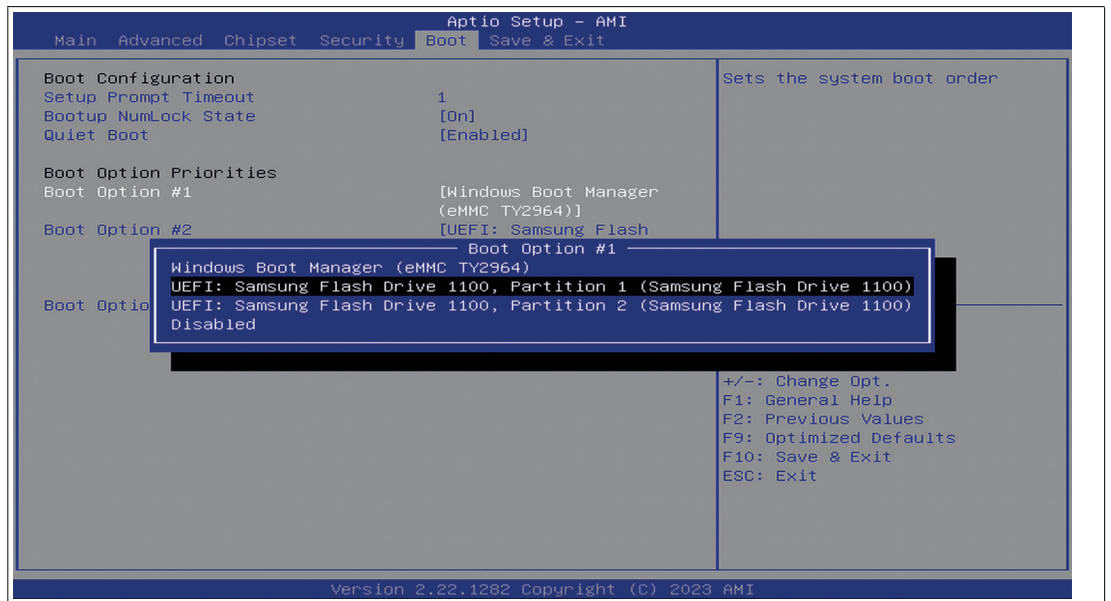


Figure 5.12

7. Select "Save and exit" or press the F10 key.

## 5.5 Resetting the BIOS to Factory Settings



### Restoring Default Settings

You can restore the system using the following instructions.

1. Use the arrow keys to select `Restore Defaults`. Press `ENTER`.
2. Select `Yes`. Press `ENTER` to load the optimized default settings.
3. Select `No` to exit the process.



### Restoring the Factory Settings with F9

1. Press `F9:Optimized Defaults`. Press `ENTER`.
2. Select `Yes`. Press `ENTER` to load the optimized default settings.
3. Select `No` to exit the process.

## 5.6 Secure Boot



### Note

Secure Boot is enabled by default.



### Secure Boot

1. Go to "Security" tab to enable Secure Boot.

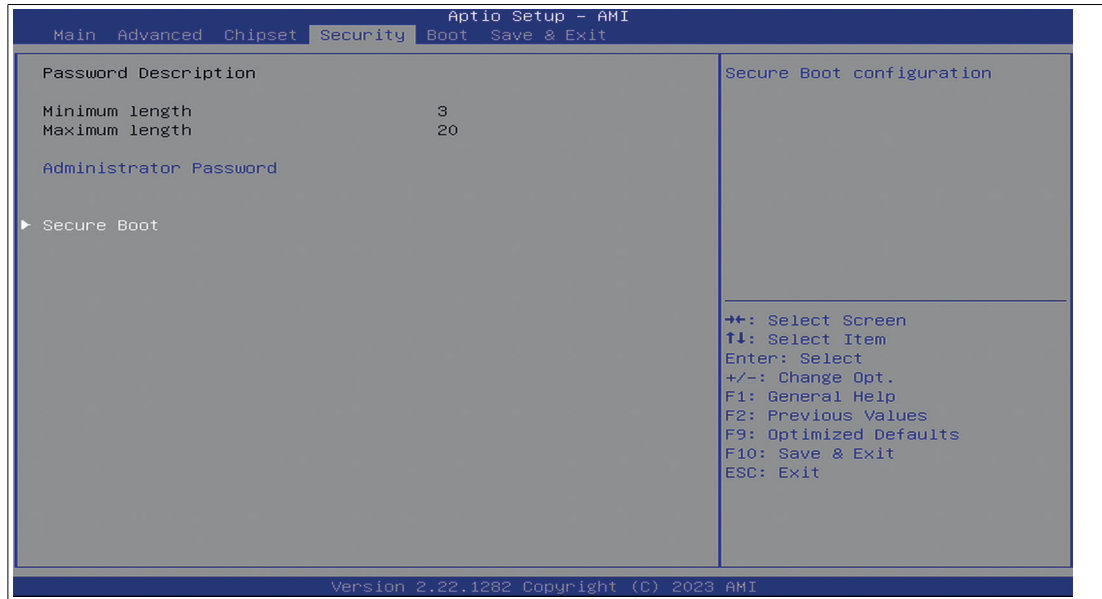


Figure 5.13

2. Enable Secure Boot.

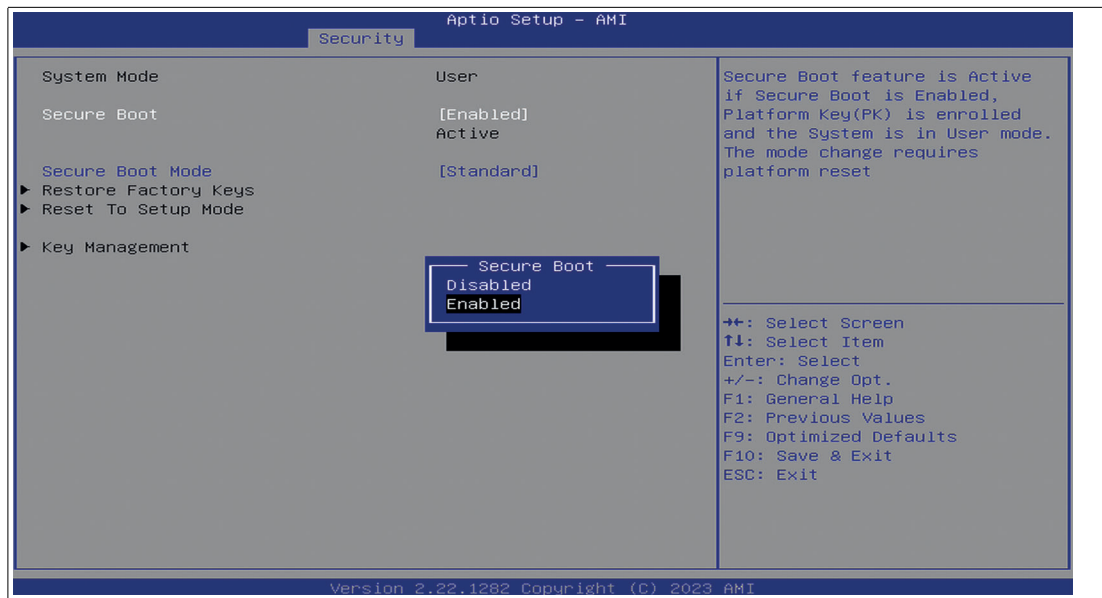


Figure 5.14



## S5 RTC Wake Settings

Enable system to wake from S5 using RTC alarm. It is used to wake the system at a specific time.

1. Go to the "Advanced" tab
2. Select "S5 RTC Wake Settings"

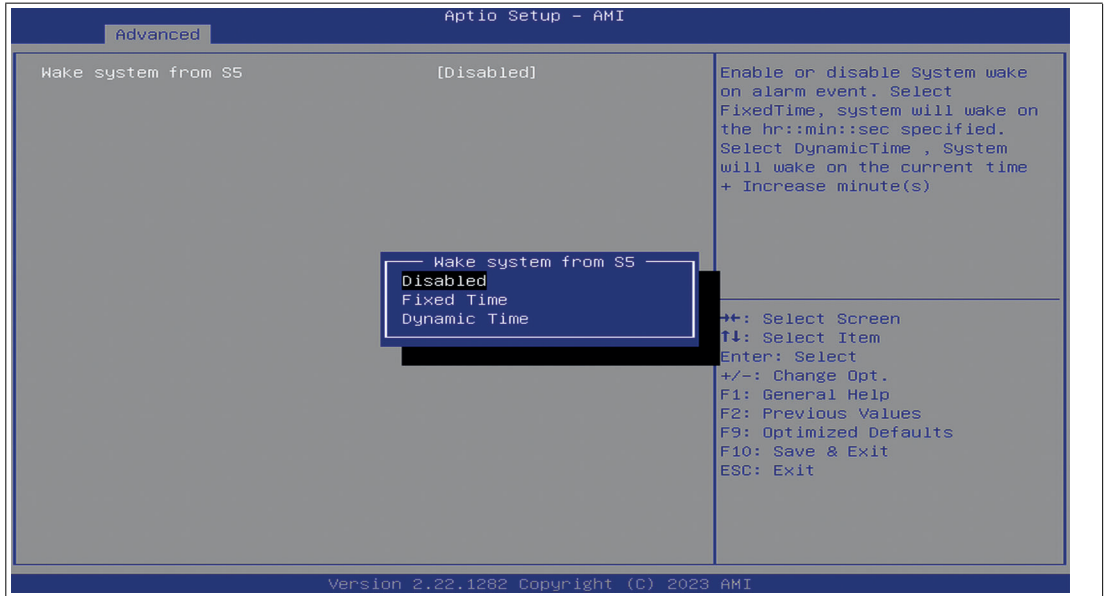


Figure 5.15

3. Chose between Fixed Time and Dynamic Time and configure the desired settings.



## Deactivate LAN ports LAN ports can be deactivated

1. Go to the "Chipset" tab. Select "PCH-IO Configuration" and then "PCI Express Configuration".
2. Choose the LAN Port you like to enable / disable and select LANx Enabled/Disabled.


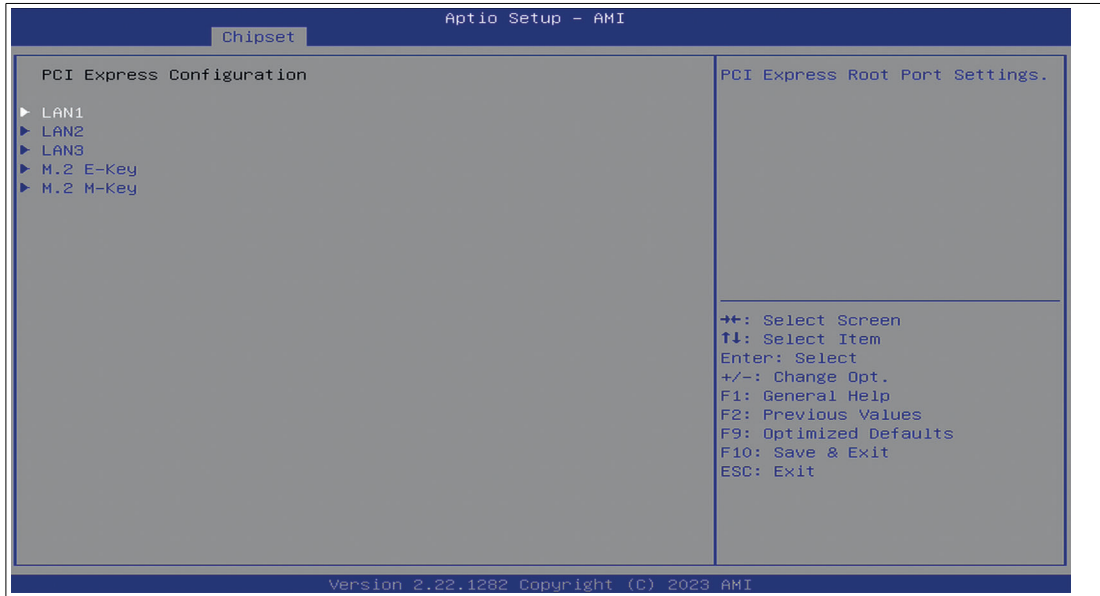


Figure 5.16

3. Disable/Enable the desired LAN port.

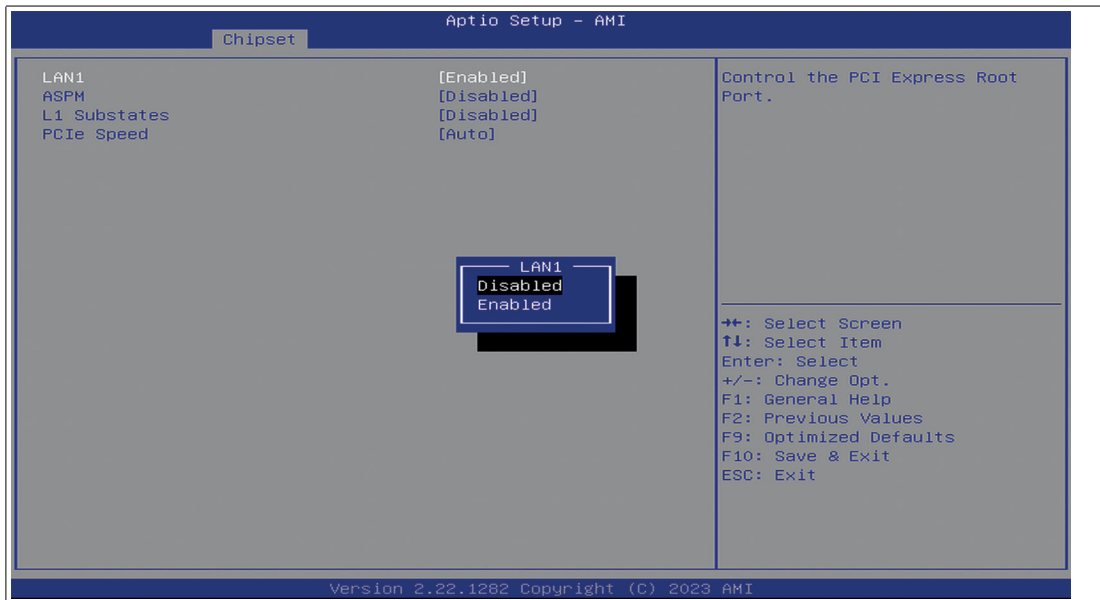

## 6 Service and Support

For more information about the products described in this document, visit [www.pepperl-fuchs.com](http://www.pepperl-fuchs.com).

Please have the following information ready when contacting your local representative or technical support:

- Product name
- Serial number of the product
- Image version and RM shell version

## 7 Accessories

### Power Supply, Cables, and Connectors

Part number	Type code	Description
548328	FSP065-RBBN3	AC/DC power supply Input: 100 VAC – 240 VAC, 50 Hz – 60 Hz Output: 19 VDC Maximum current: 3.42 A Connector: 2.5 mm DC socket with locking mechanism Approvals: CE, FCC class B, UL listed, GS, CCC Power cable: 1 x EU type and 1 x US type
548400	ATEN-LockPro	Locking device for securing cables on the BTC22 Each pack contains 10 locks
70105588	S-BN-19/1800-UK1	Power supply cable with protective conductor Type: IEC-60320-C5 Country: United Kingdom, Ireland (Type G, BS 1363) Length: approx. 1.8 m
70105589	S-BN-19/1800-AU1	Power supply cable with protective conductor Type: IEC-60320-C5 Country: Australia (Type I, AS 3112) Length: approx. 1.8 m
70105590	S-BN-19/1800-CH1	Power supply cable with protective conductor Type: IEC-60320-C5 Country: Switzerland (Type J, SEV 1011) Length: approx. 1.8 m
70105591	S-BN-19/1800-IT1	Power supply cable with protective conductor Type: IEC-60320-C5 Country: Italy (Type L, CEI 23-16-VII) Length: approx. 1.8 m
70105592	S-BN-19/1800-DK1	Power supply cable with protective conductor Type: IEC-60320-C5 Country: Denmark (Type K, IEC 60906-1) Length: approx. 1.8 m
70100504	BTC12-CBL-DC-JACK-2100	Connector: 5.5/2.5 mm DC socket with locking mechanism Open cable ends with wire end ferrules Cable length: 2.1 m
70172207	ADAPTER-RJ45-DE9	Adapter cable RJ45 to D-SUB9 Cable length: 19.5 cm

### Mounting Aids

Part number	Type code	Description
548401	BTC12-KIT-DIN-RAIL	DIN rail mounting kit for BTC
548402	BTC12-KIT-VESA-MOUNT	VESA mounting bracket kit for BTC (100 x 100mm and 75 x 75 mm)

### Video Cables and Video Adapters

Part number	Type code	Description
548406	STARTECH-DP2DVI2	Passive adapter cable for BTC DisplayPort™ 1.1 connector to DVI-D socket Cable length: 0.15 m

2024-04



# Your automation, our passion.

## Explosion Protection

- Intrinsic Safety Barriers
- Signal Conditioners
- FieldConnex® Fieldbus
- Remote I/O Systems
- Electrical Ex Equipment
- Purge and Pressurization
- Industrial HMI
- Mobile Computing and Communications
- HART Interface Solutions
- Surge Protection
- Wireless Solutions
- Level Measurement

## Industrial Sensors

- Proximity Sensors
- Photoelectric Sensors
- Industrial Vision
- Ultrasonic Sensors
- Rotary Encoders
- Positioning Systems
- Inclination and Acceleration Sensors
- Fieldbus Modules
- AS-Interface
- Identification Systems
- Displays and Signal Processing
- Connectivity

### Pepperl+Fuchs Quality

Download our latest policy here:

[www.pepperl-fuchs.com/quality](http://www.pepperl-fuchs.com/quality)

