

Temperature Converter S1SD-1TI-1U

- 1-channel signal conditioner
- 24 V DC supply
- Thermocouple, RTD, potentiometer or mV input
- Input for PTC thermistor
- Current and voltage output
- Line fault (LFD) and sensor burnout detection
- Accuracy 0.1 %
- Connection via screw terminals



Function

This signal conditioner provides the galvanic isolation between field circuits and control circuits. The device has an input for signals of the following field devices:

- resistance thermometers
- thermocouples
- PTC thermistors
- potentiometers
- voltage sources
- field device with its own characteristic

The device provides the following standard signals at the output:

- 0/2 mA ... 10 mA signal
- 0/4 mA ... 20 mA signal
- 0/1 V ... 5 V signal
- 0/2 V ... 10 V signal

This device has an integrated cold junction compensation. You can also implement external cold junction compensation.


A fault is signalized by LEDs.

The device is easily configured by the use of DIP switches.

The Teach-In function can be used to teach in the potentiometer start value and end value.

The device can be powered via terminals or Power Bus.

Connection

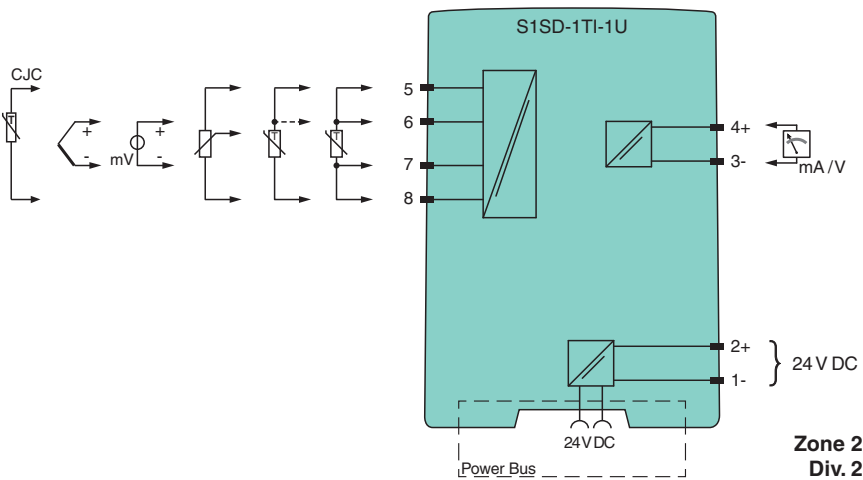

Release date: 2020-09-23 Date of issue: 2020-09-23 Filename: 276400_eng.pdf

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group
www.pepperl-fuchs.com


USA: +1 330 486 0002
pa-info@us.pepperl-fuchs.com

Germany: +49 621 776 2222
pa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091
pa-info@sg.pepperl-fuchs.com

PEPPERL+FUCHS

Dimensions

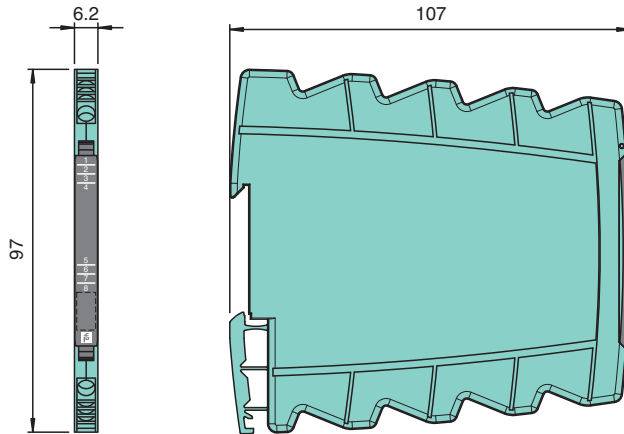

Technical Data

General specifications	
Signal type	Analog input
Operation time	MTBF: 353 a acc. to SN 29500 stationary continuous operating, average ambient temperature 40 °C (104 °F)
Supply	
Connection	Power Bus or terminals 1-, 2+
Rated voltage	U_r 16.8 ... 31.2 V DC
Power dissipation	0.7 W
Power consumption	0.8 W
Interface	
Programming interface	programming socket
Input	
Connection side	field side
Connection	terminals 5, 6, 7, 8
PTC	type KT, KTY, ST
Measuring current	approx. 200 μ A
Types of measuring	2-, 3-, 4-wire connection
Lead resistance	\leq 100 Ω per line
Measurement loop monitoring	sensor breakage, lead breakage, short circuit
RTD	type Pt100, Pt200, Pt500, Pt1000 (EN 60751: 1995) type Ni100, Ni200, Ni500, Ni1000 (DIN 43760)
Measuring current	approx. 200 μ A
Types of measuring	2-, 3-, 4-wire connection
Lead resistance	max. 100 Ω per line
Measurement loop monitoring	sensor breakage, lead breakage, short circuit
Thermocouples	type B, E, J, K, N, S, T (IEC 584-1:1995) type L, U (DIN 43710:1985) type C, D (ASTM E988)
Cold junction compensation	external (Pt100) and internal, manually
Lead resistance	max. 10 k Ω
Measurement loop monitoring	sensor breakage, lead breakage
Resistor	
Measurement range	0 ... 5 k Ω
Potentiometer	0.2 ... 50 k Ω
Types of measuring	3-wire connection
Voltage	-100 ... 100 mV -1000 ... 1000 mV
Input resistance	\geq 1 M Ω

Release date: 2020-09-23 Date of issue: 2020-09-23 Filename: 276400_eng.pdf

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group
www.pepperl-fuchs.com

USA: +1 330 486 0002
pa-info@us.pepperl-fuchs.com

Germany: +49 621 776 2222
pa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091
pa-info@sg.pepperl-fuchs.com

 PEPPERL+FUCHS

Technical Data

Output	
Connection side	control side
Connection	terminals 3-, 4+
Analog voltage output	0/1 ... 5 V, 0/2 ... 10 V, load $\geq 2 \text{ k}\Omega$
Analog current output	0/2 ... 10 mA, 0/4 ... 20 mA, load $\leq 600 \Omega$
Ripple	$\leq 10 \text{ mV}_{\text{eff}}$
Fault signal	downscale or upscale
Transfer characteristics	
Accuracy	max. 0.1 % of full-scale value
Measuring time	$\leq 300 \text{ ms}$
Deviation	
RTD	$< 0.1 \text{ K}/0.05 \%$ of the measured value
Thermocouples	$< 0.3 \text{ K}/0.1 \%$ of the measured value
Voltage	$< 0.1 \%$ of the measured value
Potentiometer	$< 0.02 \%$ of the measured value
Influence of ambient temperature	$< 100 \text{ ppm/K}$ of full-scale value
Galvanic isolation	
Output/power supply	safe electrical isolation by reinforced insulation according to IEC/EN 61010-1, rated insulation voltage $300 \text{ V}_{\text{eff}}$ test voltage 3 kV, 50 Hz, 1 min
Input/Other circuits	safe electrical isolation by reinforced insulation according to IEC/EN 61010-1, rated insulation voltage $300 \text{ V}_{\text{eff}}$ test voltage 3 kV, 50 Hz, 1 min
Indicators/settings	
Control elements	DIP-switch keys
Configuration	via DIP switches via keys via software
Labeling	space for labeling at the front
Directive conformity	
Electromagnetic compatibility	
Directive 2014/30/EU	EN 61326-1:2013 (industrial locations)
Conformity	
Degree of protection	IEC 60529:2001
Protection against electrical shock	EN 61010-1:2010
Ambient conditions	
Ambient temperature	-25 ... 70 °C (-13 ... 158 °F)
Storage temperature	-40 ... 85 °C (-40 ... 185 °F)
Damaging gas	designed for operation in environmental conditions acc. to ISA-S71.04-1985, severity level G3
Mechanical specifications	
Degree of protection	IP20
Connection	screw terminals
Core cross-section	0.5 ... 2.5 mm ² (20 ... 14 AWG)
Mass	approx. 70 g
Dimensions	6.2 x 97 x 107 mm (0.24 x 3.82 x 4.21 inch), housing type S1
Mounting	on 35 mm DIN mounting rail acc. to EN 60715:2001
Data for application in connection with hazardous areas	
Certificate	DEMKO 16 ATEX 1750X
Marking	Ⓔ II 3G Ex nA IIC T4 Gc
Directive conformity	
Directive 2014/34/EU	EN 60079-0:2012+A11:2013, EN 60079-15:2010
International approvals	
UL approval	E106378
IECEX approval	IECEX UL 16.0116X
Approved for	Ex nA IIC T4 Gc

Release date: 2020-09-23 Date of issue: 2020-09-23 Filename: 276400_eng.pdf

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".


Pepperl+Fuchs Group
www.pepperl-fuchs.comUSA: +1 330 486 0002
pa-info@us.pepperl-fuchs.comGermany: +49 621 776 2222
pa-info@de.pepperl-fuchs.comSingapore: +65 6779 9091
pa-info@sg.pepperl-fuchs.com

PEPPERL+FUCHS









Technical Data

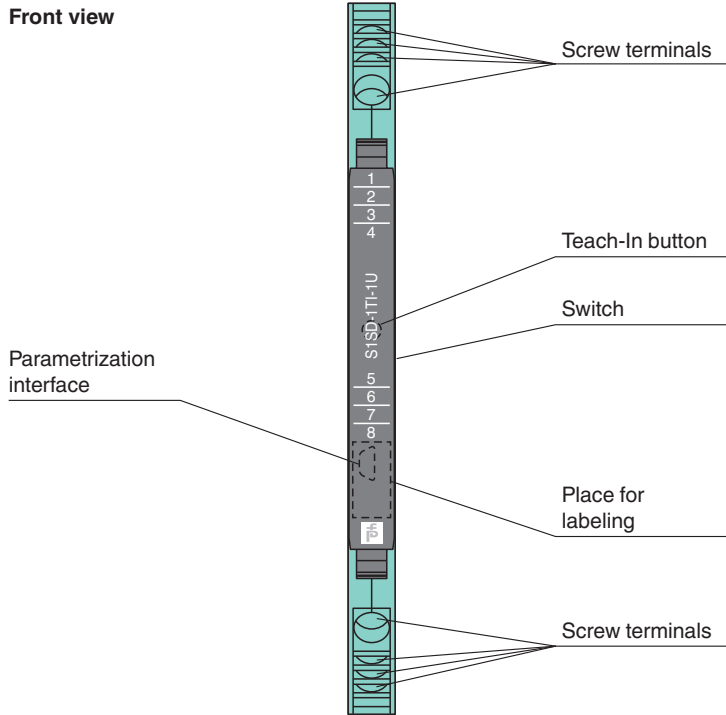General information
 Supplementary information Observe the certificates, declarations of conformity, instruction manuals, and manuals where applicable. For information see www.pepperl-fuchs.com.

Assembly



Accessories

	SC-Config	
	S1SD-2PF	Power feed module with screw terminals
	S-ADP-USB	Adapter with USB Interface
	POWERBUS-SETL5.250	Power bus for 35 mm DIN mounting rail, height: 7.5 mm, length: 250 mm
	POWERBUS-SETH5.250	Power bus for 35 mm DIN mounting rail, height: 15 mm, length: 250 mm
	POWERBUS-COV.250	Cover for 35 mm DIN mounting rail, length: 250 mm
	POWERBUS-CAP	End Cap for Power Bus
	PACTware 5.X	FDT Framework

Release date: 2020-09-23 Date of issue: 2020-09-23 Filename: 276400_eng.pdf

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Additional Information

Configuration

Configuration using DIP switches

Use the DIP switches to configure the device. Via the DIP switches you can select only a limited number of sensors. A wider range of sensors you can select via software configuration. The following options are available:

Input	S1				
	1	2	3	4	5
PT100					
PT1000	ON				
Ni100		ON			
Resistor	ON		ON		
4-wire					
3-wire				ON	
2-wire					ON
Potentiometer	ON		ON	ON	ON
Typ J	ON	ON			
Typ K			ON		
CJC internal					
CJC external				ON	
CJC OFF					ON
+100 mV		ON	ON		
+1000 mV		ON	ON		ON
PC-Programming	ON	ON	ON		

Release date: 2020-09-23 Date of issue: 2020-09-23 Filename: 276400_eng.pdf

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Start value				S1				
Temp	Res	Poti	mV	6	7	8	9	10
-200 °C	0 Ω	0 %	-100 mV	ON				
-175 °C	50 Ω	1 %	-90 mV		ON			
-150 °C	100 Ω	2 %	-80 mV	ON	ON			
-125 °C	150 Ω	3 %	-70 mV			ON		
-100 °C	200 Ω	4 %	-60 mV	ON		ON		
-75 °C	250 Ω	5 %	-50 mV		ON	ON		
-50 °C	300 Ω	6 %	-45 mV	ON	ON	ON		
-25 °C	350 Ω	7 %	-40 mV				ON	
0 °C	400 Ω	8 %	-35 mV					
25 °C	450 Ω	9 %	-30 mV	ON			ON	
50 °C	500 Ω	10 %	-25 mV		ON		ON	
75 °C	550 Ω	11 %	-20 mV	ON	ON		ON	
100 °C	600 Ω	12 %	-15 mV			ON	ON	
125 °C	650 Ω	13 %	-10 mV	ON		ON	ON	
150 °C	700 Ω	14 %	-5 mV		ON	ON	ON	
175 °C	750 Ω	15 %	0 mV	ON	ON	ON	ON	
200 °C	800 Ω	20 %	5 mV					ON
225 °C	850 Ω	25 %	10 mV	ON				ON
250 °C	900 Ω	30 %	15 mV		ON			ON
275 °C	950 Ω	35 %	20 mV	ON	ON			ON
300 °C	1000 Ω	40 %	25 mV			ON		ON
350 °C	1500 Ω	45 %	30 mV	ON		ON		ON
400 °C	2000 Ω	50 %	35 mV		ON	ON		ON
450 °C	2500 Ω	55 %	40 mV	ON	ON	ON		ON
500 °C	3000 Ω	60 %	45 mV				ON	ON
550 °C	3500 Ω	65 %	50 mV	ON			ON	ON
600 °C	4000 Ω	70 %	60 mV		ON		ON	ON
650 °C	4500 Ω	75 %	70 mV	ON	ON		ON	ON
700 °C	-	80 %	80 mV			ON	ON	ON
800 °C	-	85 %	90 mV	ON		ON	ON	ON
900 °C	-	90 %	-		ON	ON	ON	ON
1000 °C	-	Teach-in	-	ON	ON	ON	ON	ON

Release date: 2020-09-23 Date of issue: 2020-09-23 Filename: 276400_eng.pdf

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group
www.pepperl-fuchs.com

USA: +1 330 486 0002
pa-info@us.pepperl-fuchs.com

Germany: +49 621 776 2222
pa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091
pa-info@sg.pepperl-fuchs.com

End value				S2					
Temp	Res	Poti	mV	1	2	3	4	5	6
-150 °C	100 Ω	10 %	-	ON					
-125 °C	150 Ω	15 %	-		ON				
-100 °C	200 Ω	20 %	-	ON	ON				
-75 °C	250 Ω	25 %	-			ON			
-50 °C	300 Ω	30 %	-	ON		ON			
-25 °C	350 Ω	35 %	-		ON	ON			
0 °C	400 Ω	40 %	-	ON	ON	ON			
25 °C	450 Ω	45 %	-				ON		
50 °C	500 Ω	46 %	-	ON			ON		
75 °C	550 Ω	47 %	-		ON		ON		
100 °C	600 Ω	48 %	100 mV						
125 °C	650 Ω	49 %	95 mV	ON	ON		ON		
150 °C	700 Ω	50 %	90 mV			ON	ON		
175 °C	750 Ω	51 %	85 mV	ON		ON	ON		
200 °C	800 Ω	52 %	80 mV		ON	ON	ON		
225 °C	850 Ω	53 %	75 mV	ON	ON	ON	ON		
250 °C	900 Ω	54 %	70 mV					ON	
275 °C	950 Ω	55 %	65 mV	ON				ON	
300 °C	1000 Ω	56 %	60 mV		ON			ON	
325 °C	1050 Ω	57 %	55 mV	ON	ON			ON	
350 °C	1100 Ω	58 %	50 mV			ON		ON	
350 °C	1150 Ω	59 %	45 mV	ON		ON		ON	
400 °C	1200 Ω	60 %	40 mV		ON	ON		ON	
425 °C	1250 Ω	61 %	35 mV	ON	ON	ON		ON	
450 °C	1300 Ω	62 %	30 mV				ON	ON	
475 °C	1400 Ω	63 %	25 mV	ON			ON	ON	
500 °C	1500 Ω	64 %	20 mV		ON		ON	ON	
525 °C	1600 Ω	65 %	15 mV	ON	ON		ON	ON	
550 °C	1700 Ω	66 %	10 mV			ON	ON	ON	
575 °C	1800 Ω	67 %	5 mV	ON		ON	ON	ON	
600 °C	1900 Ω	68 %	0 mV		ON	ON	ON	ON	
625 °C	2000 Ω	69 %	-5 mV	ON	ON	ON	ON	ON	
650 °C	2100 Ω	70 %	-10 mV						ON
675 °C	2200 Ω	71 %	-15 mV	ON					ON
700 °C	2300 Ω	72 %	-20 mV		ON				ON
725 °C	2400 Ω	73 %	-25 mV	ON	ON				ON
750 °C	2500 Ω	74 %	-30 mV			ON			ON
775 °C	2600 Ω	75 %	-35 mV	ON		ON			ON
800 °C	2700 Ω	76 %	-40 mV		ON	ON			ON
825 °C	2800 Ω	77 %	-45 mV	ON	ON	ON			ON
850 °C	2900 Ω	78 %	-50 mV				ON		ON
875 °C	3000 Ω	79 %	-55 mV	ON			ON		ON
900 °C	3100 Ω	80 %	-60 mV		ON		ON		ON
925 °C	3200 Ω	81 %	-65 mV	ON	ON		ON		ON
950 °C	3300 Ω	82 %	-70 mV			ON	ON		ON
975 °C	3400 Ω	83 %	-75 mV	ON		ON	ON		ON
1000 °C	3500 Ω	84 %	-80 mV		ON	ON	ON		ON
1025 °C	3600 Ω	85 %	-85 mV	ON	ON	ON	ON		ON
1050 °C	3700 Ω	86 %	-90 mV					ON	ON
1075 °C	3800 Ω	87 %	-	ON				ON	ON
1100 °C	3900 Ω	88 %	-		ON			ON	ON
1125 °C	4000 Ω	89 %	-	ON	ON			ON	ON
1150 °C	4100 Ω	90 %	-			ON		ON	ON
1175 °C	4200 Ω	91 %	-	ON		ON		ON	ON
1200 °C	4300 Ω	92 %	-		ON	ON		ON	ON
1225 °C	4400 Ω	93 %	-	ON	ON	ON		ON	ON
1250 °C	4500 Ω	94 %	-				ON	ON	ON
1275 °C	4600 Ω	95 %	-	ON			ON	ON	ON
1300 °C	4700 Ω	96 %	-		ON		ON	ON	ON
1325 °C	4800 Ω	97 %	-	ON	ON		ON	ON	ON
1350 °C	4900 Ω	98 %	-			ON	ON	ON	ON

Release date: 2020-09-23 Date of issue: 2020-09-23 Filename: 276400_eng.pdf

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group
www.pepperl-fuchs.com

USA: +1 330 486 0002
pa-info@us.pepperl-fuchs.com

Germany: +49 621 776 2222
pa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091
pa-info@sg.pepperl-fuchs.com



End value				S2					
Temp	Res	Poti	mV	1	2	3	4	5	6
1375 °C	5000 Ω	99 %	-	ON		ON	ON	ON	ON
1400 °C	-	100%	-		ON	ON	ON	ON	ON
1425 °C	-	Teach-in	-	ON	ON	ON	ON	ON	ON

Output	S2			
	7	8	9	10
0 V ... 5 V	ON	ON		
0 V ... 10 V		ON		
4 mA ... 20 mA	ON			
0 mA ... 20 mA				

Characteristic				
rising				
falling			ON	

Diagnostics				
downscale				ON
upscale				

Factory settings: all switches in position OFF

Configuration using software

Use software to configure the device. Configuration must be permitted by setting the DIP switches. See table.

The device is equipped with a programming socket on the front. A corresponding adapter is available as an accessory. This adapter can be used to configure the device. The software is available to download from www.pepperl-fuchs.com.

The following options are available:

- You can choose from a wider range of sensor types.
- You can adjust the start value and end value in smaller increments.

Fault Signals on the Output

Characteristic	Diagnostics	Output range ¹	Underrange	Overrange	Fault signal
rising S2.9 = OFF	upscale S2.10 = OFF	0 ... 20 mA	0 mA	20.5 mA	22 mA
		4 ... 20 mA	3.8 mA	20.5 mA	22 mA
		0 ... 5 V	0 V	5.125 V	5.5 V
	downscale S2.10 = ON	0 ... 10 V	0 V	10.25 V	11 V
		0 ... 20 mA	0 mA	20 mA	0 mA
		4 ... 20 mA	4 mA	20 mA	4 mA
falling S2.9 = ON	upscale S2.10 = OFF	0 ... 5 V	0 V	5 V	0 V
		10 ... 0 V	0 V	10 V	0 V
		20 ... 0 mA	20 mA	0 mA	0 mA
		20 ... 4 mA	20 mA	4 mA	4 mA
		5 ... 0 V	5 V	0 V	0 V
		10 ... 0 V	10 V	0 V	0 V
	downscale S2.10 = ON	20 ... 0 mA	20 mA	0 mA	0 mA
		20 ... 4 mA	20 mA	4 mA	4 mA
		5 ... 0 V	5 V	0 V	0 V
		10 ... 0 V	10 V	0 V	0 V
		20 ... 0 mA	20 mA	0 mA	0 mA
		20 ... 4 mA	20 mA	4 mA	4 mA

¹ Other output ranges react analogous to the table.

LED Indicators

LED	Status	Description
green LED	Off	No power supply
	On	Normal functionn
red LED	Flashing rapidly	Device is in teach-in mode
	Flashing slowly	Line fault or faulty teach-in
	On	Device fault

Teach-In Function

The teach-in function can be used to teach in the potentiometer start value and end value.

There are two ways of teaching in the potentiometer using the teach-in function:

- Automatic teach-in of the device in drag mode
- Manual teach-in of the start value and end value

The taught-in values remain stored under the teach-in setting. The start value is 0 % and the end value is 100 % by default.

Starting the teach-in function

Use the teach-in button located behind the cover on the front of the device to teach in the device.

1. Configure the device using the DIP switches on the side of the device.
2. Press and hold the teach-in button for longer than 3 seconds.

The red LED will flash rapidly.

3. Automatic teach-in: Move to the start value and end value. Both values are automatically recorded in the device.

or

Manual teach-in: Move to the first end stop and press and hold the teach-in button for around 0.5 seconds. Move to the second end stop and press and hold the teach-in button for around 0.5 seconds.

Ending the teach-in function, saving the start value and end value

Press and hold the teach-in button for longer than 3 seconds.

The red LED no longer flashes. The values are saved.

Ending the teach-in function without saving the start value and end value

Press and hold the teach-in button for longer than 6 seconds.

or

Switch off the device.

The red LED no longer flashes. The values are not saved.

Teach-in fault

If the span between the start value and the end value is too small, the red LED will flash slowly again after saving the values.

Possible reasons for this include:

- The slider has not moved in drag mode.
- The second end stop is too close to the first end stop.

In the event of an error, the teach-in function must be performed again in its entirety.

Release date: 2020-09-23 Date of issue: 2020-09-23 Filename: 276400_eng.pdf