


**Ultraschall-Sensor
UB500-F42-E5-V15**



Abmessungen

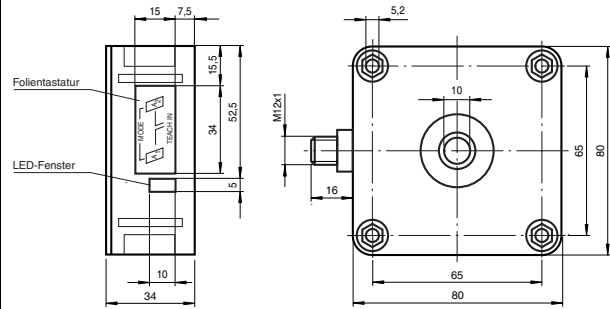


Merkmale

- Schaltausgang
- Extrem kleine Blindzone
- TEACH-IN
- Störzielausblendung (Schwelle und Öffnungswinkel der Schallkeule einstellbar)
- 4 Betriebsarten einstellbar
- Temperaturkompensation
- Synchronisationsmöglichkeiten
- Schließer/Öffner wählbar

Technische Daten

Allgemeine Daten	30 ... 500 mm
Erfassungsbereich	50 ... 500 mm
Einstellbereich	0 ... 30 mm
Blindzone	100 mm x 100 mm
Normmessplatte	ca. 390 kHz
Wandlerfrequenz	ca. 50 ms
Ansprechverzögerung	permanent grün: Power on
Anzeigen/Bedienelemente	LED grün: permanent: Lernfunktion
LED grün	LED gelb: blinkend: Lernfunktion
LED gelb	LED rot: Normalbetrieb: "Störung"
LED rot	LED blau: Lernfunktion: kein Objekt erkannt
Elektrische Daten	10 ... 30 V DC, Welligkeit 10 % _{SS}
Betriebsspannung	Leerlaufstrom I ₀ ≤ 50 mA
Leerlaufstrom I ₀	bidirektional
Ein-/Ausgang	0-Pegel: -U _B ...+1 V
Synchronisation	1-Pegel: +4 V...+U _B
	Eingangsimpedanz: > 12 kΩ
	Synchronisationsimpuls: ≥ 100 µs, Synchronisationsimpulspause: ≥ 2 ms
Synchronisationsfrequenz	≤ 95 Hz
Gleichaktbetrieb	≤ 95/n Hz, n = Anzahl der Sensoren
Multiplexbetrieb	≤ 0,5 % vom Schallpunkt
Ausgang	200 mA, kurzschluss-überlastfest
Ausgangstyp	≤ 2,5 V
Reproduzierbarkeit	≤ 8 Hz
Bemessungsbetriebsstrom I _B	1 % des eingestellten Schaltabstandes
Spannungsfall U _d	± 1 % vom Endwert
Schaltfrequenz f	EN 60947-5-2
Abstandshysterese H	-25 ... 70 °C (248 ... 343 K)
Temperaturerhöhung	-40 ... 85 °C (233 ... 358 K)
Normenkonformität	IP65
Normen	Gerätestecker V15 (M12 x 1), 5-polig
Umgebungsbedingungen	Material
Umgebungstemperatur	Gehäuse
Lagertemperatur	Wandler
Mechanische Daten	Masse
Schutzart	140 g

Elektrischer Anschluss

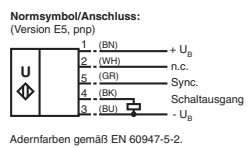

Steckverbinder V15



Zumutbare Änderungen aufgrund technischer Verbesserungen vorbehalten. Copyright Pepperl+Fuchs, Printed in Germany
Pepperl+Fuchs GmbH • 68301 Mannheim • Telefon (06 21) 7 76-11 11 • Telefax (06 21) 7 76-27-11 11 • Internet http://www.pepperl-fuchs.com

Hinweise

Synchronisation

Zur Unterdrückung gegenseitiger Beeinflussung verfügt der Sensor über einen Synchronisationsanschluss. Ist dieser unbeschaltet, arbeitet der Sensor mit einer intern erzeugten Taktrate. Eine Synchronisation mehrerer Sensoren kann auf folgende Arten erreicht werden.

Fremdsynchronisation

Der Sensor kann durch äußeres Anlegen einer Rechteckspannung synchronisiert werden. Ein Synchronisationsimpuls am Synchronisationseingang führt zur Durchführung eines Messzyklus. Die Impulsbreite muss größer 100 µs sein. Der Messzyklus wird mit der fallenden Flanke gestartet. Ein Low Pegel > 1 s oder ein offener Synchronisationseingang führt zum Normalbetrieb des Sensors. Ein High Pegel am Synchronisationseingang deaktiviert den Sensor.

Zwei Betriebsarten sind möglich

- Mehrere Sensoren werden mit dem selben Synchronisationssignal angesteuert. Die Sensoren arbeiten im Gleichtakt.
- Die Synchronisationsimpulse werden zyklisch nur jeweils einem Sensor zugeführt. Die Sensoren arbeiten im Multiplexbetrieb.

Selbstsynchronisation

Die Synchronisationsanschlüsse von bis zu 5 Sensoren mit der Möglichkeit der Selbstsynchronisation werden miteinander verbunden. Diese Sensoren arbeiten nach dem Einschalten der Betriebsspannung im Multiplexbetrieb. Der Ansprechverzögerung erhöht sich entsprechend der Anzahl der zu synchronisierenden Sensoren. Während des Einlernens kann nicht synchronisiert werden und umgekehrt. Zum Einlernen der Schaltpunkte müssen die Sensoren unsynchronisiert betrieben werden.

Einlernen der Schaltpunkte		LED-Anordnung	
		<input type="radio"/> grün (gn)	<input type="radio"/> rot (rd)
		<input type="radio"/> rot (rd)	<input type="radio"/> gelb (ye)
Schaltpunkt 1			
Zielobjekt in gewünschte Position/Abstand positionieren. Taste A1 > 2 s drücken (Zeitschloss)		Ziel erkannt <input type="radio"/> (ye)	Ziel nicht erkannt <input type="radio"/> (rd)
Wenn Ziel erkannt quittieren.		<input type="radio"/> (ye)	Wert des Objekt-abstandes wird abgespeichert.
Schaltpunkt 2			
Zielobjekt in gewünschte Position/Abstand positionieren. Taste A2 > 2 s drücken (Zeitschloss)		<input type="radio"/> (ye)	Ziel nicht erkannt <input type="radio"/> (rd)
Wenn Ziel erkannt quittieren.		<input type="radio"/> (ye)	Wert des Objekt-abstandes wird abgespeichert.


Zumutbare Änderungen aufgrund technischer Verbesserungen vorbehalten. Copyright Pepperl+Fuchs, Printed in Germany
Pepperl+Fuchs GmbH • 68301 Mannheim • Telefon (06 21) 7 76-11 11 • Telefax (06 21) 7 76-27-11 11 • Internet http://www.pepperl-fuchs.com

Bestellbezeichnung


UB500-F42-E5-V15

Kennlinien/Kurven/zusätzliche Informationen

Charakteristische Ansprechkurve

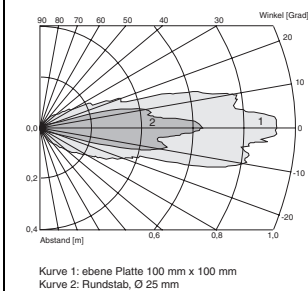

Mögliche Betriebsarten

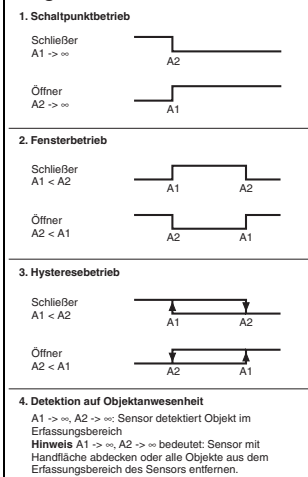

Ultraschall-Sensor

UB500-F42-E5-V15


Umschaltung Hysteresebetrieb <-> Schaltpunktbetrieb oder Fensterbetrieb		LED-Anordnung	
		<input type="radio"/> grün (gn)	<input type="radio"/> rot (rd)
		<input type="radio"/> rot (rd)	<input type="radio"/> gelb (ye)
Beide Tasten gleichzeitig gedrückt halten. (Zeitschloss)		aktuelle Betriebsart <input type="radio"/> (gn) oder <input type="radio"/> (gn)	oder
Tasten loslassen		neue Betriebsart <input type="radio"/> (gn) oder <input type="radio"/> (gn)	oder

Störzielausblendung

Die Störzielausblendung kann in 24 Stufen angepasst werden. Jeweils ein kurzer Tastendruck auf (A1) erhöht bzw. (A2) verringert den Schwellwert. Permanent leuchtende rote LED: max. bzw. min. Einstellungswert erreicht. Stellen Sie auf jeden Fall eine Stufe zurück.

Was ist ein Störziel

- geringerer Abstand zum Sensor als eigentliches Ziel
- darf eigentliches Ziel nicht vollständig verdecken
- Amplitude des Störsignals muss kleiner als Amplitude des Nutzsignals sein.
- Störziel darf sich nur am Rand und nicht im Zentrum der Schallkeule befinden.

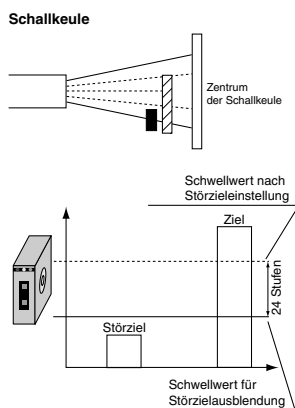

Störzielausblendung		LED-Anordnung	
		<input type="radio"/> grün (gn)	<input type="radio"/> rot (rd)
		<input type="radio"/> rot (rd)	<input type="radio"/> gelb (ye)
Zielobjekt aus Erfassungsbereich entfernen.			
Betriebsspannung abschalten		Störziel erkannt <input type="radio"/> (ye)	
Modus Störzielausblendung ist nun aktiv			
Schwellwert einstellen		Störziel erkannt <input type="radio"/> (ye)	Schwellwert O. K. Min/Max <input type="radio"/> (rd)
Achtung: Tasten nur kurz drücken. Bei Erreichen des Endanschlags leuchtet die rote LED dauernd	A1: Schwelle anheben A2: Schwelle senken		
beide Tasten kurz drücken		Verlassen des Störzielmodus, abspeichern des Schwellwertes.	

Zumutbare Änderungen aufgrund technischer Verbesserungen vorbehalten. Copyright Pepperl+Fuchs, Printed in Germany
Pepperl+Fuchs GmbH • 68301 Mannheim • Telefon (06 21) 7 76-11 11 • Telefax (06 21) 7 76-27-11 11 • Internet http://www.pepperl-fuchs.com

Ultraschall-Sensor


UB500-F42-E5-V15

Zumutbare Änderungen aufgrund technischer Verbesserungen vorbehalten. Copyright Pepperl+Fuchs, Printed in Germany
Pepperl+Fuchs GmbH • 68301 Mannheim • Telefon (06 21) 7 76-11 11 • Telefax (06 21) 7 76-27-11 11 • Internet http://www.pepperl-fuchs.com

Ultrasonic sensor
UB500-F42-E5-V15



Dimensions

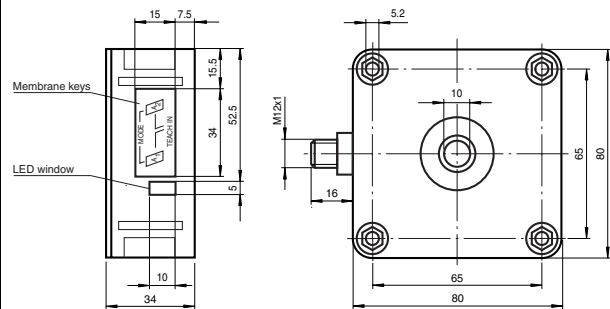


Features

- Switch output
- Extremely small unusable area
- TEACH-IN
- Interference suppression (adjustable switching threshold tracking and angle of divergence of sound beam)
- 4 operating modes can be set
- Temperature compensation
- Synchronisation options
- NO/NC selectable

Technical data

General specifications	Sensing range Adjustment range Unusable area Standard target plate Transducer frequency Response delay	30 ... 500 mm 50 ... 500 mm 0 ... 30 mm 100 mm x 100 mm approx. 390 kHz approx. 50 ms
Indicators/operating means	LED green LED yellow LED red	permanently green: Power on permanent: switching state switch output flashing: TEACH-IN function normal operation: "fault" TEACH-IN function: no object detected
Electrical specifications	Operating voltage No-load supply current I ₀	10 ... 30 V DC, ripple 10 % _{SS} ≤ 50 mA
Input/Output	Synchronisation	bi-directional 0 level: -U _B ...+1 V 1 level: +4 V...+U _B input impedance: > 12 KOhm synchronisation pulse: ≥ 100 μs, synchronisation interpulse period: ≥ 2 ms
Output	Output type Repeat accuracy Rated operational current I _B Voltage drop U _d Switching frequency f Range hysteresis H Temperature influence	1 switch output ES, pnp NO/NC, parameterisable ≤ 0.5 % of switching point 200 mA, short-circuit/overload protected ≤ 2.5 V ≤ 8 Hz 1 % of the set operating distance ± 1 % of full-scale value
Standard conformity	Standards	EN 60947-5-2
Ambient conditions	Ambient temperature Storage temperature	-25 ... 70 °C (248 ... 343 K) -40 ... 85 °C (233 ... 358 K)
Mechanical specifications	Protection degree Connection type Material Housing Transducer Mass	IP65 connector V15 (M12 x 1), 5 pin PBT epoxy resin/hollow glass sphere mixture; foam polyurethane, cover PBT 140 g

Electrical connection

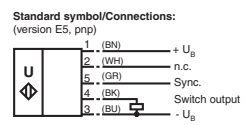

Core colours in accordance with EN 60947-5-2.

Connector V15



Subject to reasonable modifications due to technical advances. Copyright Pepperl+Fuchs, Printed in Germany
Pepperl+Fuchs Group • Tel.: Germany (06 21) 7 76-0 • USA (330) 4 25 35 55 • Singapore 67 79 90 91 • Internet http://www.pepperl-fuchs.com

Notes

Synchronisation

The sensor features a synchronisation input for the suppression of mutual interference. If this input is not used, the sensor will operate using an internally generated clock rate. The synchronisation of multiple sensors can be realised as follows:

External synchronisation

The sensor can be synchronised by the external application of a square wave voltage. A synchronisation pulse at the synchronisation input starts a measuring cycle. The pulse must have a duration greater than 100 μs. The measuring cycle starts with the falling edge of a synchronisation pulse. A low level > 1 s or an open synchronisation input will result in the normal operation of the sensor. A high level at the synchronisation input disables the sensor.

Two operating modes are available

- Multiple sensors can be controlled by the same synchronisation signal. The sensors are synchronised.
- The synchronisation pulses are sent cyclically to individual sensors. The sensors operate in multiplex mode.

Internal synchronisation

The synchronisation connections of up to 5 sensors capable of internal synchronisation are connected to one another. When power is applied, these sensors will operate in multiplex mode. The response delay increases according to the number of sensors to be synchronised. Synchronisation cannot be performed during TEACH-IN and vice versa. The sensors must be operated in an unsynchronised manner to teach the switching point.

TEACH-IN for switching points	LED layout ○ green (gn) ○ red (rd) ○ yellow (ye)	
Switching point 1 Position the target object at the desired position/distance. Press the A1 key > 2 s (time lock)	Target detected ○ (ye) or ○ (rd)	Target not detected ○ (rd) Correct the object position or sensor alignment until object is detected.
Acknowledge when target is detected.	○ (ye)	The value of the object distance will be stored.
Switching point 2 Position the target object at the desired position/distance. Press the A2 key > 2 s (time lock)	Target detected ○ (ye) or ○ (rd)	Target not detected ○ (rd) Correct the object position or sensor alignment until object is detected.
Acknowledge when target is detected.	○ (ye)	The value of the object distance will be stored.


If TEACH-IN mode is not acknowledged within 5 min., the sensor goes back into normal mode and retains the last values to be stored.

Model number

UB500-F42-E5-V15


Characteristic curves/additional information

Characteristic response curve

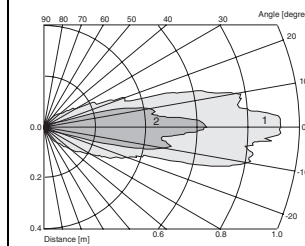

Curve 1: flat surface 100 mm x 100 mm
Curve 2: round bar, Ø 25 mm

Possible operating modes

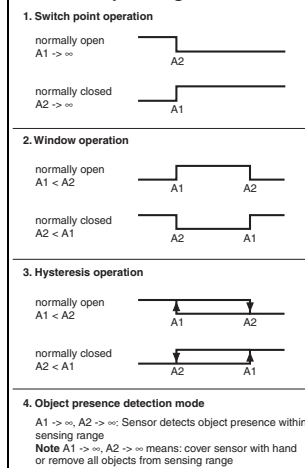

4. Object presence detection mode
A1 → ∞, A2 → ∞: Sensor detects object presence within sensing range
Note A1 → ∞, A2 → ∞ means: cover sensor with hand or remove all objects from sensing range

Subject to reasonable modifications due to technical advances. Copyright Pepperl+Fuchs, Printed in Germany
Pepperl+Fuchs Group • Tel.: Germany (06 21) 7 76-0 • USA (330) 4 25 35 55 • Singapore 67 79 90 91 • Internet http://www.pepperl-fuchs.com

Ultrasonic sensor


UB500-F42-E5-V15

Switching between hysteresis mode - switching point mode or window mode	LED layout ○ green (gn) ○ red (rd) ○ yellow (ye)
Hold down both keys at the same time. (time lock)	Current operating mode ○ (gn) or ○ (gn) Hysteresis mode New operating mode ○ (gn) or ○ (gn) Switching point mode Hysteresis mode
Release keys	5 s ○ (gn) 5 s ○ (gn)

Interference target masking
Interference target masking can be adjusted in 24 steps. Each brief keystroke on (A1) increase or (A2) decreases the limit value. Permanently lighting red LED: max. or min. adjustment limit reached. Go back one step.

What is an interference target

- Small distance to the sensor as the actual target
- must not completely cover the actual goal
- The amplitude of the interference signal must be less than the amplitude of the usable signal.
- The interference target must be positioned only at the edge of the sound lobe and not in the center.

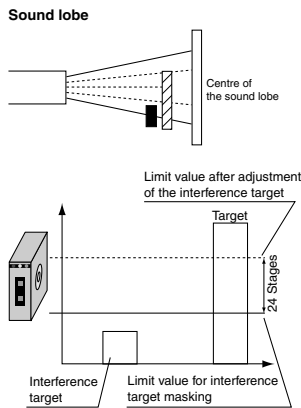

Subject to reasonable modifications due to technical advances. Copyright Pepperl+Fuchs, Printed in Germany
Pepperl+Fuchs Group • Tel.: Germany (06 21) 7 76-0 • USA (330) 4 25 35 55 • Singapore 67 79 90 91 • Internet http://www.pepperl-fuchs.com

Ultrasonic sensor

UB500-F42-E5-V15

Interference target masking	LED layout ○ green (gn) ○ red (rd) ○ yellow (ye)	
Remove the target object from the detection range.		
Turn off the operating voltage	Interference target detected	○ (ye)
Hold down both keys while turning on the operating voltage	The interference target masking mode is now active	
Adjust the limit value	Interference target detected	Limit value OK min/max ○ (rd) or ○ (rd)
Please note: Press the keys only briefly. When the end of the adjustable range is reached, the red LED is lit continuously	A1: Raise the limit A2: Lower the limit	
Press both keys briefly	Exit interference mode, store the target value.	

Check target detection
If interference target mode is not acknowledged within 5 min., the sensor goes back into normal mode and retains the last values to be stored.

Subject to reasonable modifications due to technical advances. Copyright Pepperl+Fuchs, Printed in Germany
Pepperl+Fuchs Group • Tel.: Germany (06 21) 7 76-0 • USA (330) 4 25 35 55 • Singapore 67 79 90 91 • Internet http://www.pepperl-fuchs.com