

Distance sensor OMT200-R100-2EP-IO



- Miniature design with versatile mounting options
- Space-saving distance sensors in small standardized design
- Multi Pixel Technology (MPT) exact and precise signal evaluation
- IO-Link interface for service and process data


Measurement to object, 200 mm detection range, red light, measured value via IO-Link, 2 x push-pull output, 2 m fixed cable

Function

The R100 series miniature optical sensors are the first devices of their kind to offer an endto- end solution in a small single standard design from thru-beam sensor through to a distance measurement device. As a result of this design, the sensors are able to perform practically all standard automation tasks.

The entire series enables sensors to communicate via IO-Link. The DuraBeam laser sensors are durable and can be used in the same way as a standard sensor. The use of Multi Pixel Technology gives the standard sensors a high level of flexibility and enables them to adapt more effectively to their operating environment.

Dimensions

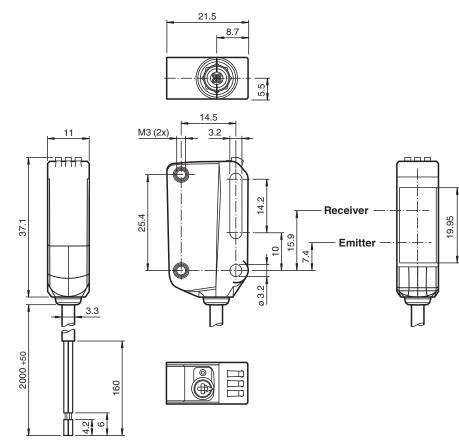

Release date: 2025-01-30 Date of issue: 2025-01-30 Filename: 267075-100182_eng.pdf

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

Pepperl+Fuchs Group www.pepperl-fuchs.com

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com




Technical Data

General specifications			
Measuring range		60 200 mm	
Reference target		standard white, 100 mm x 100 mm	
Light source		LED	
3		modulated visible red light	
LED risk group labelling		exempt group	
Angle deviation		max. +/- 1.5 °	
Diameter of the light spot		approx. 12 mm at a distance of 200 mm	
Opening angle		4 °	
Ambient light limit		EN 60947-5-2 : 30000 Lux	
Resolution		0.1 mm	
Functional safety related parameters			
MTTF _d		600 a	
Mission Time (T _M)		20 a	
Diagnostic Coverage (DC)		0 %	
Indicators/operating means			
Operation indicator		LED green:	
		constantly on - power on flashing (4Hz) - short circuit flashing with short break (1 Hz) - IO-Link mode	
Function indicator		LED yellow: constantly on - switch output active constantly off - switch output inactive	
Control elements		Teach-In key	
Control elements		5-step rotary switch for operating modes selection	
Electrical specifications			
Operating voltage	UB	10 30 V DC	
Ripple		max. 10 %	
No-load supply current	I ₀	< 25 mA at 24 V supply voltage	
Protection class			
Interface			
Interface type		IO-Link (via C/Q = pin 4)	
IO-Link revision		1.1	
Device profile		Smart Sensor	
Device ID		0x110905 (1116421)	
Transfer rate		COM2 (38.4 kBit/s)	
Min. cycle time		3 ms	
Process data width		Process data input 3 Byte Process data output 2 Bit	
SIO mode support		yes	
Compatible master port type		A	
Output			
Switching type		The default setting is: C/Q - BK: NPN normally open, PNP normally closed, IO-Link Q2 - WH: NPN normally open, PNP normally closed	
Signal output		2 push-pull (4 in 1) outputs, short-circuit protected, reverse polarity protected, overvoltage protected	
Switching voltage		max. 30 V DC	
Switching current		max. 100 mA , resistive load	
Usage category		DC-12 and DC-13	
Voltage drop	U_d	≤ 1.5 V DC	
Response time		2 ms	
Conformity			
Communication interface		IEC 61131-9	
Product standard		EN 60947-5-2	
Measurement accuracy			


OMT200-R100-2EP-IO


Technical Data	
Temperature drift	0.05 %/K
Warm up time	5 min
Repeat accuracy	≤1 %
Linearity error	±1%
Approvals and certificates	
UL approval	E87056 , cULus Listed , class 2 power supply , type rating 1
Ambient conditions	
Ambient temperature	10 60 °C (50 140 °F)
Storage temperature	-40 70 °C (-40 158 °F)
Mechanical specifications	
Degree of protection	IP67 / IP69 / IP69K
Connection	2 m fixed cable
Material	
Housing	PC (Polycarbonate)
Optical face	PMMA
Mass	approx. 36 g
Dimensions	
Height	44.5 mm
Width	11 mm
Depth	21.5 mm
Cable length	2 m

Connection



Assembly





	1	Teach-in button
2	2	Mode rotary switch
	3	Switch output indicator Q2
4	4	Switch output indicator Q1
!	5	Operating indicator

Ι	Switch output 1 / switch point B
Ш	Switch output 1 / switch point A
Ш	Switch output 2 / switch point A
IV	Switch output 2 / switch point B
V	Keylock

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group www.pepperl-fuchs.com USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

3

Teach-In

You can use the rotary switch to select the relevant switching threshold A and/or B for teaching in for switch signal Q1 or Q2. The yellow LEDs indicate the current state of the selected output.

To store a threshold value, press and hold the "TI" button until the yellow and green LEDs flash in phase (approx. 1 s). Teach-In starts when the "TI" button is released.

Successful Teach-In is indicated by alternating flashing (2.5 Hz) of the yellow and green LEDs.


An unsuccessful Teach-In is indicated by rapidly alternating flashing (8 Hz) of the yellow and green LEDs.

After an unsuccessful Teach-In, the sensor continues to operate with the previous valid setting after the relevant visual fault signal is issued.


Different switching modes can be defined by teaching in the relevant distance measured values

for the switching thresholds A and B:

Single point mode:



Window mode:



Every taught-in switching threshold can be retaught (overwritten) by pressing the "TI" button again.

Pressing and holding the "TI" button for > 4 s completely deletes the taught-in value. The yellow and green LEDs go out simultaneously to indicate that this procedure has been completed. Successful resetting is indicated by alternating flashing (2.5 Hz) of the yellow and green LEDs.

Resetting to Factory Default Settings

Press the "TI" button for > 10 s in rotary switch position ,O' to reset to factory default settings. The yellow and green LEDs go out simultaneously to indicate the resetting.

Resetting process starts when the "TI" button is released and is indicated by the yellow LED. After the process the sensor works with factory default settings, immediately.

OMT:

- Factory default settings switch signal Q1: Switch signal active, window mode
- Factory default settings switch signal Q2: Switch signal active, window mode

OQT:

- Factory default settings switch signal Q1:
- Switch signal active, BGS mode (background suppression) • Factory default settings switch signal Q2:
- Switch signal active, BGS mode (background suppression)

Configuration

Setting different operating modes via the IO-Link interface

The devices are equipped with an IO-Link interface as standard for diagnostics and parameterization tasks to ensure optimum adjustment of the sensors to the relevant application.

Single point mode operating mode (one switch point):

- "Detection of objects irrespective of type and color in a defined detection range. Objects in the background are suppressed.
- "The switch point corresponds exactly to the set point.

active detection range

Release date: 2025-01-30 Date of issue: 2025-01-30 Filename: 267075-100182_eng.pdf

Background suppression

Distance sensor

Window mode operating mode (two switch points):

- Detection of objects irrespective of type and color in a defined detection range. Reliable detection when object leaves the detection range.
- Window mode with two switch points.

a	active detection range
Foreground suppression	Background suppression

Center window mode operating mode (one switch point):

- Detection of objects irrespective of type and color in a defined detection range. Sets a defined window around a given object. Objects outside this window are not detected.
- Window mode with one switch point.

active	e detection range
Foreground suppression	Background suppression

Two point mode operating mode (hysteresis operating mode):

• Detection of objects irrespective of type and color between a defined switch-on and switch-off point.

	active detection range	
		Output
Output	Hysteresis	Culpur

Inactive operating mode:

Evaluation of switching signals is deactivated.

The associated IODD device description file can be found in the download area at www.pepperl-fuchs.com.

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"