

(E 0102

Model Number


RJ10-N-768

Features


· Comfort series

Technical Data		
General specifications		
Switching element function		NAMUR, NC
Installation		
Output polarity		NAMUR
Inside diameter		10 mm
Measuring cone		Ø 1/8", material SS18
Nominal ratings		
Nominal voltage	U_o	8 V
Operating voltage	U_B	5 25 V
Switching frequency	f	0 2000 Hz
Current consumption		
Measuring plate not detected		≥ 3 mA
Measuring plate detected		≤ 1 mA
Ambient conditions		
Ambient temperature		10 40 °C (50 104 °F)
Mechanical specifications		
Connection type		cable PVC , 2 m
Core cross-section		0.14 mm ²
Housing material		PBT
Degree of protection		IP67
General information		
Use in the hazardous area		see instruction manuals
Category		2G
Compliance with standards and directives		
Standard conformity		
NAMUR		EN 60947-5-6:2000 IEC 60947-5-6:1999
Standards		EN 60947-5-2:2007 IEC 60947-5-2:2007

Dimensions

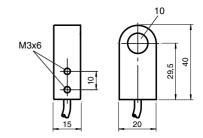

Electrical Connection

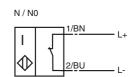

ATEX 2G

Instruction

Device category 2G

EC-Type Examination Certificate

CE marking

ATEX marking

Directive conformity

Standards

Appropriate type

Effective internal capacitance Ci

Effective internal inductance Li

General

Ambient temperature

Installation, Comissioning

Maintenance

Specific conditions

Manual electrical apparatus for hazardous areas

for use in hazardous areas with gas, vapour and mist PTB 99 ATEX 2128 X

€0102

⟨ II 2G EEx ia IIC T6

94/9/EG

EN 50014:1997, EN 50020:1994 Ignition protection "Intrinsic safety"

Use is restricted to the following stated conditions

RJ10-N....

≤30 nF; a cable length of 10 m is considered.

 \leq 20 μH ; a cable length of 10 m is considered.

The apparatus has to be operated according to the appropriate data in the data sheet and in this instruction manual. The EC-Type Examination Certificate has to be observed. The special conditions must be adhered to!

The temperature ranges, according to temperature class, are given in the EC-Type Examination Certificate.

Laws and/or regulations and standards governing the use or intended usage goal must be observed. The intrinsic safety is only assured in connection with an appropriate related apparatus and according to the proof of intrinsic safety.

No changes can be made to apparatus, which are operated in hazardous areas. Repairs to these apparatus are not possible.