

CE 0102

Model Number


SJ3,5-N-Y31604

Features

- **Comfort series**
- 3.5 mm slot width

Technical Data		
General specifications		
Switching element function Slot width		NAMUR, NC 3.5 mm
Depth of immersion (lateral)		5 7 typ. 6 mm
Installation		
Output polarity		NAMUR
Nominal ratings		
Nominal voltage	Uo	8 V
Operating voltage	UB	5 25 V
Switching frequency	f	0 3000 Hz
Hysteresis	Н	0.41 0.6 mm
Current consumption		
Measuring plate not detected		≥ 3 mA
Measuring plate detected		≤ 1 mA
Ambient conditions		
Ambient temperature		-25 100 °C (-13 212 °F)
Mechanical specifications		
Connection type		flexible leads LiY , 500 mm
Core cross-section		0.14 mm ²
Housing material		PBT/PPS
Degree of protection		IP67
General information		
Use in the hazardous area		see instruction manuals
Category		2G
Compliance with standards and directives		
Standard conformity		
NAMUR		EN 60947-5-6:2000 IEC 60947-5-6:1999
Standards		EN 60947-5-2:2007 IEC 60947-5-2:2007


Dimensions

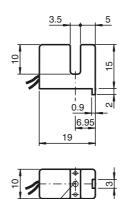




ø 1.85

Electrical Connection

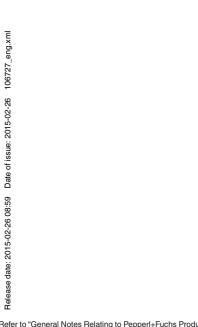



Refer to "General Notes Relating to Pepperl+Fuchs Product Information" USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com





ATEX 2G

Instruction

Device category 2G EC-Type Examination Certificate CE marking

ATEX marking

Directive conformity Standards

Appropriate type Effective internal capacitance Ci Effective internal inductance Li General

Ambient temperature

Installation, Comissioning

Maintenance

Specific conditions

Protection from mechanical danger

Manual electrical apparatus for hazardous areas

for use in hazardous areas with gas, vapour and mist PTB 99 ATEX 2219 X €0102

⟨Ex⟩ II 2G EEx ia IIC T6

94/9/EG EN 50014:1997, EN 50020:1994 Ignition protection "Intrinsic safety' Use is restricted to the following stated conditions SJ3,5-...-N...

 \leq 50 nF ; a cable length of 10 m is considered.

 \leq 250 μ H ; a cable length of 10 m is considered.

The apparatus has to be operated according to the appropriate data in the data sheet and in this instruction manual. The EC-Type Examination Certificate has to be observed. The special conditions must be adhered to!

SJ3.5-N-Y31604

The temperature ranges, according to temperature class, are given in the EC-Type Examination Certificate.

Laws and/or regulations and standards governing the use or intended usage goal must be observed. The intrinsic safety is only assured in connection with an appropriate related apparatus and according to the proof of intrinsic safety.

No changes can be made to apparatus, which are operated in hazardous areas. Repairs to these apparatus are not possible.

When used in the temperature range below -20 $^\circ\text{C}$ the sensor should be protected from knocks by the provision of an additional housing.

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

