



# CE

## **Model Number**

## SBL-8-H-SL-V-4702

Background suppression sensor with 4-pin, M12 x 1 connector and fixed cable with 4-pin, M12 socket

## **Features**

- Background suppression sensor for roller conveyors
- ٠ For installation between the rollers on a roller conveyor
- ٠ Minimal black/white difference
- Protection degree IP65 ٠
- Can be connected in series
- With pneumatic valve


# **Product information**


Sensors of the SBL series are used to easily control material flow on roller conveyors in material handling and other branches.

The SBL series is a precise background suppression sensor according to the 3 element method. The sensor features superior background suppression and a very good ambient light immunity. Material and transport container of all colors and opacities are reliably detected.


The special design allows the sensor to be mounted between the rollers of a roller conveyor or any other conveying unit. Mounting between the rollers is easy and protects the sensor.



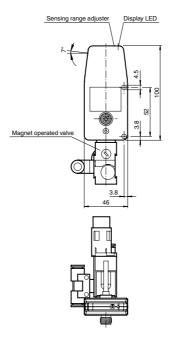

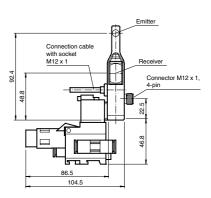


## **Electrical connection**

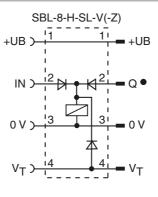




## **Pinout**



# Indicators/operating means



1	Signal display	yellow	
2	Sensing range adjuster		

Subject to modifications without notice Pepperl+Fuchs Group www.pepperl-fuchs.com

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776-4411 fa-info@pepperl-fuchs.com

Copyright Pepperl+Fuchs Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



Technical data			Accessori	
General specifications			OMH-SBL-0	
Detection range		40 900 mm	Mounting bra	
Detection range min.		40 340 mm	ries	
Detection range max.		40 900 mm		
Adjustment range		340 900 mm	V1-G-2M-PV	
Reference target		standard white 200 mm x 200 mm	Cable socke	
Light source		IRED		
Light type		modulated infrared light , 880 nm	V1-G-5M-PV Cable socke	
Black/White difference (6 %/9	0 %)	< 10 %		
Diameter of the light spot		approx. 60 mm at detection range 900 mm		
Cascadability		max. 25 sensors per line	V1-W-2M-PU Cable socke	
Ambient light limit		continuous light 30000 Lux, Fluorescent lamp 5000 Lux		
Indicators/operating means				
Function display		LED yellow: lights when object is detected	V1-W-5M-Pl	
Controls		Detection range adjuster	Cable socke	
Electrical specifications			V1S-TEE-V1	
Operating voltage	U <sub>B</sub>	24 VDC -20% +10%		
Ripple	- D	max. 10 %	T-Distributor,	
No-load supply current	I <sub>0</sub>	max. 120 mA	cket/connect	
Output	-0		Schraubend	
Switching type		dark on	Screwdriver	
Signal output		1 PNP, short-circuit protected, reverse polarity protected	Ocrewaniver	
Switching voltage		max. 30 V DC	Additional ac	
Switching current		max. 200 mA	Internet.	
Switching frequency	f	100 Hz		
Response time		5 ms		
Pneumatic output		2/3 way valve		
Type of valve		currentless closed		
Operating pressure		2 8 bar (29 116 psi)		
Medium		air		
Ambient conditions				
		-20 50 °C (-4 122 °F)		
Ambient temperature				
Storage temperature		-30 60 °C (-22 140 °F)		
Mechanical specifications		IDas		
Protection degree		IP65		
Connection		connector M12 x 1, 4-pin ; Connecting cable with Socket, straight M12 x 1 ; Length: 1200 mm		
Material				
Housing		plastic		
Optical face		plastic lens		
Mass		approx. 200 g		
Compliance with standards a ves	and direct	ŀ		
Directive conformity		EMC Directive 2004/108/EC		
Standard conformity				
Product standard		EN 60947-5-2:2007 IEC 60947-5-2:2007		
Shock and impact resistanc	0	IEC / EN 60068. half-sine, 40 g in each X, Y and Z directions		
Vibration resistance		IEC / EN 60068-2-6. Sinus. 10 -1000 Hz, 10 g in each X, Y and Z directions		
Approvals and certificates				
		chillus Listed Class 2 Power Source, Type 1 enclosure		

Approvals and o UL approval CCC approval

> cULus Listed, Class 2 Power Source, Type 1 enclosure Products with a maximum operating voltage of  ${\leq}36$  V do not bear a CCC marking because they do not require approval.

ies

01 racket for sensors of SBL se-

VC et, M12, 4-pin, PVC cable

VC et, M12, 4-pin, PVC cable

UR et, M12, 4-pin, PUR cable

UR et, M12, 4-pin, PUR cable

1/V1S or, M12 connector to M12 soctor

ndreher 0,5 x 3,0 mm r


ccessories can be found in the



www.pepperl-fuchs.com

2

## **Curves/Diagrams**

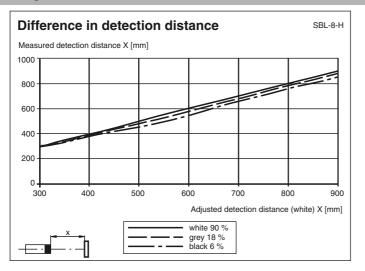

# Additional Information

## Intended use:

The transmitter and receiver are located in the same housing for direct detection sensors with background masking. Marking of objects outside the detection range is achieved by arranging the angle between the transmitter and receiver (2 receiver elements).

Objects are detected independently of the structure and colour of the surface.

The special design of the sensors makes it possible to install them between two rollers in the roller back-up conveyor systems under the material that is being moved. This allows for installation that saves space and prevents mechanical damage of the sensor caused by material being conveyed.

#### Mounting instructions:

The sensors can be directly fastened in place with the pass-through bore holes or can be attached with a support bracket or a clamp (the last two are not included in delivery).

The surface underneath must be flat to prevent the housing from moving when it is tightened into position. We recommend securing the nut and screw in place with spring washers to prevent the sensor from going out of adjustment.

## For versions SBL-8-H-SL, -V, -Z

As many as 25 sensors can be cascaded with the aid of just one power supply. A solenoid valve is energised if the corresponding sensor itself or its predecessor in the cascade does not see any object.

It is also possible to energise the values of all sensors included in the cascade with block movement ( $V_T$ ). To do this, apply the positive supply voltage (+UB) on the input  $V_T$  of the first sensor.

## Adjustment:

Align the sensor to the background. If the yellow LED is lit, the detection range should be reduced with the detection range adjuster until the yellow LED goes out.

## **Object detection:**

Position the object to be detected in the path of the beam. If the object is detected, the yellow LED lights up. If it does not light up, the detection range must be further adjusted on the potentiometer until it lights up when an object is de-

If it does not light up, the detection range must be further adjusted on the potentiometer until it lights up when an object is detected.

## Version SBL-8-H-SL-V-Z only:

The two adjusting mechanisms on the front side of the sensor can be used separately for timer functions for the switching on or switching off process.

This results in a delay defined by the adjuster between the change of state (object detected -> object not detected or vice-versa) and the switching process. The duration of the delay can be set for up to 2 seconds.

## **Cleaning:**

We recommend cleaning the optical surface and checking all connections at regular intervals.

# Note:

Use a screwdriver to adjust the sensing range. We strongly recommend to use the screwdriver given in the accessories section.

Copyright Pepperl+Fuchs Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

