



Model Number

UB800-18GM40-I-V1-Y275150

Single head system


Features

CE

- Short design, 40 mm
- Function indicators visible from all directions
- Analog output 4 mA ... 20 mA
- Measuring window adjustable
- · Program input
- Temperature compensation

Diagrams

Characteristic response curve

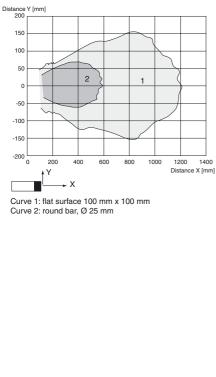

Technical data

General specifications Sensing range Adjustment range

- Dead band Standard target plate
- Transducer frequency Response delay
- Indicators/operating means LED green LED yellow

LED red

Electrical specifications Operating voltage U_B No-load supply current I₀ Input Input type

Output

Output type Default setting Resolution Deviation of the characteristic curve Repeat accuracy Load impedance

Temperature influence Ambient conditions Ambient temperature Storage temperature Mechanical specifications Connection type Degree of protection Material Housing

Transducer Mass Compliance with standards and directives

Standard conformity Standards

Approvals and certificates

UL approval

CSA approval CCC approval

50 ... 800 mm 70 ... 800 mm 0 ... 50 mm 100 mm x 100 mm approx. 255 kHz approx. 100 ms

Power on solid yellow: object in the evaluation range yellow, flashing: program function, object detected solid red: Error red, flashing: program function, object not detected

10 ... 30 V DC , ripple 10 $\%_{SS}$ \leq 20 mA

1 program input lower evaluation limit A1: -U_B ... +1 V, upper evaluation limit A2: +4 V ... +U_B input impedance: > 4.7 k Ω , pulse duration: \geq 1 s

1 analog output 4 ... 20 mA, short-circuit/overload protected evaluation limit A1: 800 mm evaluation limit A2: 70 mm 0.4 mm at max. sensing range

-25 ... 70 °C (-13 ... 158 °F) -40 ... 85 °C (-40 ... 185 °F)

Connector M12 x 1 , 4-pin IP67

brass, nickel-plated epoxy resin/hollow glass sphere mixture; foam polyurethane, cover PBT 25 g

EN 60947-5-2:2007 + A1:2012 IEC 60947-5-2:2007 + A1:2012 EN 60947-5-7:2003 IEC 60947-5-7:2003

cULus Listed, General Purpose cCSAus Listed, General Purpose CCC approval / marking not required for products rated ≤36 V


Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

Pepperl+Fuchs Group USA www.pepperl-fuchs.com fa-info@

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com




Dimensions

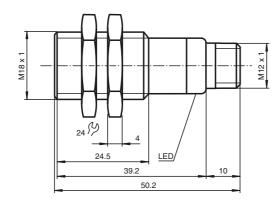

Additional Information


Programmed analog output function

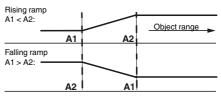

A1 -> ∞ , A2 -> ∞ : Detection of object presence

Object detected: 20 mA No object detected: 4 mA

Electrical Connection

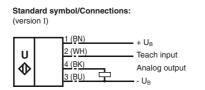

Core colors in accordance with EN 60947-5-2.

Pinout



Wire colors in accordance with EN 60947-5-2

1	BN	(brown)
2	WH	(white)
3	BU	(blue)
4	BK	(black)



Accessories

UB-PROG2 Programming unit

OMH-04

Mounting aid for round steel ø 12 mm or sheet 1.5 mm ... 3 mm

BF 18

Mounting flange, 18 mm

BF 18-F

Mounting flange with dead stop, 18 mm

BF 5-30

Universal mounting bracket for cylindrical sensors with a diameter of 5 ... 30 mm

V1-G-2M-PVC Female cordset, M12, 4-pin, PVC cable

V1-W-2M-PUR Female cordset, M12, 4-pin, PUR cable

Adjusting the evaluation limits

The ultrasonic sensor features an analogue output with two teachable evaluation limits. These are set by applying the supply voltage -U_B or +U_B to the TEACH-IN input. The supply voltage must be applied to the TEACH-IN input for at least 1 s. LEDs indicate whether the sensor has recognised the target during the TEACH-IN procedure. The lower evaluation limit A1 is taught with -U_B, A2 with +U_B.

Two different output functions can be set:

- 1. Analogue value increases with rising distance to object (rising ramp)
- 2. Analogue value falls with rising distance to object (falling ramp)

TEACH-IN rising ramp (A2 > A1)

- Position object at lower evaluation limit
- TEACH-IN lower limit A1 with UB
- Position object at upper evaluation limit
- TEACH-IN upper limit A2 with + UB

TEACH-IN falling ramp (A1 > A2):

- Position object at lower evaluation limit
- TEACH-IN lower limit A2 with + U_B
- Position object at upper evaluation limit
- TEACH-IN upper limit A1 with U_B

Default setting

A1:	nominal sensing range
A2:	unusable area
Mode of operation:	falling ramp

LED Displays

Displays in dependence on operating mode	Red LED	Yellow LED
TEACH-IN evaluation limit		
Object detected	off	flashes
No object detected	flashes	off
Object uncertain (TEACH-IN invalid)	on	off
Normal mode (evaluation range)	off	on
Fault	on	previous state

Installation conditions

If the sensor is installed at places, where the environment temperature can fall below 0 °C, for the sensors fixation, one of the mounting flanges BF18, BF18-F or BF 5-30 must be used.

In case of direct mounting of the sensor in a through hole using the steel nuts, it has to be fixed at the middle of the housing thread. If a fixation at the front end of the threaded housing is required, plastic nuts with centering ring (accessories) must be used.

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

Pepperl+Fuchs Group USA: +1 330 486 0001 www.pepperl-fuchs.com

fa-info@us.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.con

