


Commissioning sheet

Classic mode



Advanced display mode

underlined data can be selected

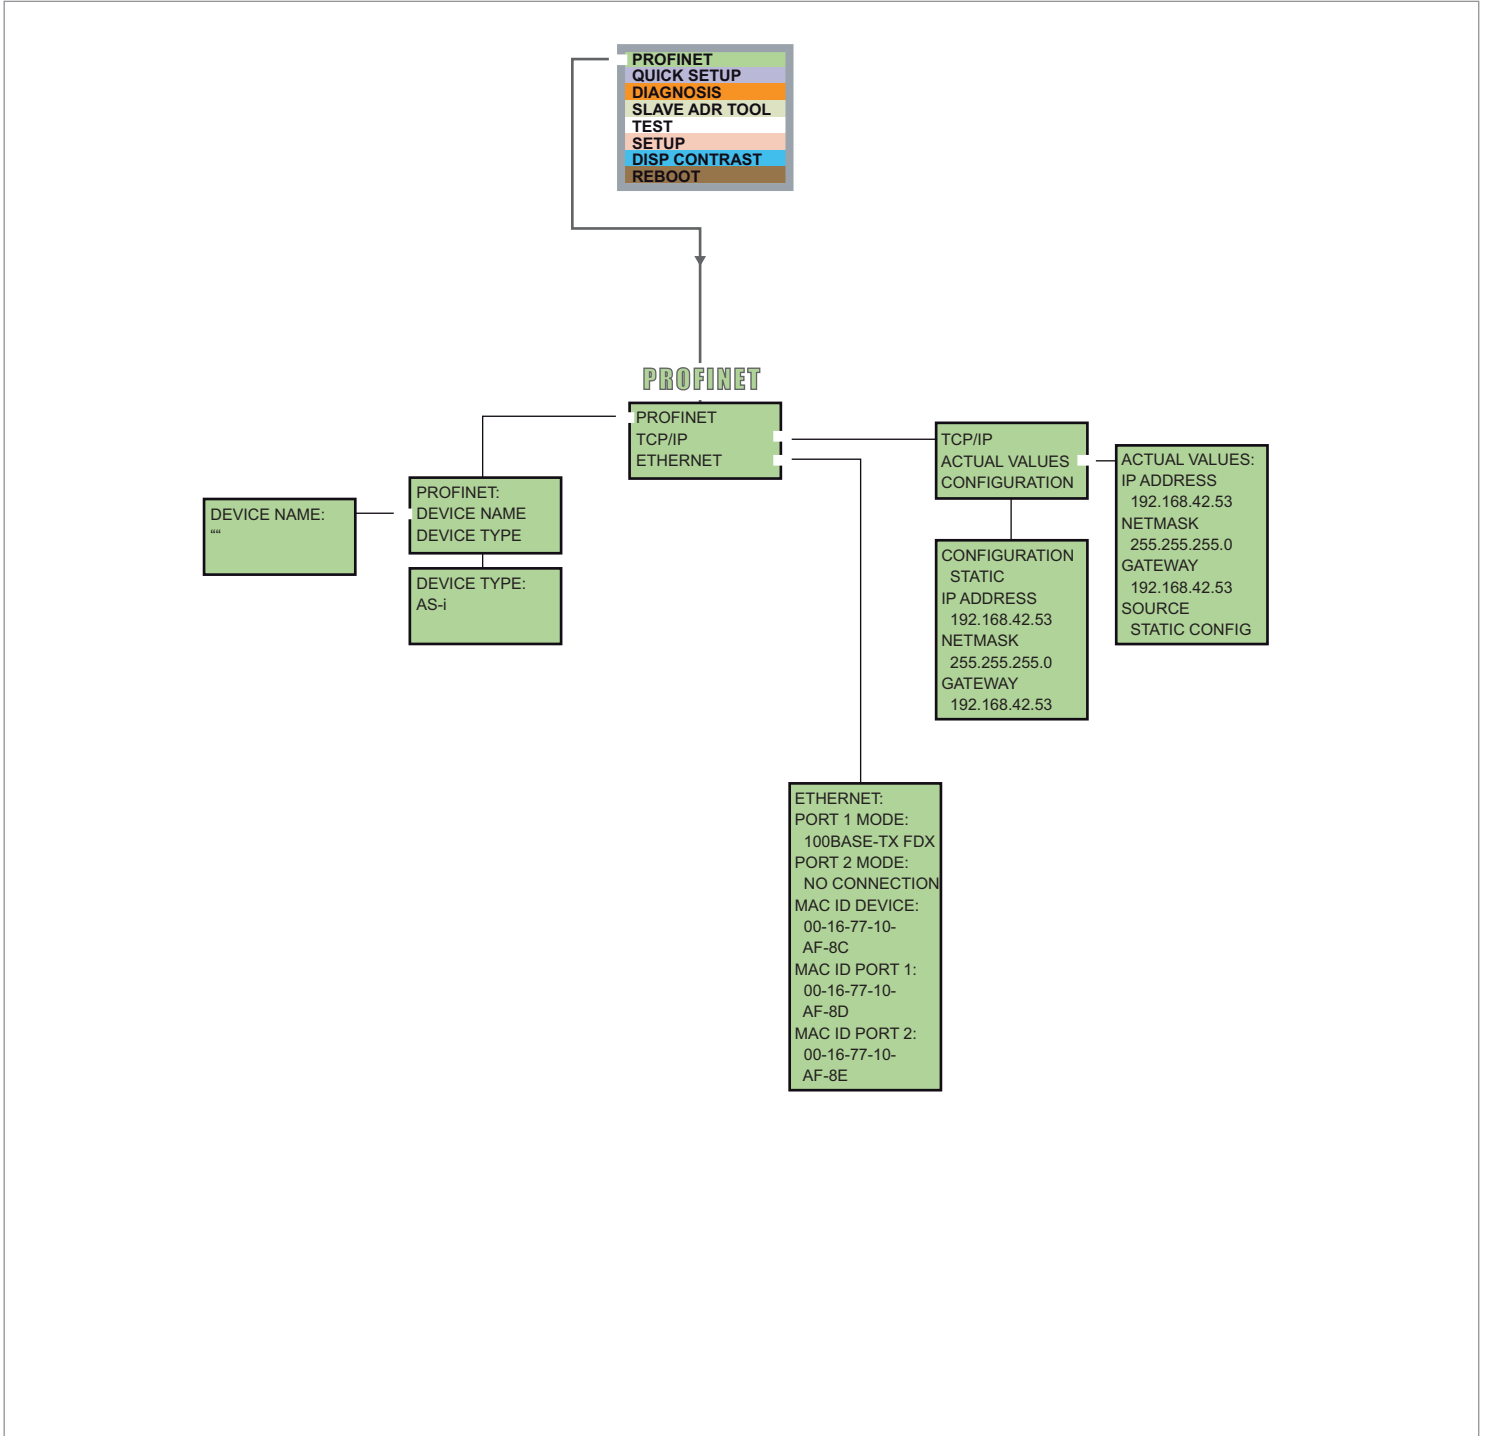
u>


Basic Operation

The device starts in the traditional mode. You can switch between the two modes with **ESC** or **OK**. In the advanced mode the cursor is moved by both arrow buttons. Pushing **OK** puts you to the superior menue (in the drawing one step to the right side). **ESC** puts you back to the previous menue. To edit data you first mark them with the cursor and then select them with **OK**, change them with the arrow buttons and finally apply them with **OK**. Pushing **ESC** cancels the editing.

Commissioning sheet

classic mode
1.12A
advanced display mode

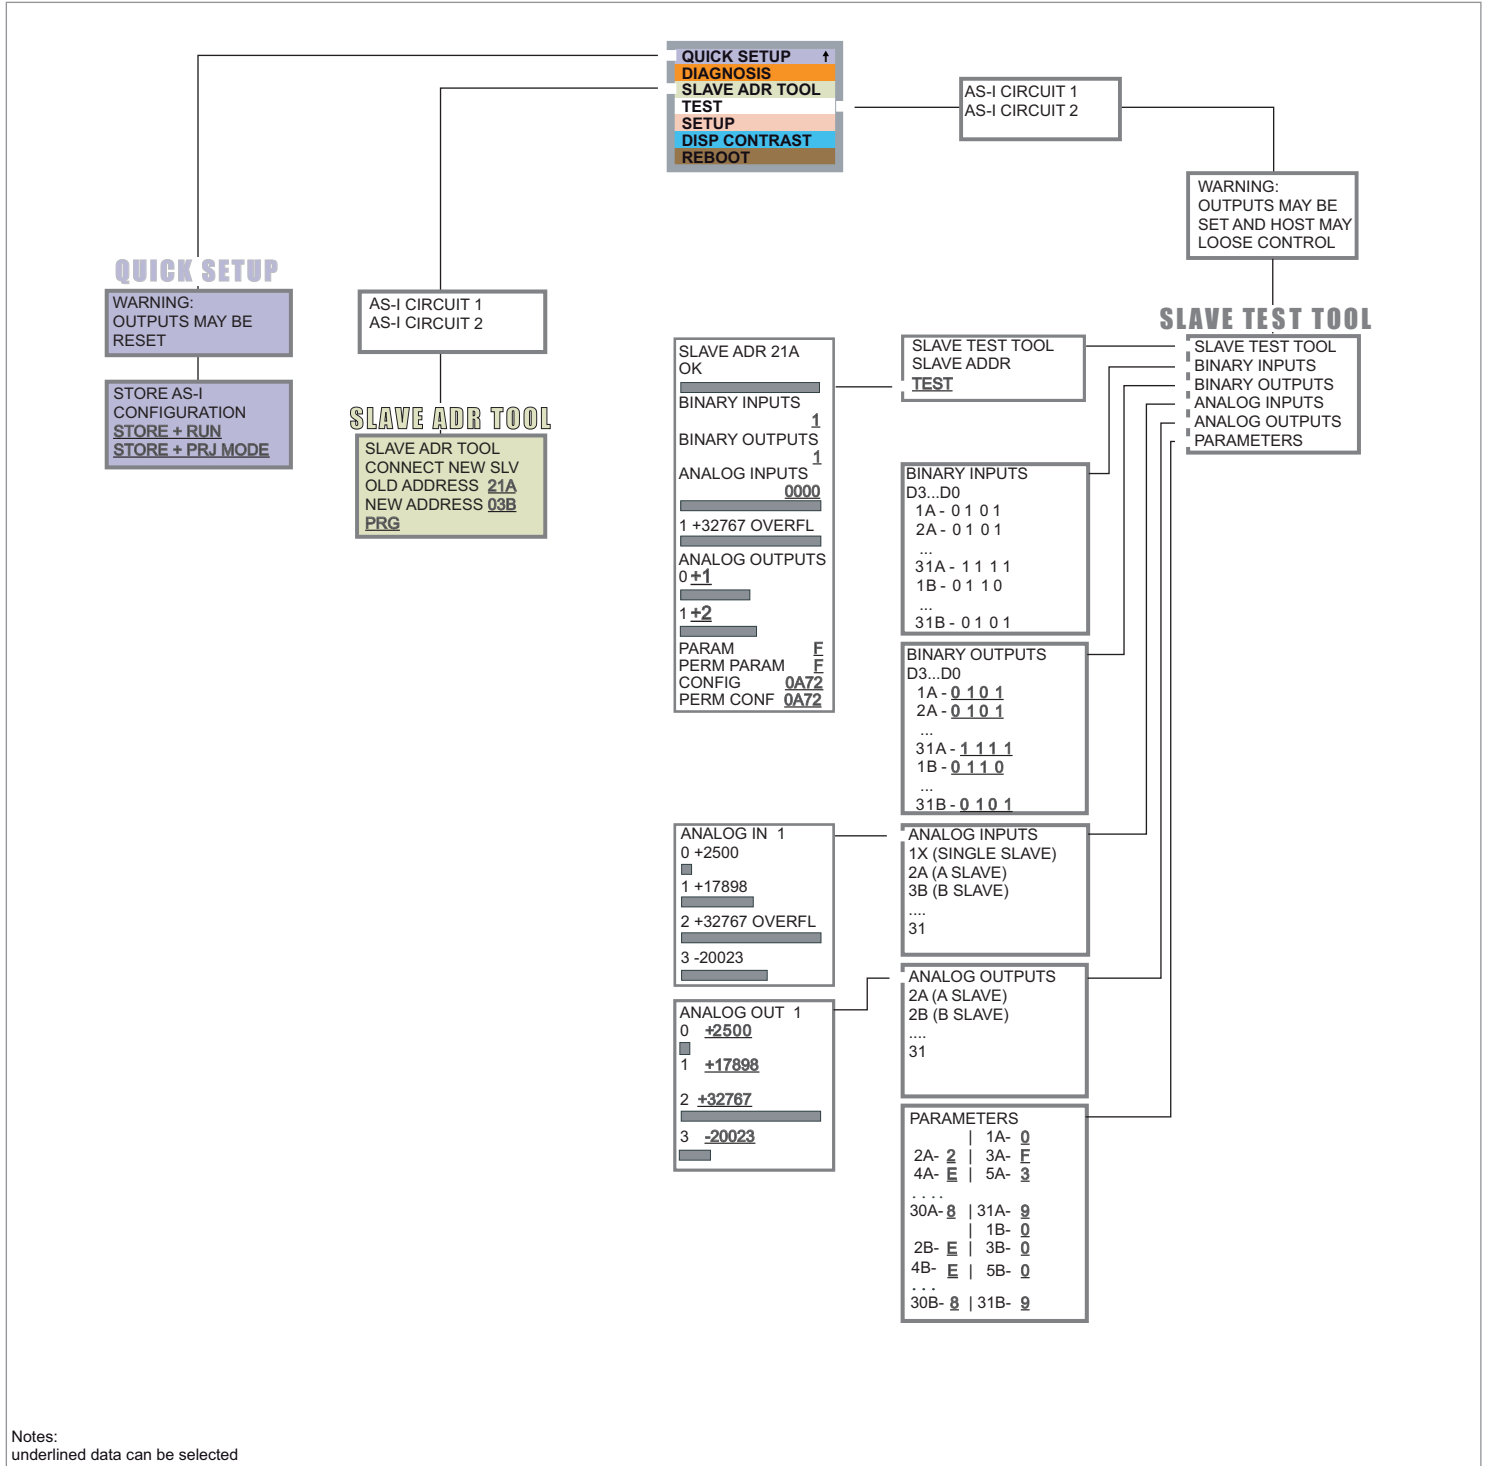


Commissioning sheet


classic mode


1.12A

advanced display mode

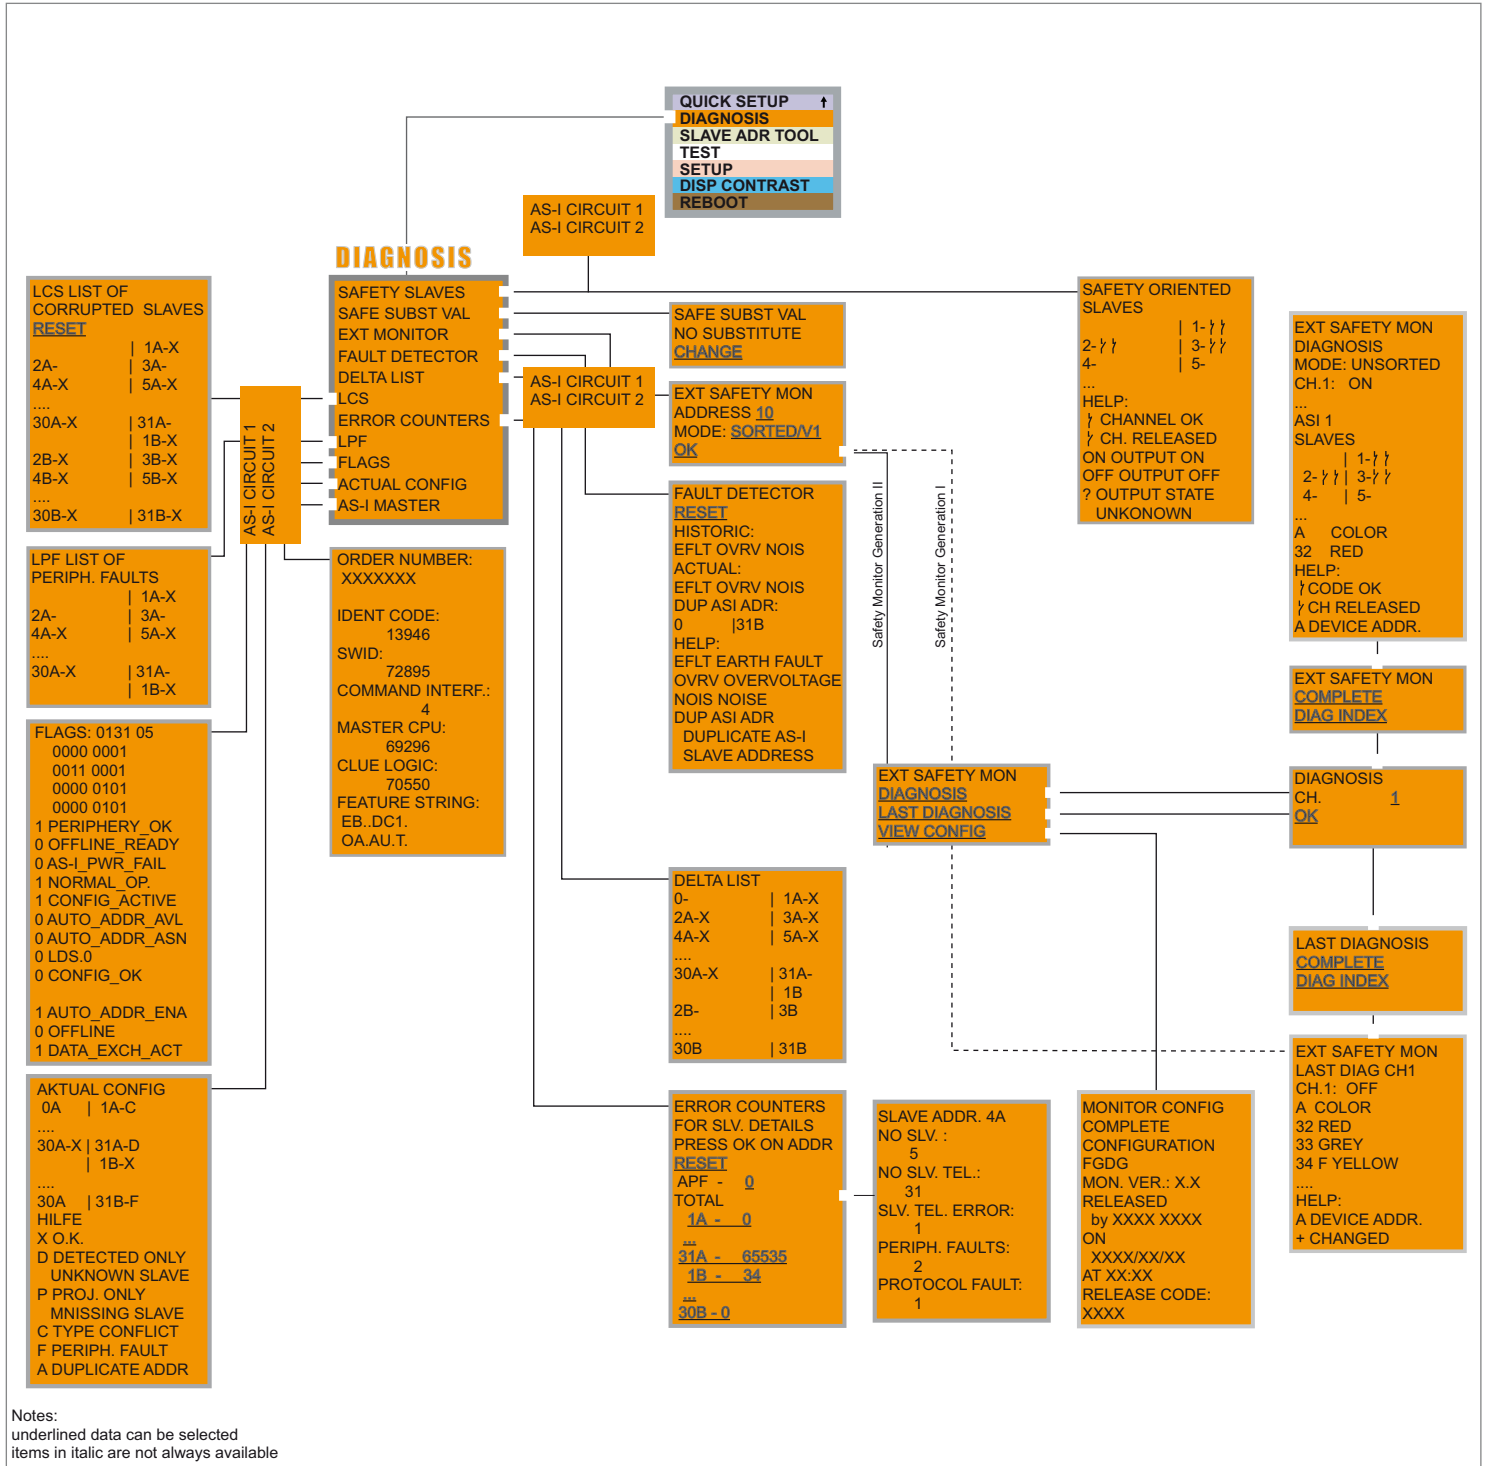

Commissioning sheet

classic mode

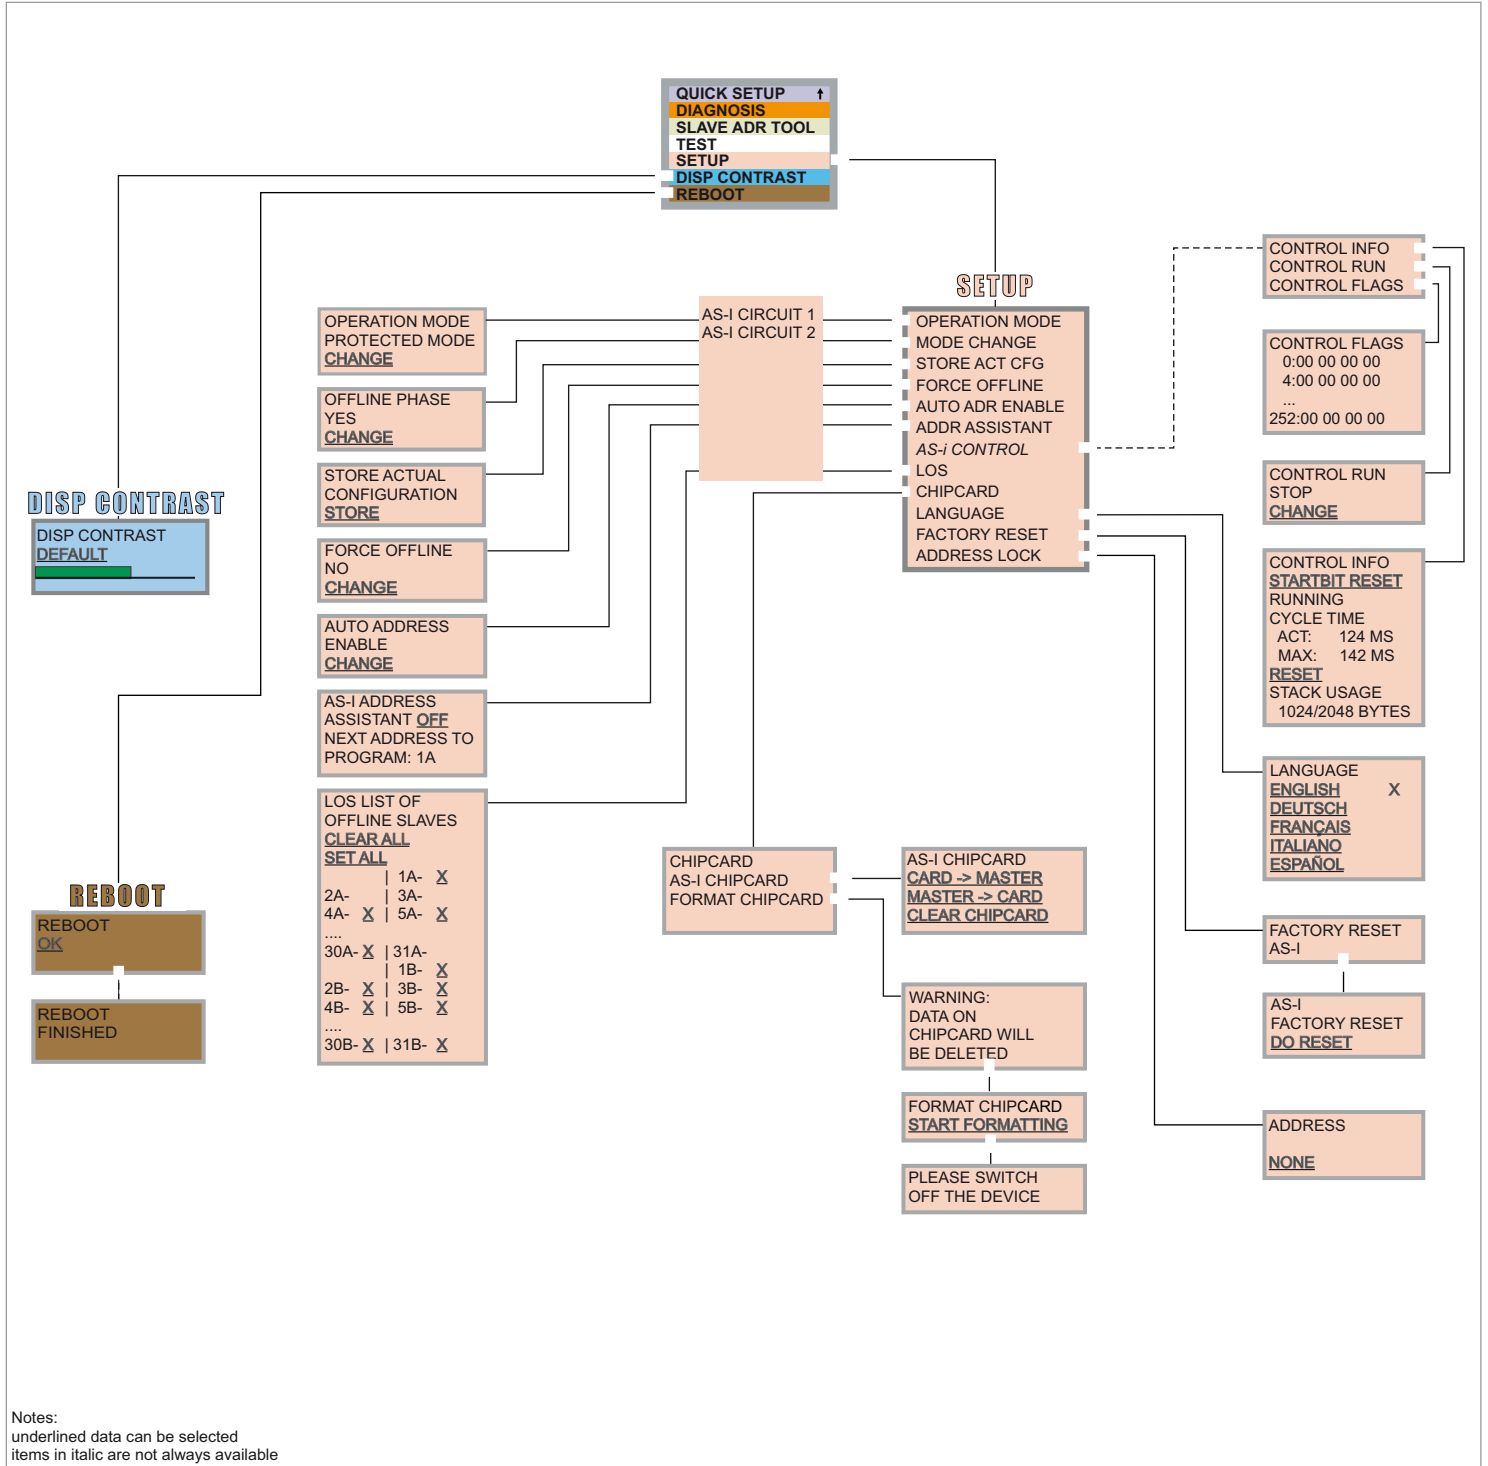 advanced display mode



Basic Operation

The device starts in the traditional mode. You can switch between the two modes with **ESC** or **OK**. In the advanced mode the cursor is moved by both arrow buttons. Pushing **OK** puts you to the superior menu (in the drawing one step to the right side). **ESC** puts you back to the previous menu. To edit data you first mark them with the cursor and then select them with **OK**, change them with the arrow buttons and finally apply them with **OK**. Pushing **ESC** cancels the editing.