

Background suppression sensor SBL-8-H-900-IR-SL-V-Z-3535



- Background suppression sensor for roller conveyors
- For installation between the rollers on a roller conveyor
- Very small black-white difference
- Adjustable detection range
- Can be connected in series
- ON/Off delay adjustable
- 3 in 1: Sensor, pneumatic valve and integrated control logic

Congested track scanner, background suppression sensor, 900 mm adjustable detection range, infrared light, dark on, time relay, 1 PNP output, M12 plug and fixed cable with M12 socket





Function

Sensors of the SBL serie are used to easily control material flow on roller conveyors in material handling and other branches. The SBL series is a precise background suppression sensor according to the 3 element method. The sensor features superior background suppression and a very good ambient light immunity.

Material and transport container of all colors and opacities are reliably detected. The special design allows the sensor to be mounted between the rollers of a roller conveyor or any other conveying unit. Mounting between the rollers is easy and protects the sensor.

Dimensions

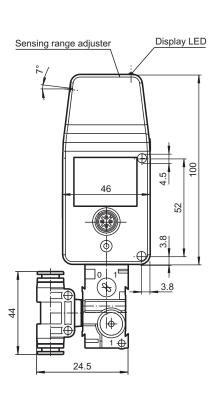

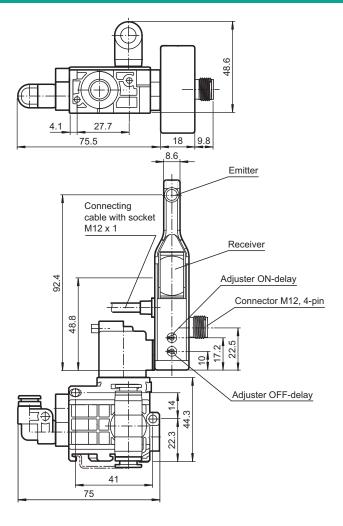



Technical Data

General specifications 40 ... 900 mm Detection range Detection range min. 40 ... 340 mm 40 ... 900 mm Detection range max. Adjustment range 340 ... 900 mm standard white 200 mm x 200 mm Reference target Light source modulated infrared light, 880 nm Light type < 10 % Black-white difference (6 %/90 %) Diameter of the light spot approx. 60 mm at detection range 900 mm Cascadability max. 38 sensors per line continuous light 30000 Lux, Fluorescent lamp 5000 Lux Ambient light limit Functional safety related parameters 1100 a MTTF_d Mission Time (T_M) 20 a Diagnostic Coverage (DC) 0 % Indicators/operating means Function indicator LED yellow: lights when object is detected Control elements Sensing range adjuster Control elements Adjuster for switch-off delay and switch-on delay Electrical specifications Operating voltage U_B 24 V DC ± 20 % Ripple max. 10 % No-load supply current max. 115 mA Output Switching type dark-on Signal output 1 PNP, short-circuit protected, reverse polarity protected Switching voltage max. 30 V DC Switching current max. 200 mA 100 Hz Switching frequency 5 ms Response time On-delay 0 ... 2000 ms Off-delay 0 ... 2000 ms Pneumatic output 3/2 way valve Type of valve currentless opened 2 ... 8 bar (29 ... 116 psi) Operating pressure Medium air Conformity Product standard EN 60947-5-2 Compliance with standards and directives Standard conformity Shock and impact resistance IEC / EN 60068. half-sine, 40 g in each X, Y and Z directions IEC / EN 60068-2-6. Sinus. 10 -1000 Hz, 10 g in each X, Y and Z directions Vibration resistance Approvals and certificates **UL** approval cULus Listed, Class 2 Power Source, Type 1 enclosure CCC approval CCC approval / marking not required for products rated ≤36 V **Ambient conditions** -15 ... 50 °C (5 ... 122 °F) Ambient temperature -30 ... 60 °C (-22 ... 140 °F) Storage temperature

Housing width


Housing height

Mechanical specifications

18 mm 100 mm

Housing depth	46 mm
Degree of protection	IP65
Connection	4-pin, M12 x 1 connector ; Connecting cable with Socket, straight M12 x 1 ; Length: 1200 mm
Material	
Housing	plastic
Optical face	plastic lens
Mass	approx. 200 g

Connection Assignment

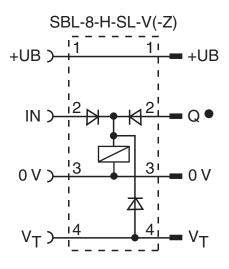


- O = Light on = Dark on

Connection Assignment






Assembly




Signal display yellow 2 Sensing range adjuster

Background suppression sensor

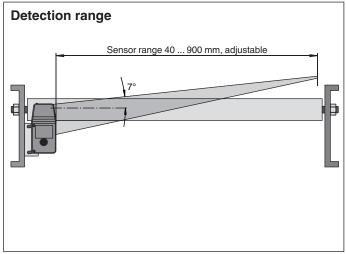

Difference in detection distance

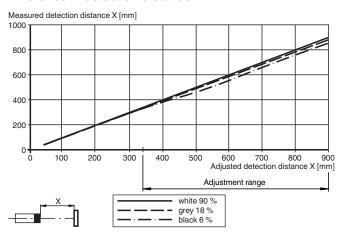

Accessories

	OMH-SBL-01	Mounting bracket for sensors of SBL series
6/	V1-G-2M-PVC	Female cordset single-ended M12 straight A-coded, 4-pin, PVC cable grey
6/	V1-G-5M-PVC	Female cordset single-ended M12 straight A-coded, 4-pin, PVC cable grey
6/	V1-W-2M-PUR	Female cordset single-ended M12 angled A-coded, 4-pin, PUR cable grey
6/	V1-W-5M-PUR	Female cordset single-ended M12 angled A-coded, 4-pin, PUR cable grey
	V1S-TEE-V1/V1S	T-Splitter M12 plug to M12 plug / M12 socket 4-pin A-coded

FPEPPERL+FUCHS

System Description

Options:

Sensors with the **version -V** are equipped with a solenoid valve and can directly control a 3/2 way pneumatic actuator, without any-interaction of an external system controlling unit (PLC). As soon as conveyed goods are detected, the diffuse mode sensor gives an electrical-signal to the pneumatic solenoid valve, which is then activated.

Sensors with the control logic **option -SL-(V)** allows up to 50 diffuse mode sensors to be connected-to each other (data and power), depending on the current consumption of sensor and solenoid valve. An additional supply power and data bus cable is used to interconnect the sensors with control logic option -SL. All necessary functions for controlling the material flow of conveyed goods are supported, such as: single feed, single release, slug release, external motor and solenoid valve control. It is also possible to energize the valves of all sensors included in the cascade by slug release (VT). To do this, apply the positive supply voltage (+UB) on the input VT of the first sensor.

Sensors with timing **function -Z** features the adjustment of the ON- and OFF delay of the output independently. This optimizes control of the solenoid valve. A zero pressure accumulation of the conveyed goods can be realized with application of time ON- and OFF delay of the output. The ON- and OFF delay to control the switching of the solenoid valve may be adjusted between 0 and 2 seconds.

Additional power supply between every 20 to 25 sensors can be realized by the use of the power in feed junction V1S-TEE-V1/V1S in combination with a cable V1-G-...-PVC. This features to practically connect any number of SBL sensors in series. Attention should be paid to the maximum rated current of the cable and the connectors which usually is max. I = 4 A. For more details on the maximum rated current of single components, please refer to our datasheet values. For the electrical supply of the sensors the country specific standards have to be considered.

Accessories

Note:

Use a screwdriver to adjust the sensing range. We strongly recommend to use the screwdriver given in the accessories section.