

Interface cable **UC-PROG-IR-USB**

Interface cable for parameterization of sensors with IrDA interface




Function

The interface cable UC-PROG-IR-USB is suitable for parameterization of ultrasonic sensors with infrared interface (IrDA). Depending on the sensor used, either the configuration tool PACTware with a DTM suitable for the sensor or the service program ULTRA-PROG-IR serves as user interface.

The cable establishes a connection between the USB interface of a PC with the infrared interface of the sensor.

Dimensions

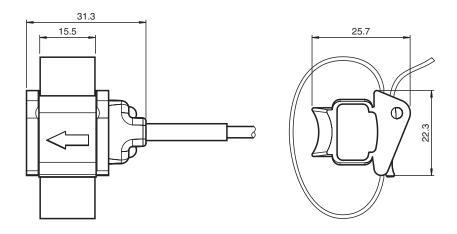

Technical Data

Indicators/operating means		
LED green		USB communication active
LED yellow		Infrared communication active
Electrical specifications		
Operating current	I_B	< 100 mA
Interface 1		
Interface type		Infrared (to the sensor)
Mode		point-to-point connection
Interface 2		
Interface type		USB 2.0 or higher (to the PC)
Compliance with standards and directives		
Standard conformity		



Release date: 2023-02-13 Date of issue: 2023-02-13 Filename: 274846_eng.pdf

Technical Data		
Standards	EN IEC 60947-5-2:2020 IEC 60947-5-2:2019	
Ambient conditions		
Ambient temperature	-25 70 °C (-13 158 °F)	
Storage temperature	-40 85 °C (-40 185 °F)	
Shock resistance	30 g , 11 ms period	
Vibration resistance	10 55 Hz , Amplitude ± 1 mm	
Mechanical specifications		
Connection type	Cable connector with cable PUR , 3 m USB-Male Connector Typ A (Standard)	
Degree of protection	IP65	
Material	black polycarbonate (PC)	
General information		
Scope of delivery	Interface cable	

Accessories



ULTRA-PROG-IR


Configuration software for ultrasonic sensors

Additional Information

Attaching to the Sensor


The interface cable UC-PROG-IR-USB can be used for parameterization of ultrasonic sensors of UC*-30GM70 series and UC*18GS series with infrared interface (IrDA). Depending on the sensor series, a certain alignment of the sensor to the interface cable is required so that the infrared interfaces can establish a link.

For UC*-30GM70 Series

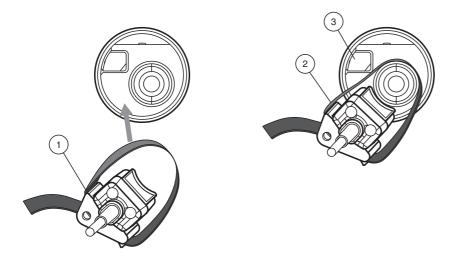

- 1. Attach the interface cable (1) to the rear of the sensor with the marking arrow on the interface cable in the direction of the sensor.
- 2. Align the interface cable (1) to the sensor so that
- the fastening strap of the interface cable (2) runs below the sensor stop (3).
- the LEDs of the interface cable are as close as possible to the sensor stop (3).

For UC*-18GS Series

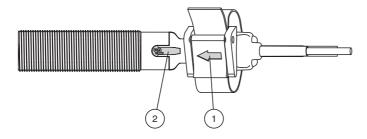

1. Attach the interface cable (1) to the rear of the sensor so that the marking arrow (1) points to the marking of the infrared interface (2) on the sensor.