



**FACTORYAUTOMATION**

**MANUAL**

**VBG-PB-K5-R4-DMD**

**AS-INTERFACE/PROFIBUS GATEWAY**

**IN ACC. TO SPECIFICATION 2.11**



With regard to the supply of products, the current issue of the following document is applicable:  
The General Terms of Delivery for Products and Services of the Electrical Industry, as published by  
the Central Association of the 'Elektrotechnik und Elektroindustrie (ZVEI) e.V.',  
including the supplementary clause "Extended reservation of title"

We at Pepperl+Fuchs recognise a duty to make a contribution to the future.  
For this reason, this printed matter is produced on paper bleached without the use of chlorine.

# Table of Contents

<b>1</b>	<b>Declaration of Conformity .....</b>	<b>5</b>
<b>2</b>	<b>The Used Symbols .....</b>	<b>6</b>
<b>3</b>	<b>Safety .....</b>	<b>7</b>
<b>3.1</b>	<b>Intended Use .....</b>	<b>7</b>
<b>3.2</b>	<b>General Safety Information .....</b>	<b>7</b>
<b>4</b>	<b>General Information .....</b>	<b>8</b>
<b>5</b>	<b>Connections, Displays and Operating Keys .....</b>	<b>9</b>
<b>5.1</b>	<b>Power Supply Concepts and AS-i Connection Techniques .....</b>	<b>9</b>
5.1.1	Double Master in IP20 .....	9
<b>5.2</b>	<b>The PROFIBUS Interface .....</b>	<b>11</b>
5.2.1	Devices in IP20 .....	11
5.2.1.1	Bus termination .....	11
<b>5.3</b>	<b>Display and Operating Elements .....</b>	<b>11</b>
5.3.1	LEDs of the Double Masters .....	11
<b>6</b>	<b>Operating the AS-i/PROFIBUS Gateway .....</b>	<b>13</b>
<b>6.1</b>	<b>Peculiarities with Double Masters .....</b>	<b>13</b>
<b>6.2</b>	<b>Master Start-Up .....</b>	<b>13</b>
<b>6.3</b>	<b>Configuration Mode .....</b>	<b>14</b>
<b>6.4</b>	<b>Protected Operating Mode .....</b>	<b>14</b>
6.4.1	Switching to Protected Operating Mode .....	14
6.4.2	Configuration Errors in Protected Operating Mode .....	15
<b>6.5</b>	<b>Assigning an AS-i Address in Configuration Mode .....</b>	<b>15</b>
6.5.1	Assigning a Slave Address .....	15
6.5.2	Erasing the Slave Address .....	16
<b>6.6</b>	<b>Programming the Address in Case of Configuration Errors .....</b>	<b>16</b>
6.6.1	Automatic Address Assignment .....	16
6.6.2	Manual Address Assignment .....	17
<b>6.7</b>	<b>Setting of the PROFIBUS Station Address .....</b>	<b>17</b>
6.7.1	PROFIBUS Station Address .....	17
<b>6.8</b>	<b>Error Messages .....</b>	<b>18</b>
<b>7</b>	<b>Operating by Full-graphic Display .....</b>	<b>19</b>
<b>7.1</b>	<b>PROFIBUS (Fieldbus Interface) .....</b>	<b>21</b>
7.1.1	PROFIBUS Address .....	21
7.1.2	PROFIBUS Status .....	22
<b>7.2</b>	<b>Setup (Configuration of the AS-i Circuit) .....</b>	<b>22</b>
7.2.1	AS-i Circuit .....	22
7.2.2	AS-i Slave Addr (AS-i Slave Address) .....	23
7.2.3	Force Offline (switch AS-i Master offline) .....	23
7.2.4	Operation Mode .....	24

Issue date 30.1.2002

# AS-Interface Table of Contents

7.2.5	Store Act Cfg (Store Actual Detected Configuration) .....	24
7.2.6	Permanent Param (Projected Parameter) .....	24
7.2.7	Permanent Cfg (Projected Configuration Data) .....	25
7.2.8	Addr. Assistant (Address Assistent) .....	25
7.2.9	LOS (List of Offline-Slaves) .....	25
<b>7.3</b>	<b>IO + Param. Test (Testing AS-i In- and Outputs as well as AS-i Parameters) .....</b>	<b>26</b>
7.3.1	Binary Inputs .....	26
7.3.2	Binary Outputs .....	27
7.3.3	Analog Inputs .....	27
7.3.4	Analog Outputs .....	27
7.3.5	Parameter .....	28
<b>7.4</b>	<b>Diagnosis (Normal AS-i Diagnosis) .....</b>	<b>28</b>
7.4.1	EC-Flags (Execution Control Flags) .....	28
7.4.2	Actual Config (Actual Configuration) .....	29
7.4.3	LPF (List of Periphery Faults) .....	29
7.4.4	AS-i Master (Info) .....	30
<b>7.5</b>	<b>Adv. Diagnosis (Advanced AS-i Diagnosis) .....</b>	<b>30</b>
7.5.1	Error Counters .....	30
7.5.2	LCS (List of Slaves, that produced a Configuration Error) .....	30
<b>7.6</b>	<b>AS-i Safety .....</b>	<b>31</b>
7.6.1	Safety Slaves .....	31
7.6.2	Safety Monitor .....	32
<b>8</b>	<b>Advanced Diagnostics for AS-i Masters .....</b>	<b>33</b>
<b>8.1</b>	<b>List of Corrupted AS-i Slaves (LCS) .....</b>	<b>33</b>
<b>8.2</b>	<b>Protocol Analysis: Counters of Corrupted Data Telegrams .....</b>	<b>33</b>
<b>8.3</b>	<b>Off-line Phase on Configuration Errors (LOS) .....</b>	<b>34</b>
<b>9</b>	<b>PROFIBUS-DP .....</b>	<b>35</b>
<b>9.1</b>	<b>DP Telegrams .....</b>	<b>35</b>
9.1.1	Diagnosis .....	35
9.1.1.1	User Parameters .....	36
9.1.2	Configuration DP V0 (cyclic data) .....	38
9.1.2.1	AS-i V2.04 Easy Mode .....	38
9.1.2.2	AS-i V2.1 Mode .....	38
9.1.3	I/O-Data .....	40
9.1.3.1	AS-i V2.04 Easy Mode .....	40
9.1.3.2	AS-i V2.1 Mode .....	40
<b>9.2</b>	<b>DP V1 .....</b>	<b>43</b>
<b>9.3</b>	<b>Mailbox .....</b>	<b>43</b>
9.3.1	Construction .....	43
9.3.1.1	Values for command .....	44
9.3.1.2	Values for results .....	46
9.3.2	Mailbox commands .....	46
9.3.2.1	IDLE .....	46
9.3.2.2	READ_IDI .....	46
9.3.2.3	WRITE_ODI .....	47
9.3.2.4	Set_Permanent_Parameter (SET_PP) .....	48

Issue date: 30.1.2002

9.3.2.5	Get_Permanent_Parameter (GET_PP)	48
9.3.2.6	Write Parameter (WRITE_P)	48
9.3.2.7	Read Parameter (READ_PI)	49
9.3.2.8	Store Actual Parameters (STORE_PI)	50
9.3.2.9	Set Permanent Configuration (SET_PCD)	50
9.3.2.10	Get Extended Permanent Configuration (GET_PCD)	51
9.3.2.11	Store Actual Configuration (STORE_CDI)	51
9.3.2.12	Read Actual Configuration (READ_CDI)	52
9.3.2.13	SET_LPS	52
9.3.2.14	GET_LPS	53
9.3.2.15	GET_LAS	54
9.3.2.16	GET_LDS	55
9.3.2.17	GET_FLAGS	55
9.3.2.18	SET_OP_MODE	56
9.3.2.19	SET_OFFLINE	57
9.3.2.20	SET_DATA_EX	58
9.3.2.21	Change Slave Address (SLAVE_ADDR)	58
9.3.2.22	Set Auto Address Enable (SET_AAE)	59
9.3.2.23	GET_LPF	60
9.3.2.24	Write AS-i Slave Extended ID1 (WRITE_XID1)	60
9.3.2.25	RD_7X_IN	61
9.3.2.26	WR_7X_OUT	61
9.3.2.27	RD_7X_OUT	62
9.3.2.28	RD_7X_IN_X	62
9.3.2.29	WR_7X_OUT_X	63
9.3.2.30	RD_7X_OUT_X	63
9.3.2.31	READ_ODI	64
9.3.2.32	WR_74_PARAM	64
9.3.2.33	RD_74_PARAM	65
9.3.2.34	RD_74_ID	65
9.3.2.35	RD_74_DIAG	66
9.3.2.36	Get_LPS, Get_LAS, Get_LDS, Get_Flags (GET_LISTS)	66
9.3.2.37	GET_LCS	68
9.3.2.38	GET_LOS	68
9.3.2.39	SET_LOS	69
9.3.2.40	GET_TECA	70
9.3.2.41	GET_TECB	70
9.3.2.42	GET_TEC_X	71
9.3.2.43	EXT_DIAG	71
9.3.2.44	BUTTONS	72
9.3.2.45	RD_EXT_DIAG	72
9.3.2.46	INVERTER	73
9.3.2.47	FP_PARAM	73
9.3.2.48	FP_DATA	74
9.3.3	Functional Profiles	74
9.3.3.1	„Safety at Work“ List 1	74
9.3.3.2	„Safety at Work“ Monitor Diagnosis	76
9.3.3.3	Integrated AS-i Sensors: Warnings	77
9.3.3.4	Integrated AS-i Sensors: Availability	78

9.3.3.5	Restrictions .....	79
9.3.4	Mailbox example .....	79
<b>10</b>	<b>Commissioning Tools and Accessories .....</b>	<b>81</b>
<b>10.1</b>	<b>Windows Software AS-i Control Tools .....</b>	<b>81</b>
<b>10.2</b>	<b>PROFIBUS-DP Master Simulator .....</b>	<b>84</b>
<b>11</b>	<b>Appendix: Displays of the Figure Display .....</b>	<b>85</b>
<b>12</b>	<b>Appendix: The First Commissioning of AS-i .....</b>	<b>87</b>
<b>13</b>	<b>Appendix: Putting PROFIBUS into Operation with a Siemens S5 .....</b>	<b>89</b>
<b>13.1</b>	<b>Putting into Operation in Easy Mode .....</b>	<b>89</b>

## 1 Declaration of Conformity

The AS-i/PROFIBUS gateway VBG-PB-K5-R4-DMD been developed and produced in accordance with the applicable European standards and directives.



*The corresponding of conformity can be requested from the manufacturer.*

### Note

The manufacturer of the product, Pepperl+Fuchs Group in D-68301 Mannheim, possesses a certified quality assurance system in accordance with ISO 9001.



## 2 The Used Symbols



**Warning**

*This symbol warns the user of possible danger. Failure to heed this warning can lead to personal injury or death and/or damage to equipment.*



**Attention**

*This symbol warns the user of a possible failure. Failure to heed this warning can lead to total failure of the equipment or any other connected equipment.*



**Note**

*This symbol gives the user important hints.*



## 3 Safety

### 3.1 Intended Use



**Warning**

*The protection of operating personnel and the system against possible danger is not guaranteed if the control interface unit is not operated in accordance with its intended use.*

*The device may only be operated by appropriately qualified personnel in accordance with this operating manual.*

### 3.2 General Safety Information



**Warning**

*Safety and correct functioning of the device cannot be guaranteed if any operation other than that described in this operation manual is performed.*

*The connecting of the equipment and any maintenance work to be carried out with voltage applied to the equipment must only be performed by appropriately qualified electrotechnical personnel.*

*In the case that a failure cannot be repaired, the device must be taken out of operation and kept from inadvertently put back into operation.*

*Repair work is to be carried out by the manufacturer only. Additions or modifications to the equipment are not allowed and void the warranty.*



**Note**

*The operator is responsible for the observance of local safety standards.*

## 4 General Information

This operating instruction is for use with the following device of the Pepperl+Fuchs GmbH:

AS-i/PROFIBUS-DP gateway with graphic display - 2 master  
VBG-PB-K5-R4-DMD

The AS-i/PROFIBUS-Gateways serve to connect AS-Interface systems to the PROFIBUS. They act as a Master for the AS-Interface and as a slave for the PROFIBUS.

### New AS-i Specification 2.1

The AS-i/PROFIBUS-DP Gateways already fulfil the new AS-i Specification 2.1. This means:

- Up to 62 AS-Interface slaves can be connected per 1 AS-i network
- The transfer of analog signals via AS-i is integrated in the Masters
- All further functions of the new specification as e.g. the diagnosis of the AS-i peripheral fault are implemented.

All AS-i functions are provided cyclically via PROFIBUS-DP V0 and acyclically via PROFIBUS-DP V1.

In the cyclic data transfer optionally up to 32 bytes I/O data are transferred for the binary data of 1 AS-i network. Furthermore analog signals and all further commands of the new AS-i specification can be transferred in the management channel via PROFIBUS.

The AS-i Control Tools can be used for the monitoring of the AS-i data online via the PROFIBUS-DP V1.

### Advanced Diagnostics

Diagnostics, which go far beyond the standard diagnostics facilitate the simple detection of the occasionally occurring configuration errors and further irritations towards the AS-i communication. So in case of an error the down time of machines can be minimized or you can initiate preventive maintenance.

### Commissioning and monitoring

The AS-i/PROFIBUS Gateways can be commissioned respectively programmed with the help of the software "AS-i Control Tools" in combination with the PROFIBUS-DP Master Simulator. The GSD file are included in the package.

Commissioning, debugging and setting up of the AS-i parameters without the software can only be accomplished with the use of the push-buttons, the display and the LEDs directly on the system.

### Accessories:

Software "AS-i Control Tools"  
PROFIBUS-DP Master Simulator

## 5 Connections, Displays and Operating Keys


On the front panel of the AS-i/PROFIBUS gateways in IP20 are:



- terminals to connect the power supply and the AS-i circuit
- a 9-pin SUB-D connector as PROFIBUS interface
- 7 LEDs
- a LC display
- 2 push-buttons (devices with full-graphic display: 4 push-buttons) to configure the gateway

### 5.1 Power Supply Concepts and AS-i Connection Techniques

#### 5.1.1 Double Master in IP20

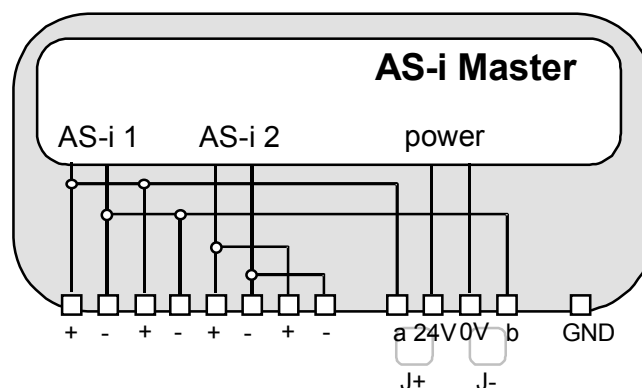


The terminals have the following functions:

- + "AS-i +", Actuator Sensor Interface 1 or 2, positive terminal  
These terminals are connected internally with point a2 of jumper "J+".
- "AS-i -", Actuator Sensor Interface 1 or 2, negative terminal  
These terminals are connected internally with point b2 of jumper "J-".
- 24V Master power supply, positive terminal (18 - 31.6 V DC)


# AS-Interface Connections, Displays and Operating Keys

- 0V Master power supply, negative terminal
- GND Ground terminal, used for better EMC.  
Should be connected with a short wire to machine GND.

## Power supply out of AS i circuit 1

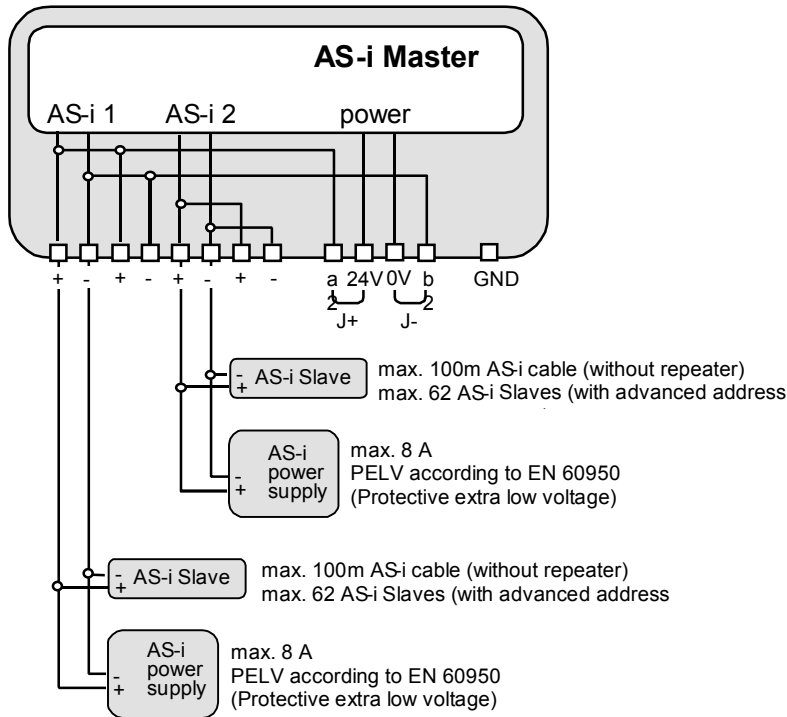

## Connection variations for the AS-i circuits (here only displayed for one AS-i circuit)

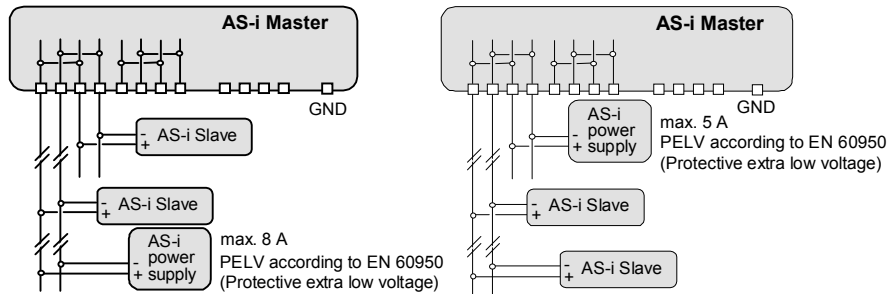


***In the wiring schemes above the current through the AS-i master must not exceed 5 A.***

## 5.2 The PROFIBUS Interface

### 5.2.1 Devices in IP20

The PROFIBUS interface is realized as a 9-pin SUB-D connector, in accordance to the standard for PROFIBUS DIN 19245. It is placed on the right hand side of the front panel.

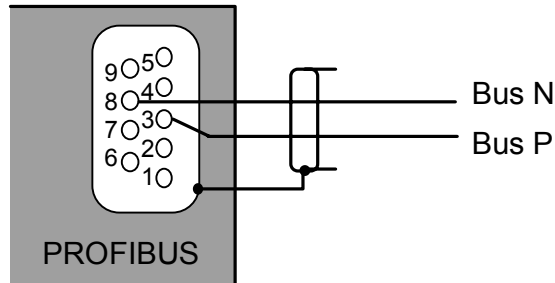

The AS-i/PROFIBUS gateway sends and receives on pins 3 and 8 of the SUB-D socket. The PROFIBUS signal “BUS N<sup>1</sup>” lies on pin 8, the signal “BUS P<sup>1</sup>” lies on pin 3.

The pins 5 (0 V) and 6 (5 V) supply 5 V DC for the bus termination.

#### 5.2.1.1 Bus termination

If the AS-i/PROFIBUS gateway is at the end of the PROFIBUS line, the termination resistors in the PROFIBUS connector have to be switched on.

## 5.3 Display and Operating Elements

### 5.3.1 LEDs of the Double Masters

**AS-i 2** Switching of the displays and push buttons between the two AS-i circuits.

If this LED lights up, all displays and button operations are related to AS-i circuit 2, otherwise AS-i circuit 1.

**bus active** LED on: Gateway is allocated to a PROFIBUS master.  
LED off: Gateway is not allocated to a PROFIBUS master.

**config err** Configuration error  
At least one configured slave is missing, or at least one detected slave is not projected or for at least one projected and detected slave the actual configuration data does not match the nominal configuration data.

**power** The master's power supply is sufficient.

**U ASI** The AS-i circuit is sufficiently powered.

**prg enable** Automatic address programming enabled.  
Exactly one slave is missing in protected operating mode. The slave can be replaced by another slave of the same type with address zero.

1. If you measure the DC voltage between Bus P and Bus N, Bus P is the positive pole when the bus is silent.

The master addresses the new slave to the faulty address and thus eliminates the configuration error.

prj mode    The AS-i master is in configuration mode.

The two push-buttons cause following:

mode    Switching between the configuration mode and the protected operating mode and saving the actual AS-i configuration as the nominal configuration.

set    Selection and assigning the address to a slave.

The detailed description is described in chapter 6.

## 6 Operating the AS-i/PROFIBUS Gateway

### 6.1 Peculiarities with Double Masters



**Note**

*In **protected mode** the displays of the double Masters are switched over from AS-i circuit 1 to AS-i circuit 2 in a measure of 2 seconds.*

In **configuration mode** all detected AS-i slaves are displayed at first before the display switches to the other AS-i circuit.

The operation of the push buttons is always related to the currently displayed AS-i circuit (LED AS-i 1/AS-i 2). After a push button was pressed the display stays with the respective AS-i circuit until the operation is finished or the operator has not interfered for 10 seconds.

### 6.2 Master Start-Up

After powering on, all segments of the figure display and all LEDs light up for approximately one second (self-test). Afterwards, the LEDs display the condition of their respective flags. The figure display shows the condition of the master:

40 Off-line Phase

The AS-i master initializes - there is no data communication on the AS-i.



**Attention**

*If the AS-i circuit is insufficiently powered (“U AS-i” does not light up) or there is no communication relationship between the PROFIBUS master and the AS-i/PROFIBUS gateway, **the master remains in the off-line phase.***

In configuration mode or when an AS-i Control program is started automatically the device can leave the off-line phase.

In protected mode, if the PROFIBUS communication is interrupted, the AS-i master switches to the off-line phase after the watchdog time of the PROFIBUS has expired unless an AS-i Control program is running and was started automatically.

41 Detection Phase

Start of the start-up phase, where the system looks for slaves located on the AS-i. The master remains in the detection phase until it finds at least one slave.

42<sup>1</sup> Activation Phase

Condition at the end of the start-up operation where the parameters are transmitted to all connected and recognized slaves. This enables access to the AS-i slaves' data connections.

---

1. Activation phase and the start of normal operation maybe so short that the numbers can not be seen in the display.

## 43<sup>1</sup> Start of Normal Operation

In normal operation the AS-i master can exchange data with all active slaves. It transmits management messages and looks for and activates newly connected slaves. During normal operation, the system keeps the maximum cycle time of 5 milliseconds.

## 6.3 Configuration Mode

The configuration mode serves to configure the AS-i circuit.



**Attention**

*In the configuration mode, all recognized slaves are activated even when the desired and actual configurations do not match.*

Pressing the “mode” button for at least five seconds switches the gateway to configuration mode. While in configuration mode, the yellow “prj mode” LED lights up. The system then displays one after the other all detected slaves at a speed of two per second. First all "A" slaves and afterwards all "B" slaves. If a "B" slave is displayed, the "AS-i active" LED blinks. If the display is empty, no slaves were detected on the AS-i circuit.

In configuration mode, all recognized slaves are activated except of slave zero. The AS-i master is in normal operation. There is data exchange between the AS-i master and all AS-i slaves detected by the master regardless of whether the detected AS-i slaves were projected before.



**Attention**

*When delivered the device is in configuration mode.*

## 6.4 Protected Operating Mode



**Note**

*In contrast with the configuration mode in the protected mode there is only data exchange between the AS-i master and the projected AS-i slaves.*

### 6.4.1 Switching to Protected Operating Mode

The configuration mode can be left by pressing the “mode” button.

Pressing the button shortly:

Exits the configuration mode without projecting the current AS-i configuration.

Pressing the button for more than five seconds:

Exits the configuration mode and projects the actual AS-i configuration. Simul-

1. Activation phase and the start of normal operation maybe so short that the numbers can not be seen in the display.



taneously the actual AS-i configuration is stored as nominal configuration in the EEPROM.



*If the system detects an AS-i slave with address zero on the AS-i, it can not leave the configuration mode.*

### Note

In the protected operating mode, only AS-i slaves that are projected and whose actual configurations match the nominal configurations will be activated.

#### 6.4.2 Configuration Errors in Protected Operating Mode

As long as there is no configuration error, the numeric display is turned off while in protected operating mode. Otherwise, the address with a faulty assignment is displayed. A faulty assignment occurs when a slave has been recognized or projected but cannot be activated.

If there are more than one faulty assignments the one that was first detected is displayed. Pressing the “set” button shortly displays the next higher faulty address.

Shortly appearing configuration errors are stored in the device (advanced AS-i diagnosis). The last error that occurred can be displayed by pressing the set button. If a short AS-i power failure is responsible for the configuration error the display shows a “39”.

#### 6.5 Assigning an AS-i Address in Configuration Mode

AS-i can be put into operation in a very comfortable manner by using the Windows software AS-i Control Tools (see chapter 10.1)(addressing directly or with the AS-i address assistant).

Furthermore you can use a hand held addressing device.

If you don't have neither a PC nor a hand held addressing device, address assigning of the AS-i slaves is also possible with the AS-i/PROFIBUS gateway using the push buttons. How it works is described as follows.

To assign a slave with address unequal zero to another address unequal zero, you have to follow the instructions first in chapter 6.5.2 and then chapter 6.5.1 one after the other.

##### 6.5.1 Assigning a Slave Address

(assigning an available address to a slave with address zero)

In configuration mode, the addresses of all detected slaves are displayed one after the other. To display the next higher available operating address, press the “set” button shortly. Each time you press the “set” button, the next available address is displayed.

Choose the displayed address as your target address by pressing the “set” button for more than five seconds. The address display blinks. The master is ready for programming; pressing the “set” button again addresses the connected slave with address zero to the target (blinking address).

Any errors will be displayed by their error codes according to chapter 11. Otherwise, the detected slaves are displayed again as described in chapter 6.3..



**Note**

*Only slaves with address 0 can get a new address by the master.*



**Attention**

*There must not be two AS-i slaves with the same address on the AS-i circuit.*

## 6.5.2 Erasing the Slave Address

(assigning address zero to a detected slave)

In configuration mode, the addresses of all recognized slaves are displayed one after the other. By pressing and releasing the “set” button, the master displays the next available address. If you press the button for more than five seconds while the address of a detected slave is displayed, this slave will get the address zero and the display shows “00”.

When you release the button, the display continues to display the detected slaves.

## 6.6 Programming the Address in Case of Configuration Errors

### 6.6.1 Automatic Address Assignment



**Note**

*One of AS-i's great advantages is the automatic address assignment. If a slave fails, it can be replaced by one of the same type with address zero. The master will detect the replacement and automatically addresses the new slave with the address of the faulty one.*

For automatic programming to work, some requirements must be met:

1. The AS-i master must be in the protected operating mode.
2. The “Auto\_Address\_Assign”<sup>1</sup> release flag must be set.
3. Only one of the projected slaves may not be detected.

If these requirements are met, the AS-i master's “**prg enable**” LED lights up and a slave with address zero will be automatically assigned to the operating address

1. By deletion of flag "Auto\_prog" the user can close "automatic addressing".

of the missing slave. The "Automatic Address Assignment" can be activated and deactivated via the software "AS-i Control Tools".



**Attention**

*If the two slaves have different configuration data, i.e. are not of the same type as far as AS-i is concerned, the automatic address assignment will not be carried out.*

### 6.6.2 Manual Address Assignment



**Note**

*If several slaves fail, they cannot be replaced automatically by the AS-i master. Then these addresses have to be set manually. If this should not be done via the host interface (using the AS-i Control Tools) or with a hand held addressing device, the slave addresses can also be changed with the help of the push buttons and the figure display of the device.*

In protected operating mode, wrong assignments are displayed as errors (see chapter 6.4). By pressing the "set" button, you can display all faulty assignments one after the other. By pressing the "set" button for more than five seconds, you can select the currently displayed address as a potential target address, and the display starts to blink.

If the faulty slave was previously replaced by a slave with address zero, the new slave can now be programmed for the blinking address by pressing the "set" key again. As a requirement, the new slave's configuration data must match the configuration data for the blinking address.

After the address has been successfully set, the next faulty assignment is displayed and the address assignment can begin from the start. Otherwise, the system displays an error code (chapter 11). When all faulty assignments are eliminated the display is empty.

### 6.7 Setting of the PROFIBUS Station Address



**Note**

*The addressing of the AS-i/PROFIBUS gateway as a PROFIBUS slave can be done locally at the gateway or via PROFIBUS according to the PROFIBUS standard.*

#### 6.7.1 PROFIBUS Station Address

Station addresses from 1 to 99 can be set, when delivered station address 3 is set. For the relocation, both the "set" button and the "mode" button have to be pushed simultaneously for at least 5 seconds until the current bus address is shown on the LCD display. With every pushing of the "set" button, the station address can now be increased by 1.

Once the desired PROFIBUS station address is shown on the display, it will be stored non-volatile in the EEPROM by pushing the "mode" button.

## 6.8 Error Messages





**Attention**

*The system displays error codes for error messages that do not point to faulty assignments on the AS-i circuit. The code numbers are larger than 50 and are therefore outside the slave address range. These codes are described in the appendix, chapter 11.*

## 7 Operating by Full-graphic Display

### Inbetriebnahme/Commissioning

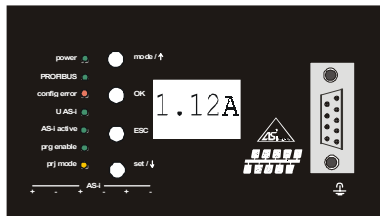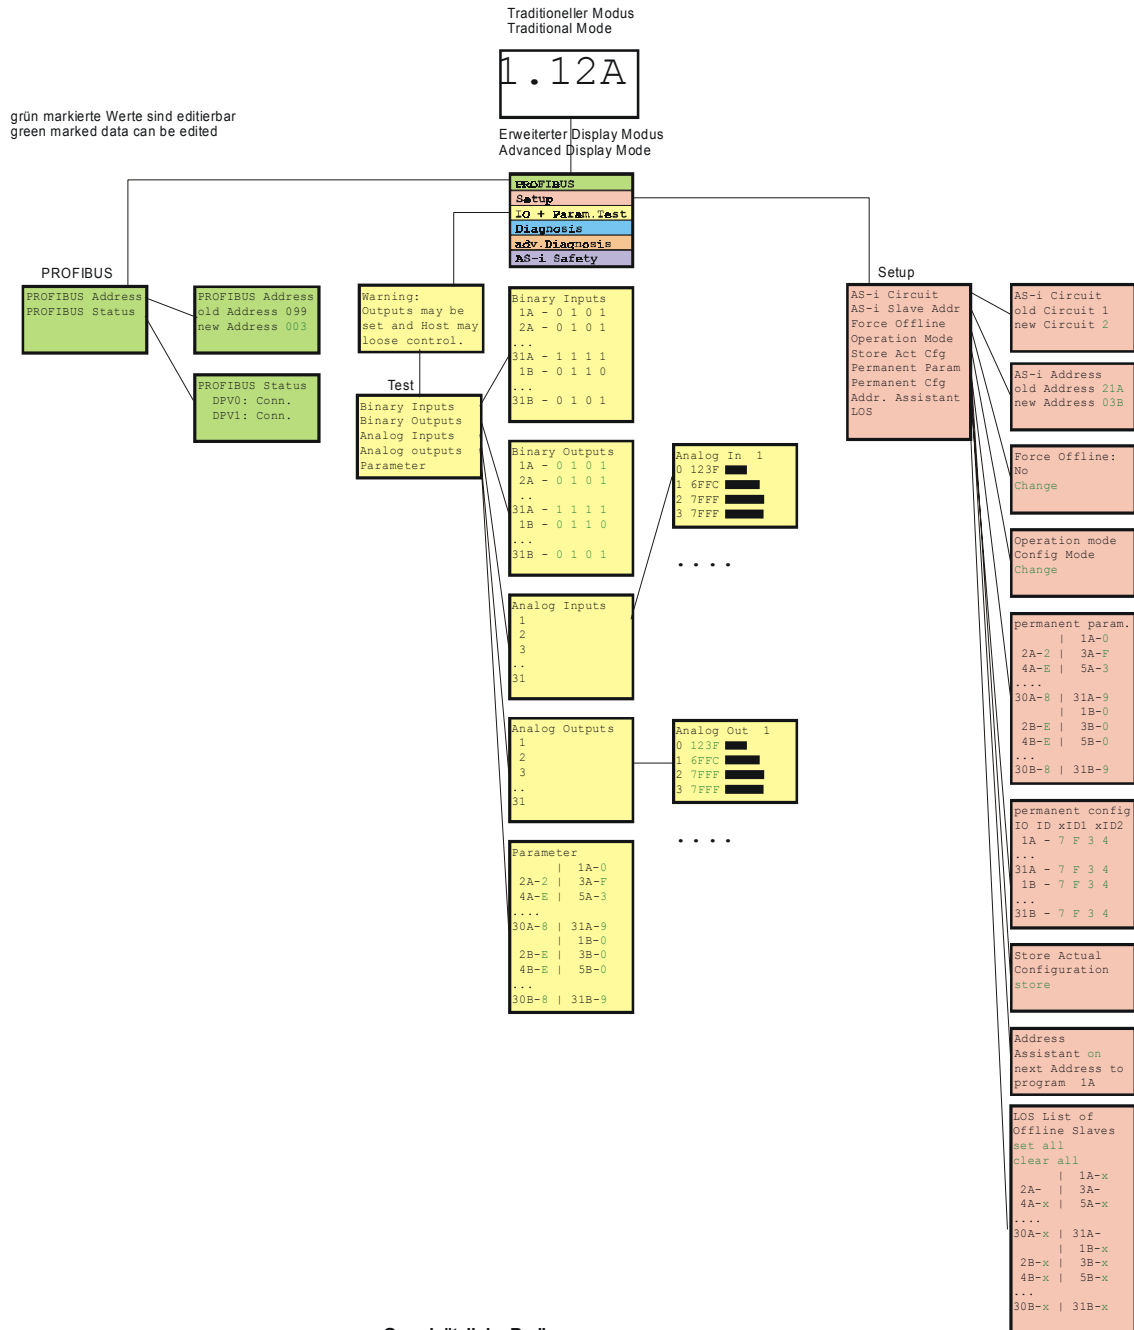

#### Grundsätzliche Bedienung

Das Gerät startet im traditionellen Modus. Mit ESC oder OK kann zwischen beiden Modi gewechselt werden. Im Erweiterten Modus wird ein Cursor mit den beiden Pfeil-Tasten bewegt. OK bringt ins nächsthöhere Menü (in der Zeichnung weiter nach rechts). ESC bringt zurück ins vorherige Menü. Wenn Werte editiert werden, werden sie zunächst mit dem Cursor markiert, dann mit OK ausgewählt, mit den Pfeiltasten verändert und schließlich mit OK übernommen. ESC bricht das Editieren ab.



#### Basic Operation

The device starts in the traditional mode. You can switch between the two modes with ESC or OK. In the advanced mode the cursor is moved by both arrow buttons. Pushing OK puts you to the superior menu (in the drawing one step to the right side). ESC puts you back to the previous menu. To edit data you first mark them with the cursor and then select them with OK, change them with the arrow buttons

issue date 30.1.2002

# AS-Interface Operating by Full-graphic Display

## Fehlersuche/Diagnostics

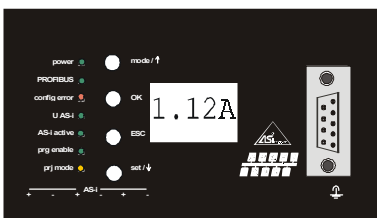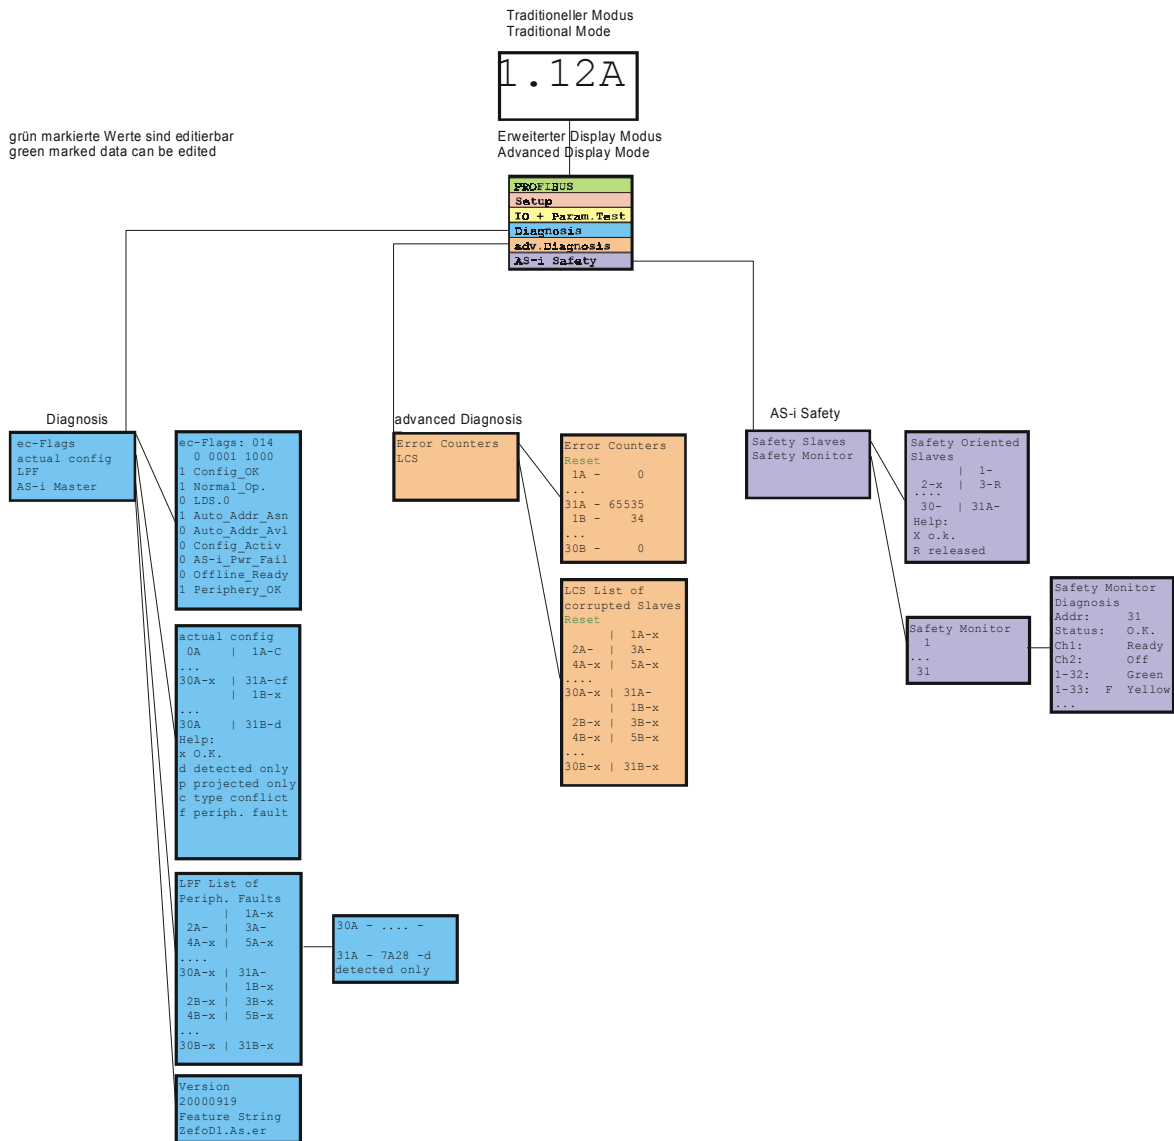

### Grundsätzliche Bedienung

Das Gerät startet im traditionellen Modus. Mit ESC oder OK kann zwischen beiden Modi gewechselt werden. Im Erweiterten Modus wird ein Cursor mit den beiden Pfeil-Tasten bewegt. OK bringt ins nächsthöhere Menü (in der Zeichnung weiter nach rechts). ESC bringt zurück ins vorherige Menü. Wenn Werte editiert werden, werden sie zunächst mit dem Cursor markiert, dann mit OK ausgewählt, mit den Pfeiltasten verändert und schließlich mit OK übernommen. ESC bricht das Editieren ab.

### Basic Operation

The device starts in the traditional mode. You can switch between the two modes with ESC or OK. In the advanced mode the cursor is moved by both arrow buttons. Pushing OK puts you to the superior menu (in the drawing one step to the right side). ESC puts you back to the previous menu. To edit data you first mark them with the cursor and then select them with OK, change them with the arrow buttons



issue date 30.1.2002



*In the classical mode it is possible to change settings while the device is in operation. That can lead to failure of the plant (e. g. changing the address of an AS-i slave).*

## Warning

In the Full-graphic Mode however the settings are protected, as long as the superior fieldbus (PROFIBUS) runs.

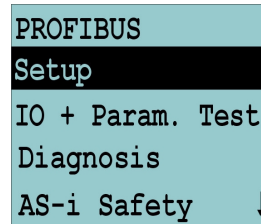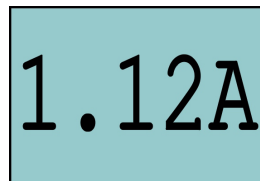

```
PROFIBUS
Setup
IO + Param. Test
Diagnosis
AS-i Safety ↓
```


The device starts in the classical mode, i. e. like the former AS-i Masters with two-digit display (see chapter 6). Press the buttons ESC or OK to switch to the full-graphic mode. To return to the classical mode just press the ESC-button several times.

When in full-graphic mode there is a highlighted bar that can be moved up or down with the arrow-buttons. Press OK to switch to the selected function or menu (in the drawing one step to the right, page 19). Press ESC to go back to previous menu.

To edit data values mark them with the selection bar, press OK, then change them with the arrow-buttons and confirm the data input with OK. The ESC-button cancels the editing process.


All possible addresses are displayed one after the other from 1A to 31A and from 1B to 31B. Data for single slaves are displayed at the addresses 1A - 31A.

## 7.1 PROFIBUS (Fieldbus Interface)

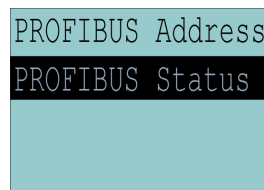

```
PROFIBUS Address
PROFIBUS Status
```

### 7.1.1 PROFIBUS Address

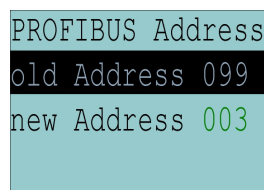

```
PROFIBUS Address
old Address 099
new Address 003
```

This function is for setting and changing the PROFIBUS station address.

The number behind "Old Address" shows the actual station address. By selecting "New Address" you can change this address.

## 7.1.2 PROFIBUS Status

```
PROFIBUS Status
DPV0: 1 Conn.
DPV1: 0 Conn.
```

The function DeviceNet status indicates if and how many connections are active on each DeviceNet channel. Following status are indicated:

The function PROFIBUS status indicates if and how many connections are active on each PROFIBUS channel.

DPV0 = cyclic channel

0: not active

1: active

DPV1 = acyclic channel

0: not active

≠0: number of connections

## 7.2 Setup (Configuration of the AS-i Circuit)

```
AS-i Circuit
AS-i Slave Addr
Force Offline
Operation Mode↓
```

Within the menu "Setup" you can choose one of the following submenus:

- AS-i Circuit
- AS-i Slave Addr (AS-i Slave Address)
- Force Offline (switch AS-i Master offline)
- Operation Mode
- Store Act Cfg (store actual detected configuration)
- Permanent Param (projected parameter)
- Permanent Cfg (projected configuration data)
- Addr. Assistant (address assistant)
- LOS (list of offline-slaves)

### 7.2.1 AS-i Circuit

```
AS-i Circuit
old Circuit 1
new Circuit 2
```


This function is only available in devices with 2 AS-i masters.



It makes possible to change the AS-i circuit that is actually active for operating by the user.

The number behind "Old Circuit" shows the active AS-i circuit. By selecting "New Circuit" you can choose the other AS-i circuit to be active.

## 7.2.2 AS-i Slave Addr (AS-i Slave Address)

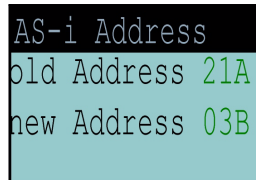

This function sets and changes the addresses of the AS-i slaves. This function replaces the handheld AS-i address programming device.

"Old Address" shows the address of the first detected AS-i slave on the AS-i circuit. Please note that you have selected the desired AS-i circuit when you operate a device with two AS-i circuits (see chapter 7.2.1).

If "Old Address" is selected you can choose the next detected AS-i slave with the OK-button. The new address for the AS-i slave has to be set with "New Address".

If an error occurs while addressing a slave, one of the following error messages is displayed for about 2 seconds:

- Failed: SND: slave with old address not detected.
- Failed: SD0: slave with address zero detected.
- Failed: SD2: slave with new address detected.
- Failed: DE: error with deletion of old address.
- Failed: SE: error with setting of new address.
- Failed: AT: new address could only be stored temporarily.
- Failed: RE: error with reading the extended ID-code 1.

## 7.2.3 Force Offline (switch AS-i Master offline)



This function shows the actual state of the AS-i Master:

- Yes: AS-i Master is offline.
- No: AS-i Master is online.

With "Change" you can modify this state.

Switching the AS-i Master offline puts the AS-i circuit into the safe state. The AS-i Master has to be in the offline-phase if an AS-i slave shall be addressed via the IR-interface.

## 7.2.4 Operation Mode

```
Operation mode
Config Mode
Change
```

This function shows the actual operation mode of the AS-i Master:

Protected Mode: protected mode  
 Config Mode: configuration mode

With "Change" you can switch to the other operation mode.

Only in configuration mode parameters and configuration data can be stored.

## 7.2.5 Store Act Cfg (Store Actual Detected Configuration)

```
Store Actual
Configuration
store
```

This function can only be executed in configuration mode.

This function enables you to store the configuration of all slaves which are connected and detected on the selected AS-i circuit.

If "Store" was successful, the LED "config error" is off. The configuration is stored, there is no configuration error anymore.

If one of the connected slaves has a peripheral fault, the LED "config error" blinks.

If the AS-i Master is in protected mode, the following error message appears:  
 "Failed No Config Mode"

If an AS-i slave with address zero exists storing the configuration is confirmed with "OK". However, the configuration error remains because address zero is not a valid operating address to project a slave on.

## 7.2.6 Permanent Param (Projected Parameter)

```
permanent param.
| 1A-0
2A-2 | 3A-F
4A-E | 5A-3 ↓
```

This function enables you to set the permanent parameters. A list of all slaves is displayed. The parameter is shown as hexadecimal value behind the slave address.

## 7.2.7 Permanent Cfg (Projected Configuration Data)

```
permanent config
IO ID xID1 xID2
1A - 7 F 3 4
2A - 7 F 3 4↓
```

With this function you can set the projected configuration data. The values for the configuration data are displayed behind the slave address in the following order:

IO (I/O-configuration) ID (ID-configuration) xID1 (extended ID1)  
xID2 (extended ID2).

## 7.2.8 Addr. Assistant (Address Assistant)

```
Address
Assistant on
next Address to
program 1A
```

The AS-i address assistant helps you with the fast setting up of the AS-i circuit. Once you have stored an AS-i configuration to the master, the AS-i address assistant addresses a virgin AS-i slaves with address zero to the desired address.

Selecting "Assistant On" or "Assistant off" switches the AS-i address assistant off or on. The actual state of the AS-i address assistant is displayed:

Assistant on: AS-i address assistant is switched on.

Assistant off: AS-i address assistant is switched off.

Procedure:

1. Store an AS-i configuration to the device. You can do this very comfortably with the Windows-software AS-i Control Tools (Master/Write configuration to the AS-i Master ...). Or directly with the fullgraphic display (see chapter 7.2.7).
2. All AS-i slaves have to be addressed to 0 or to the desired address. The slaves must be disconnected from the AS-i circuit.
3. Start the AS-i address assistant.
4. Now connect the AS-i slaves one after the other exactly in the order that the AS-i address assistant displays (The last line on the display of the AS-i address assistant shows which AS-i slave has to be connected next).

## 7.2.9 LOS (List of Offline-Slaves)

```
LOS List of
Offline Slaves
set all
clear all ↓
```

See also "Advanced Diagnostics for AS-i Masters", chapter 7.

With "Clear all" and "Set all" you can delete or set a single bit for each AS-i slave address.

empty field: LOS-bit deleted  
X: LOS-bit set

## 7.3 IO + Param. Test (Testing AS-i In- and Outputs as well as AS-i Parameters)

```
Warning:  
Outputs may be  
set and Host may  
lose control.
```

Before you switch to this menu the following warning occurs:  
"Warning: Outputs may be set and Host may loose control."

```
Binary Inputs  
Binary Outputs  
Analog Inputs  
Analog outputs↓
```

The menu "IO + Param.Test" enables you to choose one of the following sub-menus:

- Binary Inputs
- Binary Outputs
- Analog Inputs
- Analog Outputs
- Parameter

### 7.3.1 Binary Inputs

```
Binary Inputs  
1A - 0 1 0 1  
2A - 0 1 0 1  
3A - 0 0 0 1↓
```

This list shows the state of the binary inputs for all AS-i slaves.

0: input deleted  
1: input set

## 7.3.2 Binary Outputs

Binary Outputs				
1A	-	0	1	0 1
2A	-	0	1	0 1
3A	-	0	0	0 1↓

This function shows the state of the binary outputs for all AS-i slaves.

- 0: output deleted
- 1: output set

The binary outputs can be changed after selecting the desired AS-i slave.

## 7.3.3 Analog Inputs

Analog Inputs	
1	
2	
3	↓

This function shows the state of the analog inputs for all AS-i slaves.

The display is as follows:

AS-i slave address, hexadecimal 16-bit-value, bar display

Analog In 1		Analog In 2	
0	123F █	0	123F █ ↑
1	6FFC █	1	6FFC █
2	7FFF █ ↓	2	7FFF █
		3	7FFF █ ↓

## 7.3.4 Analog Outputs

Analog Outputs	
1	
2	
3	↓

This function shows the state of the analog outputs for all AS-i slaves.

The display is as follows:

AS-i slave address, hexadecimal 16-bit-value, bar display

Analog Out 1		Analog Out 31	
0	123F █	0	123F █
1	6FFC █	1	6FFC █
2	7FFF █ ↓	2	7FFF █ ↓

The analog outputs can be changed after selecting the desired AS-i slave.

## 7.3.5 Parameter

```
Parameter
| 1A-0
2A-2 | 3A-F
4A-E | 5A-3↓
```

This function shows the hexadecimal value of the actual AS-i parameters for all AS-i slaves.

The actual AS-i parameters can be changed after selecting the desired slave address.

## 7.4 Diagnosis (Normal AS-i Diagnosis)

```
ec-Flags
actual config
LPF
AS-i Master
```

The menu "Diagnosis" enables you to choose one of the following submenus:

- EC-Flags (Execution control flags)
- Actual Config (actual configuration)
- LPF (list of periphery faults)
- AS-i Master (Info)

### 7.4.1 EC-Flags (Execution Control Flags)

```
ec-Flags: 12C
 1 0010 1100
1 Config_OK
1 Normal_Op. ↓
```

This function shows the EC-flags hexadecimal, binary and as single bits beginning with the lowest-order bit.

- Bit 0: Config\_OK
- Bit 1: Normal\_Op.
- Bit 2: LDS.0
- Bit 3: Auto\_Addr\_Asn
- Bit 4: Auto\_Addr\_Avl
- Bit 5: Config\_Active
- Bit 6: AS-i\_Pwr\_Fail
- Bit 7: Offline\_Ready
- Bit 8: Periphery\_OK

See also "GET\_FLAGS", page 55.

## 7.4.2 Actual Config (Actual Configuration)

```
actual config
0A   | 1A-Cf
2Ax  | 3Ad
4p   | 5A ↓
```

This function shows the state of the actual configuration of the individual AS-i slaves.

At the end of the list there is a help text that describes the abbreviations:

X (O.K.):               The configuration data of the detected AS-i slave matches the projected configuration data.

D (Detected Only): An AS-i slave is detected at this address, but not projected.

P (Projected Only): An AS-i slave is projected at this address, but not detected.

C (Type Conflict): The configuration data of the detected AS-i slave does not match the projected configuration data. The actual detected configuration of the connected AS-i slave is displayed.

F (Periph. Fault): The AS-i slave has a peripheral fault.

After selecting the desired AS-i slave address the values for the actual configuration data are displayed behind the respective address in the following order:

IO (I/O-configuration) ID (ID-configuration) xID1 (extended ID1)  
xID2 (extended ID2).

```
30A - .... -
31A - 7A28 -d
detected only ↓
```

Furthermore the state of the configuration is displayed in plaintext.

If no AS-i slave is detected and no AS-i slave is projected at a certain address, there are four dots instead of the configuration data.

## 7.4.3 LPF (List of Periphery Faults)

```
LPF List of
Periph. Faults
      | 1A-x
2A-  | 3A- ↓
```

The list shows AS-i slaves, which have released a peripheral fault.

empty field: periphery O.K.

X:                   peripheral fault

## 7.4.4 AS-i Master (Info)

```
Version
20000919
Feature String
ZefoD1.As.er
```

This function shows information about the version and the features of the AS-i master.

Version xxxxxxxx (datecode of the firmware)

Feature String xxxxxxxxxxxxxxxxx

## 7.5 Adv. Diagnosis (Advanced AS-i Diagnosis)

```
Error Counters
LCS
```

See also "Advanced Diagnostics for AS-i Masters", chapter 8.

Under the menu "Adv. Diagnosis" you find following submenus:

- Error Counters
- LCS (list of slaves, that produced a configuration error)

### 7.5.1 Error Counters

```
Error Counters
Reset
1A - 0
2A - 0 ↓
```

This list shows the error counter for each single AS-i slave.

Furthermore the number of power failures on AS-i (APF) is displayed.

With "Reset" the error counters are reset to 0.

### 7.5.2 LCS (List of Slaves, that produced a Configuration Error)

```
Reset ↑
APF- | 1A-x
2A- | 3A-
4A-x | 5A ↓
```

This list shows for each single AS-i slave whether at least one configuration error was released through an erroneous telegram transmission. This function is especially important if the configuration error only occurs short-time.

Issue date: 30.1.2002



empty field: no error  
 X: AS-i slave released a configuration error.


## 7.6 AS-i Safety



This function shows information about the safety slaves and the safety monitor:

- Safety Slaves
- Safety Monitor

### 7.6.1 Safety Slaves

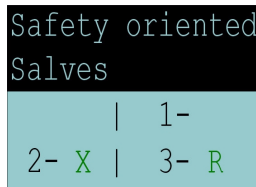

This list shows the "safety-directed input slaves" ("AS-i Safety at Work"), by which the safety function is released

empty field  
 X: o.k.  
 R: released

In this list are entered that slaves according to profile S-7.B or S-0.B, by which are deleted all 4 bits in the IDI. Therefore slaves with 2 contacts are entered only then, if both contacts are released.

Because the safety function of a safety-directed input slave can be released, if the slave does exchange no data with the AS-i master, the list may be utilized only in combination with the ec-flags.

For the building of the list CDI and IDI are utilized only. Safety-directed slaves, which are projected but not existing, and slaves, which are existing but sending a wrong code, are entered therefore not here.

This list is not actualized into the master permanently, but only it is made out of the image of the digital inputus IDI, if required.

## 7.6.2 Safety Monitor

```
Safety Monitor  
Diagnosis  
Addr: 31  
Status: O.K.
```

The AS-i safety monitor is reading the diagnosis data out of the AS-i safety monitor and represent ths data in the display. For the meaning of the shown diagnosis data please read the description of the safety monitor.

## 8 Advanced Diagnostics for AS-i Masters

The advanced AS-i diagnostics serve to locate occasionally occurring errors and to judge the quality of data transmission on AS-i without additional diagnostics tools.

The "AS-i Control Tools" (software for the comfortable commissioning of the AS-Interface and the programming of AS-i Control) support the operation of the advanced diagnostics (LCS, error counters and LOS).

### 8.1 List of Corrupted AS-i Slaves (LCS)

To locate occasionally occurring short-time configuration errors the AS-i masters with advanced diagnostics manage beside the list of projected slaves (*LPS*), the list of detected slaves (*LDS*) and the list of activated slaves (*LAS*) a forth list, the **list of corrupted slaves (LCS)**. This list contains entries of all AS-i slaves which were responsible for at least one configuration error since powering up the AS-i master or reading the list. Short-time AS-i power failures are represented in the LCS at the position of AS-i slave with address 0.



**Note**

*With every read access the LCS will be deleted.*



**Note**

*The last short-time configuration error can also be displayed on the AS-i Master:*

*Pressing the "set" button of the AS-i master shows the AS-i slave which was responsible for the last short-time configuration error. If there was a short-time AS-i power failure the display shows "39" after pressing the "set" button.*

*This function is only available if device is in the normal operation mode of the protected mode (display empty) or in the off-line-phase.*

### 8.2 Protocol Analysis: Counters of Corrupted Data Telegrams

The AS-i master with advanced diagnostics has a counter of telegram repetitions for each AS-i slave, which is increased everytime there is a corrupted data telegram. This makes possible to judge the quality of the AS-i network, even if only a few corrupted telegrams occurred and the AS-i slave did not cause any configuration errors.



**Note**

*The counter values can be read via the host interface and will be deleted with every read access. The counter value is limited to 254. 255 means counter overflow.*

The protocolanalysis is included in the command master | AS-i Diagnostics of "AS-i Control Tools".

### 8.3 Off-line Phase on Configuration Errors (LOS)

The AS-i masters with advanced diagnostics offer the possibility to put themselves into the off-line Phase when a configuration error on the AS-Interface occurs. In this way the security of the application can be ensured. The reaction to a configuration error is very fast and the host can be relieved from this task. If there are any problems on the AS-i network, the AS-interface can be switched to a secure state.

There are two different ways to parameterize the AS-i master for this feature:

- Every configuration error during normal operation in protected mode releases the off-line phase.
- For each slave address can be chosen whether a configuration error on this address will release the off-line phase or not. This information is stored in the List of Off-line Slaves (LOS).

The user himself can decide how the system reacts to a configuration error on the AS-Interface. The AS-i master can release the off-line phase in critical situations, i. e. only with certain slave addresses, while in less critical situations (if one of the other AS-i slaves have a configuration error) only the error message configuration error is sent to the host, but AS-i is still running.

The parameterization of off-line phase on configuration error is also supported by the "AS-i Control Tools" (command Master | Identity | Offline on configuration error).

## 9 PROFIBUS-DP

This chapter contains all the necessary information to operate the AS-i/PROFIBUS gateway in a PROFIBUS-DP network.

### 9.1 DP Telegrams

#### 9.1.1 Diagnosis

DP Diagnosis					
PDU byte	user byte		DP	DPV1	user
1	–	station_status 1	✓		
2	–	station_status 2	✓		
3	–	station_status 3	✓		
4	–	master address	✓		
5	–	ident high	✓		
6	–	ident low	✓		
7	1	header	✓	✓	
8	2	type		✓	
9	3	slot		✓	
10	4	spec		✓	
11	5	ec-flags (high)			✓
12	6	ec-flags (low)			✓
13	7	delta (0...7)			✓
14	8	delta (8...15)			✓
...	...	...			
20	14	delta (56...63)			✓
21	15	LPF (0...7)			✓
...	...	...			
28	22	LPF (56...63)			✓
29	23	LCS (0...7)			✓
...	...	...			
36	30	LCS (56...63)			✓

ec-flags (high):

Bit 0: periphery fault

ec-flags (low):

- Bit 0: configuration error
- Bit 1: slave with address0 detectd
- Bit 2: Auto\_address\_assignment not possible
- Bit 3: Auto\_address\_assingment available
- Bit 4: configuration mode actice
- Bit 5: not in normal operation
- Bit 6: AS-i power fail
- Bit 7: AS-i master is offline

Delta List: List of AS-i slaves with configuration error:

- 1: ConfigError
- 0: no ConfigError

LPF: List of AS-i slaves with periphery fault:

- 1: periphery fault
- 0: no periphery fault

LCS: List of Corrupted slaves (see chapter 8).

Each element of the user diagnosis (ec-flags and slave lists) can be switched off by setting the appropriate bit in the parameter telegram.

Each element that is not used will be filled up with zeros. This way the data elements in the diagnosis telegram will keep its designated position (and clear text diagnosis fits to the data furthermore).

Only if an element at the end of the user diagnosis is not used, the length of the diagnosis will be shortened.

Extdiag will be set if at least one of the following conditions is fulfilled:

- ConfigError  $\equiv$  1
- APF  $\equiv$  1
- PeripheryFault  $\equiv$  1
- LCS is not empty
- The conditions when to set the ExtDiag bit can be chosen using the user parameters or the mailbox commands.
- The GSD file includes the following presettings:
- The PROFIBUS diagnosis displays: EC-flags, delta list and LPF. The LCS is not displayed.
- ExtDiag will be set if ConfigError = 1 and APF = 1. ExtDiag will not be set if there is a periphery fault or if there is an entry in the LCS.

If an AS-i/PROFIBUS-DP Gateway with 2 AS-i masters is used, the User-Diagnosis-Bytes 5 to 30 represent AS-i network 1 and the User-diagnosis bytes 31 to 56 represent AS-i network 2.

### 9.1.1.1 User Parameters

With the User Parameters can be selected which slave lists will be displayed in the PROFIBUS diagnosis. Furthermore can be selected which conditions have to be fulfilled to set the ExtDiag bit within the diagnosis telegram.

DP Parameters						
PDU byte	user byte		DP	DPV1	user	default
1	–	station_status	✓			
2	–	WD_Fact_1	✓			
3	–	WD_Fact_2	✓			
4	–	min T <sub>sdr</sub>	✓			
5	–	ident high	✓			
6	–	ident low	✓			
7	–	group_ident	✓			
8	1	DPV status 1		✓		80 <sub>16</sub>
9	2	DPV status 2		✓		00 <sub>16</sub>
10	3	DPV status 3		✓		00 <sub>16</sub>
11	4	User Byte 1			✓	0B <sub>16</sub>
12	5	User Byte 2			✓	06 <sub>16</sub>
13	6	User Byte 3			✓	00 <sub>16</sub>

The bits in "User Byte 1" and "User Byte 3" have following meanings:

User Byte 1								
	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
	–			LCS	LPF	–	D	F
default	0	0	0	0	1	0	1	1

User Byte 2								
	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
	–			CS	PF	APF	CF	–
default	0	0	0	0	0	1	1	0

User Byte 3									
	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>	
	–					0			
default	0					0			

LCS: 1: LCS will be displayed in PROFIBUS diagnosis  
 0: LCS will not be displayed

LPF: 1: LPF will be displayed in PROFIBUS diagnosis  
 0: LPF will not be displayed

D: 1: Delta list will be displayed in PROFIBUS diagnosis  
 0: Delta list will not be displayed

F: 1: EC flags will be displayed in PROFIBUS diagnosis  
 0: EC flags will not be displayed

FD: If this bit is set, the PROFIBUS diagnosis is refreshed only then, if the PROFIBUS norm dictated this ("freeze diagnosis"). In doubt the data of the PROFIBUS masters diagnosis are then not actual.

CS: 1: ExtDiag will be set, if there is an entry in the LCS  
0: ExtDiag will not be set, if there is an entry in the LCS

PF: 1: ExtDiag will be set, if there is a periphery fault at the AS-i line  
0: ExtDiag will not be set.

APF: 1: ExtDiag will be set, if there is an AS-i Power Fail  
0: ExtDiag will not be set.

CF: 1: ExtDiag will be set, if there is an Configuration error at the AS-i line  
0: ExtDiag will not be set.

The GSD's default user parameter telegram is:

80 <sub>16</sub>	00 <sub>16</sub>	00 <sub>16</sub>	0B <sub>16</sub>	06 <sub>16</sub>	00 <sub>16</sub>
------------------	------------------	------------------	------------------	------------------	------------------

(DPV1 enabled, diagnosis settings according chapter 9.1.1)

## 9.1.2 Configuration DP V0 (cyclic data)

### 9.1.2.1 AS-i V2.04 Easy Mode



**Note**

*The AS-i/PROFIBUS-DP Gateway V2.1 can be used that it can replace Bihl+Wiedemann's AS-i/PROFIBUS-DP Gateway according to the specification 2.04 which has been commissioned in easy mode. In this mode the AS-i I/O data are shown in the PROFIBUS process data as 16 bytes I/O data with or without consistency.*

The PROFIBUS diagnosis is displayed as described in chapter 9.1.1.

Even if the PROFIBUS-DP gateway V2.1 shall be used in this V2.04 easy mode, the GSD file which comes together with the gateway has to be used. The GSD file of the V2.04 gateway can not be used.

### 9.1.2.2 AS-i V2.1 Mode

In AS-i V2.1 mode the input and output data field can be used with various "special IDs".

The advantages of special input and output IDs are: They can include up to 64 elements (bytes or words) and the length of input and output data can be different. Furthermore "manufacturer specific" data bytes are possible. These "manufacturer specific" data bytes describe the which type ID is.



The following types are possible:

<b>Areas of the I/O-data fields</b>			
type		input data length (bytes)	output data length (bytes)
00 <sub>16</sub>	empty	0...128	0...128
01 <sub>16</sub>	digital process data out of AS-i circuit 1	0...32	0...32
02 <sub>16</sub>	digital process data out of AS-i circuit 2	0...32	0...32
03 <sub>16</sub>	mailbox	2...36	2...34
10 <sub>16</sub>	analog input data circuit 1, slave 31	2...128	0
11 <sub>16</sub>	analog input data circuit 1, slave 15	2...120	0
12 <sub>16</sub>	analog output data circuit 1, slave 31	0	2...128
13 <sub>16</sub>	analog output data circuit 1, slave 15	0	2...120
14 <sub>16</sub>	analog input data circuit 2, slave 31	2...128	0
15 <sub>16</sub>	analog input data circuit 2, slave 15	2...120	0
16 <sub>16</sub>	analog output data circuit 2, slave 31	0	2...128
17 <sub>16</sub>	analog output data circuit 2, slave 15	0	2...120

The consistency of the digital process data is ignored. At least each word of the analog data has to be consistent. The mailbox commands have to be consistent. The GSD file submits the corresponding entry.

The IDs can be used in different sequences. But in the I/O data field can only be one area with each type.

## 9.1.3 I/O-Data

### 9.1.3.1 AS-i V2.04 Easy Mode

byte	$2^7$	$2^6$	$2^5$	$2^4$	$2^3$	$2^2$	$2^1$	$2^0$
0	slave 1/1A				flags			
	D3	D2	D1	D0	F3	F2	F1	F0
1	slave 3/3A				slave 2/2A			
2	slave 5/5A				slave 4/4A			
3	slave 7/7A				slave 6/6A			
4	slave 9/9A				slave 8/8A			
5	slave 11/11A				slave 10/10A			
6	slave 13/13A				slave 12/12A			
7	slave 15/15A				slave 14/14A			
8	slave 17/17A				slave 16/16A			
9	slave 19/19A				slave 18/18A			
10	slave 21/21A				slave 20/20A			
11	slave 23/23A				slave 22/22A			
12	slave 25/25A				slave 24/24A			
13	slave 27/27A				slave 26/26A			
14	slave 29/29A				slave 28/28A			
15	slave 31/31A				slave 30/30A			

### 9.1.3.2 AS-i V2.1 Mode

#### Process data



#### Note

In V2.1 mode the AS-i I/O data are mapped in the PROFIBUS process data as known from the Siemens and AS-i/InterBus masters. That means the lower nibble describes the data of the AS-i slave with the higher slave address. The EC flags resp. HI-flags are additionally mapped at the nibble of AS-i slave 0.

byte	$2^7$	$2^6$	$2^5$	$2^4$	$2^3$	$2^2$	$2^1$	$2^0$
0	flags				slave 1/1A			
	F3	F2	F1	F0	D3	D2	D1	D0
1	slave 2/2A				slave 3/3A			
2	slave 4/4A				slave 5/5A			
3	slave 6/6A				slave 7/7A			
4	slave 8/8A				slave 9/9A			
5	slave 10/10A				slave 11/11A			
6	slave 12/12A				slave 13/13A			
7	slave 14/14A				slave 15/15A			
8	slave 16/16A				slave 17/17A			
9	slave 18/18A				slave 19/19A			

issue date: 30.1.2002

byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
10	slave 20/20A				slave 21/21A			
11	slave 22/22A				slave 23/23A			
12	slave 24/24A				slave 25/25A			
13	slave 26/26A				slave 27/27A			
14	slave 28/28A				slave 29/29A			
15	slave 30/30A				slave 31/31A			
16	reserved				slave 1B			
17	slave 2B				slave 3B			
18	slave 4B				slave 5B			
19	slave 6B				slave 7B			
20	slave 8B				slave 9B			
21	slave 10B				slave 11B			
22	slave 12B				slave 13B			
23	slave 14B				slave 15B			
24	slave 16B				slave 17B			
25	slave 18B				slave 19B			
26	slave 20B				slave 21B			
27	slave 22B				slave 23B			
28	slave 24B				slave 25B			
29	slave 26B				slave 27B			
30	slave 28B				slave 29B			
31	slave 30B				slave 31B			

Flags		
	input data	output data
F0	ConfigError	Off-line
F1	APF	LOS-master-bit
F2	PeripheryFault	→ ConfigurationMode
F3	ConfigurationActive	→ ProtectedMode

ConfigError:        0 = ConfigOK, 1 = ConfigError  
 APF:                0 = AS-i-Power OK, 1 = AS-i-Power Fail  
 PeripheryFault:    0 = PeripheryOK, 1 = PeripheryFault  
 ConfigurationActive: 0 = ConfigurationActive, 1 = ConfigurationInactive  
 Off-Line:           0 = OnLine, 1 = Off-Line  
 LOS-master-bit     0 = Off-Line by ConfigError deactivated  
                       1 = Off-Line by ConfigError deactivated

A rising edge of the "LOS master bit" effects that all bits in the LOS are set. A falling edge effects that all bits are reset.

## Analog data

The 16 bit values of AS-i slaves according to the profile 7.3 can read and written within each PROFIBUS cycle or via the mailbox.

If analog values are written cyclic and acyclic via the mailbox or via DPV1 at the same time, the values transmitted cyclically will overwrite the acyclic values.

AS-i analog data 7.3 may be mapped in a separate area to provide easy access.

Analog data								
byte	$2^7$	$2^6$	$2^5$	$2^4$	$2^3$	$2^2$	$2^1$	$2^0$
1	slave 31-n/8, channel 1, high byte							
2	slave 31-n/8, channel 1, low byte							
3	slave 31-n/8, channel 2, high byte							
4	slave 31-n/8, channel 2, low byte							
...	...							
n-1	slave 31, channel 4, high byte							
n	slave 31, channel 4, low byte							

## Mailbox

Only using the IDs of the process data field the AS-i/PROFIBUS gateway can be used as M0 AS-i master. Using the mailbox (see chapter 9.1) the functions of a M3 master are available.

Request								
byte	$2^7$	$2^6$	$2^5$	$2^4$	$2^3$	$2^2$	$2^1$	$2^0$
1	command							
2	T	circuit						
3	request parameter byte 1							
...	...							
36	request parameter byte 34							

Answer								
byte	$2^7$	$2^6$	$2^5$	$2^4$	$2^3$	$2^2$	$2^1$	$2^0$
1	command (mirrored)							
2	T	result						
3	response parameter byte 1							
...	...							
34	response parameter byte 32							

A mailbox command will be treated if the toggle bit T has changed. In that way the same command can be used many times.

The mailbox commands can also be activated with PROFIBUS-DP V1. Even the process data exchange is possible via the mailbox. In that way the configuration software "AS-i Control Tools" can run the whole communication via DP V1.

issue date: 30.1.2002

**9.2 DP V1**

To exchange data between the PROFIBUS master and the AS-i/PROFIBUS gateway via PROFIBUS-DP V1 only one data block is used - slot 1, index 16. Within this data block a mailbox is installed like the one used in the DP telegram.

The DP V1-mailboxes are processed every time they are called. Therefore it is possible, to execute the same command several times without changing "command" or "circuit".

**9.3 Mailbox**

**9.3.1 Construction**

If an AS-i slave is addressed in a command or in a response, the address is structured as shown below:

Request								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	command							
2	T	–	circuit					
3	request parameter byte 1							
...	...							
36	request parameter byte 34							

Response								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	command							
2	T	result						
3	response parameter byte 1							
...	...							
34	response parameter byte 32							

Command byte and T-bit are always part of the response. The T-bit is necessary to operate the mailbox via a MSC1 connection (PROFIBUS-DP V0). In that way the same mailbox command can be used two times directly one command after the other with different parameters.

The execution of a mailbox command is declined, if the number of the transferred parameters is too small, that means the mailbox in the cyclic channel is too small or the DP V1-telegram is too short.

The mailbox commands are valid as well for PROFIBUS DP V0 as PROFIBUS DP V1.

Circuit = 0 If AS-i gateway with one AS-i master or the master 1 of an AS-i gateway with 2 masters is chosen.

Circuit = 1 If AS-i gateway with 2 masters and the master 2 is chosen.

The commands for reading and writing exist in 2 variants. By the first variant the bits in the slave lists are arranged as by Bihl+Wiedemann usually, so that the data

for slave with lower address appear in the lower bits. The second variant is compatible to Siemens masters, by which the sequence of the bits in the slave lists bytes are inverse.

Between the 2 variants can be changed with bit  $2^6$  in byte 2 of the request. If it is deleted, the Bihl+Wiedemann arrangement is actual, otherwise the Siemens compatible.

The coding of requests for commands to reading and writing is following therefore:

<b>Anfrage</b>								
Byte	$2^7$	$2^6$	$2^5$	$2^4$	$2^3$	$2^2$	$2^1$	$2^0$
1	Befehl							
2	T	0	Kreis					
3	Anfrage Parameter-Byte 1							
...	...							

### 9.3.1.1 Values for command

<b>Values for command</b>				
command	value	meaning	Req Len	Res Len
IDLE	00 <sub>16</sub>	No order	2	2
READ_IDI	41 <sub>16</sub>	Read IDI	2	36
WRITE_ODI	42 <sub>16</sub>	Write_ODI	34	2
SET_PP	43 <sub>16</sub>	Set_Permanent_Parameter	4	2
GET_PP	01 <sub>16</sub>	Get_Permanent_Parameter	3	3
WRITE_P	02 <sub>16</sub>	Write_Parameter	4	3
READ_PI	03 <sub>16</sub>	Read_Parameter	3	3
STORE_PI	04 <sub>16</sub>	Store_Actual_Parameter	2	2
SET_PCD	25 <sub>16</sub>	Set_Permanent_Config	5	2
GET_PCD	26 <sub>16</sub>	Get_Permanent_Config	3	4
STORE_CDI	07 <sub>16</sub>	Store_Actual_Configuration	2	2
READ_CDI	28 <sub>16</sub>	Read_Actual_Configuration	3	4
SET_LPS	29 <sub>16</sub>	SET_LPS	11	2
GET_LPS	44 <sub>16</sub>	Get_LPS	2	10
GET_LAS	45 <sub>16</sub>	Get_LAS	2	10
GET_LDS	46 <sub>16</sub>	Get_LDS	2	10
GET_FLAGS	47 <sub>16</sub>	Get_Flags	2	5
SET_OP_MODE	0C <sub>16</sub>	Set_Operation_Mode	3	2
SET_OFFLINE	0A <sub>16</sub>	Set_Offline_Mode	3	2
SET_DATA_EX	48 <sub>16</sub>	Set_Data_Exchange_Active	3	2

issue date: 30.1.2002

Values for command				
command	value	meaning	Req Len	Res Len
SLAVE_ADDR	0D <sub>16</sub>	Change_Slave_Address	4	2
SET_AAE	0B <sub>16</sub>	Set_Auto_Adress_Enable	3	2
GET_LPF	3E <sub>16</sub>	Get_LPF	2	10
WRITE_XID1	3F <sub>16</sub>	Write_Extended_ID-Code_1	3	2
RD_7X_IN	50 <sub>16</sub>	Read 1 7.3-slave in.data	3	10
WR_7X_OUT	51 <sub>16</sub>	Write 1 7.3-slave out.data	11	2
RD_7X_OUT	52 <sub>16</sub>	Read 1 7.3-slave out.data	3	10
RD_7X_IN_X	53 <sub>16</sub>	Read 4 7.3-slaves in.data	3	34
WR_7X_OUT_X	54 <sub>16</sub>	Write 4 7.3-slaves out.data	35	2
RD_7X_OUT_X	55 <sub>16</sub>	Read 4 7.3-slaves out.data	3	34
READ_ODI	56 <sub>16</sub>	Read ODI	2	34
WR_74_PARAM	5A <sub>16</sub>	Write S-7.4-slave parameter	≥6	2
RD_74_PARAM	5B <sub>16</sub>	Read S-7.4-slave parameter	4	≥3
RD_74_ID	5C <sub>16</sub>	Read S-7.4-slave ID string	4	≥3
RD_74_DIAG	5D <sub>16</sub>	Read S-7.4-slave diagnosis string	4	≥3
GET_LISTS	30 <sub>16</sub>	Get LDS, LAS, LPS, Flags	2	29
GET_LCS	60 <sub>16</sub>	Get LCS	2	10
GET_LOS	61 <sub>16</sub>	GET_LOS	2	10
SET_LOS	62 <sub>16</sub>	SET_LOS	10	2
GET_TECA	63 <sub>16</sub>	Get transm.err.counters	2	34
GET_TECB	64 <sub>16</sub>	Get transm.err.counters	2	34
GET_TEC_X	66 <sub>16</sub>	Get transm.err.counters	4	34
EXT_DIAG	71 <sub>16</sub>	ExtDiag generation	6	2
BUTTONS	75 <sub>16</sub>	Disable pushbuttons	3	2
RD_EXT_DIAG	7B <sub>16</sub>	Read ExtDiag Settings	2	7
INVERTER	7C <sub>16</sub>	Configure Inverter Slaves	12	4
FP_PARAM	7D <sub>16</sub>	„Functional Profile“ Param.	≥3	≥2
FP_DATA	7E <sub>16</sub>	„Functional Profile“ Data	≥3	≥2

**9.3.1.2 Values for results**

<b>Values for result</b>			
	value	place	meaning
OK	00 <sub>16</sub>	–	execution without fault
HI_NG	11 <sub>16</sub>	HI	general fault
HI_OPCODE	12 <sub>16</sub>	HI	illegal value in command
HI_LENGTH	13 <sub>16</sub>	HI	length of the mailbox in the I/O-data area respectively the length of the DPV1-Requests is too short
HI_ACCESS	14 <sub>16</sub>	HI	no access right
EC_NG	21 <sub>16</sub>	EC	general fault
EC_SND	22 <sub>16</sub>	EC	„slave (source addr) not detected“
EC_SD0	23 <sub>16</sub>	EC	„slave 0 detected“
EC_SD2	24 <sub>16</sub>	EC	„slave (target addr) not detected“
EC_DE	25 <sub>16</sub>	EC	„delete error“
EC_SE	26 <sub>16</sub>	EC	„set error“
EC_AT	27 <sub>16</sub>	EC	„address temporary“
EC_ET	28 <sub>16</sub>	EC	„extended ID1 temporary“
EC_RE	29 <sub>16</sub>	EC	„read (extended ID1) error“

**9.3.2 Mailbox commands**

**9.3.2.1 IDLE**

<b>Request</b>								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	00 <sub>16</sub>							
2	T	–	circuit					

<b>Response</b>								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	00 <sub>16</sub>							
2	T	result						

**9.3.2.2 READ\_IDI**

With this call the input data values of all AS-i slaves are read out of the AS-i/PROFIBUS Gateway in addition to the cyclic data exchange. Though the mailbox command READ\_IDI transmits all Execution-Control-Flags (byte 3 and byte 4).



Request								
byte	$2^7$	$2^6$	$2^5$	$2^4$	$2^3$	$2^2$	$2^1$	$2^0$
1	$41_{16}$							
2	T	-	circuit					
Response								
byte	$2^7$	$2^6$	$2^5$	$2^4$	$2^3$	$2^2$	$2^1$	$2^0$
1	$41_{16}$							
2	T	result						
3	-							Pok
4	OR	APF	NA	CA	AAv	AAs	s0	Cok
5	-				slave 1A			
6	slave 2A				slave 3A			
...	...							
30	slave 30B				slave 31B			

Pok Periphery\_Ok  
 S0 LDS.0  
 AAs Auto\_Address\_Assign  
 AAv Auto\_Address\_Available  
 CA Configuration\_Active  
 NA Normal\_Operation\_Active  
 APF APF  
 OR Offline\_Ready  
 Cok Config\_Ok

### 9.3.2.3 WRITE\_ODI

With this call the output data values of all AS-i slaves are written in addition to the cyclic data exchange.

Request								
byte	$2^7$	$2^6$	$2^5$	$2^4$	$2^3$	$2^2$	$2^1$	$2^0$
1	$42_{16}$							
2	T	-	circuit					
3	-				slave 1A			
4	slave 2A				slave 3A			
...	...							
34	slave 30B				slave 31B			
Response								
byte	$2^7$	$2^6$	$2^5$	$2^4$	$2^3$	$2^2$	$2^1$	$2^0$
1	$42_{16}$							
2	T	result						

Issue date 30.1.2002

**9.3.2.4 Set\_Permanent\_Parameter (SET\_PP)**

With this call, a parameter value for the specified AS-i slave is configured on the AS-i/PROFIBUS Gateway. The value is stored permanently in the EEPROM of the Gateway.

The configured parameter is not transferred immediately by the AS-i/PROFIBUS Gateway to the AS-i slave. The configured parameter value is only transferred when the AS-i slave is activated after turning on the power supply on the AS-i/PROFIBUS Gateway.

Request								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	43 <sub>16</sub>							
2	T	–	circuit					
3	–		B	slave address				
4	–				PP			
Response								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	43 <sub>16</sub>							
2	T	result						

**9.3.2.5 Get\_Permanent\_Parameter (GET\_PP)**

With this call, a slave-specific parameter value stored on the EEPROM of the AS-i/PROFIBUS Gateway is read.

Request								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	01 <sub>16</sub>							
2	T	–	circuit					
3	–		B	slave address				
Response								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	01 <sub>16</sub>							
2	T	result						
3	–				PP			

**9.3.2.6 Write Parameter (WRITE\_P)**

The AS-i slave parameter value transferred with the command is passed on to the addressed AS-i slave.

The parameter is stored on the AS-i/PROFIBUS Gateway only temporarily and is not entered as a configured parameter in the EEPROM!

The AS-i slave transfers its current parameter value in the response (parameter echo). This can deviate from the value that has just been written according to the

issue date: 30.1.2002

AS-i master specification. The AS-i slave response is returned as a parameter echo in the response data.

Request								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	02 <sub>16</sub>							
2	T	–	circuit					
3	–		B	slave address				
4	–			parameter				

Response								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	02 <sub>16</sub>							
2	T	result						
3	–			slave response				

Meaning of bit B:

B = 0 Single AS-i slave or A-slave

B = 1 B-slave

### 9.3.2.7 Read Parameter (READ\_PI)

This call returns the current parameter value (actual parameter) of an AS-i slave sent by the AS-i/PROFIBUS Gateway.

This value must not be confused with the parameter echo that is supplied by the AS-i slave as a response to the write\_parameter job.

Request								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	03 <sub>16</sub>							
2	T	–	circuit					
3	–		B	slave address				

Response								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	03 <sub>16</sub>							
2	T	result						
3	–			PI				

Meaning of bit B:

B = 0 Single AS-i slave or A-slave

B = 1 B-slave

**9.3.2.8 Store Actual Parameters (STORE\_PI)**

With this call, the configured parameters stored on the EEPROM are overwritten with the current, permanently stored (actual) parameters; in other words, the parameters of all the AS-i slaves are configured.

Request								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	04 <sub>16</sub>							
2	T	–	circuit					

Response								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	04 <sub>16</sub>							
2	T	result						

**9.3.2.9 Set Permanent Configuration (SET\_PCD)**

This call sets the following configuration data for the addressed AS-i slave:

- I/O configuration
- ID code
- Extended ID1 code
- Extended ID2 code

The configuration data are stored permanently on the EEPROM of the AS-i/ PROFIBUS Gateway and are used as the expected configuration by the AS-i master in the protected mode. The configuration data are specified by the manufacturer of the AS-i slave.

If the addressed AS-i slave does not support an extended ID code 1/2, the value F<sub>hex</sub> must be specified.

When this command is executed, the AS-i master changes to the offline phase and then changes back to the normal mode (warm restart on the AS-i master).

This command can only be executed in the configuration mode.

Request								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	25 <sub>16</sub>							
2	T	–	circuit					
3	–		B	slave address				
4	xID2				xID1			
5	ID				I0			

Response								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	25 <sub>16</sub>							
2	T	result						

Meaning of bit B:

- B = 0 Single AS-i slave or A-slave
- B = 1 B-slave

### 9.3.2.10 Get Extended Permanent Configuration (GET\_PCD)

This call reads the following configuration data (configured data) of an addressed AS-i slave stored on the EEPROM of the AS-i master:

- I/O configuration
- ID code
- Extended ID1 code
- Extended ID2 code

The configuration data are specified by the manufacturer of the AS-i slave.

Request								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	26 <sub>16</sub>							
2	T	–	circuit					
3	–		B	slave address				

Response								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	26 <sub>16</sub>							
2	T	result						
3	xID2				xID1			
4	ID				I0			

Meaning of bit B:

- B = 0 Single AS-i slave or A-slave
- B = 1 B-slave

### 9.3.2.11 Store Actual Configuration (STORE\_CDI)

With this call, the (actual) configuration data (I/O configuration, ID code, extended ID1 code and extended ID2 code) of all AS-i slaves are stored permanently in the EEPROM as the (expected) configuration data. The list of activated AS-i slaves (LAS) is adopted in the list of permanent AS-i slaves (LPS).

When this command is executed, the AS-i master changes to the offline phase and then changes back to the normal mode (warm restart on the AS-i master).

This command can only be executed in the configuration mode.

Request								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	07 <sub>16</sub>							
2	T	–	circuit					

Response								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	07 <sub>16</sub>							
2	T	result						

### 9.3.2.12 Read Actual Configuration (READ\_CDI)

With this call, the following configuration data of an addressed AS-i slave obtained by the AS-i master on the AS-Interface are read.

- I/O configuration
- ID code
- Extended ID1 code
- Extended ID2 code

The configuration data are specified by the manufacturer of the AS-i slave.

Request								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	28 <sub>16</sub>							
2	T	–	circuit					
3	–		B	slave address				

Response								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	28 <sub>16</sub>							
2	T	result						
3	xID2				xID1			
4	ID				IO			

Meaning of bit B:

B = 0 Single AS-i slave or A-slave

B = 1 B-slave

### 9.3.2.13 SET\_LPS

With this call, the list of configured AS-i slaves is transferred for permanent storage in the EEPROM of the master.

When this command is executed, the AS-i master changes to the offline phase and then changes back to the normal mode (warm restart on the AS-i master).

This command can only be executed in the configuration mode.

<b>Request (if O ≡ 0)</b>								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	29 <sub>16</sub>							
2	T	0	circuit					
3	00 <sub>16</sub>							
4	7A	6A	5A	4A	3A	2A	1A	–
...	...							
11	31B	30B	29B	28B	27B	26B	25B	24B

<b>Request (if O ≡ 1)</b>								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	29 <sub>16</sub>							
2	T	1	circuit					
3	00 <sub>16</sub>							
4	–	1A	2A	3A	4A	5A	6A	7A
...	...							
11	24B	25B	26B	27B	28B	29B	30B	31B

<b>Response</b>								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	29 <sub>16</sub>							
2	T	result						

**9.3.2.14 GET\_LPS**

With this call, the following entry is read out of the AS-i/PROFIBUS Gateway: The list of projected AS-i slaves (LPS).

<b>Request</b>								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	44 <sub>16</sub>							
2	T	O	circuit					

<b>Response (if O ≡ 0)</b>								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	44 <sub>16</sub>							
2	T	result						
3	7A	6A	5A	4A	3A	2A	1A	0A
...	...							
10	31B	30B	29B	28B	27B	26B	25B	24B

Issue date 30.1.2002

Response (if O ≡ 1)								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	44 <sub>16</sub>							
2	T	result						
3	0A	1A	2A	3A	4A	5A	6A	7A
...	...							
10	24B	25B	26B	27B	28B	29B	30B	31B

**9.3.2.15 GET\_LAS**

With this call, the following entry is read out of the AS-i/PROFIBUS Gateway: The list of activated slaves (LAS).

Request								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	45 <sub>16</sub>							
2	T	O	circuit					

Response (if O ≡ 0)								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	45 <sub>16</sub>							
2	T	result						
3	7A	6A	5A	4A	3A	2A	1A	0A
...	...							
10	31B	30B	29B	28B	27B	26B	25B	24B

Response (if O ≡ 1)								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	45 <sub>16</sub>							
2	T	result						
3	0A	1A	2A	3A	4A	5A	6A	7A
...	...							
10	24B	25B	26B	27B	28B	29B	30B	31B



**9.3.2.16 GET\_LDS**

With this call, the following entry is read out of the AS-i/PROFIBUS Gateway: The list of detected AS-i slaves (LDS).

Request									
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>	
1	46 <sub>16</sub>								
2	T	O	circuit						

Response (if O ≡ 0)								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	46 <sub>16</sub>							
2	T	result						
3	7A	6A	5A	4A	3A	2A	1A	0A
...	...							
10	31B	30B	29B	28B	27B	26B	25B	24B

Response (if O ≡ 1)								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	46 <sub>16</sub>							
2	T	result						
3	0A	1A	2A	3A	4A	5A	6A	7A
...	...							
10	24B	25B	26B	27B	28B	29B	30B	31B

**9.3.2.17 GET\_FLAGS**

With this call, the following entry is read out of the AS-i/PROFIBUS Gateway: The flags according to the AS-i slave specification.

Request								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	47 <sub>16</sub>							
2	T	–	circuit					

Response								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	47 <sub>16</sub>							
2	T	response						
3	–							Pok
4	OR	APF	NA	CA	AAv	AAs	S0	Cok
5	–					AAe	OL	DX

Issue date 30.1.2002

- Pok** Periphery\_Ok  
This flag is set when no AS-i slave is signaling a peripheral fault.
- S0** LDS.0  
This flag is set when an AS-i slave exists with address 0.
- AAs** Auto\_Address\_Assign  
This flag is set when the automatic address programming is possible (in other words, AUTO\_ADDR\_ENABLE = 1 and there is no "incorrect" slave connected to the AS-i Interface).
- AAv** Auto\_Address\_Available  
This flag is set when the automatic address programming can be executed (in other words, exactly one AS-i slave is currently out of operation).
- CA** Configuration\_Active  
The flag is set in the configuration mode and reset in the protected mode.
- NA** Normal\_Operation\_Active  
This flag is set when the AS-i master is in normal operation.
- APF** APF  
This flag is set when the voltage on the AS-i cable is too low.
- OR** Offline\_Ready  
The flag is set when the offline phase is active.
- Cok** Config\_Ok  
This flag is set when the desired (configured) and actual configuration match.
- AAe** Auto\_Address\_Enable  
This flag indicates whether the automatic address programming is enabled (bit = 1) or disabled (bit = 0) by the user.
- OL** Off-line  
This flag is set when the mode is to be changed to OFFLINE or this mode has already been adopted.
- DX** Data\_Exchange\_Active  
If the "Data\_Exchange\_Active" flag is set, the data exchange between AS-i master and slaves is available in the dataexchange phase. If this bit is not set the data exchange is not available. The read ID telegrams are transmitted to the slave.  
The bit is set if the AS-i master enters the offline phase.

### 9.3.2.18 SET\_OP\_MODE

This call changes the module between the configuration mode and the protected mode.

In the protected mode, only AS-i slaves are activated that are entered in the LPS and whose expected and actual configurations match, in other words, when the I/O configuration and ID codes of the detected AS-i slaves are identical to the configured values.

In the configuration mode, all detected AS-i slaves (except for AS-i slave "0") are activated. This also applies to AS-i slaves in which there are differences between the expected and actual configuration.

The "OPERATION MODE" bit is stored permanently; in other words, it is retained following a cold/warm restart.

When you change from the configuration mode to the protected mode, there is a warm restart on the AS-i master (change to the offline phase followed by a change to the online mode).



*If an AS-i slave with address "0" is entered in the LDS, the AS-i/PROFIBUS Gateway cannot change from the configuration mode to the protected mode.*

**Note**

Request								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	0C <sub>16</sub>							
2	T	–	circuit					
3	operation mode							

Response								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	0C <sub>16</sub>							
2	T	result						

Meaning of bit operation mode:

- 0 = protected mode
- 1 = configuration mode

**9.3.2.19 SET\_OFFLINE**

This call switches between the online and offline mode.

The online mode is the normal operating situation for the AS-i master. Here, the following jobs are processed cyclically:

- During the data exchange phase, the fields of the output data are transferred to the slave outputs for all AS-i slaves in the LAS. The addressed AS-i slaves transfer the values of the slave inputs to the master when the transfer was free of errors.
- This is followed by the inclusion phase in which there is a search for the existing AS-i slaves and newly added AS-i slaves are entered in the LDS or LAS.
- In the management phase, jobs from the user such as writing parameters are executed.

In the offline mode, the AS-i/PROFIBUS Gateway only processes jobs from the user. (Jobs that involve the immediate addressing of an AS-i slave are rejected with an error.) There is no cyclic data exchange with the AS-i slaves.

The OFFLINE = TRUE bit is not permanently stored; in other words, following a cold/warm restart, the AS-i/PROFIBUS Gateway is once again in the online mode.

Request								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	0A <sub>16</sub>							
2	T	–	circuit					
3	Off-Line							

Response								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	0A <sub>16</sub>							
2	T	result						

The master changes to the Offline phase, if there is a 1 written in byte 3.

The master will change to online mode if there is a 0 written in byte 3.

### 9.3.2.20 SET\_DATA\_EX

Request								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	48 <sub>16</sub>							
2	T	–	circuit					
3	Data_Exchange_Active							

Response								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	48 <sub>16</sub>							
2	T	result						

### 9.3.2.21 Change Slave Address (SLAVE\_ADDR)

With this call, the AS-i address of an AS-i slave can be modified.

This call is mainly used to add a new AS-i slave with the default address "0" to the AS-Interface. In this case, the address is changed from "AS-i slave address old" = 0 to "AS-i slave address new".

This change can only be made when the following conditions are fulfilled:

1. An AS-i slave with "AS-i slave address old" exists.
2. If the old AS-i slave address is not equal to 0, then an AS-i slave with address "0" cannot be connected at the same time.
3. The "AS-i slave address new" must have a valid value.
4. An AS-i slave with "AS-i slave address new" must not exist.



*When the AS-i slave address is changed, the AS-i slave is not reset, in other words, the output data of the AS-i slave are retained until new data are received at the new address.*

**Note**

<b>Request</b>								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	0D <sub>16</sub>							
2	T	–	circuit					
3	–		B	source address				
4	–		B	target address				

<b>Response</b>								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	0D <sub>16</sub>							
2	T	result						

Meaning of bit B:

B = 0 Single AS-i slave or A-slave

B = 1 B-slave

**9.3.2.22 Set Auto Address Enable (SET\_AAE)**

This call can enable or disable the "automatic address programming" function.

The AUTO\_ADDR\_ENABLE bit is stored permanently; in other words, it is retained after a warm/hot restart on the AS-i master.

<b>Request</b>								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	0B <sub>16</sub>							
2	T	–	circuit					
3	Auto_Address_Enable							

<b>Response</b>								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	0B <sub>16</sub>							
2	T	result						

**9.3.2.23 GET\_LPF**

With this call, the list of peripheral faults (LPF) signaled by the AS-i slaves is read out from the AS-i master. The LPF is updated cyclically by the AS-i master. Whether an when an AS-i slave signals faults of the attached peripherals (for example wire break) can be found in the description of the AS-i slave.

Request									
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>	
1	3E <sub>16</sub>								
2	T	O	circuit						

Response (if O ≡ 0)								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	3E <sub>16</sub>							
2	T	result						
3	7A	6A	5A	4A	3A	2A	1A	0A
...	...							
10	31B	30B	29B	28B	27B	26B	25B	24B

Response (if O ≡ 1)								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	3E <sub>16</sub>							
2	T	result						
3	0A	1A	2A	3A	4A	5A	6A	7A
...	...							
10	24B	25B	26B	27B	28B	29B	30B	31B

**9.3.2.24 Write AS-i Slave Extended ID1 (WRITE\_XID1)**

With this call, the extended ID1 code of an AS-i slave with address "0" can be written directly over the AS-i cable. The call is intended for diagnostic purposes and is not required in the normal master mode.

The AS-i master passes on the extended ID1 code to the AS-i slave without any plausibility check.

Request								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	3F <sub>16</sub>							
2	T	–	circuit					
3	–				xID1			

Response								
Byte	$2^7$	$2^6$	$2^5$	$2^4$	$2^3$	$2^2$	$2^1$	$2^0$
1	$3F_{16}$							
2	T	result						

**9.3.2.25 RD\_7X\_IN**

With this command the four 16 bit channels of an AS-i input slave according to the slave profil 7.3 can be read.

Request								
byte	$2^7$	$2^6$	$2^5$	$2^4$	$2^3$	$2^2$	$2^1$	$2^0$
1	$50_{16}$							
2	T	-	circuit					
3	-		0	slave address				

Response								
byte	$2^7$	$2^6$	$2^5$	$2^4$	$2^3$	$2^2$	$2^1$	$2^0$
1	$50_{16}$							
2	T	result						
3	channel 1, high byte							
...	...							
10	channel 4, low byte							

**9.3.2.26 WR\_7X\_OUT**

With this command the four 16 bit channels of an AS-i output slave according to the slave profil 7.3 can be written.

Request								
byte	$2^7$	$2^6$	$2^5$	$2^4$	$2^3$	$2^2$	$2^1$	$2^0$
1	$51_{16}$							
2	T	-	circuit					
3	-		0	slave address				
4	channel 1, high byte							
...	...							
11	channel 4, low byte							

Response								
byte	$2^7$	$2^6$	$2^5$	$2^4$	$2^3$	$2^2$	$2^1$	$2^0$
1	$51_{16}$							
2	T	result						

issue date 30.1.2002

**9.3.2.27 RD\_7X\_OUT**

With this command the four 16 bit channels of an AS-i output slave according to the slave profil 7.3 can be read out of the AS-i/PROFIBUS Gateway.

Request								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	52 <sub>16</sub>							
2	T	–	circuit					
3	–		0	slave address				

Response								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	52 <sub>16</sub>							
2	T	result						
3	channel 1, high byte							
...	...							
10	channel 4, low byte							

**9.3.2.28 RD\_7X\_IN\_X**

With this command the four 16 bit channels of 4 AS-i input slaves with successive addresses according to the slave profil 7.3 can be read.

Request								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	53 <sub>16</sub>							
2	T	–	circuit					
3	–		0	1st slave address				

Response								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	53 <sub>16</sub>							
2	T	result						
3	1st slave, channel 1, high byte							
...	...							
34	4th slave, channel 4, low byte							



**9.3.2.29 WR\_7X\_OUT\_X**

With this command the four 16 bit channels of 4 AS-i output slaves with successive addresses according to the slave profil 7.3 can be written.

<b>Request</b>								
byte	$2^7$	$2^6$	$2^5$	$2^4$	$2^3$	$2^2$	$2^1$	$2^0$
1	$54_{16}$							
2	T	-	circuit					
3	-		0	1st slave address				
4	1st slave, channel 1, high byte							
...	...							
35	4th slave, channel 4, low byte							

<b>Response</b>								
byte	$2^7$	$2^6$	$2^5$	$2^4$	$2^3$	$2^2$	$2^1$	$2^0$
1	$54_{16}$							
2	T	result						

**9.3.2.30 RD\_7X\_OUT\_X**

With this command the four 16 bit channels of 4 AS-i output slaves with successive addresses according to the slave profil 7.3 can be read.

<b>Request</b>								
byte	$2^7$	$2^6$	$2^5$	$2^4$	$2^3$	$2^2$	$2^1$	$2^0$
1	$55_{16}$							
2	T	-	circuit					
3	-		0	1st slave address				

<b>Response</b>								
byte	$2^7$	$2^6$	$2^5$	$2^4$	$2^3$	$2^2$	$2^1$	$2^0$
1	$55_{16}$							
2	T	result						
3	1st slave, channel 1, high byte							
...	...							
34	4th slave, channel 4, low byte							

**9.3.2.31 READ\_ODI**

With this call the output data values of all AS-i slaves is read out of the AS-i/ PROFIBUS Gateway.

Request								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	56 <sub>16</sub>							
2	T	–	circuit					
Response								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	56 <sub>16</sub>							
2	T	result						
3	–			slave 1A				
	slave 2A			slave 3A				
...	...							
34	slave 30B			slave 31B				

**9.3.2.32 WR\_74\_PARAM**

With this function the parameter string of a slave according to profile S-7.4 is written. Because it is possible, that the string is longer than the mailbox, first it will be written into the buffer in parts and then it will be transferred to the slave.

n is the length of the part of the string, that should be written into the buffer from index i.

If  $i \equiv 0$ , then the string is transferred to the slave.

Request								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	5A <sub>16</sub>							
2	T	–	circuit					
3	slave address							
4	i							
5	n							
6	buffer byte i							
...	...							
n+5	buffer byte i+n-1							

Response								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	5A <sub>16</sub>							
2	T	results						

**9.3.2.33 RD\_74\_PARAM**

With this function the parameter string according to profile S-7.4 is read. Because the string can be longer as the mailbox, it is written into the buffer. The content of the buffer can read in parts from index i.

The first byte of the buffer is the length of the read string.

If  $i \equiv 0$ , then the string is read from the slave, otherwise the function responses out of the memory, through which the data can be read consistently.

Request								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	5B <sub>16</sub>							
2	T	-	circuit					
3	slave address							
4	i							

Response								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	5B <sub>16</sub>							
2	T	result						
	buffer byte i							
...	...							
n+2	buffer byte i+n-1							

**9.3.2.34 RD\_74\_ID**

With this function the ID string of a slave according to profile S-7.4 is read. Because the string can be longer as the mailbox, it is written into the buffer. The content of the buffer can read in parts from index i.

The first byte of the buffer is the length of the read string.

If  $i \equiv 0$ , then the string is read from the slave, otherwise the function responses out of the memory, through which the data can be read consistently.

Request								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	5C <sub>16</sub>							
2	T	-	circuit					
3	slave address							
4	i							

Response								
byte	$2^7$	$2^6$	$2^5$	$2^4$	$2^3$	$2^2$	$2^1$	$2^0$
1	$5C_{16}$							
2	T	result						
	buffer byte i							
...	...							
n+2	buffer byte i+n-1							

### 9.3.2.35 RD\_74\_DIAG

With this function the diagnosis string of a slave according to profile S-7.4 is read. Because the string can be longer as the mailbox, it is written into the buffer. The content of the buffer can read in parts from index i.

The first byte of the buffer is the length of the read string.

If  $i \equiv 0$ , then the string is read from the slave, otherwise the function responses out of the memory, through which the data can be read consistently.

Request								
byte	$2^7$	$2^6$	$2^5$	$2^4$	$2^3$	$2^2$	$2^1$	$2^0$
1	$5D_{16}$							
2	T	-	circuit					
3	slave address							
4	i							

Response								
byte	$2^7$	$2^6$	$2^5$	$2^4$	$2^3$	$2^2$	$2^1$	$2^0$
1	$5D_{16}$							
2	T	result						
	buffer byte i							
...	...							
n+2	buffer byte i+n-1							

### 9.3.2.36 Get\_LPS, Get\_LAS, Get\_LDS, Get\_Flags (GET\_LISTS)

With this call, the following entries are read out of the AS-i/PROFIBUS Gateway:

- The list of active AS-i slaves (LAS)
- The list of detected AS-i slaves (LDS)
- The list of projected AS-i slaves (LPS)
- The flags according to the AS-i slave specification

Request								
byte	$2^7$	$2^6$	$2^5$	$2^4$	$2^3$	$2^2$	$2^1$	$2^0$
1	$30_{16}$							
2	T	O	circuit					

issue date: 30.1.2002

<b>Response (if O ≡ 0)</b>								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	30 <sub>16</sub>							
2	T	result						
3	7A	6A	5A	4A	3A	2A	1A	0A
...	LAS							
10	31B	30B	29B	28B	27B	26B	25B	24B
11	7A	6As	5A	4A	3A	2A	1A	0A
...	LDS							
19	31B	30B	29B	28B	27B	26B	25B	24B
20	7A	6As	5A	4A	3A	2A	1A	0A
...	LPS							
26	31B	30B	29B	28B	27B	26B	25B	24B
27	-							Pok
28	OR	APF	NA	CA	AAv	AAs	S0	Cok
29	-					AAe	OL	DX

<b>Response (if O ≡ 1)</b>								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	30 <sub>16</sub>							
2	T	result						
3	0A	1A	2A	3A	4A	5A	6A	7A
...	LAS							
10	24B	25B	26B	27B	28B	29B	30B	31B
11	0A	1A	2A	3A	4A	5A	6A	7A
...	LDS							
19	24B	25B	26B	27B	28B	29B	30B	31B
20	0A	1A	2A	3A	4A	5A	6A	7A
...	LPS							
26	24B	25B	26B	27B	28B	29B	30B	31B
27	-							Pok
28	OR	APF	NA	CA	AAv	AAs	S0	Cok
29	-					AAe	OL	DX

Pok Periphery\_Ok  
 S0 LDS.0  
 AAs Auto\_Address\_Assign  
 AAv Auto\_Address\_Available  
 CA Configuration\_Active  
 NA Normal\_Operation\_Active  
 APF APF  
 OR Offline\_Ready

Issue date 30.1.2002

Cok Config\_Ok  
 AAe Auto\_Address\_Enable  
 OL Off-line  
 DX Data\_Exchange\_Active

**9.3.2.37 GET\_LCS**

With this call, the List of Corrupted Slaves (*LCS*) is read out of the AS-i/PROFIBUS Gateway.

Request									
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>	
1	60 <sub>16</sub>								
2	T	O	circuit						

Response (if O = 0)								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	60 <sub>16</sub>							
2	T	result						
3	7A	6A	5A	4A	3A	2A	1A	0A
...	...							
10	31B	30B	29B	28B	27B	26B	25B	24B

Response (if O = 1)								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	60 <sub>16</sub>							
2	T	result						
3	0A	1A	2A	3A	4A	5A	6A	7A
...	...							
10	24B	25B	26B	27B	28B	29B	30B	31B

**9.3.2.38 GET\_LOS**

With this call, the List of Offline Slaves (*LOS*) is read out of the AS-i/PROFIBUS Gateway (see chapter 8).

Request									
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>	
1	61 <sub>16</sub>								
2	T	O	circuit						

Response (if O ≡ 0)								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	61 <sub>16</sub>							
2	T	result						
3	7A	6A	5A	4A	3A	2A	1A	0A
...	...							
10	31B	30B	29B	28B	27B	26B	25B	24B

Response (if O ≡ 1)								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	61 <sub>16</sub>							
2	T	result						
3	0A	1A	2A	3A	4A	5A	6A	7A
...	...							
10	24B	25B	26B	27B	28B	29B	30B	31B

### 9.3.2.39 SET\_LOS

With this call, the List of Offline Slaves is written to the AS-i/PROFIBUS Gateway (see chapter 8).

Request (if O ≡ 0)								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	62 <sub>16</sub>							
2	T	O	circuit					
3	7A	6A	5A	4A	3A	2A	1A	0A
...	...							
10	31B	30B	29B	28B	27B	26B	25B	24B

Request (if O ≡ 1)								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	62 <sub>16</sub>							
2	T	1	circuit					
3	0A	1A	2A	3A	4A	5A	6A	7A
...	...							
10	24B	25B	26B	27B	28B	29B	30B	31B

Response								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	62 <sub>16</sub>							
2	T	result						

**9.3.2.40 GET\_TECA**

With this call the error counters of all single slaves/A-slaves can be read (see chapter 8).

Request								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	63 <sub>16</sub>							
2	T	–	circuit					
Response								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	63 <sub>16</sub>							
2	T	result						
3	APF							
4	slave 1A							
...	...							
34	slave 31A							

**9.3.2.41 GET\_TECB**

With this call the counts of the error counters for B-slaves are read out (see chapter 8).

With every read out of the counts the error counters are restarted.

The counts are read out via the correspondending host interface and will be deleted with every read access. The counter value is limited to 254. 255 means counter overflow.

Request								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	64 <sub>16</sub>							
2	T	–	circuit					
Response								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	64 <sub>16</sub>							
2	T	result						
3	APF							
4	slave 1B							
...	...							
34	slave 31B							



**9.3.2.42 GET\_TEC\_X**

With this call beginning by a definite slave address the counts of the n error counters are read out (see chapter 8).

With every read out of the counts the error counters are restarted.

The counts are read out via the correspondending host interface and will be deleted with every read access. The counter value is limited to 254. 255 means counter overflow.

Request								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	66 <sub>16</sub>							
2	T	-	circuit					
3	1. slave address							
4	number of counters							

Response								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	66 <sub>16</sub>							
2	T	result						
3	counter 1							
...	...							
n	counter n - 2							

**9.3.2.43 EXT\_DIAG**

With this call, the conditions when to set the ExtDiag bit can be selected.

Request								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	71 <sub>16</sub>							
2	T	-	circuit					
3	CF							
4	APF							
5	PF							
6	CS							

Response								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	71 <sub>16</sub>							
2	T	result						

CF ExtDiag is set, if ConfigError ≙ 1

APF ExtDiag is set, if APF ≙ 1

issue date 30.1.2002

- PF ExtDiag is set, if PeripheryFault  $\equiv$  1
- CS ExtDiag is set, if LCS is not empty

### 9.3.2.44 BUTTONS

With this call, the use of the buttons can be enabled/disabled.

Request								
byte	$2^7$	$2^6$	$2^5$	$2^4$	$2^3$	$2^2$	$2^1$	$2^0$
1	$75_{16}$							
2	T	–	circuit					
3	ButtonsDisabled							

Response								
byte	$2^7$	$2^6$	$2^5$	$2^4$	$2^3$	$2^2$	$2^1$	$2^0$
1	$75_{16}$							
2	T	result						

### 9.3.2.45 RD\_EXT\_DIAG

With this call, the conditions when the ExtDiag bit is set can be read.

Request								
byte	$2^7$	$2^6$	$2^5$	$2^4$	$2^3$	$2^2$	$2^1$	$2^0$
1	$7B_{16}$							
2	T	–	circuit					

Response								
byte	$2^7$	$2^6$	$2^5$	$2^4$	$2^3$	$2^2$	$2^1$	$2^0$
1	$75_{16}$							
2	T	result						
3	CF							
4	APF							
5	PF							
6	CS							
7	FD							

- CF ExtDiag is set by ConfigError  $\equiv$  1
- APF ExtDiag is set by APF  $\equiv$  1
- PF ExtDiag is set by PeripheryFault  $\equiv$  1
- CS ExtDiag is set, if LCS is not empty
- FD Diagnosis will updated still only then, if this is dictated by the norm of PROFIBUS. Diagnosis data are doubtful not actual

**9.3.2.46 INVERTER**

With that call an AS-i slave for frequency inverters is switched to the mode to get four 16 bit values via the AS-i analog profile 7.3 and afterwards switched to the selected destination parameter.

Request								
byte	$2^7$	$2^6$	$2^5$	$2^4$	$2^3$	$2^2$	$2^1$	$2^0$
1	$7C_{16}$							
2	T	-	circuit					
3	slave address							
4	destination parameter							
5	value 1, high byte							
6	value 1, low byte							
7	value 2, high byte							
8	value 2, low byte							
9	value 3, high byte							
10	value 3, low byte							
11	value 4, high byte							
12	value 4, low byte							

Response								
byte	$2^7$	$2^6$	$2^5$	$2^4$	$2^3$	$2^2$	$2^1$	$2^0$
1	$7C_{16}$							
2	T	result						

**9.3.2.47 FP\_PARAM**

This command is used for parametrization of "functional profiles".

The content of the request and response bytes is depending of the called function (see chapter 9.3.3).

Request								
byte	$2^7$	$2^6$	$2^5$	$2^4$	$2^3$	$2^2$	$2^1$	$2^0$
1	$7D_{16}$							
2	T	-	circuit					
3	function							
4	request byte 1							
...	...							
n	request byte n-3							

Response								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	7D <sub>16</sub>							
2	T	result						
3	response byte 1							
...	...							
n	response byte n-2							

**9.3.2.48 FP\_DATA**

This command is used for data exchange with "functional profiles".

The content of the request and response bytes is depending of the called function (see chapter 9.3.3).

Request								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	7E <sub>16</sub>							
2	T	–	circuit					
3	function							
4	request byte 1							
...	...							
n	request byte n-3							

Response								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	7E <sub>16</sub>							
2	T	result						
3	response byte 1							
...	...							
n	response byte n-2							

**9.3.3 Functional Profiles**

**9.3.3.1 „Safety at Work“ List 1**

Function: 00<sub>16</sub>

List of "safety-directed input slaves" ("AS-i Safety at Work"), by which the safety function is released.

In this list are entered that slaves according to profile S-7.B or S-0.B, by which are deleted all 4 bits in the IDI. Therefore slaves with 2 contacts are entered only then, if both contacts are released.

Because the safety function of a safety-directed input slave can be released, if the slave does exchange no data with the AS-i master, the list may be utilized only in combination with the ec-flags.

issue date: 30.1.2002

For the building of this list CDI and IDI are utilized only. Safety-directed slaves, which are projected but not existing, and slaves, which are existing but sending a wrong code, are entered therefore not here.

<b>Request</b>									
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>	
1	7E <sub>16</sub>								
2	T	O	circuit						
3	00 <sub>16</sub>								

<b>Response (if O ≡ 0)</b>								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	7E <sub>16</sub>							
2	T	result						
3	-							Pok
4	OR	APF	NA	CA	AAv	AAs	S0	Cok
5	7	6	5	4	3	2	1	-
...	...							
8	31	30	29	28	27	26	25	25

<b>Response (if O ≡ 1)</b>								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	7E <sub>16</sub>							
2	T	result						
3	-							Pok
4	OR	APF	NA	CA	AAv	AAs	S0	Cok
5	-	1	2	3	4	5	6	7
...	...							
8	24	25	26	27	28	29	30	31

- Cok Config\_Ok
- S0 LDS.0
- AAs Auto\_Address\_Assign
- AAv Auto\_Address\_Available
- CA Configuration\_Active
- NA Normal\_Operation\_Active
- APF APF
- OR Offline\_Ready
- Pok Periphery\_Ok

**9.3.3.2 „Safety at Work“ Monitor Diagnosis**

Function:  $02_{16}$

Because the „Safety at Work“ monitor can make more than 32 Byte diagnosis data, these must be read with several mailbox calls. The second request byte declares the start index in the field of the diagnosis data.

If the start index is 0, new data is fetched from the monitor, otherwise the function responds out of the memory, through which the data can be read consistently.

Request								
byte	$2^7$	$2^6$	$2^5$	$2^4$	$2^3$	$2^2$	$2^1$	$2^0$
1	$7E_{16}$							
2	T	–	circuit					
3	$02_{16}$							
4	slave address							
5	index							

Response								
byte	$2^7$	$2^6$	$2^5$	$2^4$	$2^3$	$2^2$	$2^1$	$2^0$
1	$7E_{16}$							
2	T	result						
3	diagnosis byte #index+0							
4	diagnosis byte #index+1							
...	...							
n	diagnosis byte #index+n-3							

The diagnosis data field of the safety monitor has following structure:

Request								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
0	00 <sub>16</sub>							
1	monitor state							
2	state circuit 1							
3	state circuit 2							
4	number circuit 1							
5	number circuit 2							
6	device index 32, circuit 1							
7	device color, circuit 1							
8	device index 33, circuit 1							
9	device color, circuit 1							
...	...							
68	device index 63, circuit 1							
69	device color, circuit 1							
70	device index 32, circuit 2							
71	device color, circuit 2							
...	...							
132	device index 63, circuit 2							
133	device color, circuit 2							

### 9.3.3.3 Integrated AS-i Sensors: Warnings

Function: 03<sub>16</sub>

List of integrated AS-i sensors according to profil S-1.1 (without advanced addressing) or profil S-3.A.1 (with advanced addressing), by which the input data bit D1 ("Warning") is deleted.

For building of this list CDI and IDI are utilized only. Integrated AS-i slaves, which are projected but not existing, are entered therefore not here.

Request								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	7E <sub>16</sub>							
2	T	O	circuit					
3	03 <sub>16</sub>							

Response (if O ≡ 0)								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	7E <sub>16</sub>							
2	T	result						
3	7A	6A	5A	4A	3A	2A	1A	0
...	...							
10	31B	30B	29B	28B	27B	26B	25B	24B

Response (if O ≡ 1)								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	7E <sub>16</sub>							
2	T	result						
3	0	1A	2A	3A	4A	5A	6A	7A
...	...							
10	24A	25A	26A	27A	28A	29A	30A	31A

#### 9.3.3.4 Integrated AS-i Sensors: Availability

Function: 04<sub>16</sub>

List of the integrated slaves according to profile S-1.1, by which the input data bit D2 ("Availability") is deleted.

For building of this list CDI and IDI are utilized only. Integrated AS-i slaves, which are projected but not existing, are entered therefore not here.

Request								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	7E <sub>16</sub>							
2	T	O	circuit					
3	04 <sub>16</sub>							

Response (if O ≡ 0)								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	7E <sub>16</sub>							
2	T	result						
3	7	6	5	4	3	2	1	0
...	...							
6	31	30	29	28	27	26	25	24



Resonse (if O ≡ 1)								
byte	2 <sup>7</sup>	2 <sup>6</sup>	2 <sup>5</sup>	2 <sup>4</sup>	2 <sup>3</sup>	2 <sup>2</sup>	2 <sup>1</sup>	2 <sup>0</sup>
1	7E <sub>16</sub>							
2	T	result						
3	0	1	2	3	4	5	6	7
...	...							
6	24	25	26	27	28	29	30	31

**9.3.3.5 Restrictions**

The SPC3 has available only just 1,5 KByte DP-Ram. Therefore the lengths of telegrams and the numbers of DP V1-connections to class 2 masters have to be restricted.

Restrictions through the SPC3			
MSC1	input data output data diagnosis parameters configuration SetSlaveAddress	144 bytes 144 bytes 36 bytes 12 bytes 32 bytes 4 bytes	(8 advanced identities)
MSAC1	SAPs PDU	1 42 bytes	
MSAC2	SAPs PDU	3 42 bytes	

**9.3.4 Mailbox example**

Command RD\_7X\_IN: Reading of analog input values

PROFIBUS-DP V0: cyclic data exchange

Used ID/module in the GSD file: 12 bytes management

Meaning of the bytes:

Request: RD_7X_IN	
Byte 1	50 <sub>hex</sub> (RD_7X_IN)
Byte 2	00 <sub>hex</sub> (master 1, single master)
Byte 3	1D <sub>hex</sub> (slave address 29)
Byte 4	00 <sub>hex</sub>
...	...
Byte 12	00 <sub>hex</sub>

Response	
Byte 1	00 <sub>hex</sub>
Byte 2	00 <sub>hex</sub>
Byte 3	00 <sub>hex</sub>
Byte 4	00 <sub>hex</sub>
...	...
Byte 12	00 <sub>hex</sub>

The mailbox call has not been answered with the valid values, because the toggle bit has not been set.

Set of Toggle bit:

Request	
Byte 1	50 <sub>hex</sub>
Byte 2	80 <sub>hex</sub> (Toggle bit, master 1, single master)
Byte 3	1D <sub>hex</sub> (slave address 29)
Byte 4	00 <sub>hex</sub>
...	...
Byte 12	00 <sub>hex</sub>

Response	
Byte 1	50 <sub>hex</sub>
Byte 2	80 <sub>hex</sub> (Toggle bit, master1)
Byte 3	analog channel 1 high byte <sub>hex</sub>
Byte 4	analog channel 1 low byte <sub>hex</sub>
Byte 5	analog channel 2 high byte <sub>hex</sub>
Byte 6	analog channel 2 low byte <sub>hex</sub>
Byte 7	analog channel 3 high byte <sub>hex</sub>
Byte 8	analog channel 3 low byte <sub>hex</sub>
Byte 9	analog channel 4 high byte <sub>hex</sub>
Byte 10	analog channel 4 low byte <sub>hex</sub>
Byte 11	00 <sub>hex</sub> not usedt
Byte 12	00 <sub>hex</sub> not usedt

To get the input data again, the T-bit has to be reset aso.

If a mailbox command is used via PROFIBUS-DP V1, it is not necessary to use the toggle bit.

## 10 Commissioning Tools and Accessories


The AS-i circuit on the AS-i/PROFIBUS Gateway can be put into operation with the comfortable Windows software "AS-i Control Tools".

This software communicates with the AS-i/PROFIBUS gateway by means of a PROFIBUS DP Mastersimulator DP V1 ) or Serial PROFIBUS Master , which converts the RS 232-signals of the PC to PROFIBUS.

### 10.1 Windows Software AS-i Control Tools


The Windows software AS-i Control Tools enables you to configure the AS-i circuit in a very comfortable manner.

1. For that purpose plug in a PROFIBUS-DP Master Simulator DP V1 or serial PROFIBUS Master to the D-SUB-connector of the AS-i/PROFIBUS gateway and connect the device with a fully covered cable to the serial interface of your PC.
2. Start the AS-i Control Tools.
3. Call the command Master | New.

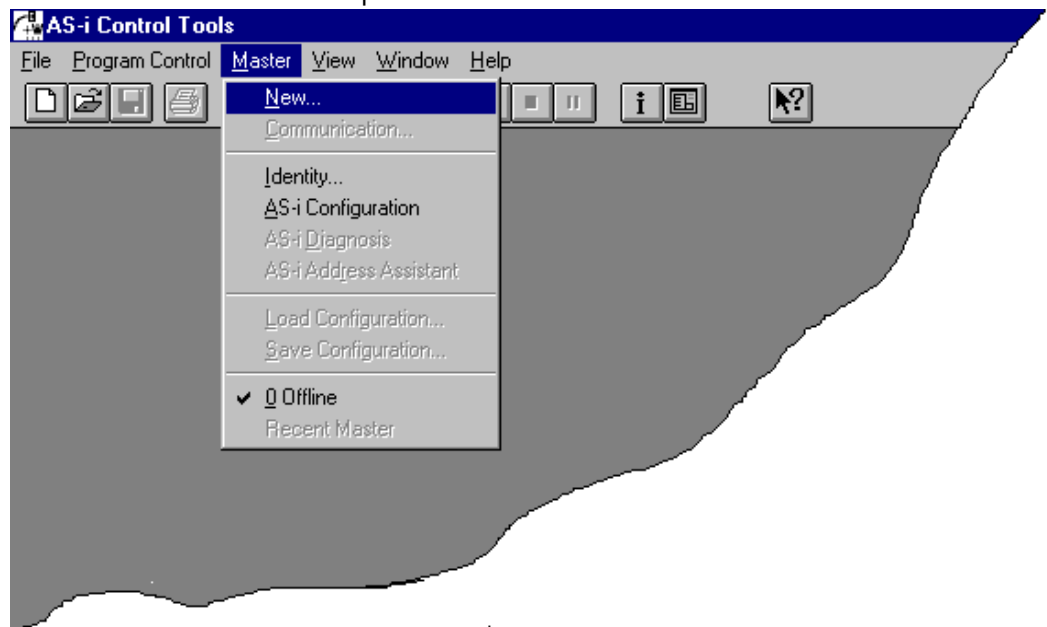


4. Choose PROFIBUS as protocol.


5. Do the appropriate settings. (e.g. serial interface COM 2, station address <auto>, AS-i circuit 1)

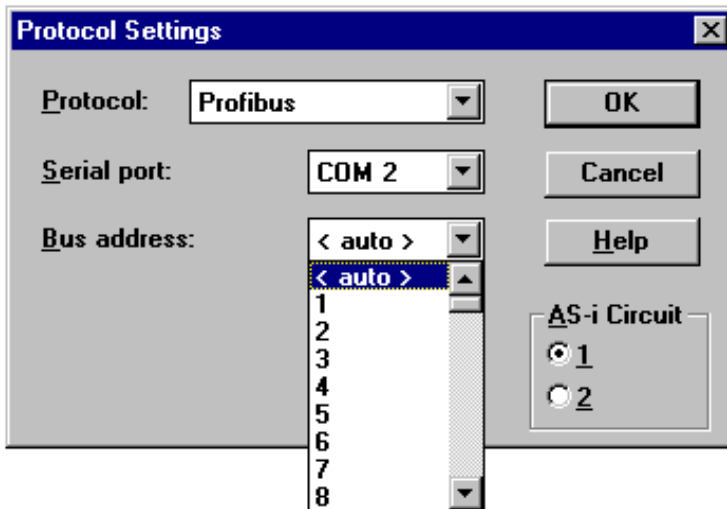

6. Call the command Master | AS-i configuration.  
The AS-i configuration editor will be started. All detected and projected AS-i slaves are displayed in this window.

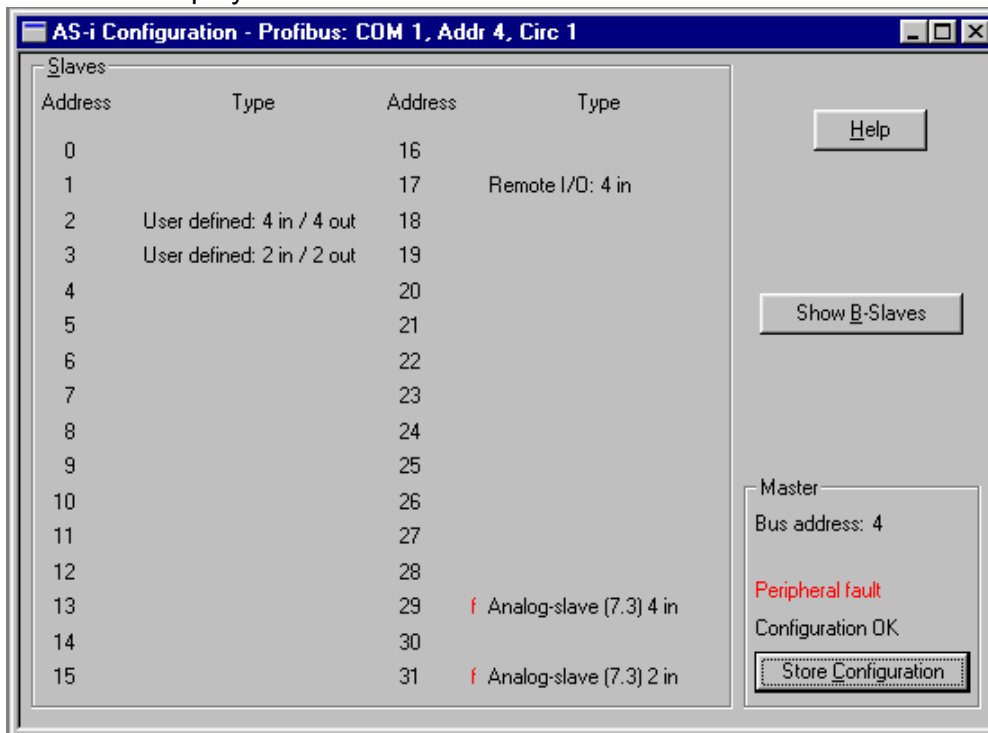

7. Click on a slave entry to open the dialogbox slave configuration.

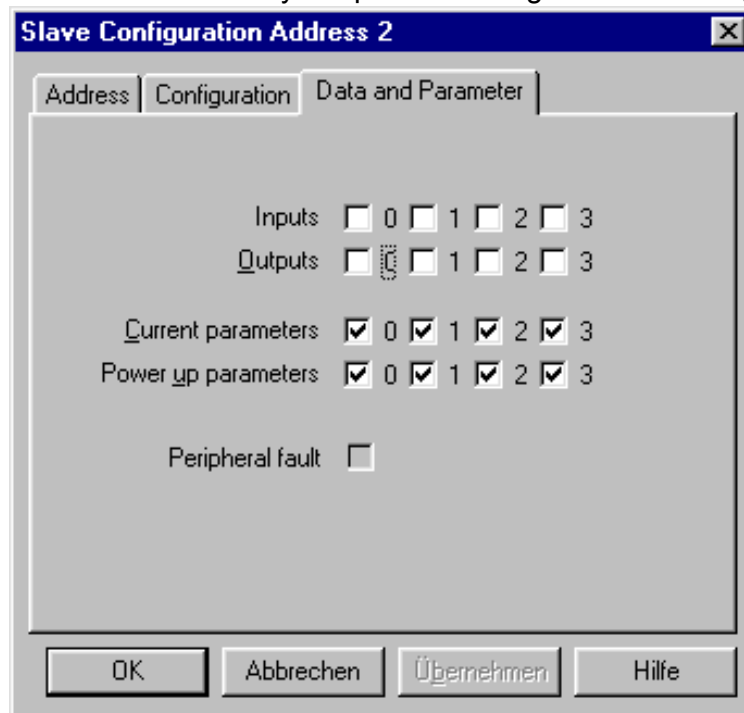


This dialog box is for changing a slave address, setting AS-i parameters or AS-i configuration data. Additionally you can test inputs and outputs.

A very easy approach to configure the AS-i circuit is connecting each AS-i slave to the line and setting the AS-i slave address one after the other. After that press the button "Store configuration" to adopt the detected AS-i circuit to the AS-i master as projected data.

Moreover you can use the **AS-i Address Assistant**. This tool changes automatically the address of an AS-i slave to the desired address after plugging the slave to the AS-i line. The desired AS-i configuration can be created off-line before and stored to a file. When you build up the plant you only have to plug the AS-i slaves to the AS-i line one after the other.

Further descriptions to all features of the software can be obtained from the integrated help.

## 10.2 PROFIBUS-DP Master Simulator

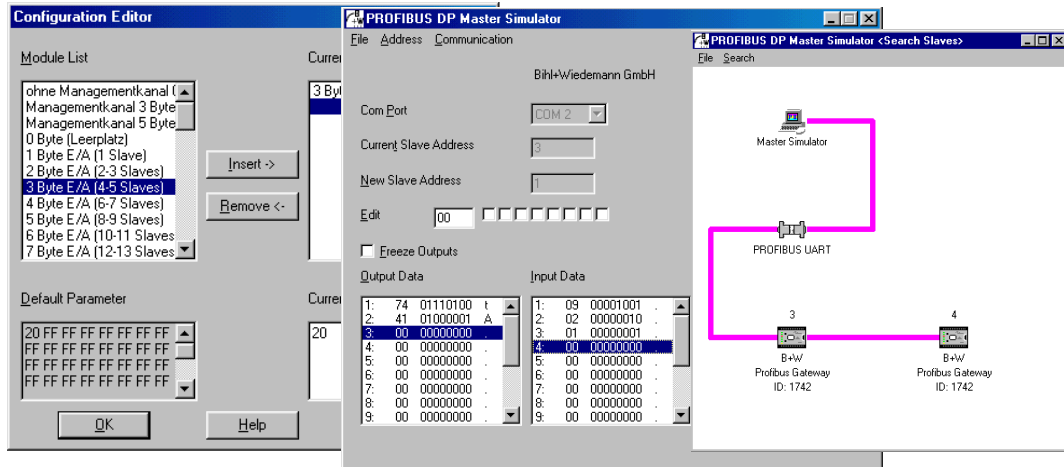

The PROFIBUS DP master simulator is a simple universal tool for data exchange with PROFIBUS slaves of almost all manufacturers via PROFIBUS DP. The PROFIBUS DP master simulator can exchange data with a PROFIBUS slave even without GSD file, without type file and without a PROFIBUS master. Without further inputs or additional files the PROFIBUS slave can be put into operation with the default I/O width. Input data can be read and output data be written. This is particularly important with time-critical troubleshoot at the PROFIBUS, if e.g. diskettes of several manufacturers are not seizable. Beyond that the PROFIBUS DP master simulator enables also the use of GSD files, of course, as well as the input of special configurations for starting data exchange with PROFIBUS slaves. Addressing of PROFIBUS slaves - above all the IP67-Module without address switches - is likewise possible.

The scope of supply of the PROFIBUS DP master simulator contains a simple PROFIBUS converter. The PROFIBUS converter is the ideal interface converter between the RS 232 interface of the PC and the PROFIBUS. The converter is very compact and needs no additional external power supply. Therefore it is in the best way suitable also for mobile build-up with a laptop or a notebook. The PROFIBUS converter can simply be connected between the PROFIBUS slave and the RS 232 interface cable.

**11 Appendix: Displays of the Figure Display**

In the basic state of the configuration mode, the display shows one after the other the addresses of all detected slaves at a rate of two per second. A blank display means that the *LDS* is empty, i.e. no slaves were detected.

In the basic state of the protected operating mode, the display is either blank or displays the address of a faulty assignment (see chapter 6.4.2).

During manual address programming, the slave address display has a different meaning (see chapter 6.5 and 6.6).

All displayed numbers that are bigger than 31 and therefore can not be interpreted as a slave address are status or error messages of the master. They have the following meanings:

39	Advanced AS-i diagnostics: If a 39 appears on the display after pressing the 'set'-button a short-time AS-i power failure occurred.
40	The AS-i master is in off-line phase.
41	The AS-i master is in detection phase.
42	The AS-i master is in activation phase.
43	The AS-i master starts the normal operating mode.
70	Hardware error: The AS-i master's EEPROM cannot be written to.
72	Hardware error: The PIC processor does not respond.
73	Hardware error: The PIC processor does not respond.
74	Checksum error in the EEPROM.
75	Error in the external RAM.
76	Error in the external RAM.
77	AS-i control software error: Stack overflow (AS-i control II)
78	AS-i control software error: Checksum error in the control program.
80	Error while attempting to exit the configuration mode: A slave with address zero exists.
81	General error while changing a slave address.
82	The front panel operation is blocked. Until the next power-up of the AS-i master the accessing to the device only from the host via the interface.
83	Program reset of the AS-i Control programm: The AS-i Control programm is just read out of EEPROM and copied into the RAM.
88	Display test while starting up the AS-i master
90	Error while changing a slave address in protected operating mode: No slave with address 0 existing.
91	Error while changing slave address: Target address is already occupied.
92	Error while changing slave address: New address could not be set.
93	Error while changing slave address: New address could only be stored volatile in the slave.

Issue date 30.1.2002

## AS-Interface Appendix: Displays of the Figure Display

94	Error while changing slave address in protected operating mode: Slave has wrong configuration data.
95	Error while changing slave address in protected operating mode: The configuration error was caused by one slave too many (instead of one missing slave).



**12 Appendix: The First Commissioning of AS-i**



**Note**

*In this chapter an example is given of how to put an AS-i network into operation quickly and easily and without the need for external devices. The addressing of the components connected to the AS-i network can be performed directly on the AS-i master. It is of course more comfortable to do the addressing with a hand-held programming device or with the Windows software AS-i Control Tools. However, it is possible to configure even complex networks using only the AS-i master.*

<b>What to do ?</b>	<b>How to go about it?</b>
See to it that the AS-i master is properly supplied with power.	Connect the AS-i power supply unit to the terminals AS-i + and AS-i - of the master, connect the ground terminal. Turn on the power supply.
After the self-test: the LEDs "power", "config err", "U ASI" and "prj mode" are on. The figure display shows "40": the AS-i master is in the off-line phase. Shortly after that a "41" will be displayed: the AS-i master stays in the detection phase.	
Switch the device to the projecting mode, if the yellow LED does not light up.	Press the "modeMODE"-button for approx. five seconds.
The yellow LED "prj mode" lights up. The device is now in projecting mode.	
Add a slave with the address 0 to the AS-i line.	Connect the slave's terminals with the terminals AS-i +/- of the master.
The green LED "ASI active" lights up. The figure display shows "0". This means the AS-i master has detected the slave.	
Change the slave address to address 1.	Select address 1 by pressing the "set" button shortly, if necessary repeatedly, whereby after each operation the next in each case free address is indicated. When a "1" appears on the display press the "set" button for approx. five seconds until the display blinks. Press again shortly the "set" button to assign the new address to the slave.
The AS-i master detects the slave with address 1 and displays "1".	
Connect another slave with address 0 to the AS-i line and allocate the address 2 to it.	Connect the slave to the AS-i line. The addressing is the same as for the previous slave.
The addresses of all slaves detected are now displayed sequentially.	
Change to the protected operating mode and store the AS-i configuration.	Leave the configuration mode by pressing the "mode" button for at least five seconds until the "prj mode" LED goes out.

Issue date 30.1.2002

## AS-Interface Appendix: The First Commissioning of AS-i


What to do ?	How to go about it?
<p>The configuration of the AS-i master is now finished. Now the hierarchically higher fieldbus system can be put into operation. <b>The gateway stays in the off-line phase (Display dark, the LED ASI active is out), until the hierarchically higher fieldbus system operates properly.</b></p>	

**13 Appendix: Putting PROFIBUS into Operation with a Siemens S5**

This chapter shows exemplarily the putting into operation of an AS-i/PROFIBUS gateway on PROFIBUS for the PLC Simatic S5 135 of Siemens with the PROFIBUS master card IM 308 C. The configuration software used is the Siemens COM PROFIBUS 3.0 (German version).


**13.1 Putting into Operation in Easy Mode**

1. Copy the GSD-file "B\_W\_1745.GSD" from the diskette "AS-i/PROFIBUS Gateway IBM PC Software" from the directory A:\GSD to the directory \GSD of the software COM PROFIBUS 3.0.
2. Start the configuration software COM PROFIBUS 3.0
3. Execute the command "File | Scan GSD-Files".
4. Execute the command "File | New".  
 The dialog box "Master & Host Selection" appears.

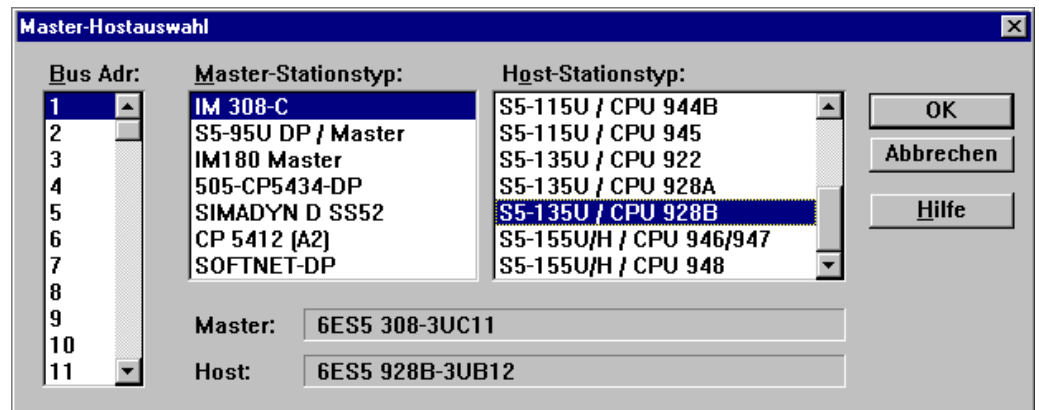


Select your PROFIBUS master.

5. With the command "Configure | Master Parameters..." you can select the baudrate and other bus parameters.

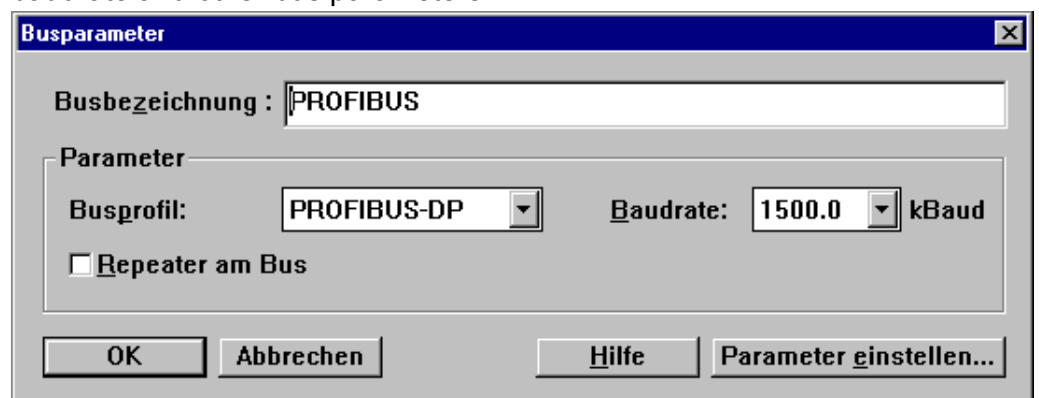

6. In the window "DP Master System" there is a ledge with several PROFIBUS slaves.


Click on AS-i and drag the icon to the PROFIBUS in the window above.

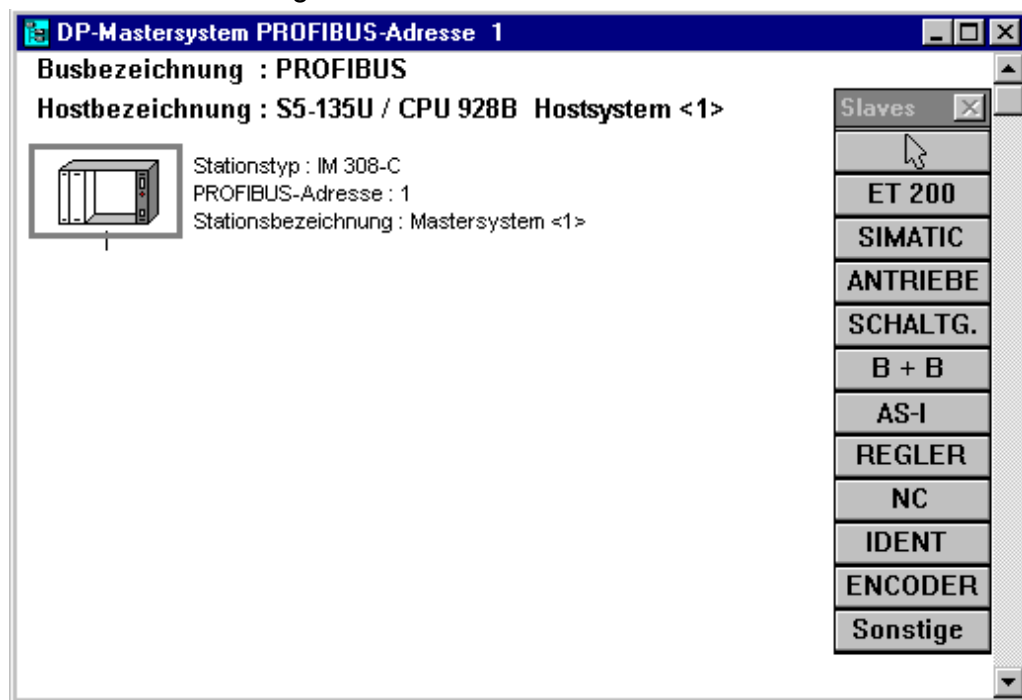

7. After a second mouse click the dialogbox for the selection of the PROFIBUS station address appears. Setting of the AS-i/PROFIBUS gateway's station address see chapter 6.7:




8. and afterwards the dialogbox for the selection of the device type (Slave Parameters):

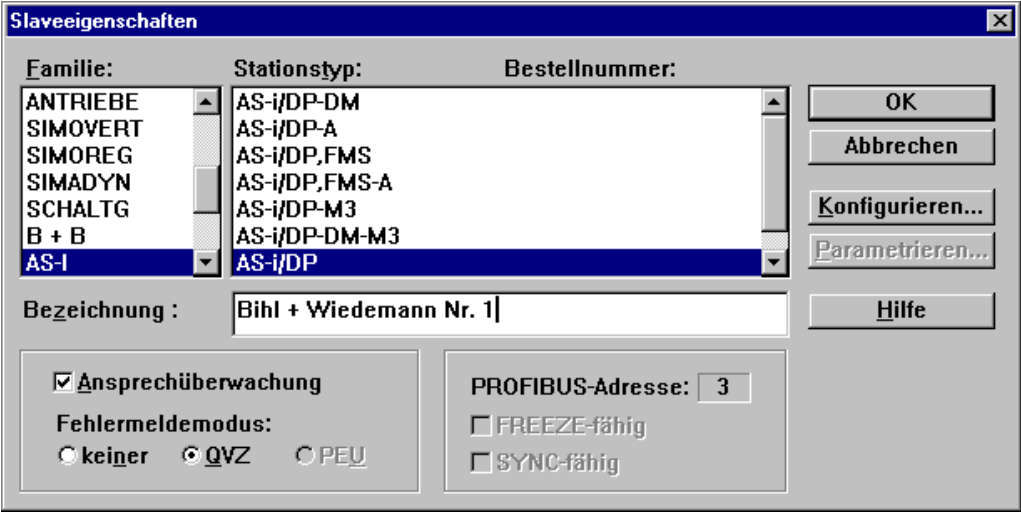

Choose "AS-i/DP" as station type. This name stands for the GSD-file with the settings for the easy mode.

9. Afterwards, your PROFIBUS system looks as follows:

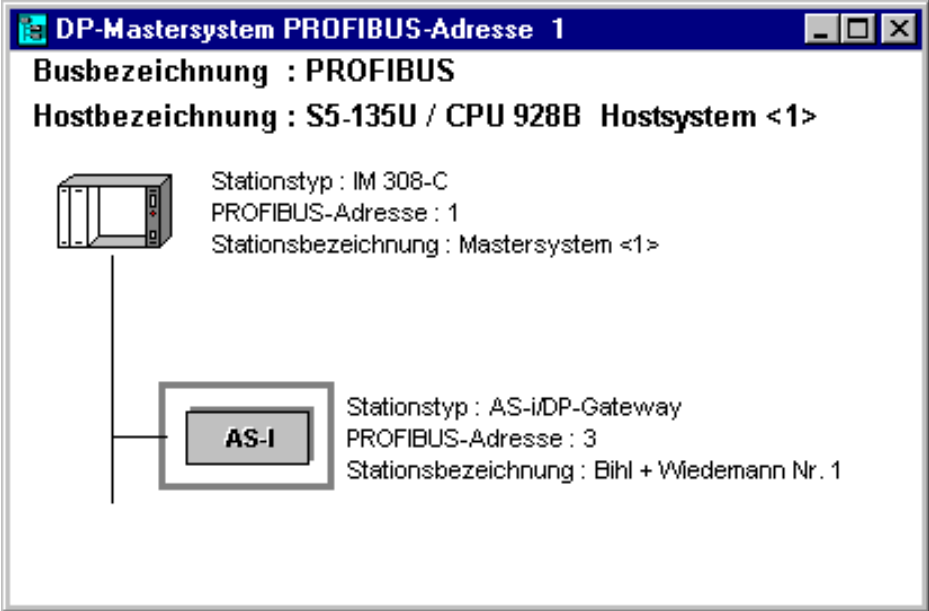

10. Select the PROFIBUS slave. With the command “Configure | Slave Parameters... | Configure...” you get to the dialogbox “Configure”.

	Kennung	Kommentar	E-Adr.	A-Adr.
0	191		P000	P000
1				
2				
3				
4				
5				
6				
7				
8				
9				
10				
11				
12				
13				

The fields “I Addr.” and “O Addr.” hold the start addresses for the AS-i data. The easiest way to set the addresses is with “Auto Addr.”. From these addresses 16 bytes of AS-i data each are mapped to the address space of your PLC.


This AS-i data can be processed with your user program by means of load and transfer operations.

11. After closing this dialogbox save your project with the command “File | Save”.
12. The last step is exporting the data to a memory card with the command “File | Export | Memory Card...”

The general terms of delivery for products and services produced or provided by the electrical industry as published by the Zentralverband Elektrotechnik und Elektroindustrie (ZVEI) e.V. in its most recent edition as well as the supplementary proviso: "Extended property proviso" are applicable.

We at Pepperl+Fuchs feel obligated to contribute to the future;  
this publication is, therefore, printed on paper bleached without the use of chlorine.

# One Company, Two Divisions.

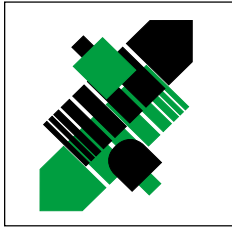

## Factory Automation Division

### Product Range


- Digital and analogue sensors
- in different technologies
  - Inductive and capacitive sensors
  - Magnetic sensors
  - Ultrasonic sensors
  - Photoelectric sensors
- Incremental and absolute rotary encoders
- Counters and control equipment
- Identification Systems
- AS-Interface

### Areas of Application

- Machine engineering
- Conveyor or transport
- Packaging and bottling
- Automotive industry

### Service Area

Worldwide sales, customer service and consultation via competent and reliable Pepperl+Fuchs associates ensure that you can contact us wherever or whenever you need us. We have subsidiaries worldwide for your convenience.

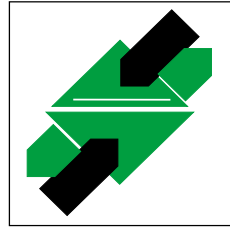

## Process Automation Division

### Product Range

- Signal conditioners
- Intrinsically safe interface modules
- Remote Process Interface (RPI)
- Intrinsically safe field bus solutions
- Level control sensors
- Process measuring and control systems engineering at the interface level
- Intrinsic safety training

### Areas of Application

- Chemical industry
- Industrial and community sewage
- Oil, gas and petrochemical industry
- PLC and process control systems
- Engineering companies for process systems

<http://www.pepperl-fuchs.com>

### USA Headquarters

Pepperl+Fuchs Inc. • 1600 Enterprise Parkway  
Twinsburg, Ohio 44087 • Cleveland-USA  
Tel. (330) 4 25 35 55 • Fax (330) 4 25 46 07  
e-mail: [sales@us.pepperl-fuchs.com](mailto:sales@us.pepperl-fuchs.com)

### Asia Pacific Headquarters

Pepperl+Fuchs Pte Ltd. • P+F Building  
18 Ayer Rajah Crescent • Singapore 139942  
Tel. (65) 7 79 90 91 • Fax (65) 8 73 16 37  
e-mail: [sales@sg.pepperl-fuchs.com](mailto:sales@sg.pepperl-fuchs.com)

### Worldwide Headquarters

Pepperl+Fuchs GmbH • Königsberger Allee 87  
68307 Mannheim • Germany  
Tel. +49 621 7 76-0 • Fax +49 621 7 76-10 00  
e-mail: [fa-info@de.pepperl-fuchs.com](mailto:fa-info@de.pepperl-fuchs.com)

 **PEPPERL+FUCHS**