


# Ultrasonic sensor UB400-12GM-E5-V1

- Switching output5 different output functions can be set
- Program input
- Temperature compensation

Single head system



Dimensions

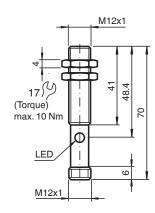

Technical	Data

General specifications	
Sensing range	30 400 mm
Adjustment range	50 400 mm
Dead band	0 30 mm
Standard target plate	100 mm x 100 mm
Transducer frequency	approx. 310 kHz
Response delay	approx. 50 ms
Indicators/operating means	
LED yellow	indication of the switching state flashing: program function object detected

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

Pepperl+Fuchs Group www.pepperl-fuchs.com

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com




Technical Data		
LED red		solid red: Error
		red, flashing: program function, object not detected
Electrical specifications		
Operating voltage	$U_B$	10 30 V DC , ripple 10 % <sub>SS</sub>
No-load supply current	I <sub>0</sub>	≤ 30 mA
Input		
Input type		1 program input operating distance 1: -U <sub>B</sub> +1 V, operating distance 2: +6 V +U <sub>B</sub> input impedance: > 4,7 kΩ program pulse: ≥ 1 s
Output		
Output type		1 switch output PNP Normally open/closed , programmable
Rated operating current	l <sub>e</sub>	100 mA , short-circuit/overload protected
Default setting		Switch point A1: 50 mm Switch point A2: 400 mm
Voltage drop	$U_d$	≤3 V
Repeat accuracy		≤1 %
Switching frequency	f	≤ 8 Hz
Range hysteresis	Н	1 % of the set operating distance
Temperature influence		± 1.5 % of full-scale value
Compliance with standards and directives		
Standard conformity		
Standards		EN IEC 60947-5-2:2020 IEC 60947-5-2:2019
Approvals and certificates		
UL approval		cULus Listed, Class 2 Power Source
CCC approval		CCC approval / marking not required for products rated ≤36 V
Ambient conditions		
Ambient temperature		-25 70 °C (-13 158 °F)
Storage temperature		-40 85 °C (-40 185 °F)
Mechanical specifications		
Connection type		Connector plug M12 x 1 , 4-pin
Housing diameter		12 mm
Degree of protection		IP67
Material		
Housing		brass, nickel-plated
Transducer		epoxy resin/hollow glass sphere mixture; foam polyurethane, cover PBT
Mass		25 g

# Connection

#### Standard symbol/Connections:

(version E5, pnp)

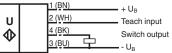

Core colours in accordance with EN 60947-5-2.

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

2

# **Connection Assignment**




Wire colors in accordance with EN 60947-5-2

1	BN	(brown)
2	WH	(white)
3	BU	(blue)
4	BK	(black)


# **Characteristic Curve**

#### Characteristic response curve

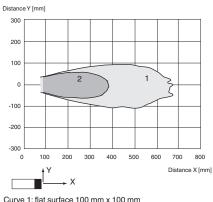

Curve 1: flat surface 100 mm x 100 r Curve 2: round bar, Ø 25 mm

# Programmable output modes

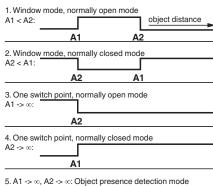

5. A1 ->∞, A2 ->∞: Object presence detection mode Object detected: Switch output closed No object detected: Switch output open

# Accessories VB-PROG2 Programming unit BF 5-30 Universal mounting bracket for cylindrical sensors with a diameter of 5 ... 30 mm

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

Release date: 2023-02-15 Date of issue: 2023-02-15 Filename: 114846\_eng.pdf

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



# UB400-12GM-E5-V1

Accessories				
<u>I</u> Ø	BF 12	Mounting flange, 12 mm		
-	BF 12-F	Plastic mounting adapter, 12 mm		
ø /	V1-G-2M-PVC	Female cordset single-ended M12 straight A-coded, 4-pin, PVC cable grey		
6/	V1-W-2M-PUR	Female cordset single-ended M12 angled A-coded, 4-pin, PUR cable grey		
	UVW90-M12	Ultrasonic -deflector		
000	M12K-VE	Plastic nuts with centering ring for the vibration-free mounting of cylindrical sensors		

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".



# Teach-In

# Adjusting the switching points

The ultrasonic sensor features a switch output with two teachable switching points. These are set by applying the supply voltage  $-U_B$  or  $+U_B$  to the TEACH-IN input. The supply voltage must be applied to the TEACH-IN input for at least 1 s. LEDs indicate whether the sensor has recognised the target during the TEACH-IN procedure. Switching point A1 is taught with  $-U_B$ , A2 with  $+U_B$ .

Five different output functions can be set

- 1. Window mode, normally-open function
- 2. Window mode, normally-closed function
- 3. one switching point, normally-open function
- 4. one switching point, normally-closed function
- 5. Detection of object presence

### TEACH-IN window mode, normally-open function

- Set target to near switching point
- TEACH-IN switching point A1 with -U<sub>B</sub>
- Set target to far switching point
- TEACH-IN switching point A2 with +U<sub>B</sub>

### TEACH-IN window mode, normally-closed function

- Set target to near switching point
- TEACH-IN switching point A2 with +U<sub>B</sub>
- Set target to far switching point
- TEACH-IN switching point A1 with -U<sub>B</sub>

### TEACH-IN switching point, normally-open function

- Set target to near switching point
- TEACH-IN switching point A2 with +U<sub>B</sub>
- Cover sensor with hand or remove all objects from sensing range
- TEACH-IN switching point A1 with -U<sub>B</sub>

### TEACH-IN switching point, normally-closed function

- Set target to near switching point
- TEACH-IN switching point A1 with -U<sub>B</sub>
- Cover sensor with hand or remove all objects from sensing range
- TEACH-IN switching point A2 with +U<sub>B</sub>

### **TEACH-IN detection of objects presence**

- Cover sensor with hand or remove all objects from sensing range
- TEACH-IN switching point A1 with -U<sub>B</sub>
- TEACH-IN switching point A2 with +U<sub>B</sub>

# **LED Displays**

Displays in dependence on operating mode	Red LED	Yellow LED
TEACH-IN switching point:		
Object detected	off	flashes
No object detected	flashes	off
Object uncertain (TEACH-IN invalid)	On	off
Normal operation	off	Switching state
Fault	on	Previous state

# **Additional Information**

If the sensor is installed at places, where the environment temperature can fall below 0 °C, for the sensors fixation, one of the mounting flanges BF 12, BF 12-F or BF 5-30 must be used. In case of direct mounting of the sensor in a through hole, it has to be fixed at the middle of the housing thread.

Refer to "General Notes Relating to Pepperl+Fuchs Product Information