

# Ultrasonic sensor UB800-F12-EP-V15

- Evaluation limits can be taught-in
- Selectable sound lobe width
- Synchronization options
- Very small unusable area
- Temperature compensation


## Single head system







### **Dimensions**

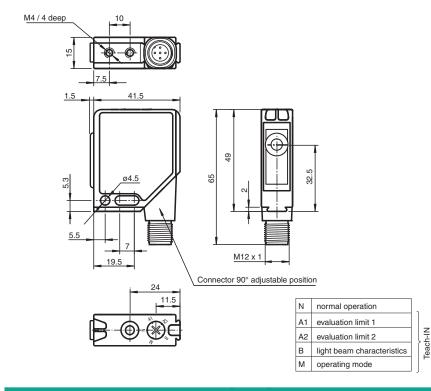


## **Technical Data**

Release date: 2020-05-23 Date of issue: 2021-02-05 Filename: 202066\_eng.pdf

General specifications				
Sensing range	30 800 mm			
Adjustment range	50 800 mm			
Dead band	0 30 mm			
Standard target plate	100 mm x 100 mm			
Transducer frequency	approx. 310 kHz			
Response delay	approx. 100 ms			
Indicators/operating means				
LED green	Operating display			
LED yellow	Evaluation range indicator, Ready for programming			

Technical Data			
LED red		Ready for programming, Fault	
Electrical specifications			
Operating voltage	U <sub>B</sub>	10 30 V DC	
No-load supply current	I <sub>0</sub>	≤ 30 mA	
Input/Output			
Synchronization		1 synchronous connection, bi-directional 0-level: $-U_B+1\ V$ 1-level: $+4\ V+U_B$ input impedance: $> 12\ k\Omega$ synchronization pulse: $\ge 100\ \mu s$ , synchronization interpulse period: $\ge 2\ ms$	
Synchronization frequency			
Common mode operation		max. 45 Hz	
Multiplex operation		≤ 45/n Hz, n = number of sensors	
Input			
Input type		1 program input Switching distance 2: +3 V +U_B Input impedance: > 10 k $\Omega$	
Pulse length		≥1\$	
Output			
Output type		Push-pull output, short-circuit protected, reverse polarity protected	
Rated operating current	l <sub>e</sub>	200 mA , short-circuit/overload protected	
Default setting		Switch point A1: 50 mm , Switch point A2: 800 mm , wide sound lobe	
Voltage drop	$U_{d}$	≤3 V	
Repeat accuracy		≤1 %	
Switching frequency	f	6 Hz	
Range hysteresis	Н	1 % of the set operating distance	
Temperature influence		± 1.5 % of full-scale value	
Compliance with standards and directives			
Standard conformity			
Standards		EN 60947-5-2:2007+A1:2012 IEC 60947-5-2:2007 + A1:2012	
Approvals and certificates			
UL approval		cULus Listed, General Purpose	
CSA approval		cCSAus Listed, General Purpose	
CCC approval		CCC approval / marking not required for products rated ≤36 V	
Ambient conditions			
Ambient temperature		-15 70 °C (5 158 °F)	
Storage temperature		-40 85 °C (-40 185 °F)	
Mechanical specifications			
Connection type		Connector M12 x 1 , 5-pin	
Degree of protection		IP54	
Material			
Housing		Frame: nickel plated, die cast zinc, Laterals: glass-fiber reinforced plastic PC	
Transducer		epoxy resin/hollow glass sphere mixture; foam polyurethane, cover PBT	
Mass		60 g	

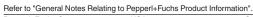

Ultrasonic sensor UB800-F12-EP-V15

### **Connection**

### Standard symbol/Connections:

(version EP, pnp/npn) 1 (BN) 2 (WH) TEACH U 5 (GY) Synchronous  $\Phi$ (BK) Switch output 3 (BU) - U<sub>B</sub>

Core colours in accordance with EN 60947-5-2.

## **Connection Assignment**




Wire colors in accordance with EN 60947-5-2

ΒN (brown) WH (white) 2 3 BU (blue) 4 BK (black) GY (gray)

## **Characteristic Curve**


### Characteristic response curve

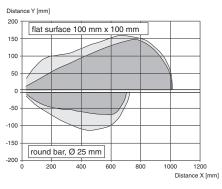



Ultrasonic sensor UB800-F12-EP-V15

## Programmable operation modes

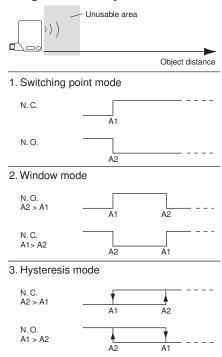

## Accessories

14	OMH-K01	dove tail mounting clamp
	OMH-K02	dove tail mounting clamp
~	OMH-K03	dove tail mounting clamp
67	OMH-01	Mounting aid for round steel ø 12 mm or sheet 1.5 mm 3 mm
	OMH-06	Mounting aid for round steel ø 12 mm or sheet 1.5 mm 3 mm
	OMH-MLV12-HWG	Mounting bracket for series MLV12 sensors
	OMH-MLV12-HWK	Mounting bracket for series MLV12 sensors
	V15-G-2M-PVC	Female cordset single-ended M12 straight A-coded, 5-pin, PVC cable grey

### **Additional Information**

### **Function description**

The sensor can be fully programmed by means of a push button and a selector switch on the top of the housing. A special feature of this sensor is the option of adapting the breadth of the ultrasonic beam to suit the ambient conditions at the point of use.

### Normal operation

During normal operation the output stage of the sensor operates in accordance with the taught-in evaluation limits, the programmed mode of operation and characteristic of the sonic beam. In this made the selector switch must remain at the N position.

LED	Condition	
Green LED	Continuous: Ready for operation	
Yellow LED	Object detected within the evaluation limits	

If the selector switch is not in the N position when the power supply is switched on, then this is indicated by simultaneous flashing of the green and yellow LEDs. However, the function of the output stage is as for the switch position N.

### Teaching in of the switching points:

Within a time window of 5 minutes after switch-on of the power supply the sensor is ready for adaptation of the switching points to the requirements of the respective application.

**Note:** For switching point mode, depending on the desired output behaviour (N. O. or N. C.), it is necessary to teach only one switching point, either A1 or A2. For the operating modes window mode and hysteresis mode, both A1 and A2 are required to be taught to the sensor.

- Place the object that is to be detected at the desired position.
- Set the selector switch to position A1 or A2.
- Now actuate the TEACH-IN button.

LED	before pressing but-	on pressing button	after pressing button
	ton		
Green	Off	Off	On
Yellow	Flashes: Positive	On	switching output state
	detection of object		
Red	Flashes: No object detected On: Object not positively detected	Off	Off

- The teach-in procedure for the evaluation range limit can be repeated by repeatedly actuating the TEACH-IN button.
- · Return the selector switch to position N.

**Note:** Acceptance of the switching point into the permanent memory of the sensor does not take place until the selector switch is reset to N. If this acceptance does not take place within a time window of 5 minutes, the sensor continues to operate with unchanged values and the red and yellow LEDs flash.


With the Output functions window mode and hysteresis mode, the teach in sequence of the switching points is arbitrary. With the output function switching point mode, the last taught point (A1 or A2) determins the output behaviour (N. O. or N. C.).

Alternatively, the switching points can be set electrically, via the teach-in input. In this case the selector switch is left in the N position. The two switching points are taught in by applying the potentials -U<sub>B</sub> (A1) and +U<sub>B</sub> (A2), respectively, for at least 500 ms to the teach-in input.

### Parameter assignment of the operating mode

Within a time window of 5 minutes from switching on the power supply the sensor is ready for adaptation of the output function.

- Set the selector switch to position M (Mode). The current set operating mode is indicated by the flashing sequence of the green LED
- The optional operating modes are selected by briefly actuating the TEACH-IN button (See flashing sequence of the green LED).

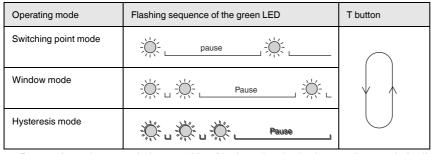

• Return the selector switch to position N when the desired operating mode is displayed.

**Note:** Acceptance of the operating mode into the permanent memory of the sensor does not take place until the selector switch is set to N. If this acceptance does not take place within a time window of 5 minutes, the sensor continues to operate with unchanged operating mode and the red and yellow LEDs flash.


### Parameter assignment of the ultrasonic beam breadth

Within a time window of 5 minutes from switching on the power supply the sensor is ready for adaptation of the ultrasonic beam breadth.

- Set the selector switch to position B (Beam). The flashing sequence of the green LED indicates the currently set ultrasonic beam breadth.
- The optional beam breadths are selected by brief actuation of the TEACH-IN button (See flashing sequence of the green LED).



### Ultrasonic sensor

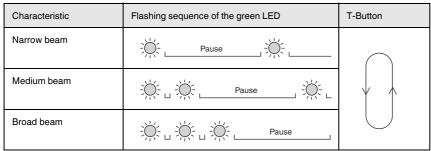

• Return the selector switch to position N when the desired beam breadth is indicated.
Note: Acceptance of the ultrasonic beam breadth into the permanent memory of the sensor does not take place until the selector switch is set to N. If this acceptance does not take place within the 5 minute time window, the sensor continues its operation with an unchanged ultrasonic beam breadth and the red and yellow LEDs flash.

### **Synchronisation**

A synchronisation connection is provided for the suppression of mutual interference. If this is unused, or connected to 0V, then the sensor operates with an internally generated clock-pulse rate. The synchronisation of a number of sensors can be achieved by the following means. *External synchronisation:* 

The sensor can be synchronised by the external application of a square-wave voltage. A synchronisation pulse at the synchronisation input leads to the execution of a measuring cycle. The pulse width must be greater than 1.2 ms. The measuring cycle starts with the falling ramp. A low level > 1 s or an open synchronisation input leads to the normal operation of the sensor. A high level at the synchronisation input deactivates the sensor.

Two operating modes are possible.

- A number of sensors are triggered by the same synchronisation signal. The sensors operate in common mode.
- The synchronisation pulses are fed cyclically to one sensor at a time. The sensors operate in multiplex mode.

The synchronisation connections of up to 5 sensors are connected together to provide the option of self-synchronisation. When the operating voltage is switched on these sensors operate in multiplex mode. The switch-in delay increases depending on the number of sensors to be synchronised. Synchronisation cannot take place during teach-in and vice-versa. The sensors must be operated unsynchronised for the teaching-in of the switch points.

#### Note:

If the synchronisation option is not used, then the synchronisation input is connected to earth (0V) or the sensor is operated with a V1 connection cable (4-pole).