


## Inductive positioning system

### PMI14V-F166-U-1M-V15

- Analog output 0 ... 10 V
- Measuring range 0 ... 14 mm
- Scaleable measurement range programmable via cable



## Dimensions

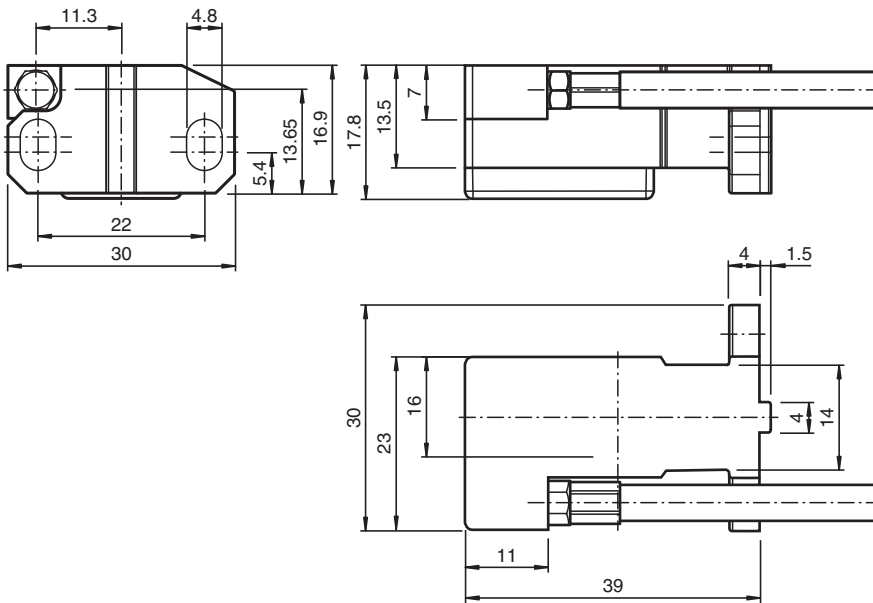

## Technical Data

### General specifications

Switching element function	Analog voltage output
Object distance	0.5 ... 2 mm
Measurement range	0 ... 14 mm

### Nominal ratings

Operating voltage	$U_B$	18 ... 30 V DC
Reverse polarity protection		reverse polarity protected
Linearity error		$\pm 0.3$ mm
Repeat accuracy	R	$\pm 0.05$ mm
Resolution		33 $\mu$ m

Release date: 2023-10-16 Date of issue: 2023-10-16 Filename: 263347\_eng.pdf

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group  
www.pepperl-fuchs.com

USA: +1 330 486 0001  
fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111  
fa-info@de.pepperl-fuchs.com


Singapore: +65 6779 9091  
fa-info@sg.pepperl-fuchs.com

 PEPPERL+FUCHS

**Technical Data**

Temperature drift		± 0.3 mm (With a target distance of 0.5 mm)
No-load supply current	$I_0$	≤ 20 mA
<b>Functional safety related parameters</b>		
MTTF <sub>d</sub>		830 a
Mission Time (T <sub>M</sub> )		20 a
Diagnostic Coverage (DC)		0 %
<b>Analog output</b>		
Output type		1 voltage output: 0 ... 10 V
Load resistor		≥ 1000 Ω
Short-circuit protection		current limit
<b>Compliance with standards and directives</b>		
Standard conformity		
Standards		EN 60947-5-2:2007 IEC 60947-5-2:2007 EN 60947-5-7:2003
<b>Ambient conditions</b>		
Ambient temperature		-10 ... 70 °C (14 ... 158 °F)
Storage temperature		-20 ... 70 °C (-4 ... 158 °F)
<b>Mechanical specifications</b>		
Degree of protection		IP65
Material		
Housing		Zinc diecast, nickel-plated cover , PBT
Target		mild steel, e. g. 1.0037, SR235JR (formerly St37-2)
Connector		
Threading		M12 x 1
Tightening torque		0.6 Nm
Number of pins		5
Cable		
Cable diameter		4.8 mm ± 0.2 mm
Bending radius		> 10 x cable diameter
Material		PUR , screened
Color		black
Number of cores		5
Core cross section		0.14 mm <sup>2</sup>
Length	L	1 m
Mass		76 g

**Connection**

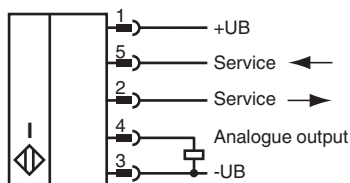

Release date: 2023-10-16 Date of issue: 2023-10-16 Filename: 263347\_eng.pdf

## Connection Assignment




Wire colors in accordance with EN 60947-5-2

1	BN	(brown)
2	WH	(white)
3	BU	(blue)
4	BK	(black)
5	GY	(gray)

## Additional Information

dimensions for the target object:

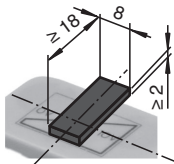

## Accessories

	<b>BT-F90-W</b>	Damping element for sensors of type F90, F112, and F166; side hole
	<b>BT-F90-G</b>	Damping element for sensors of type F90, F112, and F166; front hole
	<b>PMI14V-Teach</b>	Programming unit
	<b>MH V1-SCREWDRIVER</b>	Torque screwdriver (0.6 Nm)
	<b>MH V1-BIT M12</b>	plug-in cap M12

Release date: 2023-10-16 Date of issue: 2023-10-16 Filename: 263347\_eng.pdf

## Operation

### Information on Operation

#### Safety Information



Warnung

This product must not be used in applications in which the safety of persons depends on the function of the device. This product is not a safety component as specified in the EU Machinery Directive.

#### Actuator

The linear position measurement system is optimally aligned to the geometry of Pepperl+Fuchs actuators.

#### Using Your Own Actuators

Generally speaking, it is possible for you to use your own actuators. The specified measurement accuracy of the sensor will be achieved only if the actuator has the following properties:

- Material: construction steel such as S235JR+AR (previously St37)
- Dimensions (L x W x H):  $\geq 18 \text{ mm} \times 8 \text{ mm} \times \geq 2 \text{ mm}$
- The active surface of the actuator must protrude across the entire sensor width.

#### Note:

The width of the actuator must be precisely 8 mm. If the width of the actuator deviates from this value, the position values will differ.

## Programming

### Programming the 2 Scaling Positions

You can teach 2 scaling positions using the PMI14V-Teach programming unit. The programming unit is connected directly between the sensor and the power supply. The teach-in process is generally only possible in the first 6 minutes of the sensor being switched on. After that point, programming is blocked and is only possible again once the power supply has been interrupted.

The sensor linearizes the voltage path characteristic curve between the 2 taught scaling positions. The first scaling position is always taught as 0 V and the second scaling position as 10 V. If the measurement flag leaves the measuring range of the sensor, the sensor always emits 10 V. Each taught scaling position is based on half of the width (center) of the damping element. During the teach-in, the sensor always emits the default values: 0 V for 0 mm and 10 V for 14 mm.

#### Teach-in Process

##### Switching the Sensor to Programming Mode

1. Connect the programming unit between the sensor and the power supply.
  2. Press and hold the key on the programming unit for approx. 1.5 seconds.
- >> The LED S2 on the programming unit flashes (2 Hz).

##### Scaling Position 1

Prerequisite: LED S2 is flashing.

1. Position the damping element in the required first teach-in position.
2. Press the button again.

>> The sensor teaches in scaling position 1. If the teach-in process was successful, LED S2 lights up for approx. 2 seconds and flashes for teach-in of scaling position 2.

##### Scaling Position 2

Prerequisite: LED S2 is flashing.

1. Position the damping element in the required second teach-in position.
2. Press the button again.

>> The sensor teaches in scaling position 2. If the teach-in process was successful, LED S2 lights up for approx. 2 seconds. The sensor then returns to its normal operating state.

##### Reset to Default Settings

1. Press and hold the button for approx. 6.5 seconds.

>> The sensor is reset to its default settings. The programming unit confirms this by flashing quickly (8 Hz).

##### Faults during Teach-in

If a teach-in process fails for any reason, LED S2 flashes quickly (16 Hz) for approx. 1.5 seconds. The cause for this may be that the teach-in attempt was conducted outside the measuring range.

The teach-in process is canceled when the power supply is interrupted or if no button is pressed for 410 seconds.

In both cases, the existing positions remain saved.