

Laser diffuse mode sensor with background evaluation



Function


The R100 series miniature optical sensors are the first devices of their kind to offer an endto- end solution in a small single standard design from thru-beam sensor through to a distance measurement device. As a result of this design, the sensors are able to perform practically all standard automation tasks.

The entire series enables sensors to communicate via IO-Link. The DuraBeam laser sensors are durable and can be used in the same way as a standard sensor.

The use of Multi Pixel Technology gives the standard sensors a high level of flexibility and enables them to adapt more effectively to their operating environment.

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

Dimensions

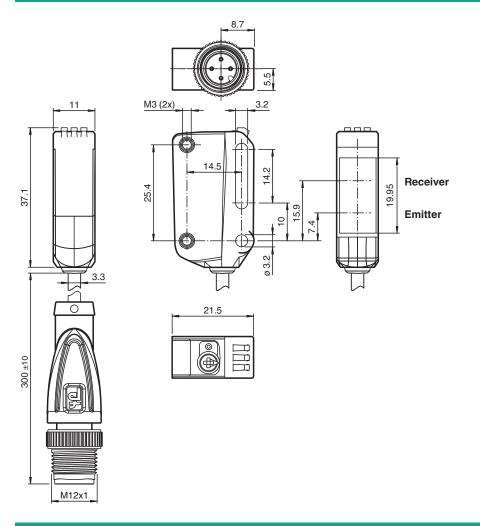

Technical Data

General specifications			
Detection range	7 300 mm		
Detection range min.	7 25 mm		
Detection range max.	7 300 mm		
Adjustment range	25 300 mm		
Reference target	standard white, 100 mm x 100 mm		
Light source	laser diode		
Light type	modulated visible red light		
Laser nominal ratings			
Note	LASER LIGHT , DO NOT STARE INTO BEAM		
Laser class	1		
Wave length	680 nm		
Beam divergence	> 5 mrad d63 < 1 mm in the range of 150 mm 250 mm		
Pulse length	3 µs		
Repetition rate	approx. 13 kHz		
max. pulse energy	10.4 nJ		
Black-white difference (6 %/90 %)	< 5 % at 150 mm		
Diameter of the light spot	approx. 1 mm at a distance of 200 mm		
Opening angle	approx. 0.3 °		
Ambient light limit	EN 60947-5-2 : 40000 Lux		
Functional safety related parameters			
MTTF _d	560 a		

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

Release date: 2025-01-17 Date of issue: 2025-01-17 Filename: 267075-0093_eng.pdf

Technical Data

Mission Time (T_M) 20 a Diagnostic Coverage (DC) 0 % Indicators/operating means Operation indicator LED green: constantly on - power on flashing (4Hz) - short circuit flashing with short break (1 Hz) - IO-Link mode Function indicator LED vellow: constantly on - background detected (object not detected) constantly off - object detected Control elements Light-on/dark-on changeover switch Control elements Sensing range adjuster Electrical specifications Operating voltage UB 10 ... 30 V DC Ripple max. 10 % No-load supply current < 20 mA at 24 V supply voltage I_0 Protection class Ш Interface IO-Link (via C/Q = pin 4) Interface type **IO-Link revision** 1.1 Device profile Smart Sensor Device ID 0x110702 (1115906) Transfer rate COM2 (38.4 kBit/s) Min. cycle time 2.3 ms Process data width Process data input 1 Bit Process data output 2 Bit SIO mode support yes Compatible master port type А Output The switching type of the sensor is adjustable. The default setting is: C/Q - Pin4: NPN normally open / dark-on, PNP normally closed / light-on, IO-Link /Q - Pin2: NPN normally closed / light-on, PNP normally open / dark-on Switching type Signal output 2 push-pull (4 in 1) outputs, short-circuit protected, reverse polarity protected, overvoltage protected Switching voltage max. 30 V DC max. 100 mA , resistive load Switching current Usage category DC-12 and DC-13 Voltage drop U_{d} ≤ 1.5 V DC f 1650 Hz Switching frequency Response time 300 µs Conformity Communication interface IEC 61131-9 Product standard EN 60947-5-2 Laser safety EN 60825-1:2014 Approvals and certificates E87056, cULus Listed, class 2 power supply, type rating 1 UL approval FDA approval IEC 60825-1:2014 Complies with 21 CFR 1040.10 and 1040.11 except for conformance with IEC 60825-1 Ed. 3 as described in Laser Notice 56, dated May 8, 2019. Ambient conditions -40 … 60 °C (-40 … 140 °F) , cable, fixed installation -25 … 60 °C (-13 … 140 °F) , movable cable not appropriate for conveyor chains Ambient temperature -40 ... 70 °C (-40 ... 158 °F) Storage temperature Mechanical specifications Degree of protection IP67 / IP69 / IP69K Connection 300 mm fixed cable with M12 x 1, 4-pin connector Material

Release date: 2025-01-17 Date of issue: 2025-01-17 Filename: 267075-0093_eng.pdf

Refer to "General Notes Relating to Pepperl+Fuchs Product Information


Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

3

Technical Data

Housing	PC (Polycarbonate)
Optical face	PMMA
Mass	approx. 17 g
Dimensions	
Height	37.1 mm
Width	11 mm
Depth	21.5 mm
Cable length	0.3 m

Connection Assignment

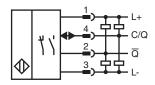


Connection Assignment



Wire colors in accordance with EN 60947-5-2

1	BN	(brown)
2	WH	(white)
3	BU	(blue)
4	BK	(black)

Assembly

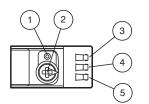


1	Light-on / dark-on changeover switch
2	Sensing range adjuster

- 3 Operating indicator / dark on
- 4 Signal indicator
- 5 Operating indicator / light on

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"


4

Characteristic Curve

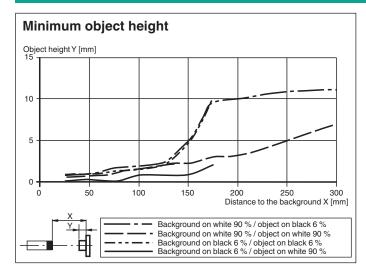

OBT300-R100-2EP-IO-1T-L-Y0093

Configuration

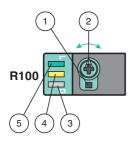

 Light-on / dark-on changeover switch
Sensing range / sensitivity

- adjuster
- 3 Operating indicator / dark on
- 4 Signal indicator
- 5 Operating indicator / light on

To unlock the adjustment functions turn the sensing range /sensitivity adjuster for more than 180 degrees.

Sensing Range / Sensitivity

Turn sensing range / sensitivity adjuster clockwise to increase sensing range / sensitivity.

Turn sensing range / sensitivity adjuster counter clockwise to decrease sensing range / sensitivity.

If the end of the adjustment range is reached, the signal indicator starts flashing with 8 Hz.

Light-on / Dark-on Configuration

Press the light-on / dark-on changeover switch for more than 1 second (less than 4 seconds). The light-on / dark-on mode changes and the operating indicators are activated accordingly.

If you press the light-on / dark-on changeover switch for more than 4 seconds, the light-on /dark-on mode changes back to the original setting. On release of the light-on / dark-on changeover switch the current state is activated.

Restore Factory Settings

Press the light-on / dark-on changeover switch for more than 10 seconds (less than 30 seconds) until all LEDs turn off. On release of the light-on / dark-on changeover switch the signal indicator turns on. After 5 seconds the sensor resumes operation with factory default settings.

After 5 minutes of inactivity the sensing range / sensitivity adjustment is locked. In order to reactivate the sensing range / sensitivity adjuster for more than 180 degrees.

Refer to "General Notes Relating to Pepperl+Fuchs Product Information