

## Diffuse mode sensor OBD1000-R101-2EP-IO-V31



- Miniature design with versatile mounting options
- Extended temperature range -40 °C ... 60 °C
- High degree of protection IP69K
- IO-Link interface for service and process data

Diffuse mode sensor


# 

## **Function**

The miniature optical sensors are the first devices of their kind to offer an end-to- end solution in a small single standard design — from thru-beam sensor through to a distance measurement device. As a result of this design, the sensors are able to perform practically all standard automation tasks.

The DuraBeam laser sensors are durable and can be used in the same way as a standard sensor. The use of Multi Pixel Technology gives the standard sensors a high level of flexibility and enables them to adapt more effectively to their operating environment.

## Dimensions

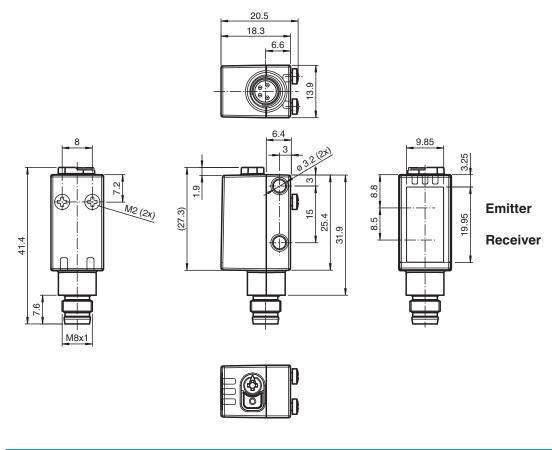

## **Technical Data**

Release date: 2023-10-23 Date of issue: 2023-10-23 Filename: 267075-0128\_eng.pdf

#### General specifications

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

Pepperl+Fuchs Group www.pepperl-fuchs.com USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



1

Technical Det

Technical Data		
Detection range		2 1000 mm
Detection range min.		20 50 mm
Adjustment range		50 1000 mm
Reference target		standard white, 100 mm x 100 mm
Light source		
Light type		modulated visible red light
LED risk group labelling		exempt group
Diameter of the light spot		approx. 65 mm at a distance of 1000 mm
÷.		3.7 °
Opening angle		5.7 EN 60947-5-2
Ambient light limit		EN 00947-3-2
Functional safety related parameters		704 -
MTTF <sub>d</sub>		724 a
Mission Time (T <sub>M</sub> )		20 a
Diagnostic Coverage (DC)		0 %
Indicators/operating means		
Operation indicator		LED green: constantly on - power on flashing (4Hz) - short circuit flashing with short break (1 Hz) - IO-Link mode
Function indicator		LED yellow: constantly on - object detected constantly off - object not detected
Control elements		Light-on/dark-on changeover switch
Control elements		Sensing range adjuster
Electrical specifications		
Operating voltage	UB	10 30 V DC
Ripple		max. 10 %
No-load supply current	I <sub>0</sub>	< 25 mA at 24 V supply voltage
Protection class		III
Interface		
Interface type		IO-Link ( via C/Q = pin 4 )
IO-Link revision		1.1
Device ID		0x110101 (1114369)
Transfer rate		COM2 (38.4 kBit/s)
Min. cycle time		2.3 ms
Process data width		Process data input 1 Bit Process data output 2 Bit
SIO mode support		yes
Compatible master port type		A
Output		
Switching type		The switching type of the sensor is adjustable. The default setting is: C/Q - Pin4: NPN normally open / light-on, PNP normally closed / dark-on, IO-Link /Q - Pin2: NPN normally closed / dark-on, PNP normally open / light-on
Signal output		2 push-pull (4 in 1) outputs, short-circuit protected, reverse polarity protected, overvoltage protected
Switching voltage		max. 30 V DC
Switching current		max. 100 mA , resistive load
Usage category		DC-12 and DC-13
Voltage drop	U <sub>d</sub>	≤ 1.5 V DC
Switching frequency	f	1000 Hz
Response time		0.5 ms
Conformity		
Communication interface		IEC 61131-9
Product standard		EN 60947-5-2
Approvals and certificates		
UL approval		E87056 , cULus Listed , class 2 power supply , type rating 1


Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

2

## **Technical Data**

-40 60 °C (-40 140 °F)					
-40 70 °C (-40 158 °F)					
Mechanical specifications					
13.9 mm					
41.4 mm					
18.3 mm					
IP67 / IP69 / IP69K					
M8 x 1 connector, 4-pin					
PC (Polycarbonate)					
PMMA					
approx. 10 g					

## Connection

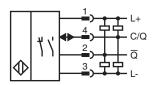

## **Connection Assignment**




#### Wire colors in accordance with EN 60947-5-2

1	BN	(brown)
2	WH	(white)
3	BU	(blue)
4	BK	(black)

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".




## Assembly

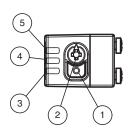


1	Light-on/dark-on changeover switch			
2	Sensitivity adjuster			
2	Onerating indicator / dark on			

- 3 Operating indicator / dark on4 Signal indicator
- 4 Signal indicator5 Operating indicator / light on

## **Characteristic Curve**

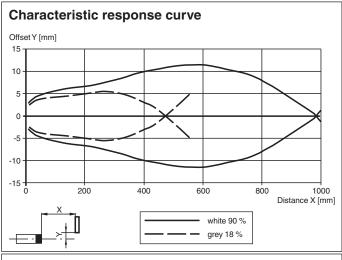


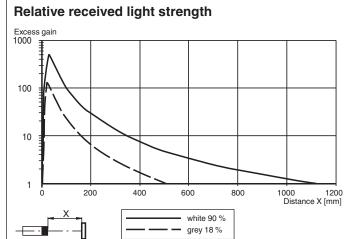

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"


4

## **Characteristic Curve**

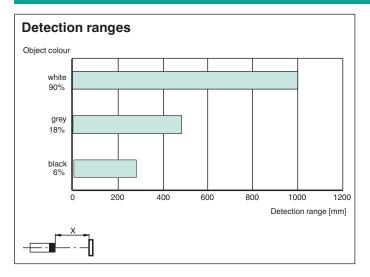

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

## Configuration

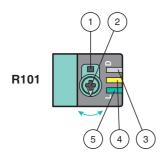

- 1 Light on / dark on changeover switch
- 2 Sensing range / sensitivity
- adjuster
- 3 Operating indicator / dark on
- 4 Signal indicator
- 5 Operating indicator / light on

To unlock the adjustment functions turn the sensing range adjuster for more than 180 degrees.

## Sensing Range / Sensitivity

Turn sensing range / sensitivity adjuster clockwise to increase sensing range / sensitivity.

Turn sensing range /sensitivity adjuster counterclockwise to decrease sensing range / sensitivity.

If the end of the adjustment range is reached, the signal indicator starts flashing with 8 Hz.

## Light on / Dark on Configuration

Press the light on / dark on changeover switch for more than 1 second (less than 4 seconds). The light on / dark on mode changes and the operating indicators are activated accordingly.

If you press the light on / dark on changeover switch for more than 4 seconds, the light on / dark on mode changes back to the original setting. On release of the light on / dark on changeover switch the current state is activated.

## **Restore Factory Settings**

Press the light on / dark on changeover switch for more than 10 seconds (less than 30 seconds) until all LEDs turn off. On release of the light on / dark on changeover switch the signal indicator turns on. After 5 seconds the sensor resumes operation with factory settings.

After 5 minutes of inactivity the sensing range / sensitivity adjustment is locked. In order to reactivate the sensing range / sensitivity adjuster for more than 180 degrees.