


# Ultrasonic sensor UB2000-30GM65-WS3-BHMS5

- AC switchpoint output
- 330° high visibility LEDs
- Fingertip range adjustability

Single head system



# **Dimensions**

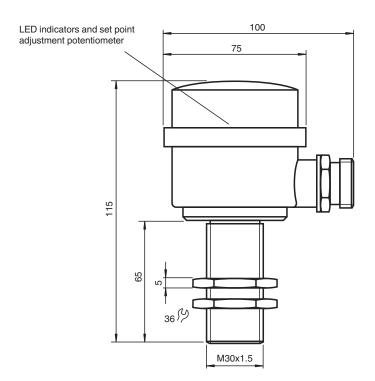


### **Technical Data**


General specifications		
Sensing range	200 2000 mm	
Dead band	0 200 mm	
Standard target plate	100 mm x 100 mm	
Transducer frequency	175 kHz	
Response delay	≤ 90 ms	
Indicators/operating means		
LED green	power	
LED red	Output	
Electrical specifications		

Technical Data		
Operating voltage	$U_B$	90 140 V AC
Power consumption	$P_0$	≤ 75 mA
Output		
Output type		Thyristor, 1 NO
Rated operating current	l <sub>e</sub>	700 mA
Voltage drop	$U_{d}$	≤ 1.5 V AC
Repeat accuracy		≤5 mm
Switching frequency	f	3.5 Hz
Range hysteresis	Н	approx. 15 mm
Temperature influence		< 2 % of far switch point
Compliance with standards and directives		
Standard conformity		
Standards		EN IEC 60947-5-2:2020 IEC 60947-5-2:2019
Approvals and certificates		
UL approval		cULus Listed, General Purpose
Ambient conditions		
Ambient temperature		-25 70 °C (-13 158 °F)
Storage temperature		-40 85 °C (-40 185 °F)
Mechanical specifications		
Connection type		5-pin, V95 connector
Housing diameter		30 mm
Degree of protection		IP65
Material		
Housing		nickel plated brass; plastic components: PBT
Transducer		epoxy resin/hollow glass sphere mixture; polyurethane foam


# Connection

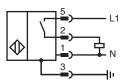

# **Connection Assignment**

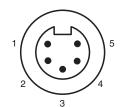

# Characteristic response curve

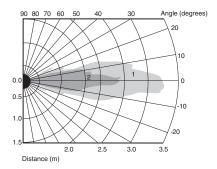

Curve 1: Flat surface 100 mm x 100 mm

#### Curve 2: Round bar, Ø 25 mm

### **Accessories**

0	UVW90-M30	Ultrasonic -deflector
	UVW90-K30	Ultrasonic -deflector
00	M30K-VE	Plastic nuts with centering ring for the vibration-free mounting of cylindrical sensors


## Configuration

#### Adjustment procedure

The UB2000 provides an N.O. switch point output between 200 mm (non-adjustable) and the potentiometer configured end point (200 - 2000 mm). The sensing window end limit is adjusted as follows:

# **Programming**

- 1. Place the target at the desired distance
- 2. Turn the sensing potentiometer (on the back of the unit) counterclockwise until the red output LED turns off.
- 3. Slowly turn the potentiometer clockwise. The sensing range is set when the red output LED turns on.

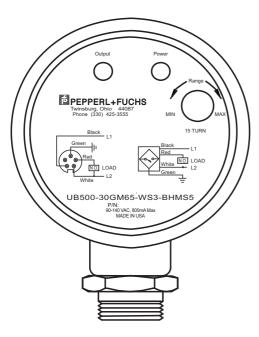

#### **Installation Conditions**

If the sensor is installed in an environment where the temperature can fall below 0 °C, one of these mounting flanges must be used for mounting: BF30, BF30-F, or BF 5-30.

If it is intended to operate the sensor at - 25 °C, we recommend discussing the mounting situation with a Pepperl + Fuchs application specialist to ensure a trouble-free operation.

If the sensor is mounted in a through hole using the included steel nuts, it must be mounted at the middle of the threaded housing. If it must be mounted at the front end of the threaded housing, plastic nuts with centering ring (optional accessories) must be used.