

Diffuse mode sensor OBD8000-R300-2PP-V1-L



- Extremely long detection range paves the way for new applications
- Pulse Ranging Technology (PRT)
- Visible light source for easy alignment
- Minimal black-white difference
- Switch point adjustment with quick twist
- Absolutely reliable background suppression

Diffuse mode sensor












Function


The sensors in the R300 series represent a versatile product line and adopt various functional principles. All sensors operate using proven Pulse Ranging Technology (PRT) and are characterized by high sensing ranges and detection ranges. Contained within the compact housing of the 28 series of light barriers, the R300 offers all of the properties of PRT such as maximum reliability when detecting objects and immunity against ambient light and cross-talk. To achieve this, the sensors in the R300 series make use of a number of different kinds of measurement data. What's more, the sensors are equipped with red light that is safe for the human eye as standard, making it easier to align the devices, even across expansive work areas. These features, combined with an innovative and intuitive operating concept, provide solutions for conventional automation tasks delivering the highest level of performance.

Dimensions



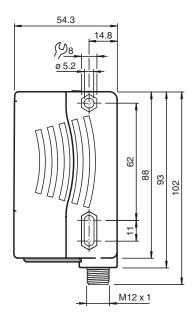





Technical Data

Genera	I specifications	
--------	------------------	--

Detection range	0.03 8 m
Adjustment range	0.05 8 m


Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

TS.
'S
TS .
S
S
ter power
d
d May 8,
,

Technical Data

Mass	90 g
Dimensions	
Height	88 mm
Width	25.8 mm
Depth	54.3 mm

Connection Assignment




Connection Assignment




Wire colors in accordance with EN 60947-5-2

1	BN	(brown)
2	WH	(white)
3	BU	(blue)
4	BK	(black)

Assembly





1	Operating indicator	green
2	Signal indicator	yellow
3	Sensing range adjuster	
4	Emitter	
5	Receiver	

Intended Use

Mounting instructions:

The sensor can be mounted directly by means of thru-holes or by using a fixing bracket or mounting clamp (not included in the scope of delivery).

Ensure that the surface is level in order to prevent the housing from becoming distorted when the fittings are tightened. It is advisable to secure the nuts and screws using spring disks to prevent the sensor from being misaligned.

Connection:

Connect the device as set out in the connection diagram.

Adjustment:

The green LED lights up when the operating voltage is applied.

Adjust the sensor so that the laser point is on the center of the target.

Installation Note

A pressure equalization membrane is fitted on the sensor nameplate.

When mounting, make sure that the pressure equalization membrane is not sealed off.

Operating Concept

Activating the operating function:

Activate the operating function by turning the sensing range adjuster by more than 180°.

If no operation takes place within five minutes, the operating function will be deactivated.

Sensing range adjustment:

To increase the sensing range, turn the sensing range adjuster in a clockwise direction.

To reduce the sensing range, turn the sensing range adjuster in a counterclockwise direction.

To jump directly to the switch point, use the Quick Twist function. This function can be activated by quickly turning the sensing range adjuster. If Quick Twist was successful, the yellow LED will change status.

To make subsequent fine adjustments to the sensing range, turn the sensing range adjuster slowly.

As soon as the scanning range limit has been reached, the green and yellow LEDs will quickly flash alternately (approx. 8 Hz).