



Model Number

SJ3,5-N-Y37090

Features

- Special version
- Calibration to B+R segment disc •
- 3. actual frequency

Technical Data	
General specifications	
Switching element function	
Slot width	
Depth of immersion (lateral)	
Installation	
Output polarity	
Nominal ratings	
Nominal voltage	Uo
Operating voltage	UB
Switching frequency	f
Current consumption	
Measuring plate not detected	
Measuring plate detected	
Standard conformity	
EMC in accordance with	
Standards	
Ambient conditions	
Ambient temperature	
Mechanical specifications	
Core cross-section	
Housing material	
Degree of protection	
Conoral information	

General information Use in the hazardous area Category

NAMUR, NC 3.5 mm 5 ... 7 typ. 6 mm NAMUR 8 V 5 ... 25 V 0 ... 3000 Hz ≥3 mA $\leq 1 \text{ mA}$


IEC / EN 60947-5-2:2004 DIN EN 60947-5-6 (NAMUR)


-25 ... 100 °C (-13 ... 212 °F)

0.14 mm² PBT/PPS IP67


see instruction manuals 2G

Dimensions

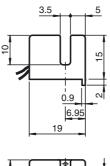

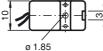

Electrical Connection

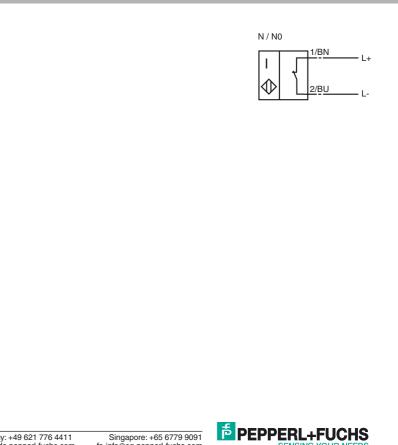

1

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

Pepperl+Fuchs Group www.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



ATEX 2G

Instruction

Device category 2G EC-Type Examination Certificate CE marking

ATEX marking

Directive conformity Standards

Appropriate type Effective internal capacitance C_i Effective internal inductance L_i General

Ambient temperature

Installation, Comissioning

Maintenance

Specific conditions

Manual electrical apparatus for hazardous areas

for use in hazardous areas with gas, vapour and mist PTB 99 ATEX 2219 X C 6 0102

⟨Ex⟩ II 2G EEx ia IIC T6

94/9/EG EN 50014:1997, EN 50020:1994 Ignition protection "Intrinsic safety" Use is restricted to the following stated conditions SJ3,5-...-N...

 \leq 50 nF ; a cable length of 10 m is considered.

 \leq 250 μ H ; a cable length of 10 m is considered.

The apparatus has to be operated according to the appropriate data in the data sheet and in this instruction manual. The EC-Type Examination Certificate has to be observed. The special conditions must be adhered to!

The temperature ranges, according to temperature class, are given in the EC-Type Examination Certificate.

Laws and/or regulations and standards governing the use or intended usage goal must be observed. The intrinsic safety is only assured in connection with an appropriate related apparatus and according to the proof of intrinsic safety.

No changes can be made to apparatus, which are operated in hazardous areas. Repairs to these apparatus are not possible.

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

