





Model Number

SC2-2 24VDC


Safety control unit

Safety control unit

Features

- Evaluation device for safety thrubeam sensors SL12 and SL29
- Test input (Type 2 according to IEC/EN 61496-1)
- Operating mode can be selected by means of DIP switches
- Start/Restart disable
- Relay monitor
- Pre-fault indication
- Safety outputs OSSD, external status displays OSSD

Dimensions

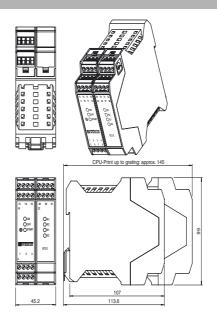

Technical data

General	specifications

deficial specifications		
Approvals	TÜV	
Tests	IEC/EN 61496	
Safety type according to IEC/EN 61496	2	
Marking	CE	
Operating mode	Start/restart disable, relay monitor,	
Functional safety related parameters		
Safety Integrity Level (SIL)	SIL 2	
Performance level (PL)	PL d	

Category

Mission Time (T _M)	20 a
PFH _d	1 E-7
ndicators/operating means	
Diagnostics display	2 LEDs red for error display

Function display LED red: OSSD OFF LED green: OSSD ON LED yellow: Start readiness LED yellow (2x): indicator lamp channel 1 ... 2

Pre-fault indication LED yellow flashing: Indicator lamp channel 1 ... 2 Controls DIP-switch

Cat. 2

Electrical specifications

24 V DC. -15 %/+20 % Operating voltage U_B No-load supply current 160 mA

Activation current approx. 10 mA Activation time 0.05 ... 1 s Test input Input for system test

Output

Safety output	2 relay outputs, force-guided NO-contact
Signal output	Output for displaying the switching state of the OSSDs
Switching voltage	20 230 V AC/DC
Switching current	AC: max. 3.5 A ; DC, max. 3.5 A (Limit switching power 60 W)
Resnanse time	30 ms

Ambient conditions

0 ... 50 °C (32 ... 122 °F) Ambient temperature -20 ... 70 °C (-4 ... 158 °F) Storage temperature

Mechanical specifications


Protection degree screw terminals , lead cross section 0.2 ... 2 mm² Connection

Material

Polyamide (PA) Housing Mass 230 g

www.pepperl-fuchs.com

Electrical connection

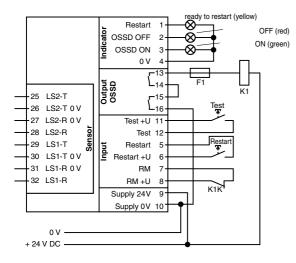

Connections of the OSSD module

Terminal/Assignment		Function
1 PNP output readiness		Option for connecting external indicator lamps to indicate restart (start)
	for startup message	or error message
2	PNP output OSSD reporting	Option for connecting external indicator lamps to indicate the OSSD state Off
	OFF	
3	PNP output OSSD reporting	Option for connecting external indicator lamps to indicate the OSSD state On
	ON	
4	0 V internal	Reference point for pnp outputs
5	Startup enable for input (RI)	Normally open contact for start/restart interlock.
		It should be wired in if no function is activated
6	24 V internal	
7	Relay monitor input (RM)	Relay monitor input.
8	24 V internal	It should be wired in if no function is activated (see section 3.2)
9	24 V DC	Supply voltage connection, protected from reverse polarity
10	0 V	
11	24 V internal	Normally open contact for testing or error enable
12	Test input	
13	OSSD1.1	OSSD relay output 1 NO (normally open)
14	OSSD1.2	
15	OSSD2.1	OSSD relay output 2 NO
16	OSSD2.2	


Connections for light barrier module


Ter	minal/Assignment	Function
25	LS2-T2	Transmitter 2 connection
26	LS2-T 0 V	
27	LS2-R 0 V	Receiver 2 connection
28	LS2-R	
29	LS1-T	Transmitter 1 connection
30	LS1-T 0 V	
31	LS1-R 0 V	Receiver 1 connection
32	LS1-R	

Operating modes

The operating modes of the SC2 can be adjusted using DIP switches. Two switches must be activated to set an operating mode. The DIP switches are located inside the housing of the light barrier module.

When the control unit is delivered, the relay monitor (RM) is turned off and start / restart interlock (RI) is turned on.

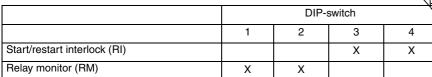

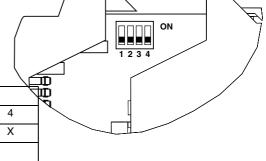


Indicator lamps

Displays for the switching state of the OSSD and status displays for indicating the operating status are located on the front plate of the two modules of the SC2-2.

Status displays

Display	LED	Meaning
OFF	Red	OSSD output turned off
ON	Green	OSSD output turned on
Start	Yellow	Continuous light: Protective field free, OSSD off, readiness for startup, activate restart button Flashing: System error (see Status E1, E2)
R1	Yellow	Status of light barrier 1 Off: Interrupted On: Light beam free Flashing: Light beam free, level below function reserve.
R2	Yellow	Status of light barrier 2 Off: Interrupted On: Light beam free Flashing: Light beam free, level below function reserve.

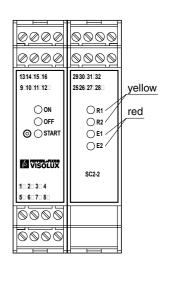

PEPPERL+FUCHS

Release date: 2009-12-14 11:08 Date of issue: 2011-02-17 111379_ENG.xml

w.pepperl-fuchs.com

System error displays

If an error is present, the yellow LED flashes, indicating readiness for startup. The red LEDs E1 and E2 display the error that has been determined.

E1	E2	Meaning
off	off	Internal error
on	off	DIP switch setting incorrect
off	on	Fault in ext. contactors (relay monitor)
on	on	Transmitter connection short circuit

USA: +1 330 486 0001