





CE c(UL)us VISCO ECOLAB 

### **Model Number**

## M71/MV71/59/76a/102/115/126b

Thru-beam sensor

with 2 m fixed cable

#### **Features**


- Reliable sensor for standard applicati-• ons
- Miniature design with front optical ٠ face
- Automatic adjustment of sensitivity • via TEACH-IN
- Resistant against noise: reliable ope-٠ ration under all conditions
- Certified by ECOLAB ٠


#### **Product information**

Small, robust, effective, and reliable - these are the properties of the ML7 sensor series. Due to their small size, number of versions, and two different lens positions, they are particularly suited for installation in tight spaces. The robust design and high quality of Pepperl+Fuchs mean they can also be used under harsh environmental conditions. The efficient technology, switching frequencies up to 1000 Hz, high resistance to ambient light, and 4-in-1 output make the series suitable for non-contact object detection.

5


Optical center

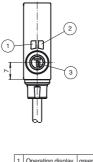

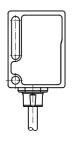

1 Operating display green 2 Signal display yellow 3 TEACH-IN button

### **Electrical connection**

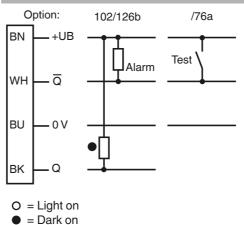



Pepperl+Fuchs Group

www.pepperl-fuchs.com

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" USA: +1 330 486 0001

fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



Technical data		
System components		M71/760/115
Emitter Receiver		M71/76a/115 MV71/59/102/115/126b
		102/113/1200
General specifications		0.05-
Effective detection range		0 3.5 m
Threshold detection range		4.5 m LED
Light source Light type		modulated visible red light
Target size		min. 7 mm
Diameter of the light spot		approx. 180 mm at a distance of 3.5 m
Angle of divergence		approx. 3 °
Ambient light limit		40000 Lux
unctional safety related param	eters	
MTTF <sub>d</sub>	cicio	1130 a
Mission Time (T <sub>M</sub> )		20 a
Diagnostic Coverage (DC)		60 %
ndicators/operating means		
Operating display		Receiver: LED green, flashes in case of short-circuit Emitter:
oporating display		LED green
Function display		Receiver: LED yellow, lights up when light beam is free, flashes
		when falling short of the stability control
Controls		Receiver: TEACH-IN key
lectrical specifications		
Operating voltage	UB	10 30 V DC , class 2
Ripple		max. 10 %
No-load supply current	I <sub>O</sub>	Emitter: ≤ 17 mA
		Receiver: ≤ 15 mA
nput		
Test input		emitter deactivation at +U <sub>B</sub>
Dutput		
Pre-fault indication output		1 NPN, inactive after failure to achieve the stability control mini- mum for approx. 5 s Immediately inactive if 4 beam interruptions occur within the flas hing period.
Switching type		dark on
Signal output		1 NPN output, short-circuit protected, reverse polarity protected, open collector
Switching voltage		max. 30 V DC
Switching current		max. 100 mA
Voltage drop	U <sub>d</sub>	$\leq$ 1.5 V DC
Switching frequency	f	1000 Hz
Response time		0.5 ms
mbient conditions		
Ambient temperature		-20 60 °C (-4 140 °F)
Storage temperature		-40 75 °C (-40 167 °F)
lechanical specifications		
Protection degree		IP67 / IP69K
Connection		2 m fixed cable
Material		
Housing		PC (glass-fiber-reinforced Makrolon)
Optical face		PMMA
Mass		approx. 100 g (emitter and receiver)
compliance with standards and es	directi	
Standard conformity		
Product standard		EN 60947-5-2:2007 IEC 60947-5-2:2007
Standards		EN 50178, UL 508
Approvals and certificates		
Approvals and certificates Protection class		II, rated voltage $\leq$ 250 V AC with pollution degree 1-2 according to IEC 60664-1

essories

H-ML7-01 nting bracket

H-ML7-02 nting bracket


H-ML7-03 ng plate


r suitable accessories can be found at .pepperl-fuchs.com

2



#### **Curves/Diagrams**

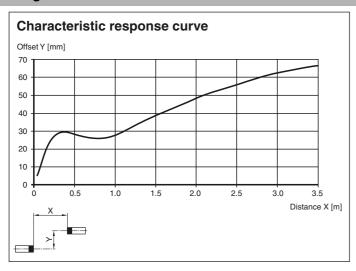

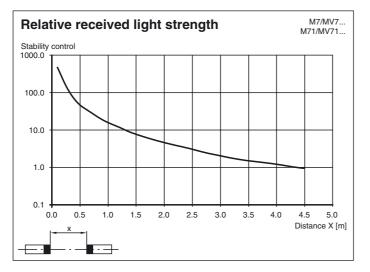

# Teach-In

Connect the sensors to operating voltage, the green LEDs green lights up constantly.

- The receiver operates at max. sensitivity (delivery status) or with the last teached values.
- · Mount transmitter and receiver opposite each other and align roughly.
- Adjust the transmitter to the receiver.
- Press the Teach-In button on the receiver as an acknowledgement the green LED will quickly turn off one time.
- Press the Teach-In button on the receiver until both LEDs green and yellow are blinking in parallel (2 Hz). Release the Teach-In button now.
  While the green and yellow LEDs are blinking alternating (2 Hz) on the receiver the unit is in the internal set up procedure.
- **Teach-In successful:** Both LEDs green and yellow on the receiver are on. The unit is ready to use and in switching mode now.
- Teach-In not successful: Both LEDs on the receiver are flashing alternating (4 Hz) for approx. 5 seconds. Afterwards the sensor returns to max. sensitivity setting. Please retry the Teach-In procedure beginning by step 1.

 Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

 Pepperl+Fuchs Group
 USA: +1 330 486 0001
 G

Pepperl+Fuchs Group USA: + www.pepperl-fuchs.com fa-info@us

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

