# Inductive sensor

# 5. No

CE


## **Model Number**

NBN3-F31-Z8-V1-3G-3D

## Features

- Direct mounting on standard actuators ٠
- Compact and stable housing •
- Fixed setting •
- Satisfies machinery directive

### Connection

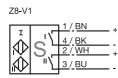

Accessories
V1-G
Non pre-wired cable socket
V1-W
Non pre-wired cable socket
V1-W-2M-PUR
Cable connector
V1-G-2M-PUR
Cable connector


Subject to modifications without notice Pepperl+Fuchs Group USA: +1 330 486 0001 www.pepperl-fuchs.com

fa-info@us.pepperl-fuchs.com

Germany: +49 621 776-4411 fa-info@pepperl-fuchs.com



### Dimensions

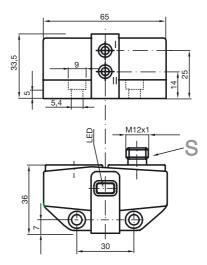

General specifications Switching element function Rated operating distance			
0		Binary NO	
hated operating distance	c	3 mm	
Installation	s <sub>n</sub>	flush mountable	
Output polarity		DC	
Assured operating distance	6	0 2.43 mm	
Reduction factor $r_{\Delta I}$	s <sub>a</sub>	0.5	
Reduction factor r <sub>Cu</sub>		0.4	
Reduction factor r <sub>V2A</sub>		1	
Reduction factor r <sub>St37</sub>		11	
0101		1.1	
Nominal ratings		0 00.1/	
Operating voltage	UB	6 60 V	
Switching frequency	f	0 500 Hz	
Hysteresis	Н	typ. 5 %	
Reverse polarity protection		tolerant	
Short-circuit protection		no	
Voltage drop	Ud	≤ 6 V	
Operating current	ΙL	4 100 mA	
Off-state current	۱ <sub>r</sub>	0 1 mA typ. 0.7 mA	
Indication of the switching state		LED, yellow	
imit data			
Tightening torque, fixing screws		0.4 Nm	
Ambient conditions			
Ambient temperature		-25 70 °C (248 343 K)	
Mechanical specifications			
Connection (system side)		connector M12 x 1, 4-pin	
Housing material		PBT	
Sensing face		PBT	
Protection degree		IP67	
General information			
Use in the hazardous area		see instruction manuals	
Category		3G; 3D	
Compliance with standards and	l directi		
Standard conformity			
Standards		EN 60947-5-2:2007	
		IEC 60947-5-2:2007	

# NBN3-F31-Z8-V1-3G-3D

ATEX 3G (nA)	
Instruction	Manual electrical apparatus for hazardous areas
Device category 3G (nA)	for use in hazardous areas with gas, vapour and mist
Directive conformity	94/9/EG
Standard conformity	EN 60079-0:2006, EN 60079-15:2005 Ignition protection category "n" Use is restricted to the following stated conditions
CE symbol	CE
Ex-identification	🐼 II 3G Ex nA IIC T6 X
General	The apparatus has to be operated according to the appropriate data in the data sheet and in this instruction manual. The data stated in the data sheet are restricted by this operating instruction! The special conditions must be observed!
Installation, Comissioning	Laws and/or regulations and standards governing the use or intended usage goal must be observed.
Maintenance	No changes can be made to apparatus, which are operated in hazardous areas. Repairs to these apparatus are not possible.
Special conditions	
Maximum operating current IL	The maximum permissible load current must be restricted to the values given in the following list. High load currents and load short-circuits are not permitted.
Maximum operating voltage UBmax	The maximum permissible operating voltage UB max is restricted to the values in the following list. Tolerances are not permissible. The power supply must not be provided in a manner, in which a voltage in excess of 60V arises between arbitrary connections.
Maximum permissible ambient temper	a-dependant of the load current I <sub>L</sub> and the max. operating voltage U <sub>Bmax.</sub>
ture T <sub>Umax</sub>	Information can be taken from the following list.
at U <sub>Bmax</sub> =60 V, I <sub>L</sub> =100 mA	46 °C
at U <sub>Bmax</sub> =60 V, I <sub>L</sub> =50 mA	55 °C
at U <sub>Bmax</sub> =60 V, I <sub>L</sub> =25 mA	59 °C
Plug connector	The plug connector must not be disconnected under voltage. The proximity switch is marked as follows: "DO NOT DIS- CONNECT UNDER VOLTAGE!" When the plug connector is disconnected the ingress of dirt into the inner areas (i.e. the areas, which are not accessible in the plugged-in condition) must be prevented.
Protection from mechanical danger	The sensor must not be exposed to ANY FORM of mechanical danger.
Protection from UV light	The sensor and the connection cable must be protected from damaging UV-radiation. This can be achieved when the sensor is used in internal areas.

ATEX 3D					
Note	This instruction is only valid for products according to EN 50281-1-1, valid until 30-September-2008 Note the ex-marking on the sensor or on the enclosed adhesive label				
Instruction	Manual electrical apparatus for hazardous areas				
Device category 3D	for use in hazardous areas with non-conducting combustible dust				
Directive conformity	94/9/EG				
Standard conformity	EN 50281-1-1 Protection via housing Use is restricted to the following stated conditions				
CE symbol	CE				
Ex-identification	(☑) II 3D IP67 T 93 °C X				
General	The apparatus has to be operated according to the appropriate data in the data sheet and in this instruction manual. The data stated in the data sheet are restricted by this operating instruction! The special conditions must be adhered				
Installation, Comissioning	Laws and/or regulations and standards governing the use or intended usage goal must be observed.				
Maintenance	No changes can be made to apparatus, which are operated in hazardous areas. Repairs to these apparatus are not possible.				
Special conditions					
Maximum operating current $I_L$	The maximum permissible load current must be restricted to the values given in the following list. High load currents and load short-circuits are not permitted.				
Maximum operating voltage UBmax	The maximum permissible operating voltage UBmax must be restricted to the values given in the following list. Tole ces are not permitted.				
Maximum heating (Temperature rise)	dependant of the load current I <sub>L</sub> and the max. operating voltage U <sub>Bmax.</sub> Information can be taken from the following list. The maximum surface temperature at maximum ambient temperatur is given in the Ex identification of the apparatus.				
at U <sub>Bmax</sub> =60 V, I <sub>L</sub> =100 mA	24 °C				
at U <sub>Bmax</sub> =60 V, I <sub>L</sub> =50 mA	15 °C				
at U <sub>Bmax</sub> =60 V, I <sub>L</sub> =25 mA	11 °C				
Plug connector	The plug connector must not be disconnected under voltage. The proximity switch is marked as follows: "DO NOT DI CONNECT UNDER VOLTAGE!" When the plug connector is disconnected the ingress of dirt into the inner areas (i.e. the areas, which are not accessible in the plugged-in condition) must be prevented. The plug connection can only be separated using a tool. This is achieved by using the locking protection V1-Clip (Mou ting accessory from Pepperl + Fuchs).				
Protection from mechanical danger	The sensor must not be mechanically damaged.				

 Subject to modifications without notice

 Pepperl+Fuchs Group
 US

 www.pepperl-fuchs.com
 fa-info



ATEX 3D (tD)	
Note	This instruction is only valid for products according to EN 61241-0:2006 and EN 61241-1:2004 Note the ex-marking on the sensor or on the enclosed adhesive label
Instruction	Manual electrical apparatus for hazardous areas
Device category 3D	for use in hazardous areas with combustible dust
Directive conformity	94/9/EG
Standard conformity	EN 61241-0:2006, EN 61241-1:2004 Protection via housing "tD" Use is restricted to the following stated conditions
CE symbol	
Ex-identification	€ II 3D Ex tD A22 IP67 T80°C X
General	The apparatus has to be operated according to the appropriate data in the data sheet and in this instruction manual. The maximum surface temperature has been determined in accordance with method A without a dust layer on the equipment. The data stated in the data sheet are restricted by this operating instruction!
	The special conditions must be adhered to!
Installation, Comissioning	Laws and/or regulations and standards governing the use or intended usage goal must be observed.
Maintenance	No changes can be made to apparatus, which are operated in hazardous areas. Repairs to these apparatus are not possible.
Special conditions	
Maximum operating current $I_L$	The maximum permissible load current must be restricted to the values given in the following list. High load currents and load short-circuits are not permitted.
Maximum operating voltage UBmax	The maximum permissible operating voltage UBmax must be restricted to the values given in the following list. Toleran- ces are not permitted.
Maximum permissible ambient temper ture	a-dependant of the load current I <sub>L</sub> and the max. operating voltage U <sub>Bmax.</sub> Information can be taken from the following list.
at U <sub>Bmax</sub> =60 V, I <sub>L</sub> =100 mA	47 °C
at U <sub>Bmax</sub> =60 V, I <sub>L</sub> =50 mA	55 ℃
at U <sub>Bmax</sub> =60 V, I <sub>L</sub> =25 mA	59 ℃
Plug connector	The plug connector must not be withdrawn under voltage. The proximity switch is identified as follows: "WARNING - DO NOT SEPARATE WHEN ENERGIZED". With the plug connector disconnected, soiling of the internal area must be prevented. (i.e. the area that is inaccessible when the connector is inserted) The plug connection can only be separated using a tool. This is achieved by using the locking protection V1-Clip (Mounting accessory from Pepperl + Fuchs).
Protection from mechanical danger	The sensor must not be exposed to ANY FORM of mechanical danger.
Protection from UV light	The sensor and the connection cable must be protected from damaging UV-radiation. This can be achieved when the sensor is used in internal areas.

Germany: +49 621 776-4411 fa-info@pepperl-fuchs.com Copyright Pepperl+Fuchs Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

