

# **Model Number**


NCB2-V3-N0-Y191903

### **Features**


- **Comfort series** •
- 2 mm flush

Technical Data		
General specifications		
Switching element function		NAMUR, NC
Rated operating distance	Sn	2 mm
Installation		flush
Output polarity		NAMUR
Assured operating distance	sa	0 1.62 mm
Reduction factor r <sub>Al</sub>		0.3
Reduction factor r <sub>Cu</sub>		0.2
Reduction factor r <sub>304</sub>		0.7
Nominal ratings		
Nominal voltage	Uo	8 V
Switching frequency	f	0 2000 Hz
Hysteresis	Н	typ. 5 %
Current consumption		
Measuring plate not detected		≥ 3 mA
Measuring plate detected		≤1mA
Switching state indicator		LED, yellow
Ambient conditions		
Ambient temperature		-25 100 °C (-13 212 °F)
Mechanical specifications		
Connection type		cable PVC , 60 mm
Core cross-section		0.14 mm <sup>2</sup>
Housing material		PBT
Sensing face		PBT
Degree of protection		IP67
Cable		10 search la sl'assactan
Bending radius		> 10 x cable diameter
General information		
Use in the hazardous area		see instruction manuals
Category		1G; 2G; 1D
Compliance with standards and di	rectives	3
Standard conformity		
NAMUR		EN 60947-5-6:2000
		IEC 60947-5-6:1999
Electromagnetic compatibility		NE 21:2007
Standards		EN 60947-5-2:2007
		IEC 60947-5-2:2007
Approvals and certificates		
FM approval		
Control drawing		116-0165F
UL approval		cULus Listed, General Purpose
CSA approval		cCSAus Listed, General Purpose
		· · · ·

#### Dimensions

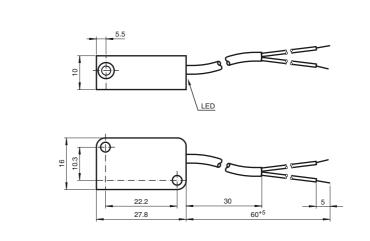

## **Electrical Connection**

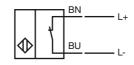

Pepperl+Fuchs Group www.pepperl-fuchs.com

Release date: 2016-02-09 08:17 Date of issue: 2016-02-09 191903\_eng.xml

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



1

ATEX 1G	
Instruction	Manual electrical apparatus for hazardous areas
Device category 1G	
FO Tara Examination Ordificate	for use in hazardous areas with gas, vapour and mist
EC-Type Examination Certificate	PTB 00 ATEX 2032 X <b>C €</b> 0102
CE marking	
ATEX marking	€ II 1G Ex ia IIC T6 Ga
Directive conformity	94/9/EG
Standards	EN 60079-0:2009, EN 60079-11:2007, EN 60079-26:2007 Ignition protection "Intrinsic safety" Use is restricted to the following stated conditions
Appropriate type	NCB2-V3-N0
Effective internal capacitance Ci	≤ 100 nF
Effective internal inductance Li	≤ 100 μH
General	The apparatus has to be operated according to the appropriate data in the data sheet and in this instruction manual. The EC-Type Examination Certificate has to be observed. The special conditions must be adhered to!
	Directive 94/9/EG and hence also EC-Type Examination Certificates apply in general only to the use of electrical apparatus under atmospheric conditions. The use in ambient temperatures of > 60 °C was tested with regard to hot surfaces by the mentioned certification authority. If the equipment is not used under atmospheric conditions, a reduction of the permis- sible minimum ignition energies may have to be taken into consideration.
Ambient temperature	The temperature ranges, according to temperature class, are given in the EC-Type Examination Certificate. Note: Use the temperature table for category 1 !!! The 20 % reduction in accordance with EN 1127-1:2007 has already been accounted for in the temperature table for category 1.
Installation, commissioning	Laws and/or regulations and standards governing the use or intended usage goal must be observed. The intrinsic safety is only assured in connection with an appropriate related appara- tus and according to the proof of intrinsic safety. The associated apparatus must satisfy the requirements of category ia. Due to the possible danger of ignition, which can arise due to faults and/or transient currents in the equipotential bonding system, galvanic isolation of the power supply and signal circuit is preferable. Associated apparatus without electrical isolation must only be used if the appropriate requirements of IEC 60079-14 are met.
Maintenance	No changes can be made to apparatus, which are operated in hazardous areas. Repairs to these apparatus are not possible.
Special conditions	
Protection from mechanical danger	When used in the temperature range below -20 °C the sensor should be protected from knocks by the provision of an additional housing.
Electrostatic charge	When used in group IIC non-permissible electrostatic charges should be avoided on the plastic housing parts.

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



## Inductive sensor

#### ATEX 2G

Instruction

#### Device category 2G EC-Type Examination Certificate CE marking

ATEX marking Directive conformity Standards

# Appropriate type Effective internal capacitance $C_i$ Effective internal inductance $L_i$ General

Ambient temperature

Installation, commissioning

Maintenance

#### Special conditions

Protection from mechanical danger

#### Manual electrical apparatus for hazardous areas

for use in hazardous areas with gas, vapour and mist PTB 00 ATEX 2032 X C 0102

II 1G Ex ia IIC T6 Ga
94/9/EG
EN 60079-0:2009, EN 60079-11:2007
Ignition protection "Intrinsic safety"
Use is restricted to the following stated conditions

NCB2-V3-N0... ≤ 100 nF

 $\leq 100 \; \mu H$ 

The apparatus has to be operated according to the appropriate data in the data sheet and in this instruction manual. The EC-Type Examination Certificate has to be observed. The special conditions must be adhered to! Directive 94/9/EG and hence also EC-Type Examination Certificates apply in general only to the use of electrical apparatus under atmospheric conditions. The use in ambient temperatures of > 60 °C was tested with regard to hot surfaces

by the mentioned certification authority. If the equipment is not used under atmospheric conditions, a reduction of the permissible minimum ignition energies may have to be taken into consideration.

The temperature ranges, according to temperature class, are given in the EC-Type Examination Certificate.

Laws and/or regulations and standards governing the use or intended usage goal must be observed. The intrinsic safety is only assured in connection with an appropriate related apparatus and according to the proof of intrinsic safety.

No changes can be made to apparatus, which are operated in hazardous areas. Repairs to these apparatus are not possible.

When used in the temperature range below -20  $^{\circ}\text{C}$  the sensor should be protected from knocks by the provision of an additional housing.



ATEX 1D	
Instruction	Manual electrical apparatus for hazardous areas
Device category 1D	for use in hazardous areas with combustible dust
EC-Type Examination Certificate	ZELM 03 ATEX 0128 X
CE marking	€ € 0102
ATEX marking	(☑) II 1D Ex iaD 20 T 108 °C (226.4 °F)
Directive conformity	94/9/EG
Standards	IEC 61241-11:2002: draft; prEN61241-0:2002 type of protection intrinsic safety "iD" Use is restricted to the following stated conditions
Appropriate type	NCB2-V3-N0
Effective internal capacitance C <sub>i</sub>	≤ 100 nF
Effective internal inductance Li	≤ 100 μH
General	The apparatus has to be operated according to the appropriate data in the data sheet and in this instruction manual. The EC-Type Examination Certificate has to be observed. The special conditions must be adhered to!
Maximum housing surface temperature	The maximum surface temperature of the housing is given in the EC-Type Examina- tion Certificate.
Installation, commissioning	Laws and/or regulations and standards governing the use or intended usage goal must be observed. The intrinsic safety is only assured in connection with an appropriate related appara- tus and according to the proof of intrinsic safety. The associated apparatus must satisfy at least the requirements of category ia IIB or iaD. Because of the possibility of the danger of ignition, which can arise due to faults and/or transient currents in the equipotential bonding system, galvanic isolation in the power supply and signal circuits is preferable. Associated apparatus without electrical isolation must only be used if the appropriate requirements of IEC 60079- 14 are met. The intrinsically safe circuit has to be protected against influences due to lightning.

When used in the isolating wall between Zone 20 and Zone 21 or Zone 21 und Zone 22 the sensor must not be exposed to any mechanical danger and must be sealed in such a way, that the protective function of the isolating wall is not impaired. The applicable directives and standards must be observed.

No changes can be made to apparatus, which are operated in hazardous areas. Repairs to these apparatus are not possible.

The connection cables are to be laid in accordance with EN 50281-1-2 and must not normally be subjected to chaffing during use.

Maintenance

Special conditions Electrostatic charge

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

