



Model Number

SB4 Module 4CG/165

Safety control unit module
Module for Evaluation unit SafeBox - series SB4

Features

- Sensor module
- 4 sensor channels
- Single module for safety thru-beam sensors SLA12 and SLA29 and for 2 channel safety devices (emergency off)
- Micro-Controller controls
- Operating mode can be selected by means of DIP switches
- Connection of a number of separate de-energizing circuits
- Screw terminals or spring terminals

Accessories

SB4 Cape
cover sheet

SB4 Housing 2
Empty housing for Evaluation unit SB4

SB4 Housing 3
Empty housing for Evaluation unit SB4



SB4 Housing 4
Empty housing for Evaluation unit SB4

SB4 Housing 5
Empty housing for Evaluation unit SB4


SB4 Housing 6
Empty housing for Evaluation unit SB4

SB4 Housing 8
Empty housing for Evaluation unit SB4


Dimensions

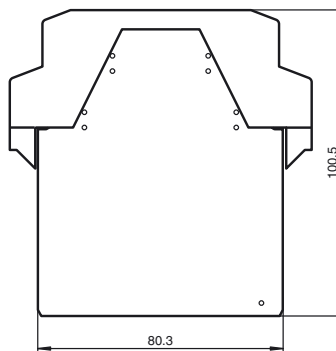

Electrical connection



Terminal	Function	Channel assignment
1	Receiver 2 input	Input
2	Receiver 2 +U	Channel 2
3	Transmitter 2 +U	Output
4	Transmitter 2 output	Channel 2
5	Receiver 1 input	Input
6	Receiver 1 +U	Channel 1
7	Transmitter 1 +U	Output
8	Transmitter 1 output	Channel 1
9	Transmitter 3 output	Output
10	Transmitter 3 +U	Channel 3
11	Receiver 3 +U	Input
12	Receiver 3 input	Channel 3
13	Transmitter 4 output	Output
14	Transmitter 4 +U	Channel 4
15	Receiver 4 +U	Input
16	Receiver 4 input	Channel 4

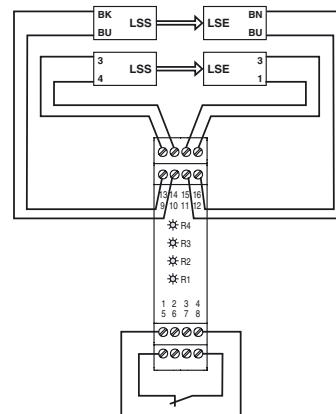

Connection example
(LSS = transmitter of light barrier; LSE = receiver of light barrier)

Technical data

General specifications

Operating mode simultaneousness, antivalence

Functional safety related parameters

Safety Integrity Level (SIL)	SIL 3
Performance level (PL)	PL e
Category	Cat. 4
Mission Time (T _M)	20 a
Type	4

Indicators/operating means

Function indicator	LED yellow (4x): indicator lamp channel 1 ... 4
Pre-fault indicator	LED yellow flashing: Indicator lamp channel 1 ... 4
Control elements	DIP-switch

Electrical specifications

Operating voltage U_B 24 V DC ± 20 % , via SB4 Housing

Input

Activation current approx. 7 mA

Conformity

Functional safety	ISO 13849-1 ; EN 61508 part1-4
Product standard	EN 61496-1

Ambient conditions

Ambient temperature	0 ... 50 °C (32 ... 122 °F)
Storage temperature	-20 ... 70 °C (-4 ... 158 °F)

Mechanical specifications

Degree of protection	IP20
Connection	Cage tension spring terminals , Cable cross-section 0.2 ... 1.5 mm ²
Material	

Release date: 2018-04-23 12:33 Date of issue: 2018-04-23 206758_eng.xml

Housing	Polyamide (PA)
Mass	approx. 150 g
Approvals and certificates	
CE conformity	CE
UL approval	cULus
TÜV approval	TÜV

The operation of this module is only possible within an interface device Type SB4 SafeBox.

The operating instruction for the SafeBox must be followed.

Function

The 4-channel sensor card module SB4-4CG facilitates the connection of light barriers or light grids and safety sensors with contacts in a single or two-channel version. It also contains the microcontroller control system for the SafeBox. Only one of these modules is contained in a SafeBox SB4 and it must be plugged-in at position 2.

There is a plug-in jumper on the module. If the system contains additional assemblies, then this plug-in jumper must be plugged-in to the last plug-in position.

This module enables a number of separate trip circuits to be installed in one SafeBox.

On switching on the system the software determines whether a light barrier or a safety sensor with contacts is connected on a channel and then monitors its presence during operation.

Safety sensors with contacts, which are connected to the SafeBox, must operate in accordance with the normally-closed principle. An open contact signifies a "Safe condition".


Channels 1 and 2 and 3 and 4 can be monitored for concurrence and antivalence. During activated concurrence monitoring 2-channel safety devices are monitored for simultaneous opening and changeover of the signals. The monitoring is carried out over a period of 2 s.

Antivalence monitoring awaits the normally-closed contact on channel 1 or channel 3 and the normally-open contact on channel 2 or 4. If the antivalence monitoring is operated without concurrence monitoring, then an incorrect contact setting leads to switch off and error signal 7 after approx. 60 s.

Operating modes

The assembly comprises 4 DIP switches for selecting the concurrence of neighbouring channels (1 and 2, 3 and 4) and antivalence evaluation of neighbouring channels (1 and 2, 3 and 4). Function selection always involves the actuation of 2 switches. The functions are not effective with light barriers connected.

Position of the DIP switches

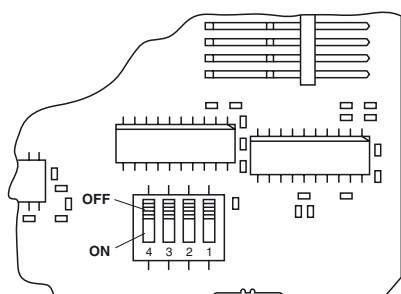

Switch	Position	Operating mode
1 and 3	OFF	No antivalent evaluation
	ON	Antivalent evaluation active
2 and 4	OFF	No concurrence evaluation
	ON	Concurrence evaluation active

Indicators

A yellow LED is provided for each channel on the front panel of the module.

Indicator	LED	Meaning
R1 - R4	Yellow	Status light barrier 1 ... 4 Off: Broken On: Light beam free Flashing: Light beam free, stability control inadequate (Frequency approx. 2.5 Hz) Fast flashing: Fault (Frequency approx. 5 Hz)

Release date: 2018-04-23 12:33 Date of issue: 2018-04-23 206758_eng.xml

Release date: 2018-04-23 12:33 Date of issue: 2018-04-23 206758_eng.xml

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group
www.pepperl-fuchs.com

USA: +1 330 486 0001
fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411
fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091
fa-info@sg.pepperl-fuchs.com