### **Technical data** General specifications 800 ... 10000 mm Sensing range Adjustment range 800 ... 10000 mm Dead band 0 ... 800 mm Standard target plate 100 mm x 100 mm approx. 60 kHz Transducer frequency Nominal ratings Time delay before availability tv 280 ms Limit data Permissible cable length max, 300 m Indicators/operating means LED yellow solid: switching state switch output flashing: misadjustment **Electrical specifications** Rated operating voltage Ue 24 V DC CE Operating voltage UB 15 ... 30 V (including ripple) In supply voltage interval 15 ... 20 V sensitivity reduced to 20% ... 0% ≤ 10 % Ripple No-load supply current I0 < 75 mA Input/Output Model Number Input/output type 1 synchronization connection, bidirectional 0 Level ≤ 3 V UC10000-F260-IE8R2-Y235155 1 Level 15 ... 30 V typ. 0.9 kΩ Input impedance Single head system Number of sensors max. 10 Switching output Features Output type 2 switch outputs PNP, NO Repeat accuracy R ± 15 mm Large sensing range Operating current IL 300 mA, short-circuit/overload protected **Adjustable Bracket** Voltage drop ≤ 3 V Switch-on delay 800 ms Programmable by means of Inter-Analog output face (see accessories) and SON-PROG Output type 1 current output 0 ... 20 mA rising ramp Default setting 800 ... 10000 mm Linearity error ≤ 1.5 % 1 analog output, 0-20 mA current Load resistor ≤ **300** Ω source Ambient conditions 2 switch outputs -25 ... 70 °C (-13 ... 158 °F) Ambient temperature Storage temperature -40 ... 85 °C (-40 ... 185 °F) Synchronization options Shock resistance 30 g , 11 ms period Vibration resistance 10 ... 55 Hz , Amplitude $\pm$ 1 mm **Temperature compensation** Mechanical specifications Connection type screw terminals, PG 13.5 cable gland Description Degree of protection IP65 Material This ultrasonic sensor is a contactless distance sensor Housing UP 1225 SF/R8 based on the echo run time principle. It is suitable for Transducer epoxy resin/hollow glass sphere mixture; polyurethane foam the detection of solid, liquid or powder sound-reflecting Installation position any position objects. The unique sensor design allows easy move-Mass 1800 g ment of the direction of sound radiation in all spatial di-Compliance with standards and directives rections by up to 10° without additional an additional Standard conformity assembly device. Standards EN 60947-5-2:2007 + A1:2012 IEC 60947-5-2:2007 + A1:2012 EN 60947-5-7:2003 Diagrams IEC 60947-5-7:2003 Characteristic response curve Approvals and certificates UL approval cULus Listed, General Purpose

٠

•

1800 1600 1400 1200 1000 800 600 400 200 0 -200 -400 -600 -800 1 1000 1200 -1400 -1600 -1800 2000 4000 6000 8000 10000 12000 14000 16000 Distance X [mm] х Curve 1: flat surface 100 mm x 100 mm Curve 2: round bar, Ø 25 mm

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" USA: +1 330 486 0001

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com





www.pepperl-fuchs.com fa-info@us.pepperl-fuchs.com

Pepperl+Fuchs Group

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

CSA approval

cCSAus Listed, General Purpose

UC10000-F260-IE8R2-Y235155

112

Ш


### Dimensions

A


# 160 ø 8.5 97.6 09 Ġ $\bigcirc$

### **Additional Information**

### Area definitions

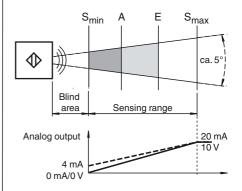

### **Electrical Connection**

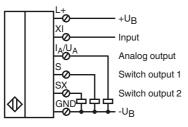

### Accessories

DA5-IU-C Digital display unit

### 3RX4000-PF PC interface

V15S-M16-500 Receptacles, M12/M16, 5-pin

### V15S-G-2M-PVC

Cable connector, M12, 5-pin, PVC cable

## Danger!

This product must not be used in applications in which the safety of persons depends on the device function.

This product is not a safety component in accordance with the EU Machinery Directive.


### Assembly and connection

When installing the sensor, make sure that the space filled by the sound cone is free from interfering objects. Objects in the blind zone cause cause false signals. Implement suitable measures to ensure that objects cannot enter the blind zone.

The electrical connection is made via screw terminals. The connections are protected against reverse polarity, short circuits and overloads. Shielded cables are recommended if there is electrical interference.

### Setting

The detection range limits  $S_{min} \mbox{ and } S_{max} \mbox{ are fixed (see Technical data).}$ Within these limits, the switch points A and E are set using a potentiometer. Switch point A must be smaller than switch point E. If this is not the case, the LED flashes and correct switching is not possible.

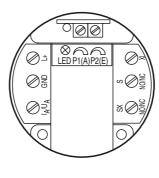

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" Pepperl+Fuchs Group www.pepperl-fuchs.com USA: +1 330 486 0001

fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



### Parameterisation via SONPROG

The following parameters can be changed via the SONPROG parameterisation software:

- Measuring range limits S<sub>min</sub> and S<sub>max</sub>
- Switch-on and switch-off points E and A
- Blind zone
- Averaging
- Analogue limits
- Analogue characteristic, rising/falling

### Operation

Within the detection range, which is restricted by the detection range limits  $S_{min}$  and  $S_{max}$ , the object distance is detected. Objects with an even, smooth surface can have a maximum inclination of 3° to the direction of sound propagation. With rough, uneven surfaces the angular deviation can be bigger. The actual value depends significantly on the object finish and should be obtained experimentally if necessary.

### Behaviour of the switch outputs:

- If the object is at a distance > E, both switch outputs are in standby mode.
- If the object is between E and A, switch output S is activated and switch output SX is in standby mode.
- If the object is at a distance < A, switch output SX is activated and switch output S is in standby mode.

### Behaviour of the analogue output:

The object distance between the detection range limits ( $S_{min}$ ,  $S_{max}$ ) are displayed in the form of an analogue output signal at the analogue output. The analogue output delivers its minimum value at distance  $S_{min}$  and its maximum value at distance  $S_{max}$ . The characteristic between the two measuring range limits is linear. Outside of  $S_{max}$  the analogue output retains its maximum value.

### Display:

The sensor has an LED. It lights up continuously when the output terminal S is carrying a voltage. It flashes when switch points A and E are set incorrectly (see Setting). Function input XI

The sensor is placed in standby mode by connecting a low level at the function input XI (blocked release). The sensors then performs no measurements. The switch outputs retain the most recent status. As soon as function input XI is disconnected from the low level or a high level is connected (release), the sensor resumes its normal function after the release period has expired.

The function input XI can be used during operation for the synchronisation of multiple sensors in the event of mutual interefence. The following synchronisation modes are possible:


- Triggering of each individual sensor with a separate control signal, e.g. by a PLC (external synchronisation).
- Connection of the function inputs XI of all sensors and joint triggering with an external control signal, e.g. by a PLC (external synchronisation, common-mode operation).
- Connection of the function inputs XI of all sensors and without triggering with an external signal (internal synchronisation, multiplex mode).

### Maintenance

The ultrasonic sensor is maintenance-free. However, the converter surface must not be wet, damaged, painted or covered with material deposits..

### Connecting the PC interface 3RX4000-PF to use SONPROG

This sensor can be parameterised using SONPROG for an optimum adaptation to the application. Therefore the sensor provides communication with the 3RX4000-PF PC interface. To connect to the 3RX4000-PF PC interface a 4- or 5-pin M12 male cable connector is reqired. We recommend e. g. an adapter V15S-M16-500 or a cable connector V15S-G-2M-PVC. Please connect the wires to the sensors terminals as shown, below.

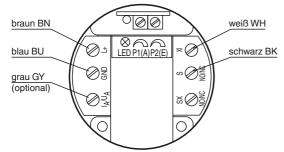

The terminals  $I_A/U_A$  (analog output) and SX (2<sup>na</sup> switching output) are not needed for programming.

Pepperl+Fuchs Group www.pepperl-fuchs.com USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

